

**CHAPTER**

**33**

**LIGHTS**



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**CHAPTER 33  
LIGHTS**


Subject/Page	Date	COC	Subject/Page	Date	COC	Subject/Page	Date	COC
33-EFFECTIVE PAGES			33-20 TASKS (cont)			33-40 TASKS (cont)		
1	JUN 15/2016		217	Oct 15/2015		204	Feb 15/2016	
2	BLANK		218	Oct 15/2015		33-44 TASKS		
33-HOW TO USE THE FIM			O 219	Jun 15/2016		O 201	Jun 15/2016	
1	Feb 15/2013		O 220	Jun 15/2016		O 202	Jun 15/2016	
2	Feb 15/2013		O 221	Jun 15/2016		O 203	Jun 15/2016	
3	Feb 15/2013		O 222	Jun 15/2016		O 204	Jun 15/2016	
4	Feb 15/2013		O 223	Jun 15/2016		O 205	Jun 15/2016	
5	Feb 15/2013		O 224	Jun 15/2016		O 206	Jun 15/2016	
6	Feb 15/2013		O 225	Jun 15/2016		A 207	Jun 15/2016	
33-FAULT CODE INDEX			O 226	Jun 15/2016		A 208	BLANK	
101	Feb 15/2013		O 227	Jun 15/2016		33-50 TASKS		
102	Jun 15/2013		O 228	Jun 15/2016		201	Jun 15/2013	
103	Feb 15/2013		O 229	Jun 15/2016		202	Feb 15/2013	
104	BLANK		O 230	Jun 15/2016		203	Feb 15/2013	
33-10 TASKS			O 231	Jun 15/2016		204	Feb 15/2013	
201	Jun 15/2013		O 232	Jun 15/2016		205	Feb 15/2013	
202	Jun 15/2013		O 233	Jun 15/2016		206	BLANK	
203	Oct 15/2013		O 234	Jun 15/2016		33-55 TASKS		
204	Feb 15/2016		O 235	Jun 15/2016		201	Jun 15/2013	
33-20 TASKS			236	BLANK		202	BLANK	
201	Oct 15/2015		33-20 TASK SUPPORT					
202	Oct 15/2015		301	Feb 15/2014				
203	Oct 15/2015		302	Feb 15/2014				
204	Oct 15/2015		303	Feb 15/2014				
205	Oct 15/2015		304	Feb 15/2014				
206	Oct 15/2015		305	Feb 15/2014				
207	Oct 15/2015		306	BLANK				
208	Oct 15/2015		33-30 TASKS					
209	Oct 15/2015		O 201	Jun 15/2016				
210	Oct 15/2015		O 202	Jun 15/2016				
211	Oct 15/2015		O 203	Jun 15/2016				
212	Oct 15/2015		204	BLANK				
213	Oct 15/2015		33-40 TASKS					
214	Oct 15/2015		201	Oct 15/2015				
O 215	Jun 15/2016		202	Oct 15/2015				
O 216	Jun 15/2016		203	Feb 15/2016				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 33-EFFECTIVE PAGES



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

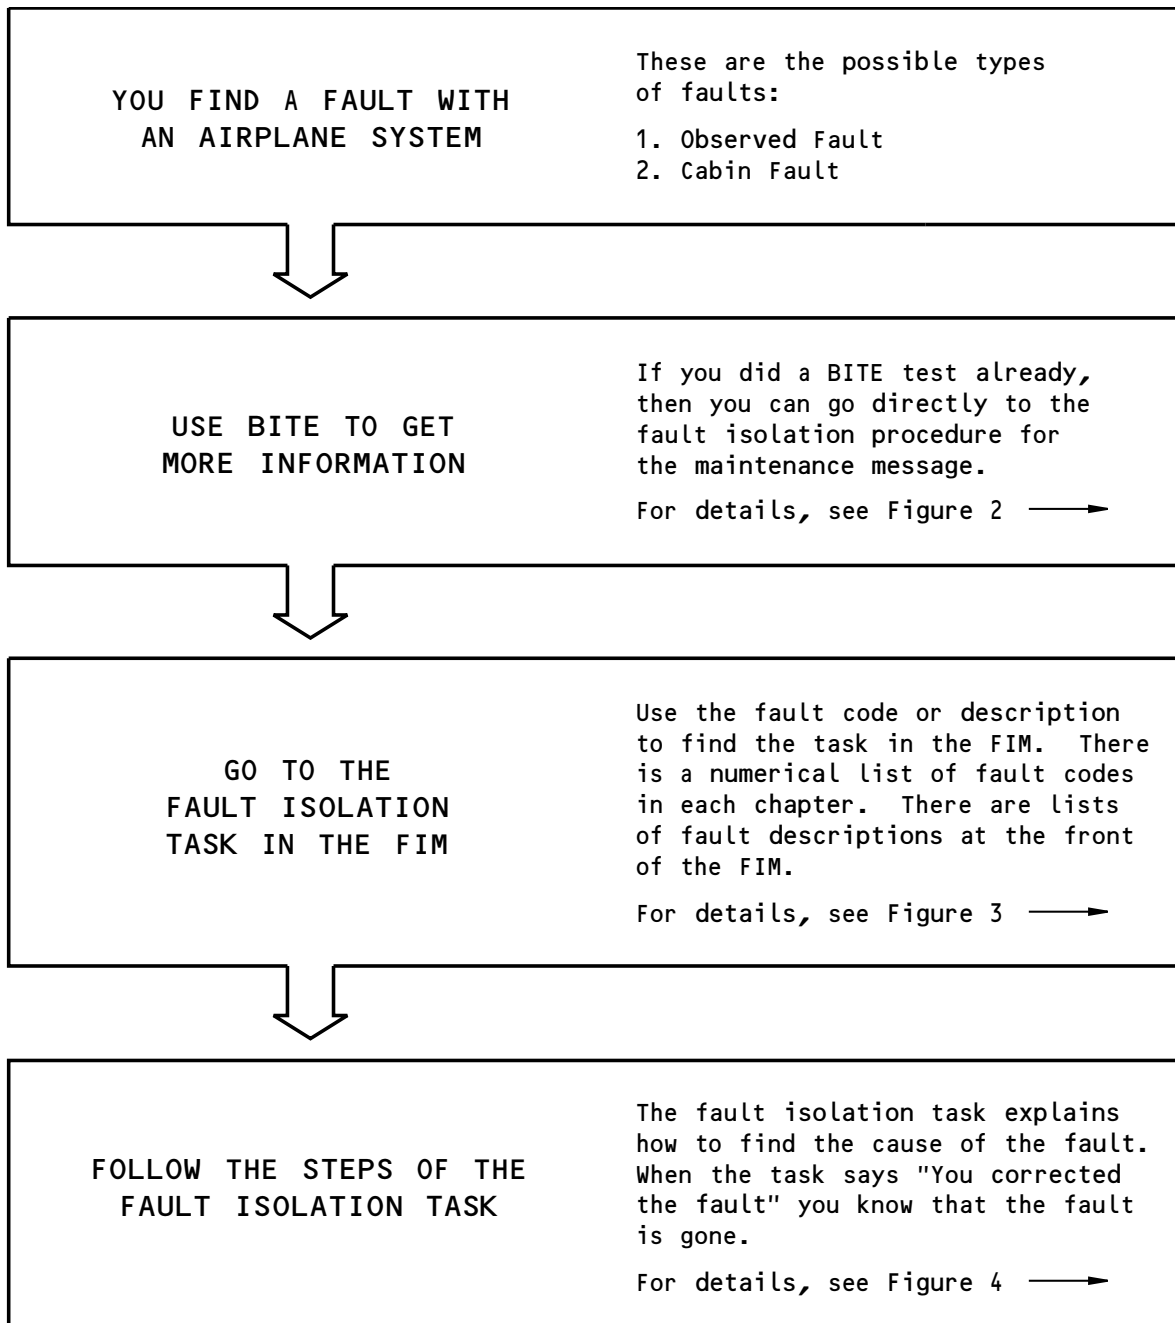

G04902 S0000148576\_V1

**Basic Fault Isolation Process  
Figure 1**

EFFECTIVITY  
AKS ALL

## 33-HOW TO USE THE FIM

D633A103-AKS

Page 1  
Feb 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

Some airplane systems have built-in test equipment (BITE). IF the system finds a fault when you do a BITE test, it will give you a maintenance message.

A maintenance message can be any of these:

- a code
- a text message
- a light
- an indication.

To find the fault isolation task for a maintenance message, go to the Maintenance Message Index in the chapter for the applicable system.

If you do not know which chapter is the correct one, look at the list at the front of any Maintenance Message Index. For each system or component (LRU) that has BITE, this list gives the chapter number where you can find the Index that you need.

Find the maintenance message for the applicable LRU or system in the Index. Then find the task number on the same line as the maintenance message. Go to the task in the FIM and do the steps of the task (see Figure 4).

G04950 S0000148578\_V1

**Getting Fault Information from BITE  
Figure 2**

EFFECTIVITY  
AKS ALL


## 33-HOW TO USE THE FIM

D633A103-AKS

Page 2  
Feb 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

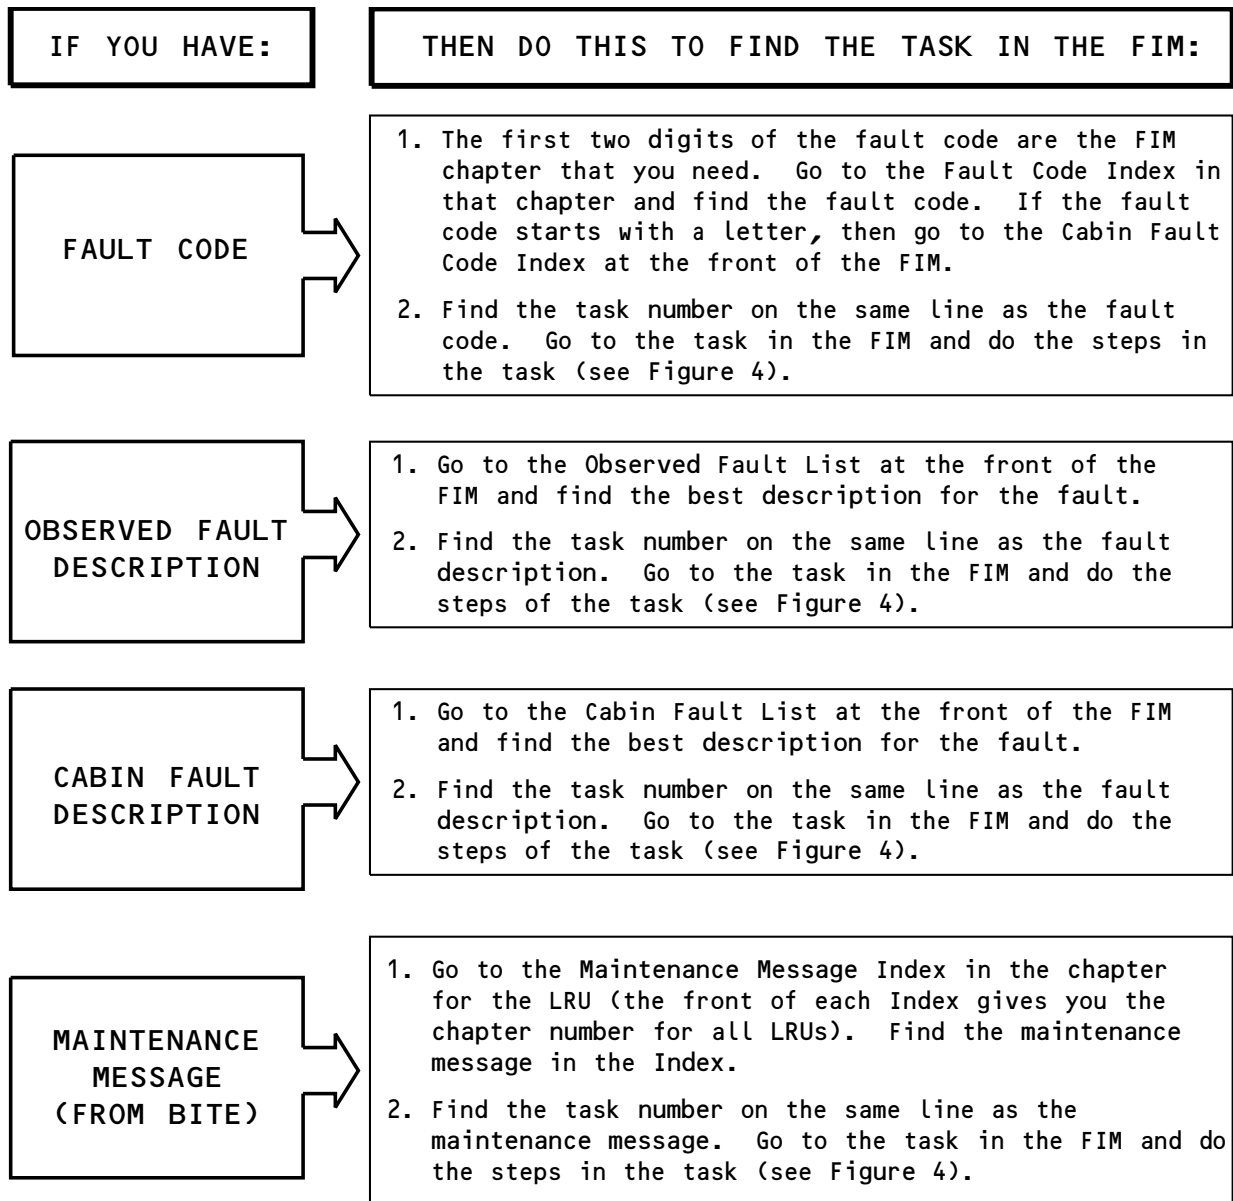

G04979 S0000148579\_V2

**Finding the Fault Isolation Task in the FIM  
Figure 3**

EFFECTIVITY  
AKS ALL

## 33-HOW TO USE THE FIM

D633A103-AKS

Page 3  
Feb 15/2013



## 737-600/700/800/900 FAULT ISOLATION MANUAL

### ASSUMED CONDITIONS AT START OF TASK

- External electrical power is ON
- Hydraulic power and pneumatic power are OFF
- Engines are shut down
- No equipment in the system is deactivated

### POSSIBLE CAUSES

- The list of possible causes has the most likely cause first and the least likely cause last.
- You can use the maintenance records of your airline to determine if the fault occurred before. Compare the list of possible causes to the past maintenance actions. This will help prevent repetition of the same maintenance actions.

### INITIAL EVALUATION PARAGRAPH

- The primary purpose of the Initial Evaluation paragraph at the start of the task is to help you find out if you can detect the fault right now:
  - If you cannot detect the fault right now, then the task cannot isolate the fault and the Initial Evaluation paragraph will say that there was an intermittent fault.
  - If you have an intermittent fault, you must use your judgement (and follow your airline's policy) to decide which maintenance action to take. Then monitor the airplane to see if the fault happens again on subsequent flights.
- The Initial Evaluation paragraph can also help you find out which Fault Isolation Procedure to use to isolate and correct the fault.

### FAULT ISOLATION STEPS

- The FIM task steps are presented in a specified order. The "If... then" statements will guide you along a logical path. But if you do not plan to follow the FIM task exactly, make sure that you read it before you start to isolate the fault. Some FIM procedures start with important steps that have an effect on the other steps in the procedure.
- When you are at the endpoint of the path, the step says "...you corrected the fault." Complete the step and exit the procedure.

G05009 S0000148580\_V3

Doing the Fault Isolation Task  
Figure 4


EFFECTIVITY  
AKS ALL

## 33-HOW TO USE THE FIM

D633A103-AKS

Page 4  
Feb 15/2013

**BOEING**  
737-600/700/800/900  
**FAULT ISOLATION MANUAL**

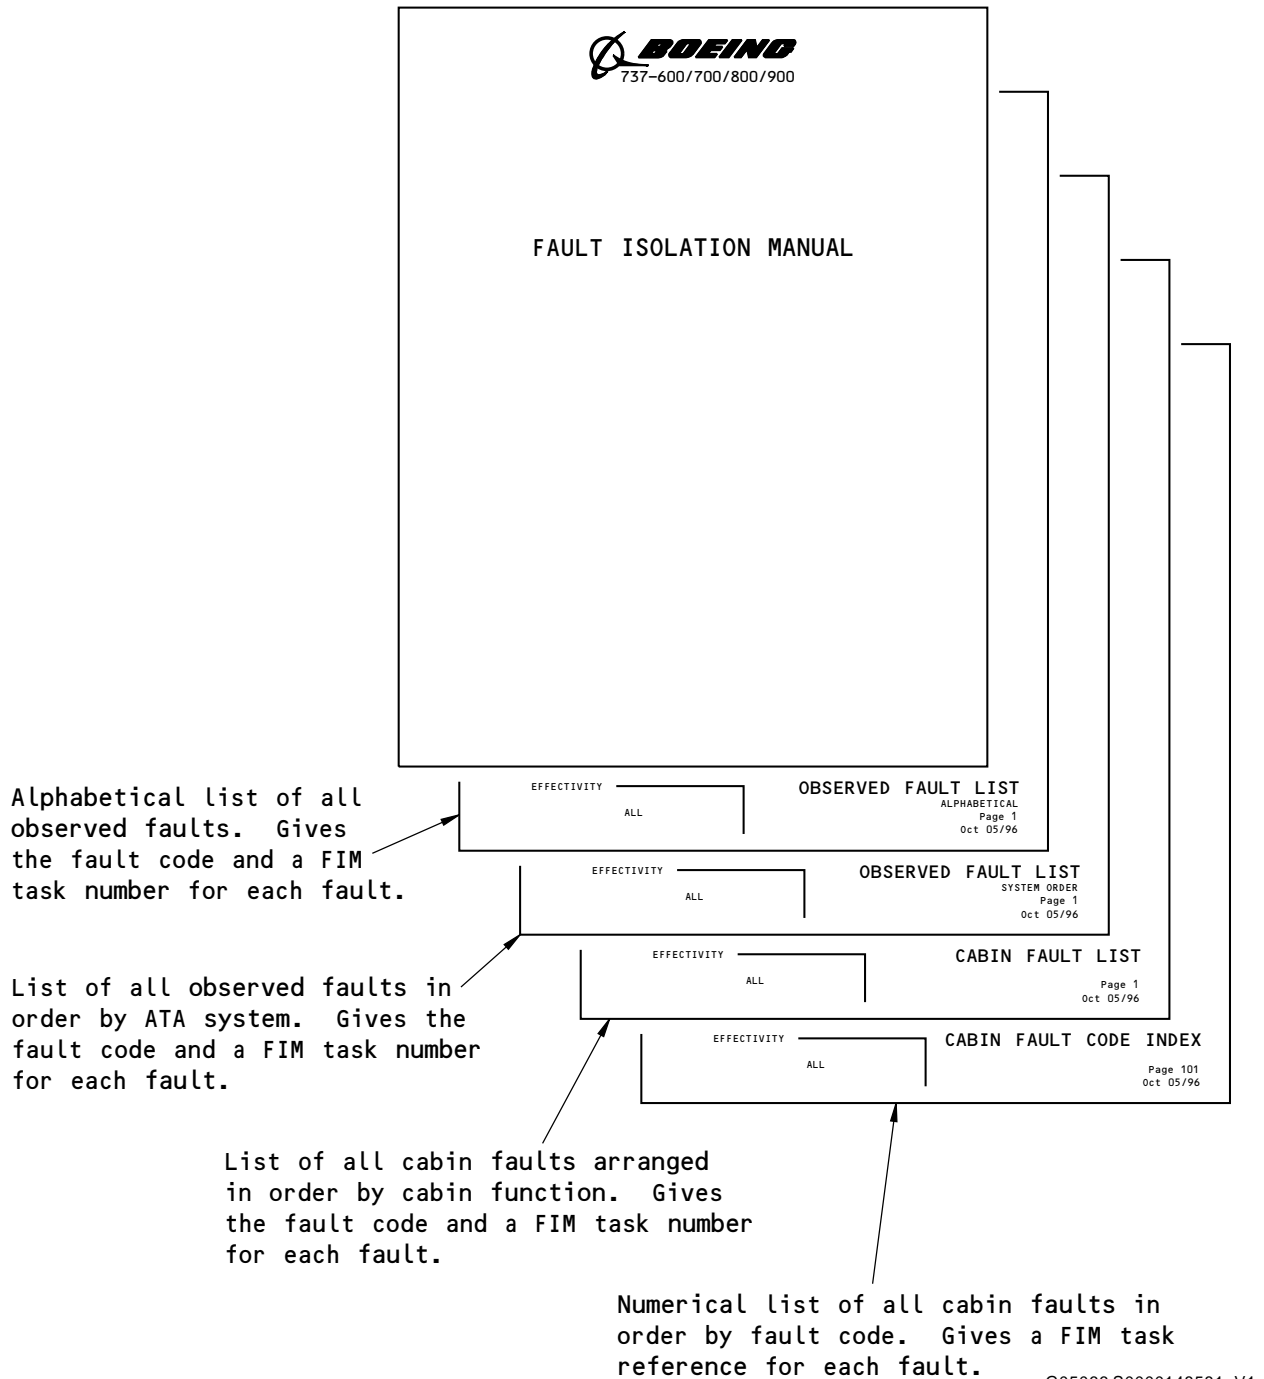

**Subjects at Front of FIM**  
**Figure 5**


EFFECTIVITY	
AKS ALL	

## 33-HOW TO USE THE FIM

D633A103-AKS



# 737-600/700/800/900 FAULT ISOLATION MANUAL

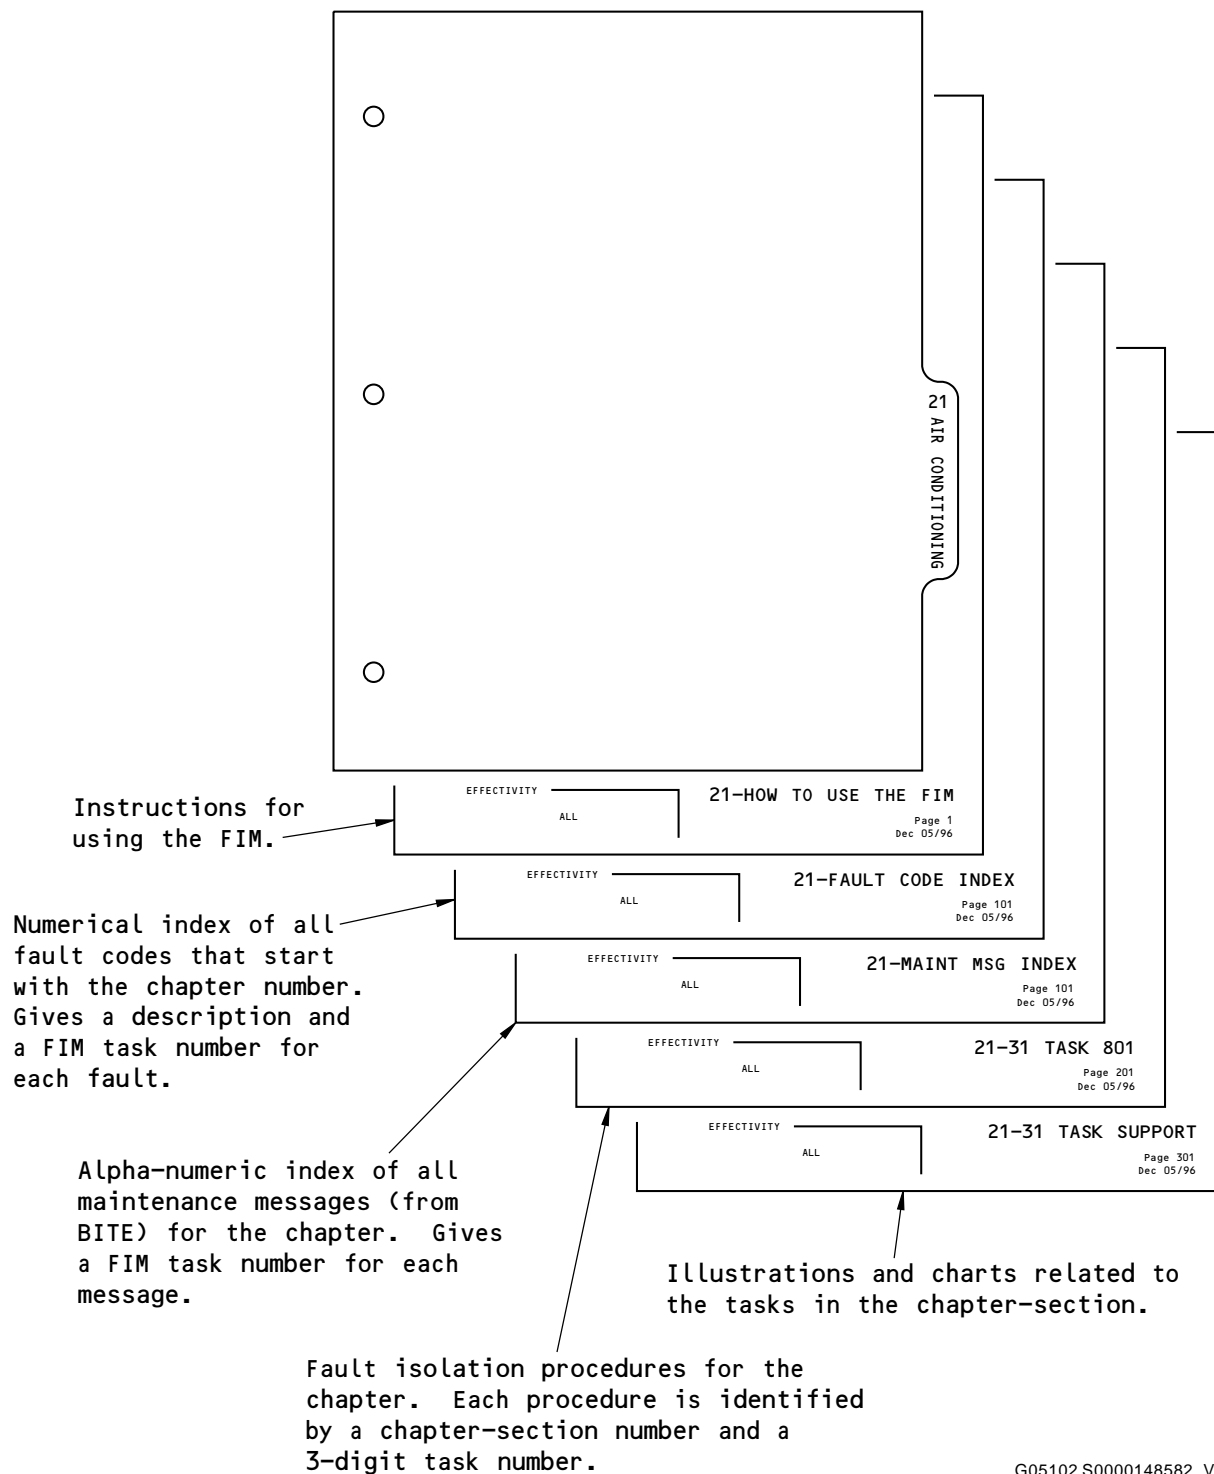

G05102 S0000148582\_V1

Subjects in Each FIM Chapter  
Figure 6

EFFECTIVITY
AKS ALL

## 33-HOW TO USE THE FIM

D633A103-AKS

Page 6  
Feb 15/2013





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

<b>FAULT CODE</b>	<b>FAULT DESCRIPTION</b>	<b>GO TO FIM TASK</b>
331 010 00	Indicator light: does not come on correctly.	33-10 TASK 801
331 011 00	Indicator light: Does not go off.	33-10 TASK 801
331 020 00	Lighted pushbutton switch: does not come on correctly.	33-10 TASK 801
331 021 00	Lighted pushbutton switch: Does not go off.	33-10 TASK 801
331 030 00	Lightplate: does not come on.	33-10 TASK 801
331 031 00	Lightplate: Does not go off.	33-10 TASK 801
331 040 00	Circuit breaker panel light: does not come on.	33-10 TASK 801
331 041 00	Circuit breaker panel light: Does not go off.	33-10 TASK 801
331 050 00	Dome light: does not come on correctly.	33-10 TASK 801
331 051 00	Dome light: Does not go off.	33-10 TASK 801
331 060 00	LCD segment: does not operate correctly.	33-10 TASK 801
331 070 00	Glareshield (AFCS) Floodlight: does not come on correctly.	33-10 TASK 801
331 071 00	Glareshield (AFCS) Floodlight: Does not go off.	33-10 TASK 801
331 080 31	Panel floodlight: does not come on correctly - captain's.	33-10 TASK 801
331 080 32	Panel floodlight: does not come on correctly - first officer's.	33-10 TASK 801
331 080 43	Panel floodlight: does not come on correctly - center.	33-10 TASK 801
331 081 31	Panel floodlight: Does not go off - captain's.	33-10 TASK 801
331 081 32	Panel floodlight: Does not go off - first officer's.	33-10 TASK 801
331 081 43	Panel floodlight: Does not go off - center.	33-10 TASK 801
331 090 00	Control stand floodlight: does not come on correctly.	33-10 TASK 801
331 091 00	Control stand floodlight: Does not go off.	33-10 TASK 801
331 100 00	Standby compass light: does not come on.	34-23 TASK 802
331 101 00	Standby compass light: Does not go off.	34-23 TASK 802
331 110 31	Flight kit light: does not come on correctly - captain's.	33-10 TASK 801
331 110 32	Flight kit light: does not come on correctly - first officer's.	33-10 TASK 801
331 111 31	Flight kit light: Does not go off - captain's.	33-10 TASK 801
331 111 32	Flight kit light: Does not go off - first officer's.	33-10 TASK 801
331 120 31	Map light: does not come on correctly - captain's.	33-10 TASK 801
331 120 32	Map light: does not come on correctly - first officer's.	33-10 TASK 801
331 121 31	Map light: Does not go off - captain's.	33-10 TASK 801
331 121 32	Map light: Does not go off - first officer's.	33-10 TASK 801
331 130 00	Reading light, observer's: does not come on correctly.	33-10 TASK 801
331 131 00	Reading light, observer's: Does not go off.	33-10 TASK 801
331 140 00	Oxygen mask floodlight: does not come on.	33-10 TASK 801
331 150 31	Chart light: does not come on correctly - captain's.	33-10 TASK 801

EFFECTIVITY  
AKS ALL

## 33-FAULT CODE INDEX

D633A103-AKS

Page 101  
Feb 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

<b>FAULT CODE</b>	<b>FAULT DESCRIPTION</b>	<b>GO TO FIM TASK</b>
331 150 32	Chart light: does not come on correctly - first officer's.	33-10 TASK 801
331 151 31	Chart light: Does not go off - captain's.	33-10 TASK 801
331 151 32	Chart light: Does not go off - first officer's.	33-10 TASK 801
331 160 00	Master dim and test system: does not operate correctly.	33-10 TASK 801
333 010 00	Wheel well light: does not come on - main landing gear.	33-30 TASK 801
333 011 00	Wheel well light: does not go off - main landing gear.	33-30 TASK 801
333 020 00	Wheel well light: does not come on - nose landing gear.	33-30 TASK 801
333 021 00	Wheel well light: Does not go off - nose landing gear.	33-30 TASK 801
333 030 41	Air conditioning compartment light: does not come on - left.	33-30 TASK 801
333 030 42	Air conditioning compartment light: does not come on - right.	33-30 TASK 801
333 031 41	Air conditioning compartment light: Does not go off - left.	33-30 TASK 801
333 031 42	Air conditioning compartment light: Does not go off - right.	33-30 TASK 801
333 040 00	Electronic equipment compartment light: does not come on.	33-30 TASK 801
333 041 00	Electronic equipment compartment light: Does not go off.	33-30 TASK 801
333 050 00	Accessory compartment light: does not come on.	33-30 TASK 801
333 051 00	Accessory compartment light: Does not go off.	33-30 TASK 801
333 060 00	APU service light: does not come on.	33-30 TASK 801
333 061 00	APU service light: Does not go off.	33-30 TASK 801
333 070 00	Tailcone light: does not come on.	33-30 TASK 801
333 071 00	Tailcone light: Does not go off.	33-30 TASK 801
333 080 44	Cargo compartment light: does not come on - forward.	33-30 TASK 801
333 080 45	Cargo compartment light: does not come on - aft.	33-30 TASK 801
333 081 44	Cargo compartment light: Does not go off - forward.	33-30 TASK 801
333 081 45	Cargo compartment light: Does not go off - aft.	33-30 TASK 801
334 010 41	Wing illumination light: does not come on - left.	33-40 TASK 801
334 010 42	Wing illumination light: does not come on - right.	33-40 TASK 801
334 020 41	Wing illumination light: Does not go off - left.	33-40 TASK 801
334 020 42	Wing illumination light: Does not go off - right.	33-40 TASK 801
334 030 41	Landing light: does not come on - left fixed.	33-40 TASK 801
334 030 42	Landing light: does not come on - right fixed.	33-40 TASK 801
334 040 41	Landing light: does not come on - left retractable.	33-40 TASK 801
334 040 42	Landing light: does not come on - right retractable.	33-40 TASK 801
334 060 41	Landing light: Does not extend - left retractable.	33-40 TASK 801
334 060 42	Landing light: Does not extend - right retractable.	33-40 TASK 801
334 070 41	Landing light: Does not go off - left fixed.	33-40 TASK 801

EFFECTIVITY  
AKS ALL

## 33-FAULT CODE INDEX

D633A103-AKS

Page 102  
Jun 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

<b>FAULT CODE</b>	<b>FAULT DESCRIPTION</b>	<b>GO TO FIM TASK</b>
334 070 42	Landing light: Does not go off - right fixed.	33-40 TASK 801
334 080 41	Landing light: Does not go off - left retractable.	33-40 TASK 801
334 080 42	Landing light: Does not go off - right retractable.	33-40 TASK 801
334 100 41	Landing light: does not retract - left retractable.	33-40 TASK 801
334 100 42	Landing light: does not retract - right retractable.	33-40 TASK 801
334 110 41	Position (NAV) light: does not come on - left wing forward.	33-40 TASK 801
334 120 41	Position (NAV) light: does not come on - left wing aft.	33-40 TASK 801
334 120 42	Position (NAV) light: does not come on - right wing aft.	33-40 TASK 801
334 130 42	Position (NAV) light: does not come on - right wing forward.	33-40 TASK 801
334 190 41	Position (NAV) light: Does not go off - left wing forward.	33-40 TASK 801
334 200 41	Position (NAV) light: Does not go off - left wing aft.	33-40 TASK 801
334 200 42	Position (NAV) light: Does not go off - right wing aft.	33-40 TASK 801
334 210 42	Position (NAV) light: Does not go off - right wing forward.	33-40 TASK 801
334 230 41	Anti-collision light: does not come on correctly - left wing.	33-44 TASK 801
334 230 42	Anti-collision light: does not come on correctly - right wing.	33-44 TASK 801
334 240 00	Anti-collision light: does not come on correctly - tail.	33-44 TASK 801
334 250 41	Anti-collision (strobe) light: Does not go off - left wing.	33-44 TASK 801
334 250 42	Anti-collision (strobe) light: Does not go off - right wing.	33-44 TASK 801
334 260 00	Anti-collision (strobe) light: Does not go off - tail.	33-44 TASK 801
334 270 46	Anti-collision light: does not come on correctly - upper.	33-44 TASK 801
334 270 47	Anti-collision light: does not come on correctly - lower.	33-44 TASK 801
334 280 46	Anti-collision light: Does not go off - upper.	33-44 TASK 801
334 280 47	Anti-collision light: Does not go off - lower.	33-44 TASK 801
334 290 00	Airstair tread light: does not come on.	33-40 TASK 801
334 291 00	Airstair tread light: Does not go off.	33-40 TASK 801
334 300 41	Runway turnoff light: does not come on - left.	33-40 TASK 801
334 300 42	Runway turnoff light: does not come on - right.	33-40 TASK 801
334 310 41	Runway turnoff light: Does not go off - left.	33-40 TASK 801
334 310 42	Runway turnoff light: Does not go off - right.	33-40 TASK 801
334 320 00	Taxi light: does not come on.	33-40 TASK 801
334 330 00	Taxi light: Does not go off.	33-40 TASK 801
334 340 41	Logo light: does not come on - left.	33-40 TASK 801
334 340 42	Logo light: does not come on - right.	33-40 TASK 801
334 350 41	Logo light: Does not go off - left.	33-40 TASK 801
334 350 42	Logo light: Does not go off - right.	33-40 TASK 801

EFFECTIVITY  
AKS ALL

## 33-FAULT CODE INDEX

D633A103-AKS

Page 103  
Feb 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Flight Compartment Lighting Problem - Fault Isolation**

**A. Description**

- (1) (SDS SUBJECT 33-11-00)
- (2) (SDS SUBJECT 33-14-00)
- (3) (SDS SUBJECT 33-17-00)
- (4) (SDS SUBJECT 33-18-00)

**B. Possible Causes**

- (1) Use the applicable system schematic manual (SSM) or wiring diagram manual (WDM) in the table below to identify possible causes for the lighting problem.

**C. Circuit Breakers**

- (1) Use the applicable SSM or WDM in the table below to identify the circuit breakers related to the fault.

**D. Related Data**

- (1) Use the table below to identify the applicable SSM and WDM for the lights in the flight compartment.

**E. Initial Evaluation**

- (1) In this table, find the light that does not operate correctly and its applicable SSM and WDM:

**Table 201**

<b>LIGHT</b>	<b>SSM/WDM</b>
Chart Lights	33-17-11
Circuit Breaker Panel Lights	33-14-12
Control Stand Light	33-14-12
Dome Lights	33-14-12
Flight Kit Lights	33-17-11
Instrument and Panel Lts on P1-P3, P7-P10, P21, P23	33-11-11 thru 33-11-41
Instrument and Panel Lts on P5	33-12-11, 33-12-12
Map Lights	33-17-11
MD&T Indicator Lights on P1	33-18-21
MD&T Indicator Lights on P2	33-18-23 thru 33-18-24
MD&T Indicator Lights on P3	33-18-22
MD&T Indicator Lights on P5, Forward	33-18-31 thru 33-18-37
MD&T Indicator Lights on P5, Aft	33-18-41 thru 33-18-42
MD&T Indicator Lights on P7	33-18-51
MD&T Indicator Lights on P8	33-18-61 thru 33-18-63
MD&T LCDs in Panels, Modules, and Indicators	33-18-11 thru 33-18-63
Panel/Glareshield Floodlights	33-14-11
Reading Lights	33-17-11

EFFECTIVITY  
AKS ALL

**33-10 TASK 801**

D633A103-AKS

Page 201  
Jun 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**Table 201 (Continued)**

<b>LIGHT</b>	<b>SSM/WDM</b>
Standby Compass Light	33-14-12

- (2) On the applicable SSM or WDM, identify the control for the light.
- (3) Set the light to the on mode, then all other possible modes, including off.  
**NOTE:** All lights in the flight compartment have switches but the oxygen mask floodlights. The oxygen mask floodlights should come on when electrical power is supplied to the airplane and go off when its circuit breaker is opened or electrical power is removed from the airplane.
- (a) If the light operates correctly in all possible modes, then there was an intermittent fault.
  - 1) Set the light to the usual mode.
- (b) If the light does not operate correctly in all possible modes, then do the fault isolation procedure below.

**F. Fault Isolation Procedure**

- (1) If the light does not come on, then replace the lamp or light assembly.  
**NOTE:** A spare lamp box is on the right sidewall that is forward of the first officers seat.
- (a) To replace it, use the applicable task that follows:
  - 1) For a circuit breaker panel light, do this task:  
Circuit Breaker Panel Light - Lamp Replacement, AMM TASK 33-14-00-960-805.
  - 2) For a panel/glareshield floodlight, do this task:  
Panel/Glareshield Floodlight - Light Assembly Replacement, AMM TASK 33-14-00-960-801.
  - 3) For a dome light, do this task:  
Dome Light - Lamp Replacement, AMM TASK 33-14-00-960-804.
  - 4) For an oxygen mask floodlight, do this task:  
Oxygen Mask Floodlight - Light Assembly Replacement, AMM TASK 33-14-00-960-803.
  - 5) For a control stand floodlight lamp, do this task:  
Control Stand Floodlight - Lamp Replacement, AMM TASK 33-14-00-960-802.
  - 6) For a control stand floodlight light assembly, do this task:  
Control Stand Floodlight - Light Assembly Replacement, AMM TASK 33-14-00-960-807.
  - 7) For a map light, do this task:  
Map Light - Lamp Replacement, AMM TASK 33-17-00-960-801.
  - 8) For a chart light, do this task:  
Chart Light - Lamp Replacement, AMM TASK 33-17-00-960-803.
  - 9) For a flight kit light, do this task:  
Flight Kit/Reading Light - Lamp Replacement, AMM TASK 33-17-00-960-802.
  - 10) For a reading light, do this task:  
Flight Kit/Reading Light - Lamp Replacement, AMM TASK 33-17-00-960-802.

EFFECTIVITY  
AKS ALL

**33-10 TASK 801**

D633A103-AKS

Page 202  
Jun 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 11) For an indicator light,  
These are the tasks:  
Indicator Light - Lamp Replacement, AMM TASK 33-18-00-960-801,  
Indicator Light - Light Assembly Replacement, AMM TASK 33-18-00-960-802.
  - 12) For a lightplate, do this task:  
Lightplate - Replacement, AMM TASK 33-18-00-960-804.
  - 13) For a lighted pushbutton switch, do this task:  
Lighted Pushbutton Switch - Lamp Replacement, AMM TASK 33-18-00-960-803.
  - 14) For a Standby Compass Light, do this task:  
Standby Magnetic Compass Light Not Illuminated, 34-23 TASK 802
- (b) If the light operates correctly in all possible modes, then you corrected the fault.
  - (c) If the light does not operate correctly in all possible modes, then continue.
- (2) Remove the applicable control display unit (CDU) or multi-purpose control and display unit (MCDU) (AMM TASK 34-61-01-000-802).
    - (a) If the lights go off, then replace the applicable CDU or MCDU to correct the fault.
    - (b) Install the applicable CDU or MCDU (AMM TASK 34-61-01-400-802).
    - (c) If the lights do not go off, then continue.

**WARNING:** BEFORE YOU DO COMPONENT REPLACEMENTS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (3) If the light does not go off, then use the applicable SSM or WDM to replace the switch.

**NOTE:** These steps do not apply to the oxygen mask floodlights, or to switches that are not line replaceable units.

  - (a) If a circuit breaker was opened, then close it.
  - (b) Set the light to the on mode, then to the off mode.
  - (c) If the light goes off, then you corrected the fault.
  - (d) If the light does not go off, then continue.

**WARNING:** BEFORE YOU DO WIRING CHECKS, COMPONENT REPLACEMENTS, OR WIRING REPAIRS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS OR SET SWITCHES TO THE OFF MODE TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (4) If the light does not operate correctly in all possible modes, including dim and off, then use the SSM or WDM to examine the lighting circuitry.
  - (a) Do continuity checks between the source of power and the light.
  - (b) If you identify a component in the lighting circuitry that does not operate correctly, then replace the component.
    - 1) If a circuit breaker was opened, then close it.
    - 2) Set the light to the on mode, then all other possible modes, including off.

EFFECTIVITY  
AKS ALL

## 33-10 TASK 801

D633A103-AKS

Page 203  
Oct 15/2013



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 3) If the light operates correctly in all possible modes, then you corrected the fault.
  - a) Set the light to the usual mode.
- (c) If all components in the lighting circuitry operate correctly, then check the bonding of the applicable ground block.
  - 1) Locate the applicable ground block and remove all wires from the ground block (SWPM 20-90-15).
  - 2) Perform a bond test of the applicable ground block. Do this task:  
Electrical Bonding Processes, THE BOEING COMPANY, SWPM 20-20-00.
  - 3) Make sure the maximum resistance does not exceed 1 milliohm (0.001 ohm).  
NOTE: Refer to SWPM 20-20-00, Resistance of Ground Block Installations.
  - 4) If the resistance is not in the specified range, then replace the applicable ground block (Electrical Bonding Processes, THE BOEING COMPANY, SWPM 20-20-00).
    - a) If a circuit breaker was opened, then close it.
    - b) Set the light to the on mode, then all other possible modes, including off.
    - c) If the light operates correctly in all possible modes, then you corrected the fault.
  - 5) If the resistance is in the specified range, then continue.
- (d) If there is no problem with the ground blocks, then repair the wiring.
  - 1) If a circuit breaker was opened, then close it.
  - 2) Set the light to the on mode, then all other possible modes, including off.
  - 3) If the light operates correctly in all possible modes, then you corrected the fault.
  - 4) Set the light to the usual mode.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-10 TASK 801**

D633A103-AKS

Page 204  
Feb 15/2016





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Passenger Compartment Lighting Problem - Fault Isolation**

**A. Description**

- (1) The passenger compartment lights have these subsystems:
  - Window Lights (SDS SUBJECT 33-21-00)
  - Ceiling Lights (SDS SUBJECT 33-22-00)
  - Reading Lights (SDS SUBJECT 33-23-00)
  - Passenger Signs (SDS SUBJECT 33-25-00)
  - Lavatory Lights and Signs (SDS SUBJECT 33-26-00)
  - Passenger and Lavatory Call Lights (SDS SUBJECT 33-27-00)
  - Entry Lights (SDS SUBJECT 33-29-00)
- (2) The passenger compartment lights for the Boeing Sky Interior (BSI) system include Sidewall Lights, Over-Wing Exit Lights, Ceiling and Cross-Bin Lights, Direct Lights, Cove Lights and optional Center Overhead Stowage (COS) Lights. These are controlled by the Forward and Aft Attendant Control Panels (ACPs) which are connected to the RS-485 communications bus

**B. Possible Causes**

- (1) Lamp
- (2) Light Assembly
- (3) Switch
- (4) Component(s)
- (5) Wiring

**C. Circuit Breakers**

- (1) Use the applicable SSM or WDM in the table below to identify the circuit breakers related to the problem.

**D. Related Data**

- (1) Use the table below to identify the applicable SSM and WDM for the lights/signs in the passenger compartment.

**E. Initial Evaluation**

- (1) In this table, find the light/sign that does not operate correctly and its applicable SSM and WDM:

**Table 201**

<b>LIGHT/SIGNS</b>	<b>SSM</b>	<b>WDM</b>
Attendant Work Lights	33-26-11	33-26-11
Chime Lights for Flight and Ground Crew Calls	23-42-11	23-42-11
Chime Lights for Pass. and Lavatory Calls	33-27-11 thru 33-27-41	33-27-11 thru 33-27-41
Dim Entry Lights	33-29-11	33-29-11
Galley Lights	33-26-21	33-26-21
Lavatory Call Lights	33-27-11 thru 33-27-41	33-27-11 thru 33-27-41

EFFECTIVITY  
AKS ALL

**33-20 TASK 801**

D633A103-AKS

Page 201  
Oct 15/2015





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**Table 201 (Continued)**

<b>LIGHT/SIGNS</b>	<b>SSM</b>	<b>WDM</b>
Lavatory Lights	33-26-31	33-26-31
Lavatory Mirror Light Switch	33-26-31	33-26-31
Lavatory-Occupied Signs	33-26-31	33-26-31
No-Smoking/Fasten-Seat-Belt Signs	33-25-11 thru 33-25-51	33-25-11 thru 33-25-61
Passenger Call Lights	33-27-11 thru 33-27-41	33-27-11 thru 33-27-41
Reading Lights	33-23-11 thru 33-23-31	33-23-11 thru 33-23-31
Return-to-Seat Signs	33-25-11 thru 33-25-51	33-25-11 thru 33-25-61

- (2) On the applicable SSM or WDM, identify the control for the light/sign.
- (3) Set the light/sign to the ON mode, then all other possible modes, including OFF.

**NOTE:** The dim entry light is controlled by the BAT Switch on the P5-13 panel (WDM 24-41-11). The light comes ON only when 28 Volts DC battery power is supplied to the light. It goes OFF when battery power is removed.

- (a) If the light/sign operates correctly in all possible modes, then there was an intermittent problem.
  - 1) Set the light/sign to the usual mode.
- (b) If the light/sign does not operate correctly in all possible modes, then do the Fault Isolation Procedure below.

**F. Initial Evaluation (BSI - Boeing Sky Interior)**

- (1) Use the table below to identify the applicable fault in the BSI passenger compartment, then go to the referenced FIM task.

**Table 202**

<b>FAULT TYPE</b>	<b>FAULT DESCRIPTION</b>	<b>GO TO FIM TASK</b>
Communication Fault	One BSI Light Partially/Fully Not Responding to ACP Signal	33-20 TASK 803
Communication Fault	One BSI Light At End of Databus Partially/Fully Not Responding to ACP Signal	33-20 TASK 805
Communication Fault	A sequence of BSI Light Not Responding to ACP Signal.	33-20 TASK 805
Power Fault	BSI Window Lights Do Not Come On	33-20 TASK 806
Power Fault	BSI Cove Light Does Not Come On	33-20 TASK 807
Power Fault	One BSI Direct/Bin/Wash/COS Light Does Not Come On	33-20 TASK 808
Power Fault	All BSI Lights Do Not Come On	33-20 TASK 809
Power Fault	All BSI Cove and Direct Lights Do Not Come On	33-20 TASK 810
Power Fault	All Right BSI Window Lights Do Not Come On	33-20 TASK 811
Power Fault	All Left BSI Window Lights Do Not Come On	33-20 TASK 812
Power Fault	All Forward Right BSI Bin/Wash/COS Lights Do Not Come On	33-20 TASK 813

EFFECTIVITY  
AKS ALL

## 33-20 TASK 801

D633A103-AKS

Page 202  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**Table 202 (Continued)**

<b>FAULT TYPE</b>	<b>FAULT DESCRIPTION</b>	<b>GO TO FIM TASK</b>
Power Fault	All Forward Left BSI Bin/Wash/COS Lights Do Not Come On	33-20 TASK 814
Power Fault	All Aft Right BSI Bin/Wash/COS Lights Do Not Come On	33-20 TASK 815
Power Fault	All Aft Left BSI Bin/Wash/COS Lights Do Not Come On	33-20 TASK 816

**G. Fault Isolation Procedure**

- (1) If the light/sign does not come ON, then replace the lamp or light assembly.
  - (a) To replace it, use the applicable task that follows:
    - 1) For a reading light, do this task:  
Reading Light - Light Assembly Replacement, AMM TASK 33-23-00-960-802.
    - 2) For a no-smoking or fasten-seat-belt sign, do this task:  
Information Sign - Light Assembly Replacement for a No-Smoking/Fasten-Seat-Belt Sign, AMM TASK 33-25-00-960-807.
    - 3) For a return-to-seat sign, do this task:  
Information Sign - Light Assembly Replacement for a Return-to-Seat Sign, AMM TASK 33-25-00-960-803.
    - 4) For an attendant work light, do this task:  
Attendant Work Light - Lamp Replacement, AMM TASK 33-26-01-960-801.
    - 5) For a galley light, do this task:  
Galley Light - Lamp Replacement, AMM TASK 33-26-02-960-801.
    - 6) For a lavatory light problem, do this task:  
Lavatory Light - Lamp Replacement, AMM TASK 33-26-03-960-801.
    - 7) For a lavatory light Switch problem, do this task:  
Lavatory Door Switch - Adjustment/Replacement, AMM TASK 33-26-03-960-804.
    - 8) For a lavatory-occupied sign, do this task:  
Lavatory-Occupied Sign - Light Assembly Replacement, AMM TASK 33-26-03-960-803.
    - 9) For a passenger call light, do this task:  
Passenger Call Light - PSU LED Call Light Replacement, AMM TASK 33-27-00-960-804.
    - 10) For a lavatory call light, do this task:  
Lavatory Call Light - Light/Switch Replacement, AMM TASK 33-27-00-960-802.
    - 11) For a dim entry light, do this task:  
Entry Light - Dim Entry LED Light Assembly Replacement, AMM TASK 33-29-00-960-805.
  - (b) If the light/sign operates correctly in all possible modes, then you corrected the problem.
  - (c) If the light/sign does not operate correctly in all possible modes, then continue.

EFFECTIVITY  
AKS ALL

**33-20 TASK 801**

D633A103-AKS

Page 203  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**WARNING:** BEFORE YOU DO COMPONENT REPLACEMENTS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (2) If the light/sign does not go OFF, then use the applicable SSM or WDM to replace the switch.

**NOTE:** These steps do not apply to the BAT switch (WDM 24-41-11) that operates the dim entry lights.

- (a) If a circuit breaker was opened, then close it.
- (b) Set the light/sign to the ON mode, then to the OFF mode.
- (c) If the light/sign goes OFF, then you corrected the problem.
- (d) If the light/sign does not go OFF, then continue.

**WARNING:** BEFORE YOU DO WIRING CHECKS, COMPONENT REPLACEMENTS, OR WIRING REPAIRS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS OR SET SWITCHES TO THE OFF MODE TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (3) If the light/sign does not operate correctly in all possible modes, including OFF, then use the SSM or WDM to examine the lighting circuitry.

- (a) Do continuity checks between the source of power and the light/sign.
- (b) If you identify a component in the lighting circuitry that does not operate correctly, then replace the component.
  - 1) If a circuit breaker was opened, then close it.
  - 2) Set the light/sign to the ON mode, then all other possible modes, including OFF.
  - 3) If the light/sign operates correctly in all possible modes, then you corrected the problem.
    - a) Set the light/sign to the usual mode.
- (c) If all components in the lighting circuitry operate correctly, then repair the wiring.
  - 1) If a circuit breaker was opened, then close it.
  - 2) Set the light/sign to the ON mode, then all other possible modes, including OFF.
  - 3) If the light operates correctly in all possible modes, then you corrected the problem.
  - 4) Set the light/sign to the usual mode.

————— **END OF TASK** —————

**803. BSI Light Communication Fault - One BSI Light Partially/Fully Not Responding to ACP Signal - Fault Isolation**

**A. Possible Causes**

- (1) Wiring
- (2) Light Assembly

EFFECTIVITY  
AKS ALL

**33-20 TASKS 801-803**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 204  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**B. Related Data**

Lights	Manual
Window Lights	SSM/WDM 33-21-XX
Ceiling Lights	SSM/WDM 33-22-XX
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00
Ceiling Lights	SDS 33-22-00
Cove Lights	SDS 33-24-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) At the attendant control panel (ACP), do a test of the light in the applicable passenger seating area, forward and aft entry areas.

This is the task:

Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.

**NOTE:** The part of the ceiling light above the bullnose ceiling panel is normally set to off and does not come on.

- (a) If the light operates correctly, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If the light does not operate correctly, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Do a check of the wiring at the non-responsive light.
  - (a) Do a check of the wiring at the non-responsive light (WDM 33-21-XX , WDM 33-22-XX, and WDM 33-24-XX).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) At the ACP, do a test of the light in the applicable passenger seating area, forward and aft entry areas. This is the task:  
Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.
    - 4) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.
    - 5) If the light does not operate correctly, then continue.
  - (c) If there is no problem with the wiring, then continue.
- (2) Replace the light.
  - (a) Replace the applicable light assembly (AMM PAGEBLOCK 33-21-00/201, AMM PAGEBLOCK 33-22-00/201).
  - (b) Load the software to the new light assembly. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.

EFFECTIVITY  
AKS ALL

**33-20 TASK 803**

D633A103-AKS

Page 205  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (c) At the ACP, do a test of the light in the applicable passenger seating area, forward and aft entry areas. This is the task:

Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.

- 1) If the lights operate correctly, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**805. BSI Light Communication Fault - A Sequence of BSI Lights Not Responding to ACP Signal - Fault Isolation**

**A. Possible Causes**

- (1) Wiring  
(2) Light Assembly

**B. Related Data**

Lights	Manual
Window Lights	SSM/WDM 33-21-XX
Ceiling Lights	SSM/WDM 33-22-XX
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00
Ceiling Lights	SDS 33-22-00
Cove Lights	SDS 33-24-00

**Table 203 Typical BSI ACP Light Databus Port 1-4 Layout**

Port 1 Left Window	Port 2 Left Ceiling	Port 3 Right Ceiling	Port 4 Right Window
FWD Entry Direct	Wash	COS (if installed)	Sidewall
FWD Cove L	.	COS (if installed)	.
FWD Cove R	Wash	Bin	Sidewall
FWD Cabin Direct	COS (if installed)	.	Overwing Exit
MID Cove R	Bin	Bin	Overwing Exit
MID Cove L	.	COS (if installed)	Sidewall
Sidewall	Bin	COS (if installed)	.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 803-805**

D633A103-AKS

Page 206  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**Table 203 Typical BSI ACP Light Databus Port 1-4 Layout (Continued)**

<b>Port 1 Left Window</b>	<b>Port 2 Left Ceiling</b>	<b>Port 3 Right Ceiling</b>	<b>Port 4 Right Window</b>
.	COS (if installed)	Bin	Sidewall
Sidewall	COS (if installed)	.	AFT Cove L
Overwing Exit	Bin	Bin	AFT Cove R
Overwing Exit	.	COS (if installed)	AFT Cabin Direct L
Sidewall	Bin	Wash	AFT Entry Direct L
.	COS (if installed)	.	AFT Entry Direct R
Sidewall	COS (if installed)	Wash	AFT Cabin Direct R
Termination Plug M2805	Termination Plug M2805	Termination Plug M2805	Termination Plug M2805

**C. Maintenance Tip - Troubleshooting the 737NG Boeing Sky Interior (BSI) Lighting System using C33001**

**(1) Condition**

- (a) There is a reported difficulty in quickly selecting the appropriate C33001-1 test cables for bypassing suspected defective LED lighting assemblies.

**(2) Recommended Action**

- (a) Become familiar with the C33001-44 Usage Placard and the C33001-54 Wiring Schematic along with the suggested steps as noted below.

**(3) Background**

- (a) The C33001-1 test cabling equipment was designed to facilitate bypassing many different combinations of 737NG BSI (Boeing Sky Interior) LED lightning assemblies for troubleshooting purposes. Bypassing a suspected light(s) helps determine if it is the one causing the problem. Due to the many variations in LED lighting assemblies, in data transmission paths, and in power routing directions, the C33001-44 Usage Placard was created to help select the appropriate C33001-1 test cable(s) for bypassing a defective LED lighting assembly. Unfortunately, the amount of data conveyed on the usage placard is very extensive and requires condensed terms and symbols in order to fit in the information. These terms and symbols are then used in conjunction with the C33001-54 Wiring Schematics to select the appropriate C33001-1 test cable(s).

**(4) Suggested Steps**

- (a) Introductory Notes:

EFFECTIVITY  
AKS ALL

**33-20 TASK 805**

D633A103-AKS

Page 207  
Oct 15/2015



## 737-600/700/800/900 FAULT ISOLATION MANUAL

- 1) The Key symbols (A, B, C, D, E, F, Y, Z and R) on the upper right corner of the C33001-44 Usage Placard refer to the different types of LED lighting assemblies installed on the airplane. These symbols show the different types of signal (data) and/or power going into and out of the particular LED lighting assembly connectors, such as J2 (B) and P3 (B). (Here, J2 and P3 are two of an airplane LED lighting assembly's connectors and (B) is the particular type of LED lighting assembly.)
  - 2) A typical plan view pictorial of the LED lightning system and airplane fuselage is shown on the C33001-44 Usage Placard. The pictorial includes airplane zonal Areas (I – VI), Data Busses (1 - 4) and LED Lighting Assemblies (A – F, Y, Z and R).
  - 3) Table I on the C33001-1 Usage Placard is intended to be used together with the C33001-54 Wiring Schematics to select the appropriate C33001-1 test cable(s). For example, identifying J6-P4 in Table I refers to the use of two of the connectors on the C33001-6 Adapter Cable Assy.
- (b) In order to select the appropriate C33001-1 test cable(s), please do the following steps:
- 1) Determine which type of LED lighting assembly is to be bypassed, including the Area and the data Bus line number.
  - 2) Determine which 2 LED lighting assembly types that the appropriate C33001-1 test cable will need to interconnect. Then, search for the applicable 'FROM' and 'TO' column in the Table I of the C33001-44 Usage Placard while knowing the Area and data Bus numbers and info from step 1.
  - 3) In the 'FROM CONNECTOR(S)' and 'TO CONNECTOR(S)' columns of Table I, the connectors to the left of the symbol // refer to connectors on the LED lighting assemblies. The connectors to the right of the symbol // refers to connectors on the applicable C33001-1 cable assembly.
  - 4) In the 'C33001 CABLE CONNECTORS' column of Table I, the symbol // refers to the mating of two or more separate C33001-1 test cables. (Please note that it is possible that a connector from a particular C33001-1 test 'Y-cable' may not be used in the specified interconnection.) If the symbol // is not present in a particular entry within the aforementioned column, then only one C33001-1 test cable is required.

**Partial C33001-44 Usage Placard Table I Extract (With Explanations)**

		Lighting to Bypass			'FROM' Lighting Connector // C33001 Cable Connector		"TO" Lighting Connector // C33001 Cable Connector	Cable Connection C33001-7 // C33001-2 // C33001-6
III	1,4	E	DATA ONLY	D - AREA II	P2 (D) // J7	F	J2 (F) // P4	J7-P6 // J1-P1 // J6-P4
III	1,4	E & F	DATA ONLY	D - AREA II	P2 (D) // J7	B - AREA IV	J2 (B) // P4	J7-P6 // J1-P1 // J6-P4

(c) C33001 CABLE ASSEMBLIES USAGE EXAMPLES

- 1) Example 1: Cove Light (Bypassing Data)
  - a) When bypassing a complete Cove light assembly (type B & D) (e.g. P/N 9550-26-000X) and connecting the adjacent upstream and downstream Direct Lights (e.g. P/N 9500-13-000X), use C33001 cable assemblies -7, -2 and -6.  
<1> Join the three aforementioned C33001 cables together by connecting P6 to J1, and J6 to P1.

EFFECTIVITY  
AKS ALL

**33-20 TASK 805**

D633A103-AKS

Page 208  
Oct 15/2015





## 737-600/700/800/900 FAULT ISOLATION MANUAL

- <2> Disconnect the J2 and P2 from complete Cove light lighting assembly (J1 can remain connected).
  - <3> Connect J7 (C33001-7) to P2 of upstream Direct Light and P4 (C33001-6) to J2 of downstream Direct Light (P7 (C33001-7) and P5 (C33001-6) are not connected).
- 2) Example 2: Sidewall Light (Bypassing Power and Data)
- a) When bypassing a Sidewall Light with 9 pins connector (type C) (e.g. P/N 9650-14-0002) and connecting the adjacent upstream and downstream Sidewall Lights (e.g. P/N 9650-14-0002) use cable assembly C33001-2. 1.
    - <1> Disconnect the J3 and P3 from the Sidewall Lighting assemblies.
    - <2> Connect J1 (C33001-2) to P3 of upstream Sidewall Light and P1 (C33001-2) to J3 of downstream Sidewall Light.
- 3) Example 3: Sidewall Light (Bypassing Data)
- a) When bypassing a Sidewall Light with 2 connectors on each end (type F) (e.g. P/N 9650-14-0005) and connecting the adjacent upstream and downstream Sidewall Lights (e.g. P/N 9650-14-0005), use C33001 cable assemblies -7, -2 and -6.
    - <1> Join the three aforementioned C33001 cables together by connecting P6 to J1, and J6 to P1.
    - <2> Disconnect the data connectors J2 and P2 from the Sidewall Lighting assembly (J1 and P1 remain connected when bypassing data only).
    - <3> Connect J7 (C33001-7) to P2 of upstream Sidewall Light and P4 (C33001-6) to J2 of downstream Sidewall Light (P7 (C33001-7) and P5 (C33001-6) are not connected).
- 4) Example 4: Ceiling Light (Bypassing Data)
- a) When bypassing one half of a typical ceiling light assembly with two types of lights (type Y for Wash Light and Z for Cross-Bin Light) (e.g. P/N 9600-XX-000) and connecting the adjacent upstream and downstream ceiling lights (e.g. P/N 9600-XX-000), use C33001 cable assemblies -7, -2, and -6.

NOTE: There are two sets of data connectors on each Ceiling Light (namely J5 & P5 for Wash Light, J2 & P2 for Cross-Bin Light). The data travels in different directions for each set of connectors.
  - b) Join the three aforementioned cables together by connecting P6 to J1, and J6 to P1.
  - c) Disconnect the data connectors set that need to be tested (i.e. either J5 & P5 or J2 & P2) from the Ceiling Light assemblies (all other connections should remain).
  - d) If J5 & P5 data connector set is disconnecting, connect J7 (C33001-7) to P5 of the upstream (adjacent) Ceiling Light and P4 (C33001-6) to J5 of the downstream (adjacent) Ceiling Light. If J2 & P2 data connector set is disconnected, connect J7 (C33001-7) to P2 of the upstream (adjacent) Ceiling Light and P4 (C33001-6) to J2 of the downstream (adjacent) Ceiling Light (P7 (C33001-7) and P5 (C33001-6) are not connected).





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**D. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) At the attendant control panel (ACP), do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:  
Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.
  - (a) If the lights operate correctly, then there was an intermittent fault. Set the lights to their usual mode.
  - (b) If the lights do not operate correctly, then do the Fault Isolation Procedure below.

**E. Fault Isolation Procedure**

- (1) Do a check of the wiring at the non-responsive light.
  - (a) Identify the first non-responsive light.
  - (b) Do a check of the wiring between the non-responsive light and the line-replaceable unit (LRU) before it (WDM 33-21-XX , WDM 33-22-XX, and WDM 33-24-XX).
  - (c) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) At the ACP, do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:  
Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.
      - a) If the lights operate correctly, then you corrected the fault. Set the lights to their usual mode.
      - b) If the lights do not operate correctly, then continue.
  - (d) If there is no problem with the wiring, then continue.
- (2) Do a communication isolation check.
  - (a) Identify the first non-responsive light assembly in the sequence of non-responsive lights as "UNIT B".
  - (b) Identify the LRU before the first non-responsive light in the sequence of non-responsive lights as "UNIT A". (SSM 33-21-XX, SSM 33-22-XX, SSM 33-24-XX, WDM 33-21-XX , WDM 33-22-XX, and WDM 33-24-XX).  
NOTE: Refer to Table 203 and related SSM/WDM for the BSI ACP light databus port layout.
  - (c) Set the Cabin/Utility switch to the OFF position.
  - (d) Use the C33001 test cabling (kit), SPL-13463 to isolate the UNIT B (WDM 33-21-XX , WDM 33-22-XX, and WDM 33-24-XX).  
NOTE: The C33001 test cabling (kit), SPL-13463 has the necessary test cables to isolate the LRU in fault.
    - 1) Disconnect UNIT B from UNIT A.
    - 2) Disconnect UNIT B from the light assembly after it.
    - 3) Use the C33001 test cabling (kit), SPL-13463 to connect the UNIT A and the light assembly after the UNIT B.
  - (e) Set the Cabin/Utility switch to the ON position.

EFFECTIVITY  
AKS ALL

**33-20 TASK 805**

D633A103-AKS

Page 210  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (f) At the ACP, do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:

Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.

- 1) If the lights operate correctly, then there was a fault in the UNIT B. Do these steps:

- a) Replace the UNIT B light assembly

NOTE: Wash light and bin light are one bin/wash light assembly. If there was a fault in UNIT B and it is a wash light or bin light, then both lights need to be replaced as one bin/wash light assembly.

- b) Make sure the software part number information displayed on the ACP is correct.

<1> If it is necessary to load the software to the new light assembly, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.

- c) At the ACP, do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:

Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.

<1> If the light operates correctly, then you corrected the fault. Set the light to its usual mode.

- 2) If the lights do not operate correctly, then there was a fault in the UNIT A. Do these steps:

- a) If the UNIT A is the ACP, then do these steps:

<1> Replace the ACP (AMM PAGEBLOCK 25-25-11/401).

<2> Make sure the software part number information displayed on the ACP is correct.

<a> If it is necessary to load the software, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.

<3> At the ACP, do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:

Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.

<4> If the light operates correctly, then you corrected the fault. Set the light to its usual mode.

- b) If the UNIT A is a light assembly, then do these steps:

<1> Replace the light assembly.

<2> Make sure the software part number information displayed on the ACP is correct.

<a> If it is necessary to load the software to the new light assembly, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.

<3> At the ACP, do a test of the lights in the passenger seating area, forward and aft entry areas. This is the task:

EFFECTIVITY  
AKS ALL

**33-20 TASK 805**

D633A103-AKS

Page 211  
Oct 15/2015



**737-600/700/800/900**  
**FAULT ISOLATION MANUAL**

Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.

<4> If the light operates correctly, then you corrected the fault. Set the light to its usual mode.

————— **END OF TASK** —————

**806. BSI Light Power Fault - BSI Window Lights Do Not Come On - Fault Isolation**

**A. Description**

- (1) There are three 115V AC power break-in points above the sidewall panels on each side of the airplane: STA 419, STA 616, and STA 866. At each power break-in point, two sets of window lights are connected to the 115V AC. Each set of window lights can have maximum six window lights connected in series to the 115V AC power bus. There are two 115V AC power bus directions for the two sets of window lights (forward direction and aft direction).
- (2) If a window light does not have 115V AC power:
  - The window light has an inoperative internal power supply.
  - The previous window light in the set has an inoperative internal power supply.

**B. Possible Causes**

- (1) Wiring
- (2) Light Assembly

**C. Related Data**

Lights	Manual
Window Lights	SSM/WDM 33-21-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00

**D. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (3) If necessary, input the password to get access to the attendant control panel.
- (4) At the attendant control panel (ACP), set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

  - (a) If the light comes on, then there was an intermittent fault. Set the lights to their usual mode.
  - (b) If the light does not come on, then do the Fault Isolation Procedure below.

**E. Fault Isolation Procedure**

- (1) Do a wiring check at the light.
  - (a) Do a wiring check at the light (SSM 33-21-XX, WDM 33-21-XX ).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 805-806**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 212  
Oct 15/2015



## 737-600/700/800/900 FAULT ISOLATION MANUAL

- 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.
  - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.
  - b) If the light does not operate correctly, then continue.
- (c) If you do not find a problem with the wiring, then continue.
- (2) Do a voltage check at the light.
  - (a) Identify the window light assembly closet to the 115V AC power bus that does not come on (SSM 33-21-XX, WDM 33-21-XX ).
  - (b) Disconnect the connector that supplies 115V AC to the window light assembly (SSM 33-21-XX, WDM 33-21-XX ).
  - (c) Do a voltage check for 115V AC from pin B to pin A of the connector (SSM 33-21-XX, WDM 33-21-XX ).
  - (d) If 115 V AC is present, do these steps:
    - 1) Replace the window light assembly (AMM PAGEBLOCK 33-21-00/201).
    - 2) Load the software to the new light assembly. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
    - 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.
      - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.
  - (e) If 115V AC is not present, then do these steps:
    - 1) Replace the LRU before the window light assembly.
    - 2) Load the software to the new LRU. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
    - 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.
      - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.

————— END OF TASK —————

### 807. BSI Light Power Fault - BSI Cove Light Does Not Come On - Fault Isolation

#### A. Possible Causes

- (1) Wiring
- (2) Light Assembly

#### B. Related Data

Lights	Manual
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00

EFFECTIVITY  
AKS ALL

## 33-20 TASKS 806-807

D633A103-AKS

Page 213  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

(Continued)

Lights	Manual
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (3) If necessary, input the password to get access to the attendant control panel.
- (4) At the attendant control panel (ACP), set lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
  - (a) If the light comes on, then there was an intermittent fault. Set the lights to their usual mode.
  - (b) If the light does not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Do a wiring check at the light.
  - (a) Do a wiring check at the light (SSM 33-24-XX, WDM 33-24-XX ).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.
      - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.
      - b) If the light does not operate correctly, then continue.
  - (c) If you do not find a problem with the wiring, then continue.
- (2) Do a voltage check at the light.
  - (a) Disconnect the connector that supplies 115V AC to the cove light assembly (SSM 33-24-XX, WDM 33-24-XX ).
  - (b) Do a voltage check for 115V AC from pin B to pin A of the connector (SSM 33-24-XX, WDM 33-24-XX ).
  - (c) If 115 V AC is present, do these steps:
    - 1) Replace the cove light assembly (AMM PAGEBLOCK 33-22-00/201).
    - 2) Load the software to the new light assembly. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
    - 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM  
TASK 33-20-00-710-804-001.
      - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.

EFFECTIVITY  
AKS ALL

**33-20 TASK 807**

D633A103-AKS

Page 214  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (d) If 115V AC is not present, then do these steps:
- 1) Replace the LRU before the cove light assembly.
  - 2) Load the software to the new LRU. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
  - 3) At the ACP, do a test of the light in the passenger seating area. This is the task:  
Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.
    - a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**808. BSI Light Power Fault - One BSI Direct/Bin/Wash/COS Light Does Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Wiring
- (2) Light Assembly

**B. Related Data**

Lights	Manual
Ceiling Lights	SSM/WDM 33-22-XX
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00
Cove Lights	SDS 33-24-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (3) If necessary, input the password to get access to the attendant control panel.
- (4) At the attendant control panel (ACP), set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab.  
When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If the light comes on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If the light does not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Do a wiring check at the light.
  - (a) Do a wiring check at the light (WDM 33-22-XX and WDM 33-24-XX)..
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 807-808**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 215  
Jun 15/2016



## 737-600/700/800/900 FAULT ISOLATION MANUAL

- 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- 4) If necessary, input the password to get access to the attendant control panel.
- 5) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- a) If the light operates correctly, then you corrected the fault. Set the lights to their usual mode.
  - b) If the light does not operate correctly, then continue.
  - (c) If you do not find a problem with the wiring, then continue.
- (2) Replace the light.
- (a) Replace the light assembly (AMM PAGEBLOCK 33-22-00/201).
- NOTE:** Wash light and bin light are one bin/wash light assembly. If there was a fault in a wash light or bin light, then both lights need to be replaced as one bin/wash light assembly.
- (b) Load the software to the new light assembly. To do it, do this task: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
  - (c) At the ACP, do a test of the light in the applicable passenger seating area, forward and aft entry areas. This is the task:  
Passenger Compartment Lights - Operational Test, AMM TASK 33-20-00-710-804-001.
- 1) If the lights operate correctly, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

### 809. BSI Light Power Fault - All BSI Lights Do Not Come On - Fault Isolation

#### A. Possible Causes

- (1) Relay R120
- (2) Cabin/Utility switch
- (3) Wiring

#### B. Related Data

Lights	Manual
Window Lights	SSM/WDM 33-21-XX
Ceiling Lights	SSM/WDM 33-22-XX
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00
Ceiling Lights	SDS 33-22-00
Cove Lights	SDS 33-24-00

#### C. Initial Evaluation

- (1) Cycle the Cabin/Utility switch.

EFFECTIVITY  
AKS ALL

## 33-20 TASKS 808-809

D633A103-AKS

Page 216  
Jun 15/2016





## 737-600/700/800/900 FAULT ISOLATION MANUAL

- (2) Open and close these circuit breakers:

### Power Distribution Panel Number 1, P91

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
C	4	C00184	GND SERV CLG NIGHT CONT
E	7	C01937	CEILING LIGHT AFT-L
E	8	C01938	CEILING LIGHT AFT-R
E	9	C00590	CEILING LT-R
E	10	C00591	CEILING LT-L

### Power Distribution Panel Number 2, P92

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	5	C01939	COVE LIGHT
E	11	C00594	WINDOW LIGHT RIGHT
E	12	C00776	WINDOW LIGHT LEFT

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all the passenger compartment lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all the passenger compartment lights do not come on, then do the Fault Isolation Procedure below.

### D. Fault Isolation Procedure

- (1) Replace the relays.
- (a) Replace the relay R120 (WDM 33-22-XX).
- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.
- NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (f) If all the passenger compartment lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all the passenger compartment lights do not come on, then continue.
- (2) Do a check of the Cabin/Utility switch.
- (a) Disconnect the D652 from the P5-13 module.
- (b) Set the Cabin/Utility switch to the ON position.
- (c) Do a continuity check from pin 5 to pin 14 of connector D652.
- (d) If there is no continuity, then do these steps:

EFFECTIVITY  
AKS ALL

## 33-20 TASK 809

D633A103-AKS

Page 217  
Oct 15/2015





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 1) Replace the P5-13 module.
- 2) Connect the D652 to the P5-13 module.
- 3) Cycle the Cabin/Utility switch.
- 4) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- 5) If necessary, input the password to get access to the attendant control panel.
- 6) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- 7) If all the passenger compartment lights come on, then there was an intermittent fault. Set the lights to their usual mode.
  - 8) If all the passenger compartment lights do not come on, then continue.
- (e) If there is continuity, then continue.
- 1) Connect the D652 to the P5-13 module.
- (3) Do a check of the wiring.
- (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-21-XX , WDM 33-22-XX, and WDM 33-24-XX).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
    - 4) If necessary, input the password to get access to the attendant control panel.
    - 5) At the ACP, set the lights to the on mode.
- NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- 6) If all the passenger compartment lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**810. BSI Light Power Fault - All BSI Cove and Direct Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R427
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	5	C01939	COVE LIGHT

- (3) Wiring

EFFECTIVITY  
AKS ALL

**33-20 TASKS 809-810**

D633A103-AKS

Page 218  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**B. Related Data**

Lights	Manual
Cove Lights	SSM/WDM 33-24-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	5	C01939	COVE LIGHT

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If the cove lights and direct lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all the cove lights and direct lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the relay.
  - (a) Replace the R427 relay (WDM 33-24-11).
  - (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If the cove lights and direct lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If the cove lights and direct lights do not come on, then continue.
- (2) Replace the circuit breaker.
  - (a) Replace this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	5	C01939	COVE LIGHT

EFFECTIVITY  
AKS ALL

**33-20 TASK 810**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 219  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (f) If the cove lights and direct lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If the cove lights and direct lights do not come on, then continue.
- (3) Do a check of the wiring.
  - (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-24-XX).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
    - 4) If necessary, input the password to get access to the attendant control panel.
    - 5) At the ACP, set lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
    - 6) If the cove lights and direct lights come on, then you corrected the fault. Set the lights to their usual mode.

**————— END OF TASK —————**

**811. BSI Light Power Fault - All Right BSI Window Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R427
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	11	C00594	WINDOW LIGHT RIGHT

- (3) Wiring

**B. Related Data**

<b>Lights</b>	<b>Manual</b>
Window Lights	SSM/WDM 33-21-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00

EFFECTIVITY  
AKS ALL

**33-20 TASKS 810-811**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 220  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	11	C00594	WINDOW LIGHT RIGHT

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all right window lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all right window lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the relay.
  - (a) Replace the relay R427 (WDM 33-21-XX ).
  - (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If all right window lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all right window lights do not come on, then continue.
- (2) Replace the circuit breaker.
  - (a) Replace this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	11	C00594	WINDOW LIGHT RIGHT

- (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.

EFFECTIVITY  
AKS ALL

**33-20 TASK 811**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 221  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (e) At the ACP, set lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (f) If all right window lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all right window lights do not come on, then continue.
- (3) Do a check of the wiring.
  - (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-21-XX ).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
    - 4) If necessary, input the password to get access to the attendant control panel.
    - 5) At the ACP, set lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
    - 6) If all right window lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**812. BSI Light Power Fault - All Left BSI Window Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R427
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	12	C00776	WINDOW LIGHT LEFT

- (3) Wiring

**B. Related Data**

<b>Lights</b>	<b>Manual</b>
Window Lights	SSM/WDM 33-21-XX
Passenger Compartment Lights	SDS 33-20-00
Window Lights	SDS 33-21-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 811-812**

D633A103-AKS

Page 222  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	12	C00776	WINDOW LIGHT LEFT

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.
- NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (a) If all left window lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all left window lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the relay.
- (a) Replace the relay R427 (WDM 33-21-XX ).
- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.
- NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (f) If all left window lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all left window lights do not come on, then continue.
- (2) Replace the circuit breaker.
- (a) Replace this circuit breaker:

**Power Distribution Panel Number 2, P92**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	12	C00776	WINDOW LIGHT LEFT

- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.
- NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (f) If all left window lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all left window lights do not come on, then continue.
- (3) Do a check of the wiring.
  - (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-21-XX ).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
    - 4) If necessary, input the password to get access to the attendant control panel.
    - 5) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- 6) If all left window lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**813. BSI Light Power Fault - All Forward Right BSI Bin/Wash/COS Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R120
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	9	C00590	CEILING LT-R

- (3) Wiring

**B. Related Data**

<b>Lights</b>	<b>Manual</b>
Ceiling Lights	SSM/WDM 33-22-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	9	C00590	CEILING LT-R

EFFECTIVITY  
AKS ALL

**33-20 TASKS 812-813**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 224  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all forward right bin/wash/COS lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all forward right bin/wash/COS lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the relay.
  - (a) Replace the relay R120 (WDM 33-22-11).
  - (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If all forward right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all forward right bin/wash/COS lights do not come on, then continue.
- (2) Replace the circuit breaker
  - (a) Replace this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	9	C00590	CEILING LT-R

- (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
  - (f) If all forward right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all forward right bin/wash/COS lights do not come on, then continue.
- (3) Do a check of the wiring.





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-22-XX).
- (b) If you find a problem with the wiring, then do these steps:
  - 1) Repair the wiring.
  - 2) Cycle the Cabin/Utility switch.
  - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - 4) If necessary, input the password to get access to the attendant control panel.
  - 5) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
  - 6) If all forward right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**814. BSI Light Power Fault - All Forward Left BSI Bin/Wash/COS Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R120
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	10	C00591	CEILING LT-L

- (3) Wiring

**B. Related Data**

<b>Lights</b>	<b>Manual</b>
Ceiling Lights	SSM/WDM 33-22-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	10	C00591	CEILING LT-L

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 813-814**

D633A103-AKS

Page 226  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (5) At the attendant control panel (ACP), set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all forward left bin/wash/COS lights come on, then there was an intermittent fault. Set the lights to their usual mode.
- (b) If all forward left bin/wash/COS lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the relay.

- (a) Replace the relay R120 (WDM 33-22-11).
- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If all forward bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all forward bin/wash/COS lights do not come on, then continue.

- (2) Replace the circuit breaker

- (a) Replace this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	10	C00591	CEILING LT-L

- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If all forward left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
- (g) If all forward left bin/wash/COS lights do not come on, then continue.

- (3) Do a check of the wiring.

- (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-22-XX).
- (b) If you find a problem with the wiring, then do these steps:
- 1) Repair the wiring.



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 2) Cycle the Cabin/Utility switch.
- 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- 4) If necessary, input the password to get access to the attendant control panel.
- 5) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- 6) If all forward left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**815. BSI Light Power Fault - All Aft Right BSI Bin/Wash/COS Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R394
- (2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	8	C01938	CEILING LIGHT AFT-R

- (3) Wiring

**B. Related Data**

Lights	Manual
Ceiling Lights	SSM/WDM 33-22-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.
- (2) Open and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	8	C01938	CEILING LIGHT AFT-R

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (4) If necessary, input the password to get access to the attendant control panel.
- (5) At the attendant control panel (ACP), set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all aft right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 814-815**

D633A103-AKS

Page 228  
Jun 15/2016



## 737-600/700/800/900 FAULT ISOLATION MANUAL

- (b) If all aft right bin/wash/COS lights do not come on, then do the Fault Isolation Procedure below.

### D. Fault Isolation Procedure

- (1) Replace the R394 relay.

- (a) Replace the R394 relay (WDM 33-22-11).
- (b) Cycle the Cabin/Utility switch.
- (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (d) If necessary, input the password to get access to the attendant control panel.
- (e) At the ACP, set lights to the on mode.

**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (f) If all aft right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all aft right bin/wash/COS lights do not come on, then continue.
- (2) Replace the circuit breaker

- (a) Replace this circuit breaker:

#### Power Distribution Panel Number 1, P91

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	8	C01938	CEILING LIGHT AFT-R

- (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set lights to the on mode.
- NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (f) If all aft right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all aft right bin/wash/COS lights do not come on, then continue.
- (3) Do a check of the wiring.

- (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-22-XX).
- (b) If you find a problem with the wiring, then do these steps:
  - 1) Repair the wiring.
  - 2) Cycle the Cabin/Utility switch.
  - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - 4) If necessary, input the password to get access to the attendant control panel.

EFFECTIVITY  
AKS ALL

## 33-20 TASK 815

D633A103-AKS

Page 229  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 5) At the ACP, set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- 6) If all aft right bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.

————— **END OF TASK** —————

**816. BSI Light Power Fault - All Aft Left BSI Bin/Wash/COS Lights Do Not Come On - Fault Isolation**

**A. Possible Causes**

- (1) Relay R120  
(2) This is the primary circuit breaker related to the fault:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	7	C01937	CEILING LIGHT AFT-L

- (3) Wiring

**B. Related Data**

Lights	Manual
Ceiling Lights	SSM/WDM 33-22-XX
Passenger Compartment Lights	SDS 33-20-00
Ceiling Lights	SDS 33-22-00

**C. Initial Evaluation**

- (1) Cycle the Cabin/Utility switch.  
(2) Open and close this circuit breaker:

**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	7	C01937	CEILING LIGHT AFT-L

- (3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.  
(4) If necessary, input the password to get access to the attendant control panel.  
(5) At the attendant control panel (ACP), set lights to the on mode.

NOTE: Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.

- (a) If all aft left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.  
(b) If all aft left bin/wash/COS lights do not come on, then do the Fault Isolation Procedure below.

**D. Fault Isolation Procedure**

- (1) Replace the R120 relay.  
(a) Replace the relay R120 (WDM 33-22-11).

EFFECTIVITY  
AKS ALL

**33-20 TASKS 815-816**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 230  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (b) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
- (c) If necessary, input the password to get access to the attendant control panel.
- (d) At the ACP, set the lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
- (e) If all aft left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
- (f) If all aft left bin/wash/COS lights do not come on, then continue.
- (2) Replace the circuit breaker.
  - (a) Replace this circuit breaker:  
**Power Distribution Panel Number 1, P91**

<u>Row</u>	<u>Col</u>	<u>Number</u>	<u>Name</u>
E	7	C01937	CEILING LIGHT AFT-L
  - (b) Cycle the Cabin/Utility switch.
  - (c) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
  - (d) If necessary, input the password to get access to the attendant control panel.
  - (e) At the ACP, set the lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
  - (f) If all aft left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.
  - (g) If all aft left bin/wash/COS lights do not come on, then continue.
- (3) Do a check of the wiring.
  - (a) Do a check of the wiring between the applicable circuit breaker and the lights (WDM 33-22-XX).
  - (b) If you find a problem with the wiring, then do these steps:
    - 1) Repair the wiring.
    - 2) Cycle the Cabin/Utility switch.
    - 3) Make sure that the attendant control panel display is activated. To activate it, touch the opposite corners of the display sequentially within two seconds.
    - 4) If necessary, input the password to get access to the attendant control panel.
    - 5) At the ACP, set the lights to the on mode.  
**NOTE:** Use the ACP maintenance display. On the ACP display, touch the MAINTENANCE tab. When the ACP changes to the maintenance display, touch LAMP TESTS.
    - 6) If all aft left bin/wash/COS lights come on, then you corrected the fault. Set the lights to their usual mode.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-20 TASK 816**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 231  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**817. BSI Light Column Address Fault - System Error - Fault Isolation**

**A. Description**

- (1) This task is for the following maintenance messages:
  - (a) 33-11001
  - (b) 33-11002
  - (c) 33-11003
  - (d) 33-11004
  - (e) 33-11005
  - (f) 33-11006
  - (g) 33-11007
  - (h) 33-11008
  - (i) 33-11009
  - (j) 33-11010
  - (k) 33-11011
  - (l) 33-11016
- (2) This fault is generated by the system test.

**B. Possible Causes**

- (1) Light Failure

**C. Related Data**

- (1) WDM 33-21-12
- (2) WDM 33-22-21
- (3) WDM 33-22-22
- (4) WDM 33-22-31
- (5) WDM 33-22-32
- (6) WDM 33-22-41
- (7) WDM 33-22-51
- (8) WDM 33-24-21
- (9) WDM 33-24-22

**D. Initial Evaluation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then there was an intermittent fault.
  - (b) If the fault shows, then continue.

**E. Fault Isolation Procedure**

- (1) Cycle the CABIN/UTILITY switch on the P5 overhead panel to the OFF and ON position.  
NOTE: Make sure the switch is in the OFF position for at least 10 seconds.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (2) Replace the light that is reporting the fault. Do the applicable task:
  - (a) Window Light - LED Light Assembly Replacement, AMM TASK 33-21-00-960-804

EFFECTIVITY  
AKS ALL

**33-20 TASK 817**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 232  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (b) Window Light - Overwing Exit Light Assembly Replacement, AMM TASK 33-21-00-960-805
- (c) Ceiling Light, Bin/Wash - LED Light Assembly Replacement, AMM TASK 33-22-00-960-807
- (d) Ceiling Light, Direct - LED Light Assembly Replacement, AMM TASK 33-22-00-960-808
- (e) Ceiling Light, Cove - LED Light Assembly Replacement, AMM TASK 33-22-00-960-809
- (f) Ceiling Light, Center Overhead Stowage - LED Light Assembly Replacement, AMM TASK 33-22-00-960-810

**F. Repair Confirmation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then you corrected the fault.

————— **END OF TASK** —————

**818. BSI Light Column Address Fault - Zone/Scene - Fault Isolation**

**A. Description**

- (1) This task is for the following maintenance messages:
  - (a) 33-11012
  - (b) 33-11013
  - (c) 33-11014
  - (d) 33-11015
- (2) This fault is generated by the system test.

**B. Possible Causes**

- (1) Data Load
- (2) Light Failure

**C. Related Data**

- (1) WDM 33-21-12
- (2) WDM 33-22-21
- (3) WDM 33-22-22
- (4) WDM 33-22-31
- (5) WDM 33-22-32
- (6) WDM 33-22-41
- (7) WDM 33-22-51
- (8) WDM 33-24-21
- (9) WDM 33-24-22

**D. Initial Evaluation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then there was an intermittent fault.
  - (b) If the fault shows, then continue.

EFFECTIVITY  
AKS ALL

**33-20 TASKS 817-818**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 233  
Jun 15/2016





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**E. Fault Isolation Procedure**

- (1) Do a Phase 2 Data Load. Refer to: Attendant Control Panel (ACP) Software Loading, AMM TASK 23-42-03-470-801.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (2) Cycle the CABIN/UTILITY switch on the P5 overhead panel to the OFF and ON position.  
**NOTE:** Make sure the switch is in the OFF position for at least 10 seconds.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (3) Replace the light that is reporting the fault. Do the applicable task:
  - (a) Window Light - LED Light Assembly Replacement, AMM TASK 33-21-00-960-804
  - (b) Window Light - Overwing Exit Light Assembly Replacement, AMM TASK 33-21-00-960-805
  - (c) Ceiling Light, Bin/Wash - LED Light Assembly Replacement, AMM TASK 33-22-00-960-807
  - (d) Ceiling Light, Direct - LED Light Assembly Replacement, AMM TASK 33-22-00-960-808
  - (e) Ceiling Light, Cove - LED Light Assembly Replacement, AMM TASK 33-22-00-960-809
  - (f) Ceiling Light, Center Overhead Stowage - LED Light Assembly Replacement, AMM TASK 33-22-00-960-810

**F. Repair Confirmation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then you corrected the fault.

————— **END OF TASK** —————

**819. BSI Light Column Address Fault - Communication Error - Fault Isolation**

**A. Description**

- (1) This task is for the following maintenance messages:
  - (a) 33-11017
  - (b) 33-11018
  - (c) 33-11019
- (2) This fault is generated by the system test.

**B. Possible Causes**

- (1) Wiring
- (2) Light Failure

**C. Related Data**

- (1) WDM 23-42-XX
- (2) WDM 33-21-12
- (3) WDM 33-22-21
- (4) WDM 33-22-22
- (5) WDM 33-22-31
- (6) WDM 33-22-32

EFFECTIVITY  
AKS ALL

**33-20 TASKS 818-819**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 234  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (7) WDM 33-22-41
- (8) WDM 33-22-51
- (9) WDM 33-24-21
- (10) WDM 33-24-22

**D. Initial Evaluation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then there was an intermittent fault.
  - (b) If the fault shows, then continue.

**E. Fault Isolation Procedure**

- (1) Cycle the CABIN/UTILITY switch on the P5 overhead panel to the OFF and ON position.  
NOTE: Make sure the switch is in the OFF position for at least 10 seconds.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (2) Do a wiring connection check at the light that is reporting the fault and repair if necessary.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (3) If there is no problem with the light connection, then repair the wiring between the light that is reporting the fault and the attendant control panel.
  - (a) Do the Repair Confirmation procedure below.
  - (b) If the fault shows, then continue.
- (4) Replace the light that is reporting the fault. Do the applicable task:
  - (a) Window Light - LED Light Assembly Replacement, AMM TASK 33-21-00-960-804
  - (b) Window Light - Overwing Exit Light Assembly Replacement, AMM TASK 33-21-00-960-805
  - (c) Ceiling Light, Bin/Wash - LED Light Assembly Replacement, AMM TASK 33-22-00-960-807
  - (d) Ceiling Light, Direct - LED Light Assembly Replacement, AMM TASK 33-22-00-960-808
  - (e) Ceiling Light, Cove - LED Light Assembly Replacement, AMM TASK 33-22-00-960-809
  - (f) Ceiling Light, Center Overhead Stowage - LED Light Assembly Replacement, AMM TASK 33-22-00-960-810

**F. Repair Confirmation**

- (1) Do this task: Attendant Control Panel (ACP) - BITE Procedure, 23-42 TASK 801.
  - (a) If the fault message does not show, then you corrected the fault.

————— **END OF TASK** —————

EFFECTIVITY  
AKS ALL

**33-20 TASK 819**

D633A103-AKS


BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 235  
Jun 15/2016



## 737-600/700/800/900 FAULT ISOLATION MANUAL

### CONFIGURATION GENERAL LIGHTING LAY-OUT

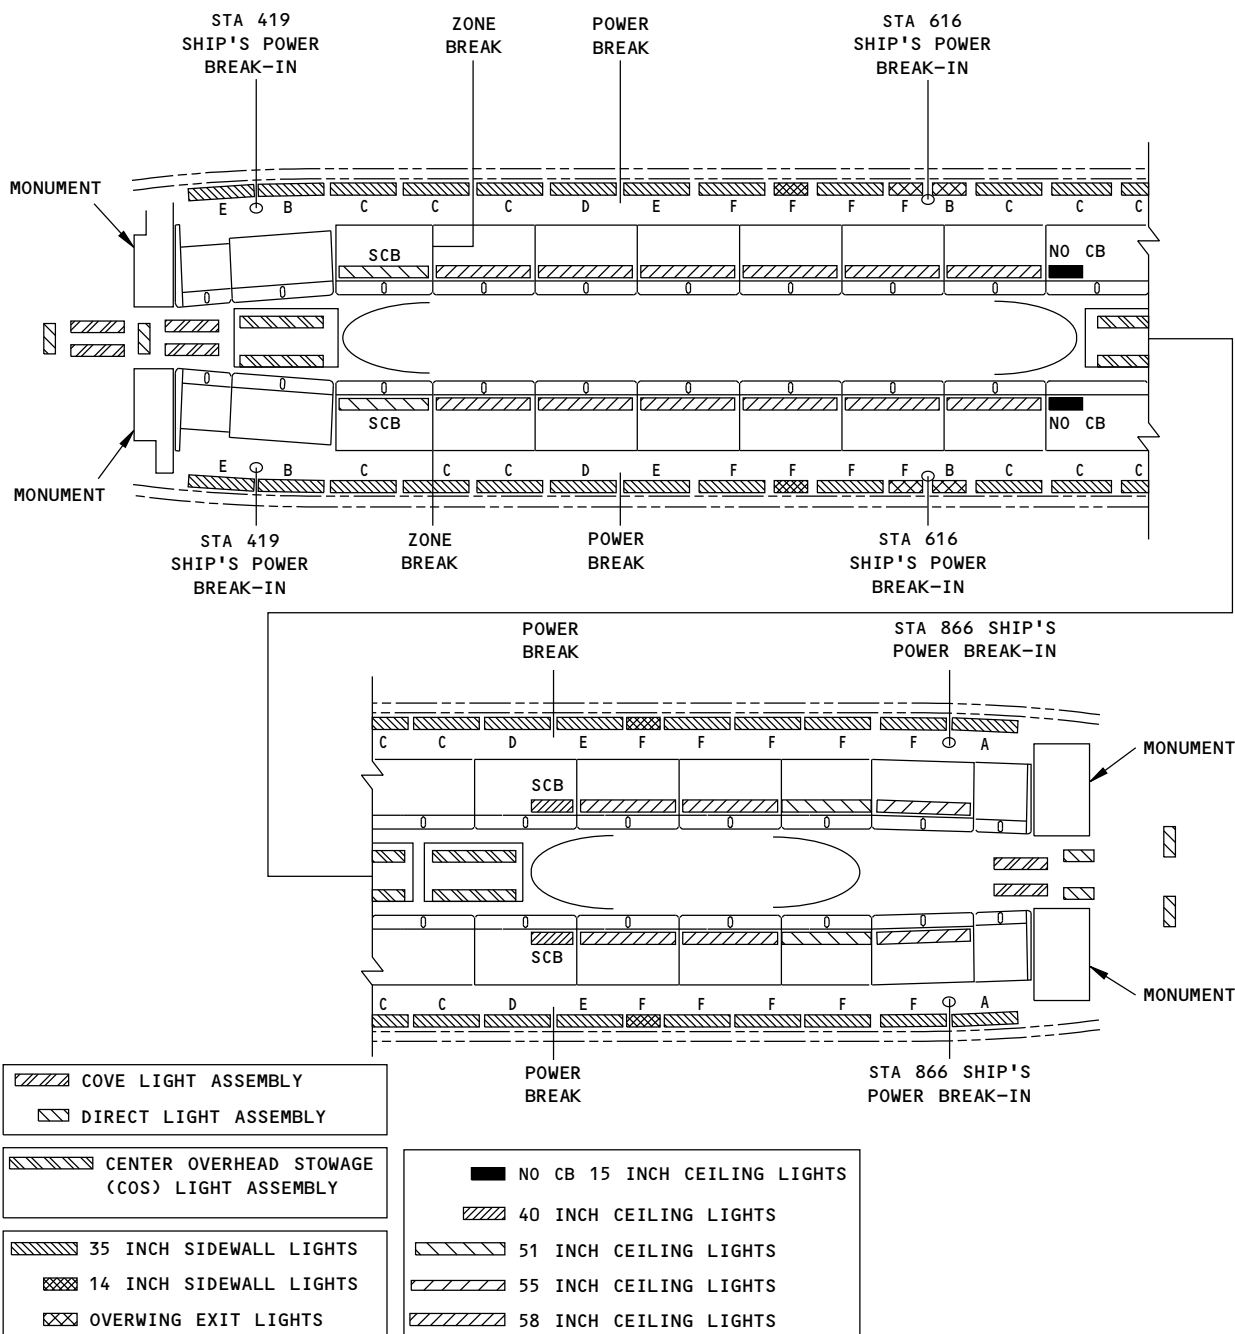

NOTE: "NO CB" DENOTES A CEILING LIGHT ASSEMBLY WITH NO CROSS-BIN LIGHT.  
"SCB" DENOTES A CEILING LIGHT ASSEMBLY WITH A SHORTENED CROSS-BIN LIGHTING LED STRIP INSIDE HOUSING.

2303511 S0000522444\_V1

General Lighting Layout  
Figure 301/33-20-00-990-802 (Sheet 1 of 2)

EFFECTIVITY  
AKS ALL

33-20 TASK SUPPORT

D633A103-AKS


BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 301  
Feb 15/2014



737-600/700/800/900  
FAULT ISOLATION MANUAL

KEY: LIGHTING ASSEMBLIES CONNECTIONS  
(INPUTS AND OUTPUTS)

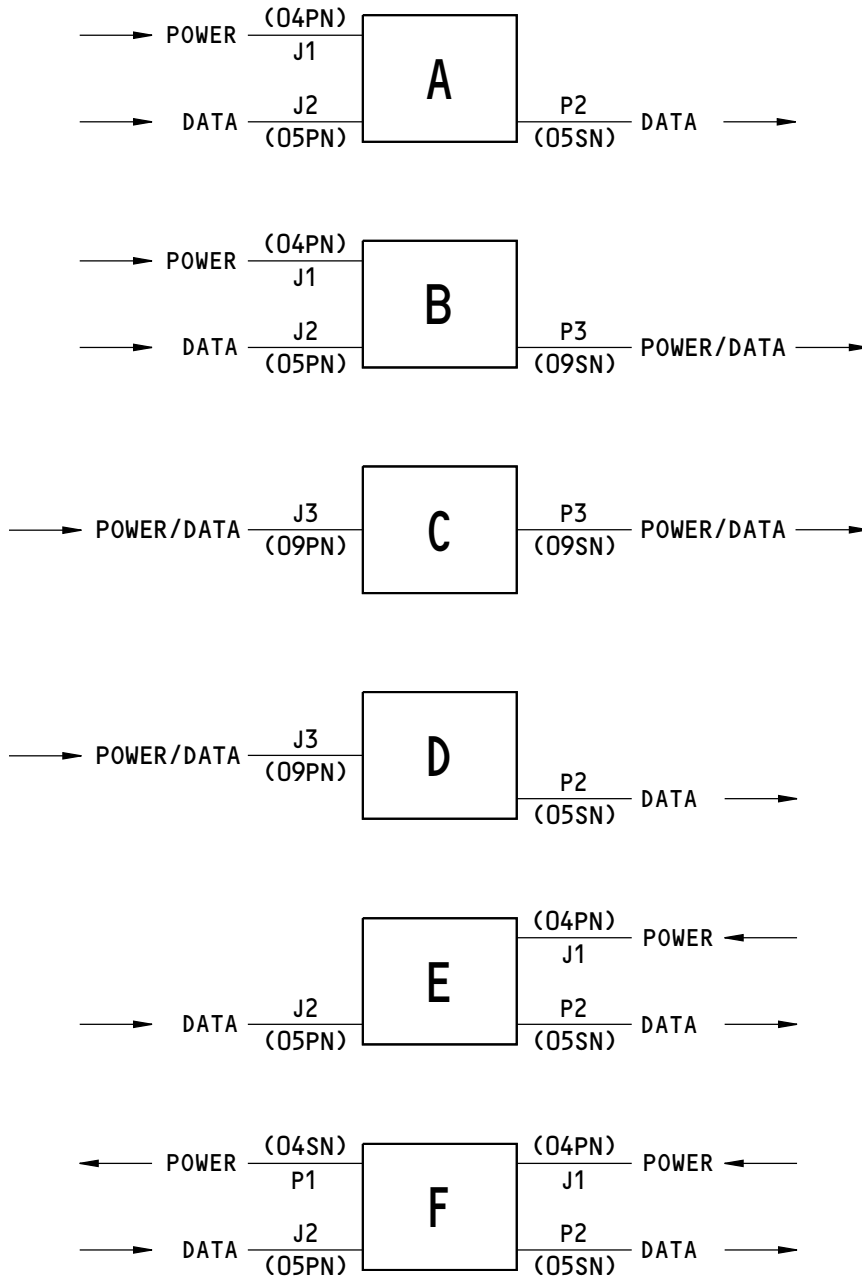

2303513 S0000522988\_V1

General Lighting Layout  
Figure 301/33-20-00-990-802 (Sheet 2 of 2)

EFFECTIVITY  
AKS ALL

33-20 TASK SUPPORT

D633A103-AKS


BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 302  
Feb 15/2014



## 737-600/700/800/900 FAULT ISOLATION MANUAL

### BSI TROUBLESHOOTING GUIDE

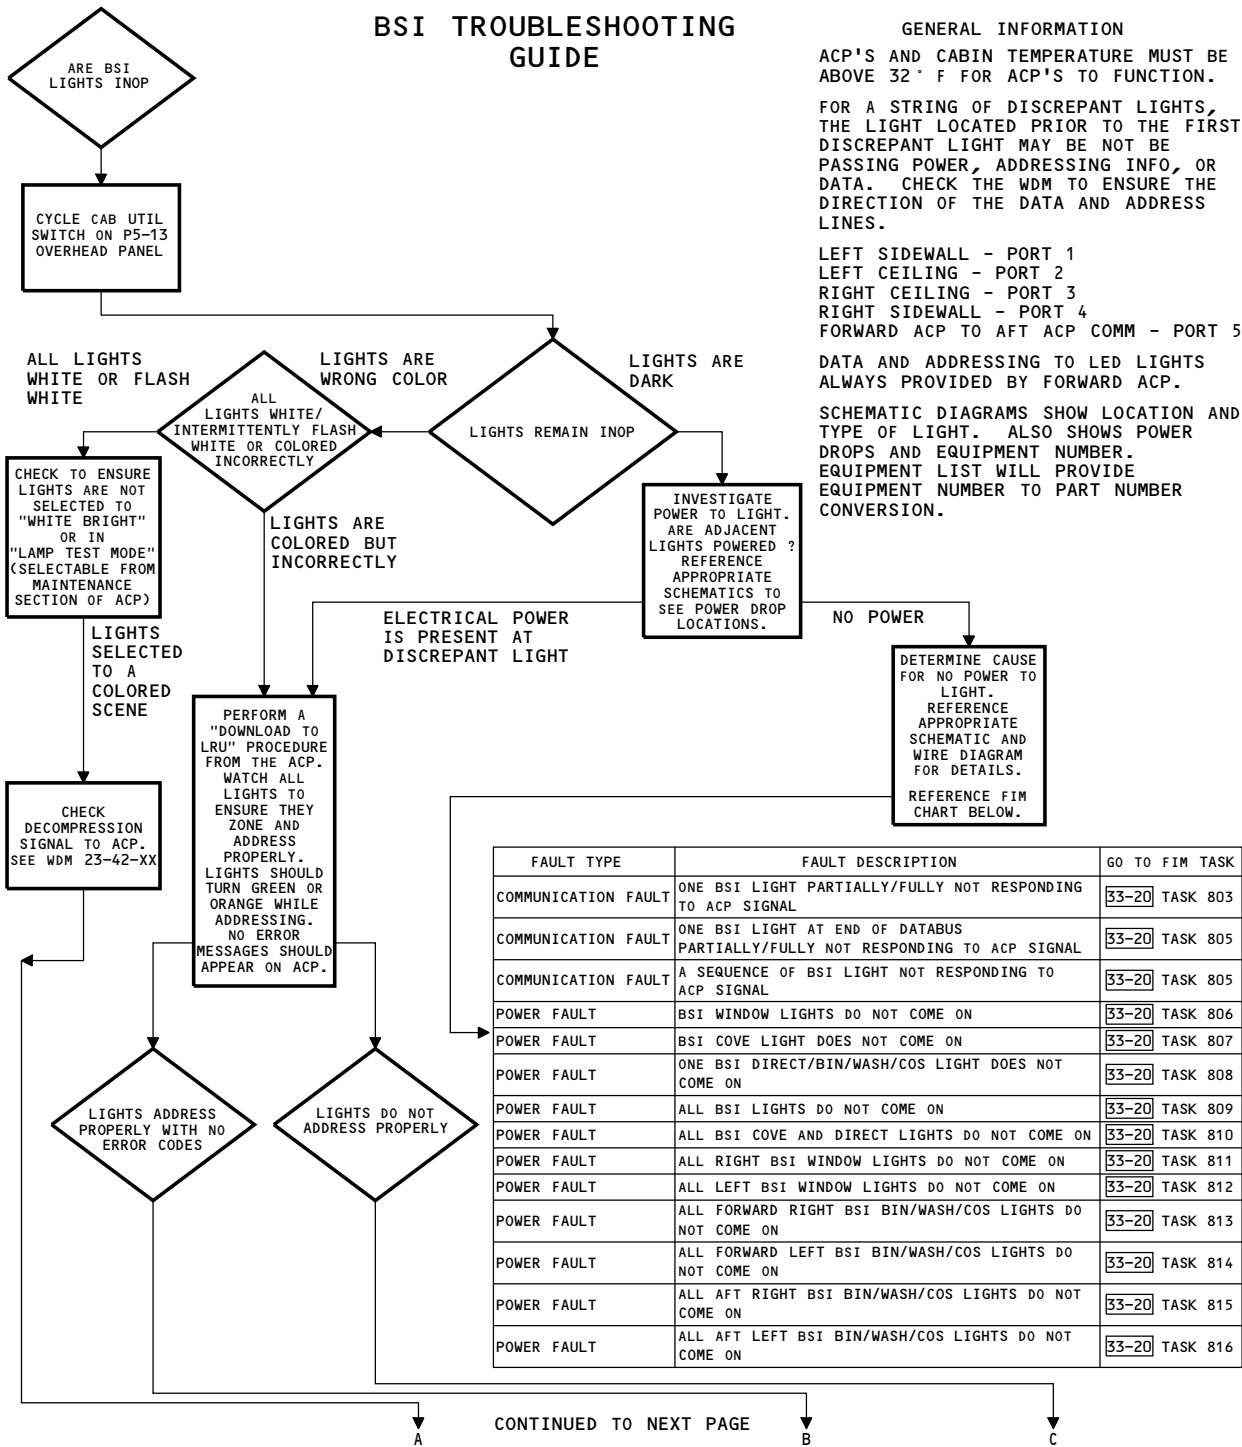

#### GENERAL INFORMATION

ACP'S AND CABIN TEMPERATURE MUST BE ABOVE 32° F FOR ACP'S TO FUNCTION.

FOR A STRING OF DISCREPANT LIGHTS, THE LIGHT LOCATED PRIOR TO THE FIRST DISCREPANT LIGHT MAY BE NOT BE PASSING POWER, ADDRESSING INFO, OR DATA. CHECK THE WDM TO ENSURE THE DIRECTION OF THE DATA AND ADDRESS LINES.

LEFT SIDEWALL - PORT 1  
LEFT CEILING - PORT 2  
RIGHT CEILING - PORT 3  
RIGHT SIDEWALL - PORT 4  
FORWARD ACP TO AFT ACP COMM - PORT 5

DATA AND ADDRESSING TO LED LIGHTS ALWAYS PROVIDED BY FORWARD ACP.

SCHEMATIC DIAGRAMS SHOW LOCATION AND TYPE OF LIGHT. ALSO SHOWS POWER DROPS AND EQUIPMENT NUMBER. EQUIPMENT LIST WILL PROVIDE EQUIPMENT NUMBER TO PART NUMBER CONVERSION.

**BSI Trouble Shooting Guide**  
**Figure 302/33-20-00-990-803 (Sheet 1 of 3)**

EFFECTIVITY  
AKS ALL

## 33-20 TASK SUPPORT

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details


Page 303  
Feb 15/2014

2306386 S0000523803\_V1



## 737-600/700/800/900 FAULT ISOLATION MANUAL

CONTINUED FROM PREVIOUS PAGE

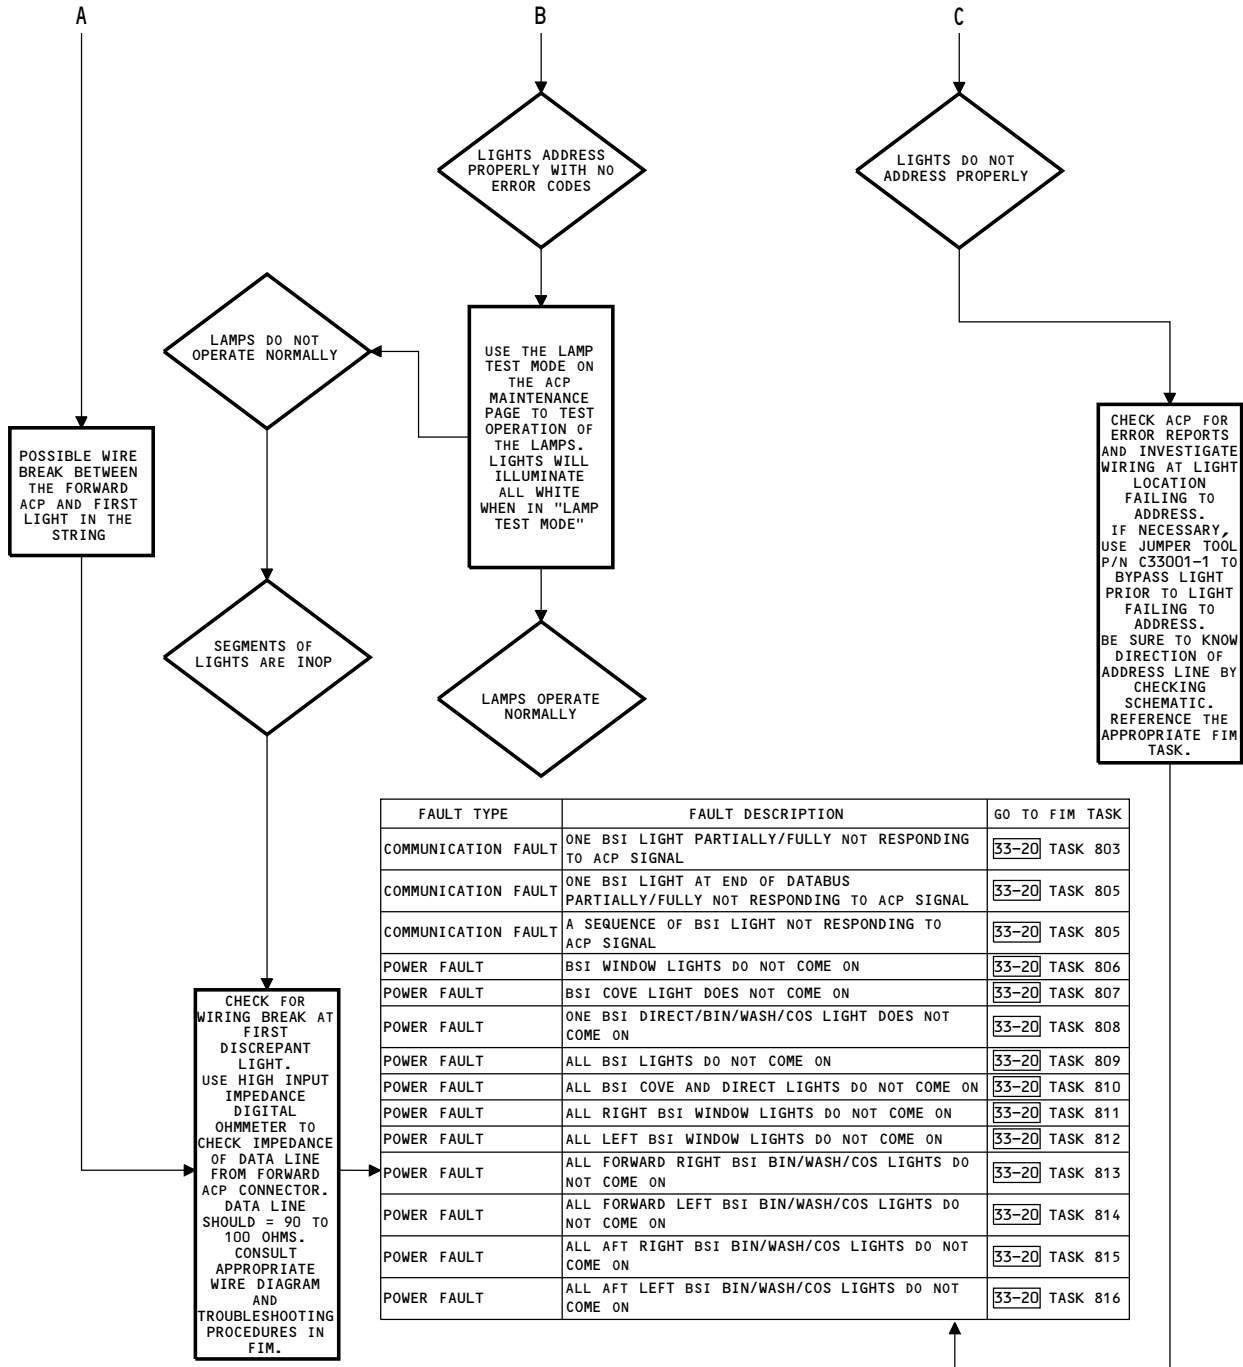

2306463 S0000523869\_V1

BSI Trouble Shooting Guide  
Figure 302/33-20-00-990-803 (Sheet 2 of 3)

EFFECTIVITY  
AKS ALL


## 33-20 TASK SUPPORT

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 304  
Feb 15/2014

**BOEING**  
737-600/700/800/900  
**FAULT ISOLATION MANUAL**

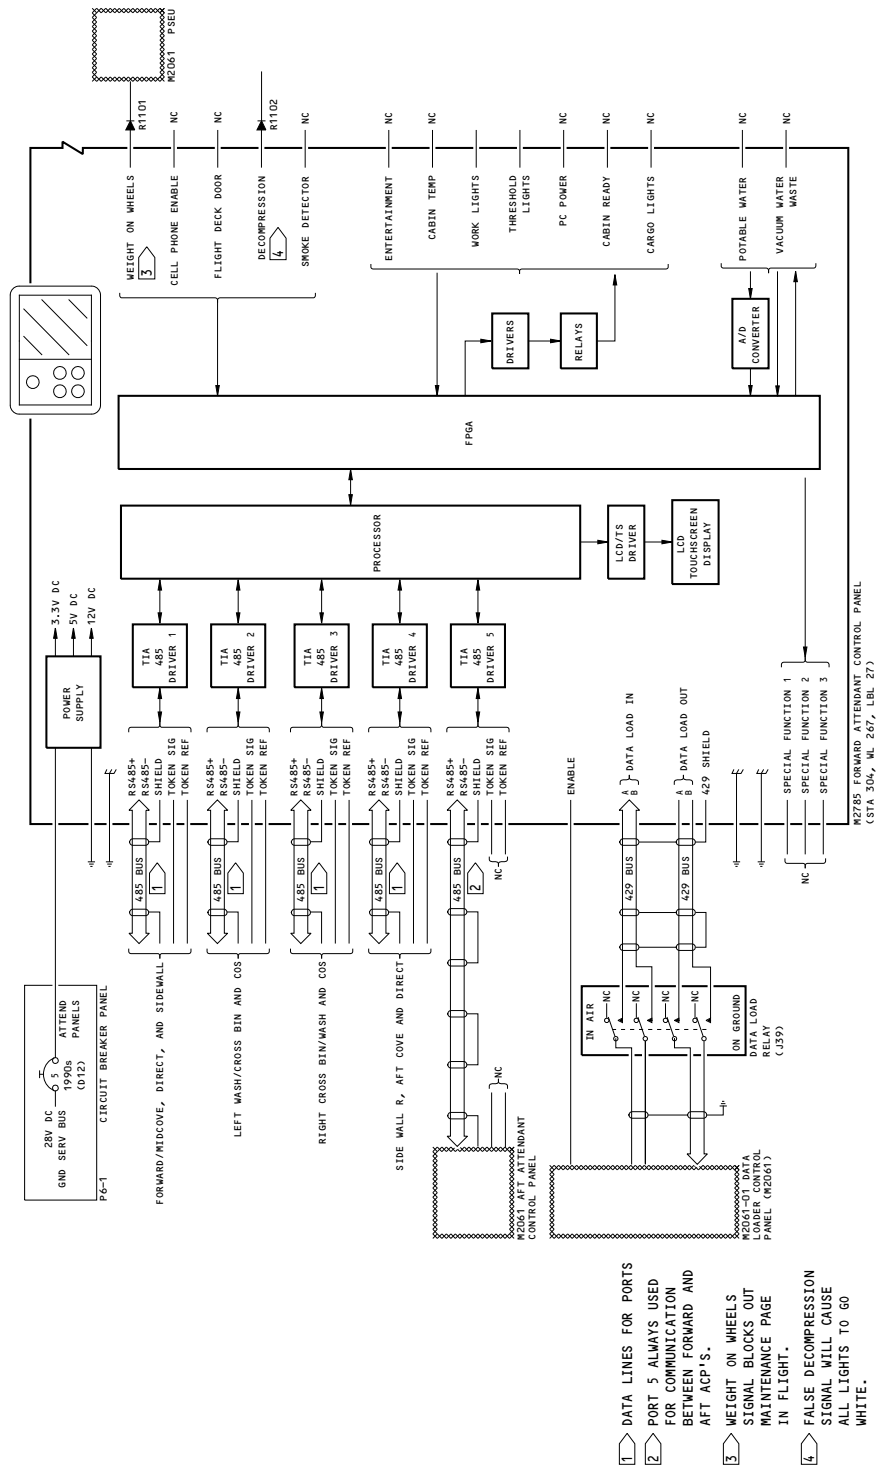

**BSI Trouble Shooting Guide**  
**Figure 302/33-20-00-990-803 (Sheet 3 of 3)**

2306478 S0000523870\_V1

EFFECTIVITY  
AKS ALL

## 33-20 TASK SUPPORT

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 305  
Feb 15/2014



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Cargo/Service Compartment Lighting Problem - Fault Isolation**

**A. Description**

- (1) (SDS SUBJECT 33-32-00)
- (2) (SDS SUBJECT 33-33-00)
- (3) (SDS SUBJECT 33-34-00)
- (4) (SDS SUBJECT 33-35-00)
- (5) (SDS SUBJECT 33-36-00)

**B. Possible Causes**

- (1) Use the applicable system schematic manual (SSM) or wiring diagram manual (WDM) in the table below to identify possible causes for the lighting problem.

**C. Circuit Breakers**

- (1) Use the applicable SSM or WDM in the table below to identify the circuit breakers related to the fault.

**D. Related Data**

- (1) Use the table below to identify the applicable SSM and WDM for the lights in the cargo and service compartments.

**E. Initial Evaluation**

- (1) In this table, find the light that does not operate correctly and its applicable SSM and WDM:

**Table 201**

<b>LIGHT</b>	<b>SSM/WDM</b>
Accessory Compartment Lights	33-35-11
Air Conditioning Compartment Lights	33-33-11
APU Service Lights	33-35-11
Cargo Compartment Lights, Aft	33-36-12
Cargo Compartment Lights, Forward	33-36-11
Electronic Equipment Compartment Lights	33-34-11
Tailcone Lights	33-35-11
Wheel Well Lights	33-32-11

- (2) On the applicable SSM or WDM, identify the control for the light.
- (3) Set the light to the on mode, then all other possible modes, including off.
  - (a) If the light operates correctly in all possible modes, then there was an intermittent fault.
    - 1) Set the light to the usual mode.
  - (b) If the light does not operate correctly in all possible modes, then do the fault isolation procedure below.

**F. Fault Isolation Procedure**

- (1) If the light does not come on, then replace the lamp.
  - (a) To replace it, use the applicable task that follows:
    - 1) For a wheel well light, do this task:

EFFECTIVITY  
AKS ALL

**33-30 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 201  
Jun 15/2016





## 737-600/700/800/900 FAULT ISOLATION MANUAL

Wheel Well Light - Lamp Replacement, AMM TASK 33-32-00-960-801.

- 2) For an air conditioning compartment light, do this task:  
Air Conditioning Compartment Light - Lamp Replacement, AMM TASK 33-33-00-960-801.
- 3) For an electronic equipment compartment light, do this task:  
Electronic Equipment Compartment Light - Lamp Replacement, AMM TASK 33-34-00-960-801.
- 4) For an accessory compartment light, do this task:  
Accessory Compartment Light - Lamp Replacement, AMM TASK 33-35-00-960-801.
- 5) For an APU service light, do this task:  
Air Conditioning Compartment Light - Lamp Replacement, AMM TASK 33-33-00-960-801.
- 6) For a tailcone light, do this task:  
Accessory Compartment Light - Lamp Replacement, AMM TASK 33-35-00-960-801.
- 7) For a cargo compartment light,  
These are the tasks:  
Cargo Compartment Light - Lamp Replacement, Door, AMM TASK 33-36-00-960-802,  
Cargo Compartment Light - Lamp Replacement, Ceiling, AMM TASK 33-36-00-960-801.

- (b) If the light operates correctly in all possible modes, then you corrected the fault.
- (c) If the light does not operate correctly in all possible modes, then continue.

**WARNING:** BEFORE YOU DO COMPONENT REPLACEMENTS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (2) If the light does not go off, then use the applicable SSM or WDM to replace the switch.
  - (a) If a circuit breaker was opened, then close it.
  - (b) Set the light to the on mode, then to the off mode.
  - (c) If the light goes off, then you corrected the fault.
  - (d) If the light does not go off, then continue.

**WARNING:** BEFORE YOU DO WIRING CHECKS, COMPONENT REPLACEMENTS, OR WIRING REPAIRS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS OR SET SWITCHES TO THE OFF MODE TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (3) If the light does not operate correctly in all possible modes, including off, then use the SSM or WDM to examine the lighting circuitry.
  - (a) Do continuity checks between the source of power and the light.
  - (b) If you identify a component in the lighting circuitry that does not operate correctly, then replace the component.

EFFECTIVITY  
AKS ALL

## 33-30 TASK 801

D633A103-AKS

Page 202  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 1) If a circuit breaker was opened, then close it.
- 2) Set the light to the on mode, then all other possible modes, including off.
- 3) If the light operates correctly in all possible modes, then you corrected the fault.
  - a) Set the light to the usual mode.
- (c) If all components in the lighting circuitry operate correctly, then repair the wiring.
  - 1) If a circuit breaker was opened, then close it.
  - 2) Set the light to the on mode, then all other possible modes, including off.
  - 3) If the light operates correctly in all possible modes, then you corrected the fault.
  - 4) Set the light to the usual mode.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-30 TASK 801**

D633A103-AKS

Page 203  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Exterior Lighting Problem - Fault Isolation**

**A. Description**

- (1) Wing Illumination Lights (SDS SUBJECT 33-41-00)
- (2) Landing Lights (SDS SUBJECT 33-42-00)
- (3) Position Lights (SDS SUBJECT 33-43-00)
- (4) Taxi and Runway Turnoff Lights (SDS SUBJECT 33-45-00)
- (5) Logo Lights (SDS SUBJECT 33-49-00)

**B. Possible Causes**

- (1) Use the applicable System Schematic Manual (SSM) or Wiring Diagram Manual (WDM) in the table below to identify possible causes for the lighting problem.

**C. Circuit Breakers**

- (1) Use the applicable SSM or WDM in the table below to identify the circuit breakers related to the problem.

**D. Related Data**

- (1) Use the table below to identify the applicable SSM and WDM for the exterior lights.

**E. Initial Evaluation**

- (1) AIRPLANES WITH CABIN/UTILITY SWITCH ON THE P5-13 PANEL:  
Make sure CAB/UTIL switch is in the ON position.
- (2) In this table, find the light that does not operate correctly and its applicable SSM and WDM.

**Table 201**

LIGHT	SSM/WDM
Wing Illumination Lights	33-41-11
Position (Nav) Lights, Wing Aft	33-43-11
Position (Nav) Lights, Wing Forward	33-43-11
<b>AKS 001-017</b>	
Landing Lights, Fixed	33-42-11
Landing Lights, Retractable	33-42-11
Runway Turnoff Lights	33-45-11
Taxi Light	33-45-11
<b>AKS 018-999</b>	
Landing Taxi and Runway Turnoff Lighting System	33-42-21
<b>AKS ALL</b>	
Logo Lights	33-49-11

- (3) On the applicable SSM or WDM, identify the control for the light.
- (4) Set the light to the ON mode, then all other possible modes, including OFF.
  - (a) If the light operates correctly in all possible modes, then there was an intermittent problem.
    - 1) Set the light to the usual mode.

EFFECTIVITY  
AKS ALL

**33-40 TASK 801**

D633A103-AKS

Page 201  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (b) If the light does not operate correctly in all possible modes, then do the Fault Isolation Procedure below.

**F. Fault Isolation Procedure**

- (1) If the light does not come on, then replace the lamp.
- (a) To replace it, use the applicable task that follows:
- 1) For a wing illumination light, do this task:  
Wing Illumination Light - Lamp Replacement, AMM TASK 33-41-00-960-801.
  - 2) For a fixed landing light, do this task:  
Fixed Landing Light - Lamp Replacement, AMM TASK 33-42-01-960-801 or Fixed Landing Light - Main Array Assembly Replacement, AMM TASK 33-42-01-960-803.
  - 3) For a retractable landing light, do this task:  
Retractable Landing Light - Lamp Replacement, AMM TASK 33-42-02-960-801.
  - 4) For a forward wing position light, do this task:  
Forward Position Light with Single Lens - Lamp Replacement, AMM TASK 33-43-11-960-801 or Forward Position Light with Dual Lens - Lamp Replacement, AMM TASK 33-43-11-960-802

**AKS 002-999**

- 5) For a winglet LED position light, do this task;  
Position Light - LED Light Control PBA Replacement, AMM TASK 33-43-10-960-802

**AKS ALL**

- 6) For an aft wing position light, do this task:  
Aft Position Light - Lamp Replacement, AMM TASK 33-43-12-960-801.
  - 7) For a taxi light, do this task:  
Taxi Light - Lamp Replacement, AMM TASK 33-45-01-960-801.
  - 8) For a runway turnoff light, do this task:  
Runway Turnoff Light - Lamp Replacement, AMM TASK 33-45-02-960-801 or Runway Turnoff Light - Light Assembly Replacement, AMM TASK 33-45-02-900-801.
  - 9) For a logo light, do this task:  
Logo Light - Lamp Replacement, AMM TASK 33-49-00-960-801.
- (b) If the light operates correctly in all possible modes, then you corrected the problem.
- (c) If the light does not operate correctly in all possible modes, then continue.

**WARNING:** BEFORE YOU DO COMPONENT REPLACEMENTS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (2) If the light does not go off, then use the applicable SSM or WDM to replace the switch.
- (a) If a circuit breaker was opened, then close it.
  - (b) Set the light to the ON mode, then to the OFF mode.
  - (c) If the light goes off, then you corrected the problem.

EFFECTIVITY  
AKS ALL

**33-40 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 202  
Oct 15/2015



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (d) If the light does not go off, then continue.

**WARNING:** BEFORE YOU DO WIRING CHECKS, COMPONENT REPLACEMENTS, OR WIRING REPAIRS, PROTECT YOURSELF FROM ELECTRICAL SHOCK. OPEN CIRCUIT BREAKERS OR SET SWITCHES TO THE OFF MODE TO REMOVE ELECTRICAL POWER. ACCIDENTAL GROUNDS DURING MAINTENANCE ACTIVITIES CAN CAUSE ELECTRICAL SHOCK WHEN ELECTRICAL POWER IS SUPPLIED TO THE LIGHTING SYSTEM.

- (3) If the light does not operate correctly in all possible modes, including off, then use the SSM or WDM to examine the lighting circuitry.
- (a) Do continuity checks between the source of power and the light.
- (b) If you identify a component in the lighting circuitry that does not operate correctly, then replace the component.
- 1) If a circuit breaker was opened, then close it.
- 2) Set the light to the ON mode, then all other possible modes, including OFF.
- 3) If the light operates correctly in all possible modes, then you corrected the problem.
- a) Set the light to the usual mode.
- (c) If all components in the lighting circuitry operate correctly, then repair the wiring.
- 1) If a circuit breaker was opened, then close it.
- 2) Set the light to the ON mode, then all other possible modes, including OFF.
- 3) If the light operates correctly in all possible modes, then you corrected the problem.
- 4) Set the light to the usual mode.

———— **END OF TASK** ————

**AKS 002-999**

**802. Winglet LED Position Lights - Fault Isolation**

**A. Description**

- (1) Inoperative winglet LED position lights on 737NG airplanes.

**B. Possible Causes**

- (1) Damage of the printed board assemblies (PBA) due to overheat. The affected circuits provide power for a single LED module.

**NOTE:** Defective but working LED modules can cause the PBA to become damaged or inoperative. For repeat occurrences of an unserviceable PBA in the same position, it is recommended to replace the LED modules.

**C. Fault Isolation Procedure**

- (1) Remove the inoperative module and the adjacent working module.
- (2) Remove the cover of the PBA, Position Light - LED Light Control PBA Replacement, AMM TASK 33-43-10-960-802.
- (3) Examine the PBA for burns.
- (4) If the PBA does not appear burned, replace the cover.
- (5) Install the non-working LED module in the working LED module position.
- (6) Apply power to the position lights.
- (a) If the module illuminates, replace the PBA.

EFFECTIVITY  
AKS ALL

**33-40 TASKS 801-802**

D633A103-AKS

Page 203  
Feb 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**AKS 002-999 (Continued)**

- (b) If the module does not illuminate, the module is at fault, replace the module.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-40 TASK 802**

D633A103-AKS

Page 204  
Feb 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Anti-Collision Light Problem - Fault Isolation**

**A. Description**

- (1) (SDS SUBJECT 33-44-00)
- (2) The anti-collision lights include the red strobe lights on the top and bottom of the fuselage, the white strobe lights installed in each forward wing tip light assembly, and the white strobe light on the tail.

**NOTE:** Do not replace the forward wing tip light assemblies, L38 and L40. Replace its anti-collision light only.

**Table 201**

ANTI-COLLISION LT	POWER SUPPLY	SWITCH	CIRCUIT BREAKER
L36, Upper	M1744	S57	C00111
L37, Lower	M1745	S57	C00111
Right Wing (in L38)	M1742	S58/S636	C00115
Left Wing (in L40)	M1743	S58/S636	C00115
L46, Tail	None	S58/S636	C00115
Wing & Tail	M1743 & None	R593	C00115

**B. Possible Causes**

- (1) Lamp Assembly
- (2) Light assembly
- (3) Power Supply
- (4) Switch
- (5) Circuit breaker
- (6) Wiring
- (7) Air/Ground Relay

**C. Circuit Breakers**

- (1) These are the primary circuit breakers related to the fault:

**CAPT Electrical System Panel, P18-3**

Row	Col	Number	Name
B	12	C00111	EXTERIOR LIGHTING ANTI COLLISION RED
B	13	C00115	EXT LIGHTING ANTI COLLISION WHITE

**D. Related Data**

- (1) (SSM 33-44-11)
- (2) (SSM 33-44-12)
- (3) (WDM 33-44-11)
- (4) (WDM 33-44-12)

EFFECTIVITY  
AKS ALL

**33-44 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 201  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**E. Initial Evaluation**

- (1) At the overhead panel, P5, set the switch for the anti-collision light to the on mode.
  - (a) If the light comes on and flashes correctly, then set the switch to the off mode.

NOTE: FOR THE UPPER, LOWER, OR WING ANTI-COLLISION LIGHT;

Let the light flash for 20 seconds to stabilize the system. If no misfire occurs, and the light flashed 40 to 45 times a minute, the system operates correctly. If a misfire occurs before the system becomes stable, let the light flash for 60 more seconds. There must be no other misfires after the system becomes stable for the system to operate correctly.

**Table 202**

ANTI-COLLISION LIGHT	FLASHES PER MINUTE
Upper	40 to 45
Lower	40 to 45
Left Wing	40 to 45
Right Wing	40 to 45
Tail	60

- 1) If the light goes off, then there was an intermittent fault.
  - 2) If the light does not go off, then do the fault isolation procedure - The Light Does Not Go Off below.
- (b) If the light comes on but does not flash correctly, then do the fault isolation procedure - The Light Comes On But Does Not Flash Correctly below.
  - (c) If the light does not come on, then do a visual check of lights that use the same circuit breaker.

NOTE: The red anti-collision lights use the same circuit breaker. The white anti-collisions lights use the same circuit breaker.

- 1) If a light that uses the same circuit breaker comes on, then do the fault isolation procedure - The Light Does Not Come On below.
  - 2) If a light that uses the same circuit breaker does not come on, then do the fault isolation procedure - No Lights Come On below.
- (d) If the light comes on and off correctly, set the switch to the Auto mode.
    - 1) Put the airplane in Air Mode AMM PAGEBLOCK 32-09-00/201 and verify that the Lights come on and flash correctly.
      - a) If the lights come on and flash correctly there was an intermittent fault.
      - b) If the lights do not come on correctly, fault isolate the Air/Ground system AMM PAGEBLOCK 32-09-00/201.

**F. Fault Isolation Procedure - The Light Does Not Go Off**

- (1) At the P5 panel, replace the applicable switch, S57 (WDM 33-44-11) or S58/S636 (WDM 33-44-12).
  - (a) Set the switch to the on mode.
  - (b) After the light flashes for a minimum of 20 seconds, set the switch to the off mode.
  - (c) If the light goes off, then you corrected the fault.

EFFECTIVITY  
AKS ALL

**33-44 TASK 801**

D633A103-AKS

Page 202  
Jun 15/2016





## 737-600/700/800/900 FAULT ISOLATION MANUAL

### G. Fault Isolation Procedure - The Light Comes On But Does Not Flash Correctly

(1) FOR AN UPPER OR LOWER ANTI-COLLISION;

Replace the applicable light assembly, L36 or L37.

(a) To replace the upper light assembly, do this task:

Upper Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-01-960-802.

(b) To replace the lower light assembly, do this task:

Lower Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-02-960-802.

(c) If the light comes on and flashes correctly, then you corrected the fault.

(d) If the light does not flash correctly, then replace the applicable power supply, M1744 or M1745.

1) To replace the upper power supply, do this task:

Upper Anti-Collision Light - Power Supply Replacement, AMM TASK 33-44-01-960-804.

2) To replace the lower power supply, do this task:

Lower Anti-Collision Light - Power Supply Replacement, AMM TASK 33-44-02-960-804.

3) If the light comes on and flashes correctly, then you corrected the fault.

(2) FOR A WING ANTI-COLLISION LIGHT;

Replace the anti-collision light assembly in the applicable winglet or in the forward wing tip light assembly, L38 or L40.

NOTE: Do not replace the forward wing tip light assemblies, L38 and L40. Replace its anti-collision light only.

(a) To replace it, do this task:

Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-13-960-801 or  
Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-13-960-803

(b) If the light comes on and flashes correctly, then you corrected the fault.

(c) If the light does not flash correctly, then replace the applicable power supply, M1742 or M1743.

1) To replace it, do this task:

Anti-collision Light - Power Supply Replacement, AMM TASK 33-44-13-960-802.

2) If the light comes on and flashes correctly, then you corrected the fault.

(3) FOR TAIL ANTI-COLLISION LIGHT;

Replace the lamp assembly, L46.

(a) To replace it, do this task:

Tail Anti-Collision Light - Lamp Replacement, AMM TASK 33-44-04-960-801.

(b) If the light comes on and flashes correctly, then you corrected the fault.

### H. Fault Isolation Procedure - The Light Does Not Come On

(1) FOR AN UPPER OR LOWER ANTI-COLLISION;

Replace the lamp assembly in the applicable light assembly, L36 or L37.

(a) To replace the upper lamp, do this task:

Upper Anti-Collision Light - Lamp Assembly Replacement, AMM TASK 33-44-01-960-801.

EFFECTIVITY  
AKS ALL

## 33-44 TASK 801

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- (b) To replace the lower lamp, do this task:  
Lower Anti-Collision Light - Lamp Assembly Replacement, AMM TASK 33-44-02-960-801.
- (c) If the light comes on, then you corrected the fault.
- (d) If the light does not come on, then do a continuity check of the wiring between the switch, S57, and the applicable light assembly, L36 or L37 (WDM 33-44-11).
  - 1) If there is electrical continuity, then replace the applicable light assembly, L36 or L37.
    - a) To replace the upper light, do this task:  
Upper Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-01-960-802.
    - b) To replace the lower light, do this task:  
Lower Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-02-960-802.
    - c) If the light comes on, then you corrected the fault.
    - d) If the light does not come on, then replace the applicable power supply, M1744 or M1745.  
These are the tasks:  
Upper Anti-Collision Light - Power Supply Replacement, AMM TASK 33-44-01-960-804,  
Lower Anti-Collision Light - Power Supply Replacement, AMM TASK 33-44-02-960-804.
    - e) If the light comes on, then you corrected the fault.
  - 2) If there is not electrical continuity, then repair the wiring.
    - a) Set the switch to the on mode.
    - b) If the light comes on, then you corrected the fault.
    - c) Set the switch to the off mode.

**AKS 001**

- (2) FOR A WING ANTI-COLLISION LIGHT;

Replace the attenuator for the applicable wing anti-collision light.

- (a) To replace it, do this task:  
Wing Anti-Collision Light - Attenuator Assembly Replacement, AMM TASK 33-44-13-960-804
  - 1) If the light comes on, then you corrected the fault.
  - 2) If the light does not come on, then continue.

**AKS 002-999**

- (3) FOR AN LED WING ANTI-COLLISION LIGHT;

If the light does not come on;



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**AKS 002-999 (Continued)**

Remove power from the system for one minute by selecting the flight deck Anti-collision light switch off for one minute and then select back on.

**NOTE:** If the light is turned off and back on again in 30 seconds or less, an internal power monitoring circuit can possibly sense a false end-of-life (EOL) condition. This circuit can prevent ACL illumination until power is removed from the light for greater than 40 seconds.

- (a) If the lights come on, then you corrected the fault.
- (b) If the lights do not come on, then continue.
- (c) If a light does not come on or comes on but does not strobe;

Replace the current Step-Down Converter Box (SDCB).

- 1) To replace it, do this task:

Wing Anti-Collision Light - Stepdown Converter Replacement, AMM  
TASK 33-44-13-960-806

**NOTE:** If a light does not come on, the SDBC has an internal fault. The R11 resistor in the SDBC may have failed. To test the R11 resistor, measure the resistance between pin 2 and 3 on connector P3 (the larger diameter connector of the SDBC). The resistance value of the R11 resistor should be 150-151 ohms. Send the removed SDBC back to the winglet manufacturer for evaluation.

**NOTE:** If a light comes on but does not strobe, the SDBC has an internal fault. An inductor in the SDBC may have failed. Send the removed SDBC back to the winglet manufacturer for evaluation.

- a) If the lights come on, then you corrected the fault.
- b) If the lights do not come on, then continue.
- (d) Replace the anti-collision light - LED module in the winglet.

- 1) To replace it, do this task:

Wing Anti-Collision Light - LED Module Replacement, AMM  
TASK 33-44-13-960-805.

- 2) If the light comes on, then you corrected the fault.

**AKS ALL**

- (4) FOR A WING ANTI-COLLISION LIGHT;

Replace the anti-collision light assembly in the applicable winglet or in the forward wing tip light assembly, L38 or L40.

**NOTE:** Do not replace the forward wing tip light assemblies, L38 and L40. Replace its anti-collision light only.

- (a) To replace it, do this task:

Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-13-960-801 or  
Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-13-960-803.

- (b) If the light comes on, then you corrected the fault.
- (c) If the light does not come on, then do a continuity check of the wiring between the switch, S58/S636, and all pins on connector P4 of the applicable light assembly, L38 or L40 (WDM 33-44-12).



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 1) If there is electrical continuity, then replace the applicable power supply, M1742 or M1743.
    - a) To replace it, do this task:  
Anti-collision Light - Power Supply Replacement, AMM TASK 33-44-13-960-802.
    - b) If the light comes on, then you corrected the fault.
  - 2) If there is not electrical continuity, then repair the wiring.
    - a) Set the switch to the on mode.
    - b) If the light comes on, then you corrected the fault.
    - c) Set the switch to the off mode.
- (5) FOR TAIL ANTI-COLLISION LIGHT;  
Replace the lamp assembly, L46.
- (a) To replace it, do this task:  
Tail Anti-Collision Light - Lamp Replacement, AMM TASK 33-44-04-960-801.
  - (b) If the light comes on, then you corrected the fault.
  - (c) If the light does not come on, then do a continuity check of the wiring between the switch, S58/S636, and the light assembly, L46 (WDM 33-44-12).
    - 1) If there is electrical continuity, then replace the light assembly, L46.
      - a) To replace it, do this task:  
Tail Anti-Collision Light - Light Assembly Replacement, AMM TASK 33-44-04-960-802.
      - b) If the light comes on, then you corrected the fault.
    - 2) If there is not electrical continuity, then repair the wiring.
      - a) Set the switch to the on mode.
      - b) If the light comes on, then you corrected the fault.
      - c) Set the switch to the off mode.

**I. Fault Isolation Procedure - No Lights Come On**

- (1) Do a continuity check of the wiring between the applicable switch, S57 or S58/S636, and the circuit breaker, C00111 or C00115 (WDM 33-44-11) (WDM 33-44-12).
  - (a) If there is electrical continuity, then replace the switch, S57 or S58/S636.
    - 1) Set the switch to the on mode.
    - 2) If the light comes on, then you corrected the fault.
    - 3) Set the switch to the off mode.
  - (b) If there is not electrical continuity, then replace the applicable circuit breaker, C00111 or C00115.
    - 1) Set the switch to the on mode.
    - 2) If the light comes on, then you corrected the fault.
      - a) Set the switch to the off mode.
    - 3) If the light does not come on, then repair the wiring.
      - a) Make sure the switch is in the on mode.
      - b) If the light comes on, then you corrected the fault.

EFFECTIVITY  
AKS ALL

**33-44 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 206  
Jun 15/2016



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- c) Set the switch to the off mode.

———— **END OF TASK** ————

EFFECTIVITY  
**AKS ALL**

**33-44 TASK 801**

D633A103-AKS

Page 207  
Jun 15/2016



## 737-600/700/800/900 FAULT ISOLATION MANUAL

### 801. Emergency Lighting Problem - Fault Isolation

#### A. Description

- (1) (SDS SUBJECT 33-51-00)

#### B. Possible Causes

- (1) Use the applicable system schematic manual (SSM) or wiring diagram manual (WDM) in the table below to identify possible causes for the lighting problem.

#### C. Circuit Breakers

- (1) Use the applicable SSM or WDM in the table below to identify the circuit breakers related to the fault.

#### D. Related Data

- (1) Use the table below to identify the applicable SSM and WDM for the emergency light/sign.

#### E. Initial Evaluation

- (1) In this table, find the light/sign that does not operate correctly and its applicable SSM and WDM:

**Table 201**

EMERGENCY LIGHTS/SIGNS	SSM/WDM
Area Light	33-51-12 thru 33-51-14
Exit Sign/Indicator	33-51-12 thru 33-51-14, 33-51-21
Floor Proximity Light	33-51-21
Handle Light in the Overwing Exit Sign	33-51-13
Slide/Overwing Light	33-51-12 thru 33-51-14
Power Supply	33-51-11

- (2) To make sure the battery packs are charged, do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
- (3) Make sure the attendant's emergency light switch in the passenger compartment is in the off mode.
- (4) At the overhead panel, P5, set the pilots emergency light switch, S7, to the on mode.
  - (a) If the emergency light/sign comes on correctly, set the switch to the off mode.
    - 1) If the emergency light/sign goes off, then there was an intermittent fault.
    - 2) If the emergency light/sign does not go off, then do the fault isolation procedure - The Light/Sign Does Not Go Off below.
  - (b) If the emergency light/sign comes on but one or more of its lamps does not come on, set the switch to the off mode, then do the fault isolation procedure - One Lamp Does Not Come On below.

**NOTE:** This option is used for emergency lights/signs that contain more than one lamp.
  - (c) If the emergency light/sign does not come on, then do a visual check of the remaining emergency lights and signs.
    - 1) If no emergency lights and signs come on, set the switch to the off mode, then do the fault isolation procedure - No Lights and Signs Come On below.



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 2) If all emergency lights and signs that use the same battery pack come on, set the switch to the off mode, then do the fault isolation procedure - The Light/Sign Does Not Come On below.

NOTE: Use the SSM or WDM to isolate the lights and signs that use the same battery pack.

- 3) If a group of emergency lights and signs that uses the same battery pack or circuit breaker does not come on, set the switch to the off mode, then do the fault isolation procedure - A Group of Lights and Signs Does Not Come On below.

NOTE: Use the SSM or WDM to isolate the lights and signs that use the same battery pack.

**F. Fault Isolation Procedure - The Light/Sign Does Not Go Off**

- (1) If no emergency lights and signs go off, then replace the pilots emergency light switch, S7 (WDM 33-51-11).
  - (a) Set the switch to the on mode, and then to the off mode.
  - (b) If the light/sign goes off, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
- (2) If all emergency lights and signs that use the same battery pack do not go off, then do a check of the wiring between the pilots emergency light switch, S7, and the applicable power supply (WDM 33-51-11).
  - (a) If there is an open circuit, repair the wiring.
  - (b) Set the switch to the on mode, and then to the off mode.
  - (c) If the light/sign goes off, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
  - (d) If the light/sign does not go off, then do a check of the wiring between the applicable power supply and the applicable circuit breaker (WDM 33-51-11).
    - 1) Repair the wiring.
    - 2) Set the switch to the on mode, and then to the off mode.
    - 3) If the light/sign goes off, then you corrected the fault.
      - a) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
- (3) If the one emergency light/sign does not off but all other lights and signs go off, do a check of the wiring between the applicable power supply and the emergency light/sign (WDM 33-51-12) (WDM 33-51-13) (WDM 33-51-14) (WDM 33-51-21).
  - (a) Repair the wiring.
  - (b) Set the switch to the on mode, and then to the off mode.
  - (c) If the light/sign goes off, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**G. Fault Isolation Procedure - One Lamp Does Not Come On**

- (1) Replace the lamp. Use the applicable task that follows:
  - (a) For an exit sign/indicator, do this task:  
Exit Sign - Lamp Replacement, AMM TASK 33-51-01-960-801.
  - (b) For a handle light in the overwing exit sign, do this task:  
Exit Sign - Lamp Replacement, AMM TASK 33-51-01-960-801.
  - (c) If the light/sign comes on, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.

**H. Fault Isolation Procedure - No Lights and Signs Come On**

- (1) Replace the pilots emergency light switch, S7 (WDM 33-51-11).
  - (a) Set the switch to the on mode.
  - (b) If the lights and signs come on, then you corrected the fault.
    - 1) Set the switch to the off mode.
    - 2) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.

**I. Fault Isolation Procedure - The Light/Sign Does Not Come On**

- (1) Replace the lamp. Use the applicable task that follows:
  - (a) For an exit sign/indicator, do this task:  
Exit Sign - Lamp Replacement, AMM TASK 33-51-01-960-801.
  - (b) For a handle light in the overwing exit sign, do this task: Exit Sign - Lamp Replacement, AMM TASK 33-51-01-960-801.
  - (c) For an area light, use the applicable procedure below:
    - 1) Do this task: Emergency Aisle Light (EAL) - Lens Replacement, AMM TASK 33-51-03-960-803.
  - (d) For a slide/overwing light, do this task:  
Slide/Overwing Light - Lamp Replacement, AMM TASK 33-51-04-960-801.
  - (e) For a floor proximity light, use the applicable procedure below:
    - 1) Do this task:  
Floor Proximity Light - Lamp Replacement, AMM TASK 33-51-14-960-801.
  - (f) If the light/sign comes on, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
  - (g) If the light/sign does not come on, then continue.
- (2) Replace the light assembly. Use the applicable task that follows:
  - (a) For an exit sign/indicator, do this task:  
Exit Sign - Light Assembly Replacement, AMM TASK 33-51-01-960-802.
  - (b) For a handle light in an overwing exit sign, do this task:  
Exit Sign - Light Assembly Replacement, AMM TASK 33-51-01-960-802.
  - (c) For an area light, use the applicable procedure below:

EFFECTIVITY  
AKS ALL

**33-50 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 203  
Feb 15/2013





**737-600/700/800/900  
FAULT ISOLATION MANUAL**

- 1) Do this task: Emergency Aisle Light (EAL) – Assembly Replacement, AMM TASK 33-51-03-960-805.
- (d) For a floor proximity light, use the applicable procedure below:
  - 1) Do this task:  
Floor Proximity Light - Light Assembly Replacement, AMM TASK 33-51-14-960-802.
- (e) If the light/sign comes on, then you corrected the fault.
  - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
- (f) If the light/sign does not come on, then continue.
- (3) Do a check of the wiring between the applicable power supply and the emergency light/sign (WDM 33-51-12) (WDM 33-51-13) (WDM 33-51-14) (WDM 33-51-21).
  - (a) Repair the wiring.
  - (b) Set the switch to the on mode.
  - (c) If the light/sign comes on, then you corrected the fault.
    - 1) Set the switch to the off mode.
    - 2) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.

**J. Fault Isolation Procedure - A Group of Lights and Signs Does Not Come On**

- (1) Do a check for 28 volts DC at the applicable circuit breaker on the P18-3 panel.
  - (a) If there is not 28 volts DC at the circuit breaker, then replace the circuit breaker.
    - 1) Set the switch to the on mode.
    - 2) If the light/sign comes on, then you corrected the fault.
      - a) Set the switch to the off mode.
      - b) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
    - 3) If the light/sign does not come on, then do a check of the wiring between the circuit breaker and the applicable power supply (WDM 33-51-11).
      - a) Repair the wiring.
      - b) Set the switch to the on mode.
      - c) If the light/sign comes on, then you corrected the fault. Set the switch to the off mode, then, do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
  - (b) If there is 28 volts DC at the circuit breaker, then continue.
- (2) Replace the applicable battery pack. To replace it, do this task:  
Power Supply - Battery Pack Replacement, AMM TASK 33-51-06-960-805.
  - (a) If the light/sign comes on, then you corrected the fault.
    - 1) Do this task:  
Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.
  - (b) If the light/sign does not come on, then continue.
- (3) Replace the defective power supply fuse. To replace it, do this task:



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

Power Supply - Fuse Replacement, AMM TASK 33-51-06-960-804.

- (a) If the light/sign comes on, then you corrected the fault.
- (b) If the light/sign does not come on, then continue.
- (4) Replace the applicable power supply. To replace it, do this task:

Power Supply - Power Supply Replacement, AMM TASK 33-51-06-960-806.

- (a) If the light/sign comes on, then you corrected the fault.

- 1) Do this task:

Power Supply - Charge the Battery Packs, AMM TASK 33-51-06-610-802.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-50 TASK 801**

D633A103-AKS



**737-600/700/800/900  
FAULT ISOLATION MANUAL**

**801. Flashlight Problem - Fault Isolation**

**A. Initial Evaluation**

- (1) When more than one flashlight is in the specified area, do this initial evaluation for each flashlight to find the one that does not operate correctly.
- (2) If the flashlight is in a mounting bracket, remove it.
- (3) Set the switch on the flashlight to the on mode and then to the off mode.
  - (a) FOR A FLASHLIGHT THAT IS NOT RECHARGEABLE:
    - 1) If the flashlight does not come on or go off correctly, use the standard method of your airline to correct the fault.
    - 2) If the flashlight comes on and goes off correctly, then there was an intermittent fault.
      - a) If the flashlight was in a mounting bracket, put it back.

———— **END OF TASK** ————

EFFECTIVITY  
AKS ALL

**33-55 TASK 801**

D633A103-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 201  
Jun 15/2013