

CHAPTER

52

DOORS



737-800

WIRING DIAGRAM MANUAL

CHAPTER 52 DOORS

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
52-EFFECTIVE PAGES									
		1		Jun 21/2016					
		2		BLANK					
52-CONTENTS									
R		1		Jun 21/2016					
		2		BLANK					
52-ALPHABETICAL INDEX									
		1		Aug 15/2013					
		2		BLANK					
52-51-11									
R		1		Jun 21/2016					
52-71-11									
R		1		Jun 21/2016					
52-71-12									
R		1		Jun 21/2016					
52-71-13									
R		1	1	Jun 21/2016					
R			2	Jun 21/2016					
R			3	Jun 21/2016					
52-71-14									
R		1	1	Jun 21/2016					
R			2	Jun 21/2016					
R			3	Jun 21/2016					

A = Added, R = Revised, D = Deleted, O = Overflow

52-EFFECTIVE PAGES

Page 1
Jun 21/2016

D280A351



737-800

WIRING DIAGRAM MANUAL

CHAPTER 52 DOORS

	Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
	<u>CREW DOOR</u>						
I	CONTROL CABIN DOOR LOCK	52-51-11		1		Jun 21/2016	ALL
	<u>DOOR WARNING SYSTEM</u>						
I	DOOR WARNING SYSTEM - ENTRY AND SERVICE	52-71-11		1		Jun 21/2016	ALL
I	DOOR WARNING SYSTEM - CARGO AND EQUIPMENT	52-71-12		1		Jun 21/2016	ALL
I	DOOR WARNING OVERWING - LEFT OVERWING	52-71-13		1	1	Jun 21/2016	ALL
I					2	Jun 21/2016	ALL
I					3	Jun 21/2016	ALL
I	DOOR WARNING OVERWING - RIGHT OVERWING	52-71-14		1	1	Jun 21/2016	ALL
I					2	Jun 21/2016	ALL
I					3	Jun 21/2016	ALL

52-CONTENTS

D280A351

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1
Jun 21/2016



737-800

WIRING DIAGRAM MANUAL

CHAPTER 52 DOORS


CH-SC-SU	Title
52-51-11	CONTROL CABIN DOOR LOCK
52-71-13	DOOR WARNING OVERWING - LEFT OVERWING
52-71-14	DOOR WARNING OVERWING - RIGHT OVERWING
52-71-12	DOOR WARNING SYSTEM - CARGO AND EQUIPMENT
52-71-11	DOOR WARNING SYSTEM - ENTRY AND SERVICE

52-ALPHABETICAL INDEX

D280A351

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1
Aug 15/2013

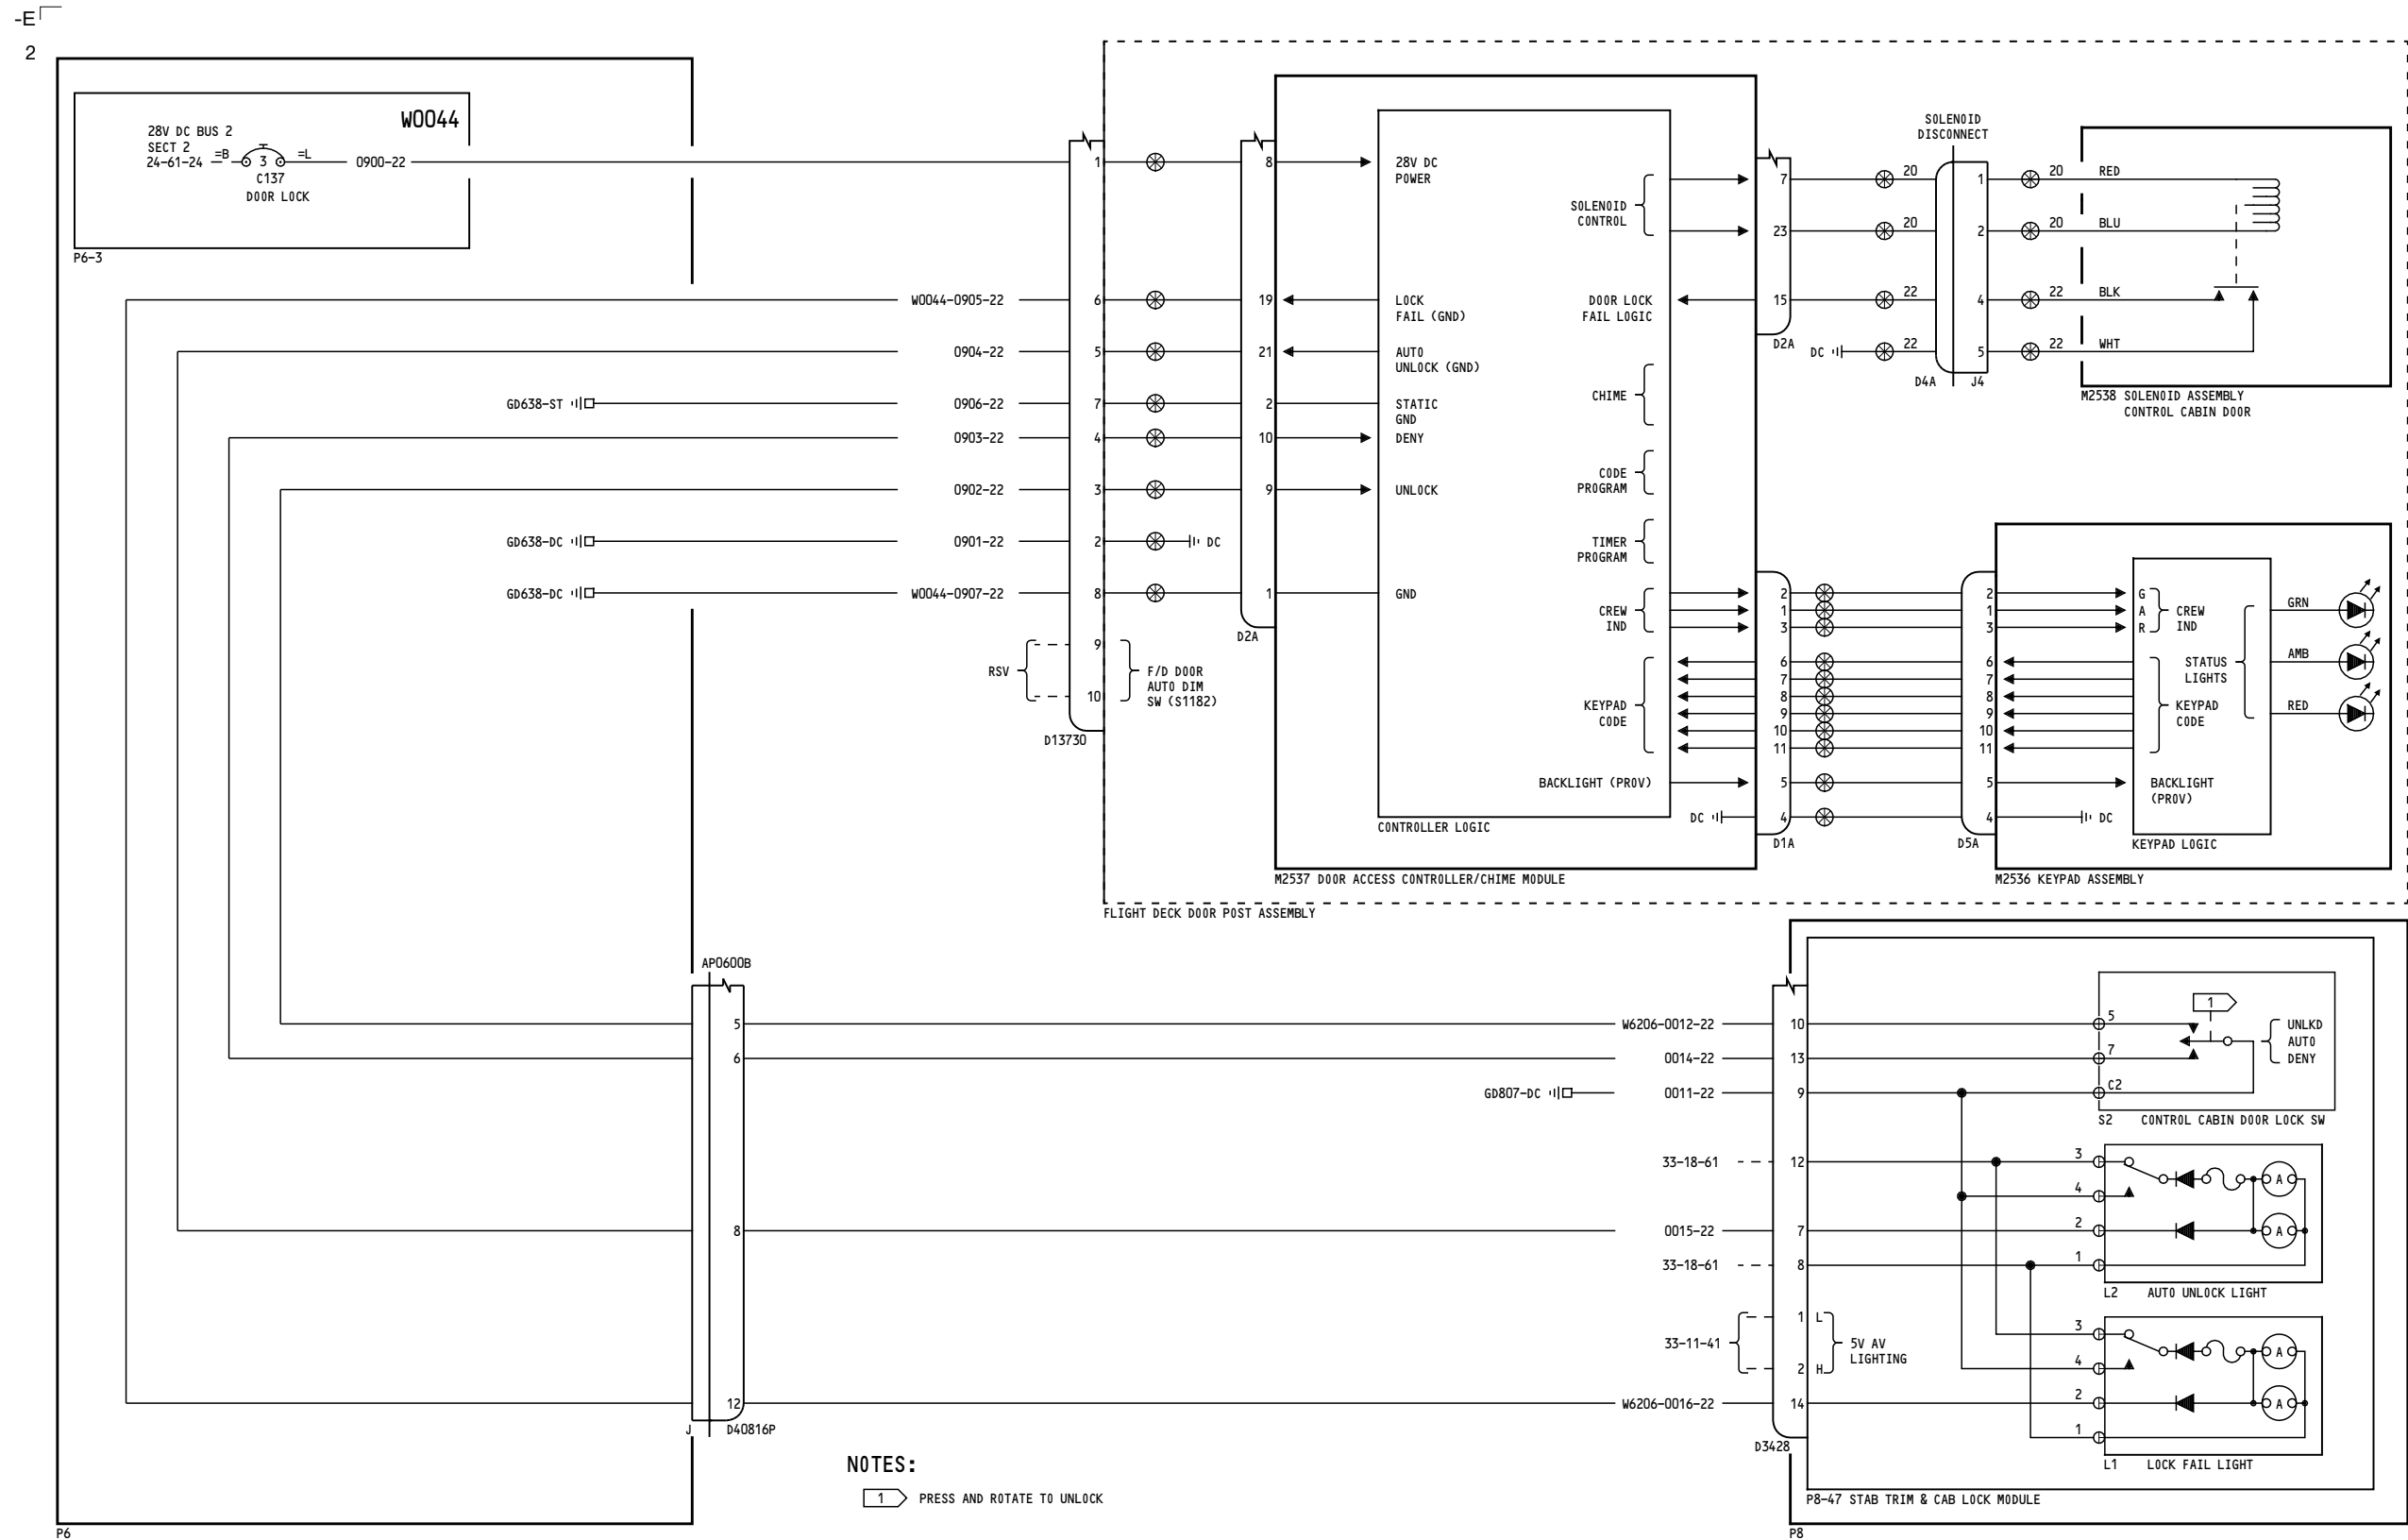

ALL	CONTROL CABIN DOOR LOCK
D280A351	

52-51-11


Page 1

Jun 21/2016

52-51-11

Page 1

Jun 21/2016

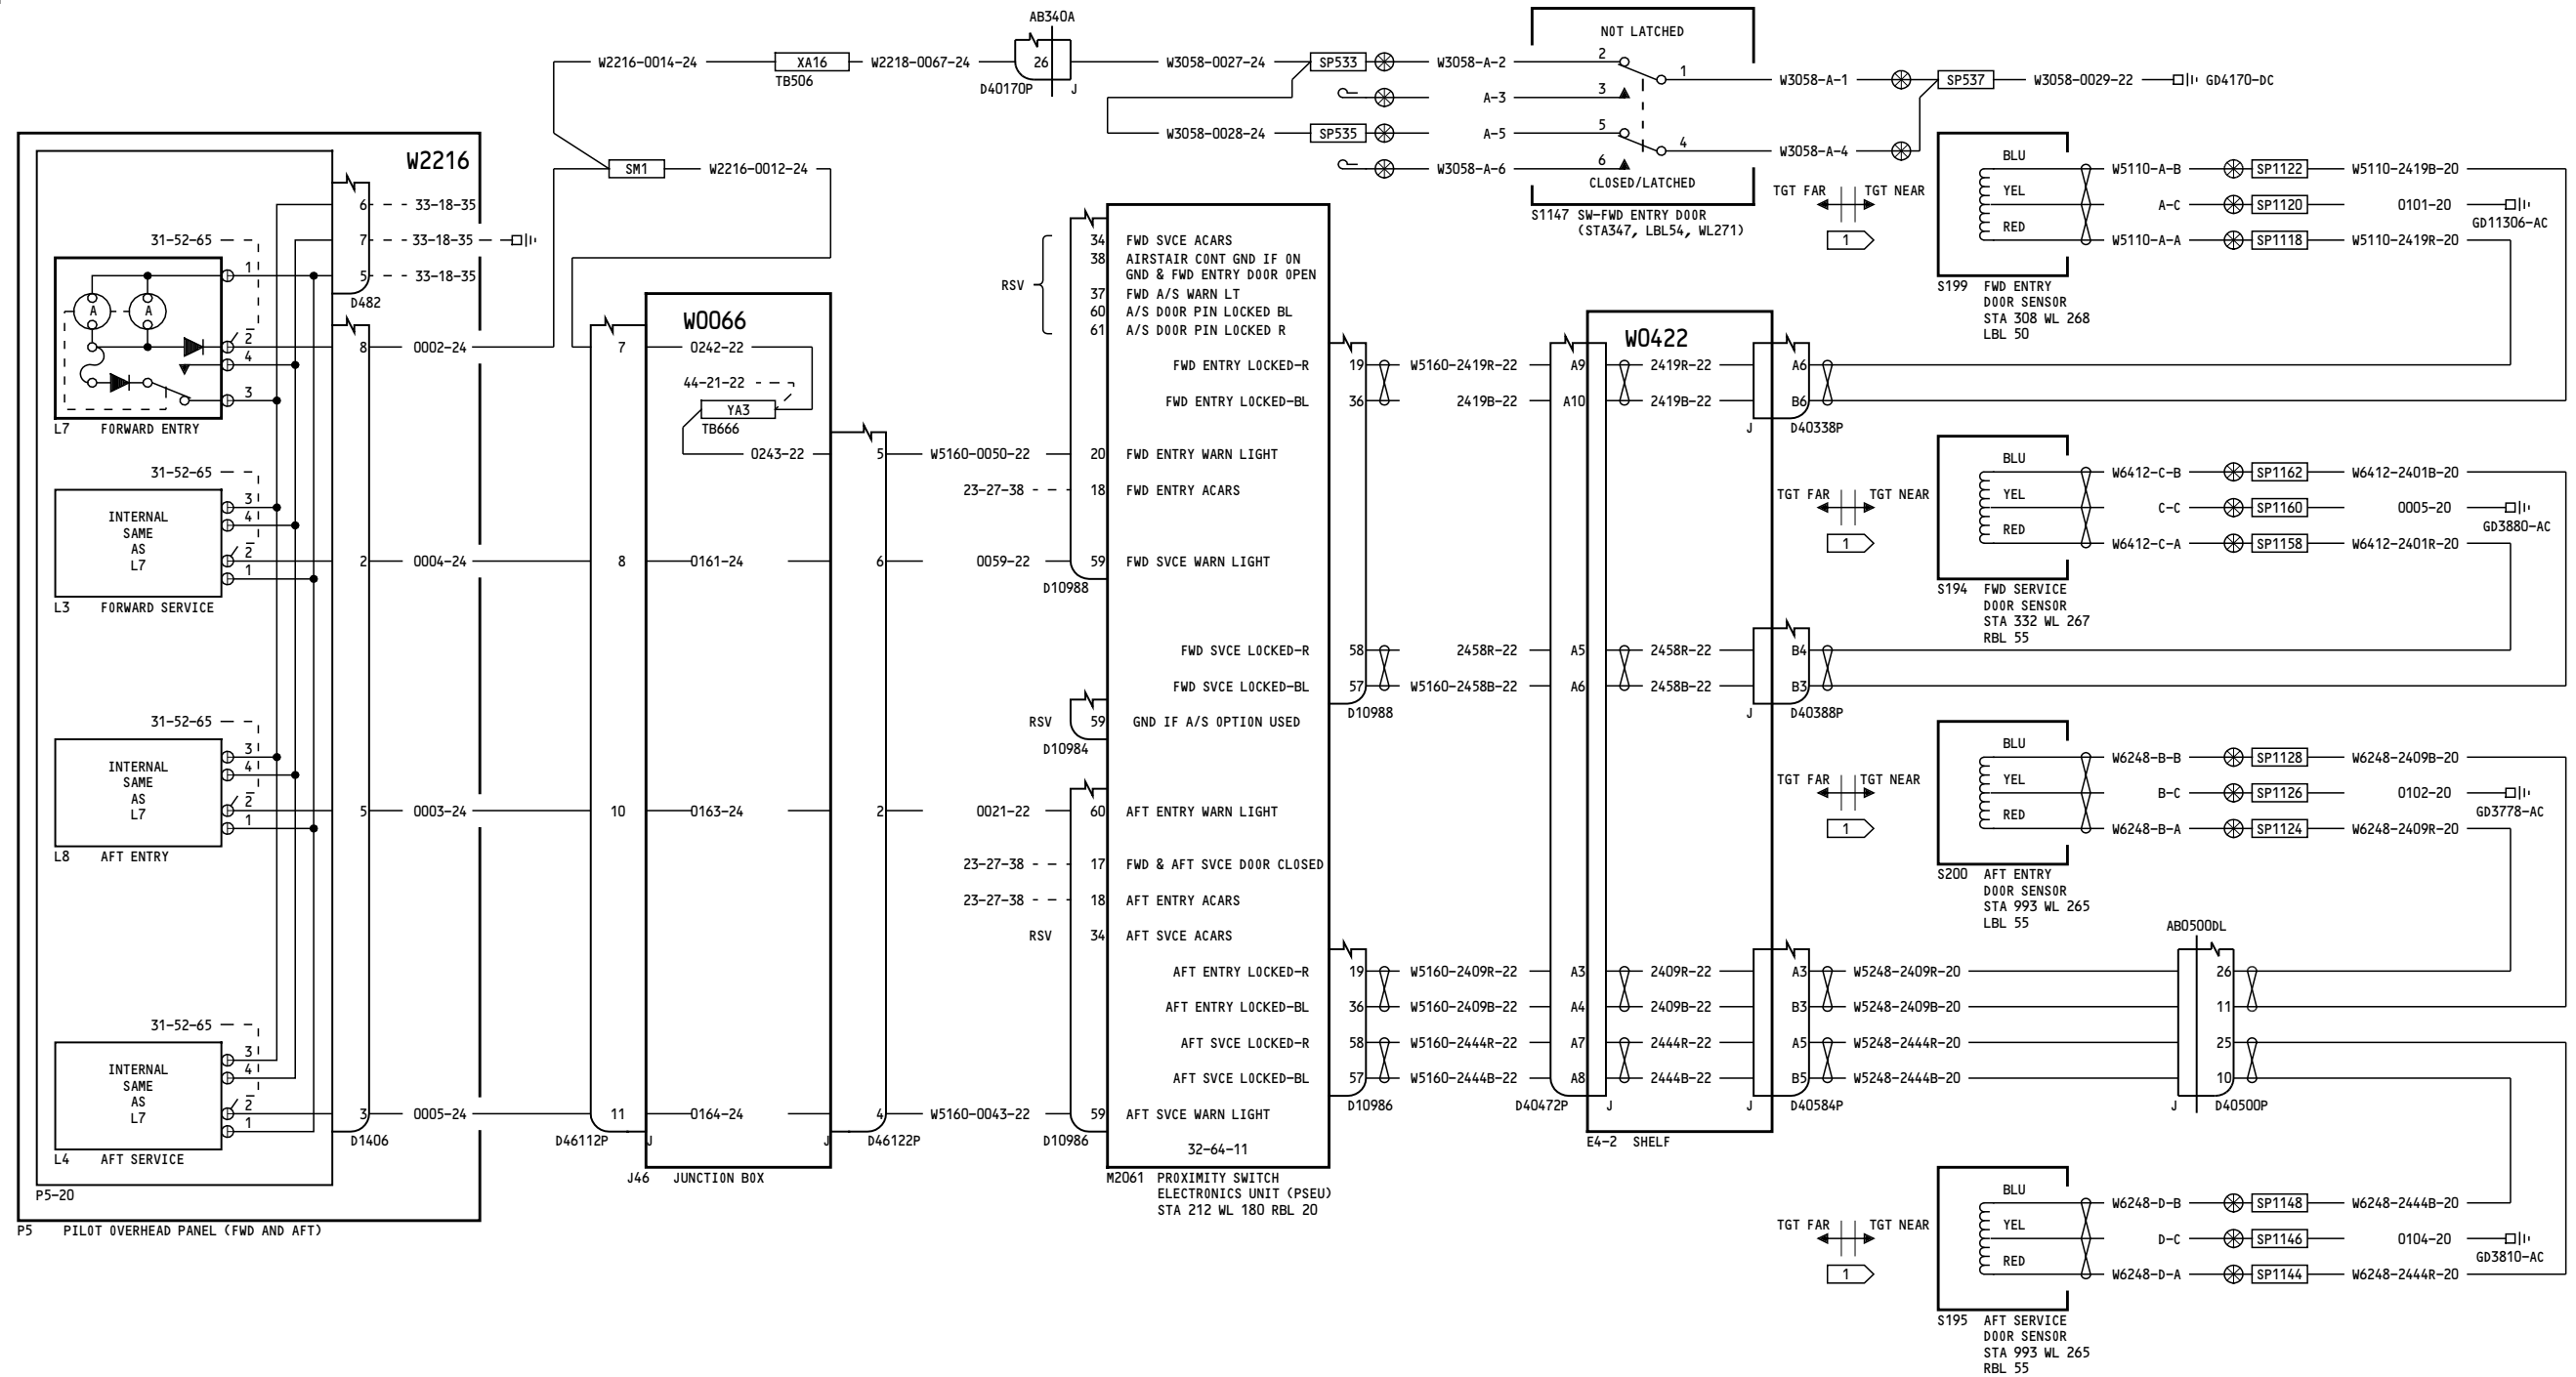

NOTES:

- 1 TARGET FAR = DOOR OPEN
TARGET NEAR = DOOR CLOSED

ALL

DOOR WARNING SYSTEM - ENTRY AND SERVICE

52-71-11

Page 1

D280A351

Jun 21/2016

52-71-11

Page 1

Jun 21/2016



52-71-12

52-71-12


D280A351

Jun 21/2016

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.



10

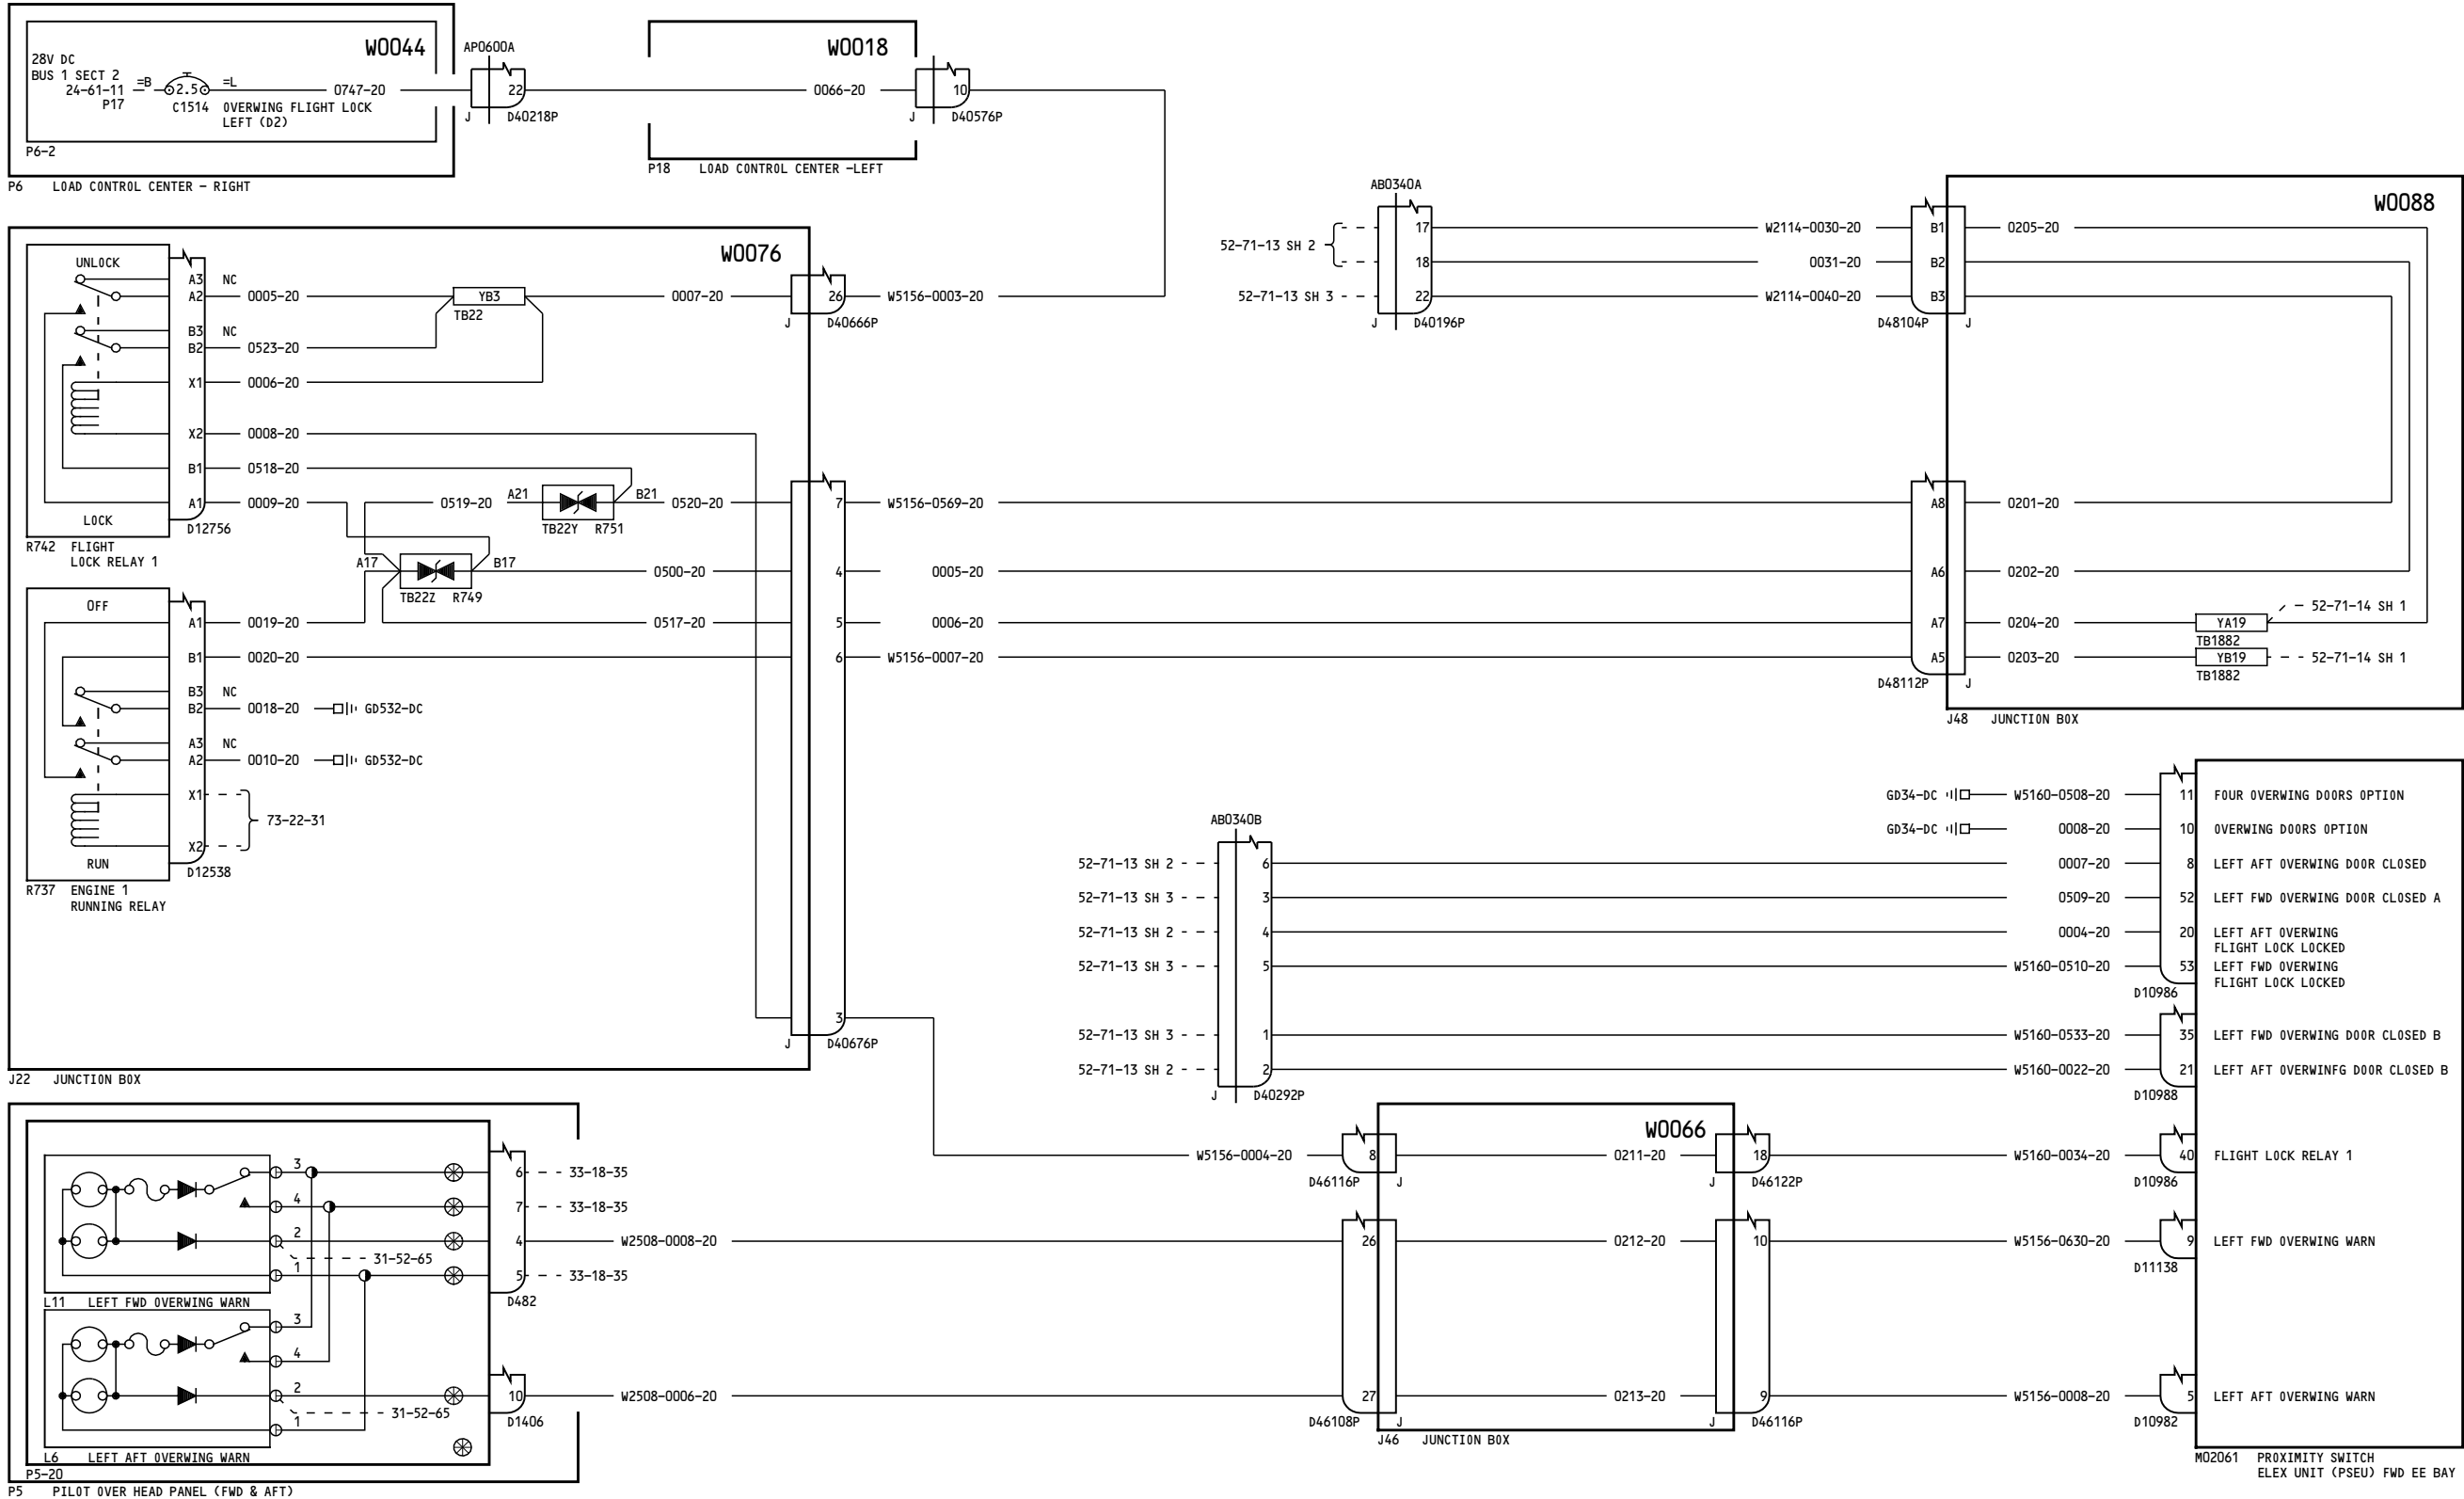

ALL

DOOR WARNING OVERWING -
LEFT OVERWING

D280A351

52-71-13


Page 1
Sheet 1
Jun 21/2016

52-71-13

Page 1
Sheet 1
Jun 21/2016



737-800 WIRING DIAGRAM MANUAL

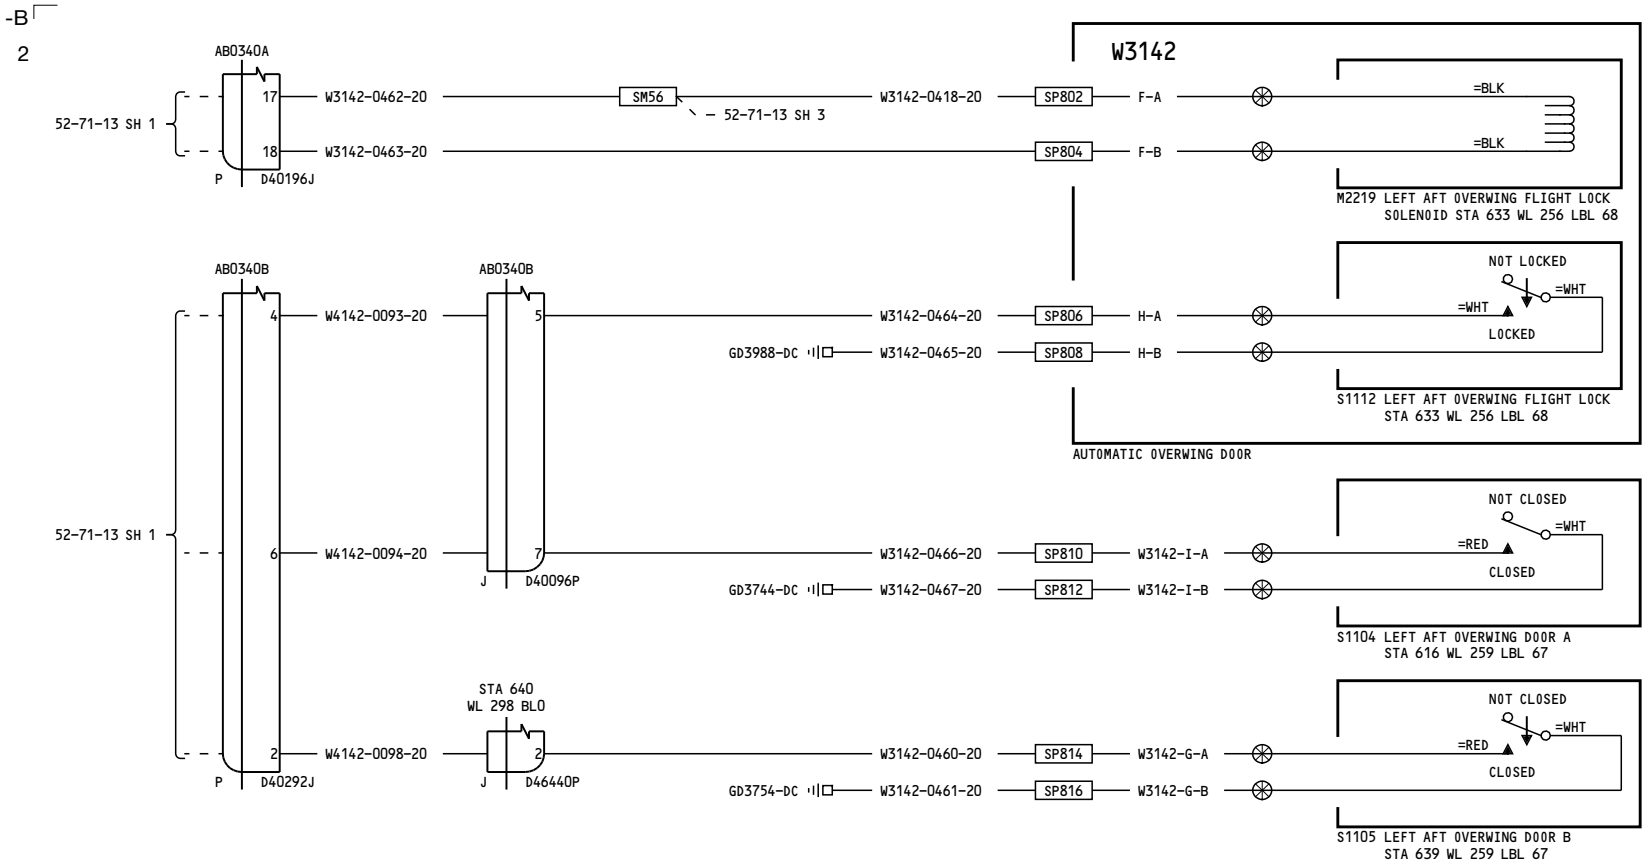

ALL

DOOR WARNING OVERWING -
LEFT OVERWING

D280A351

52-71-13


Page 1
Sheet 2
Jun 21/2016

52-71-13

Page 1
Sheet 2
Jun 21/2016



-B
1

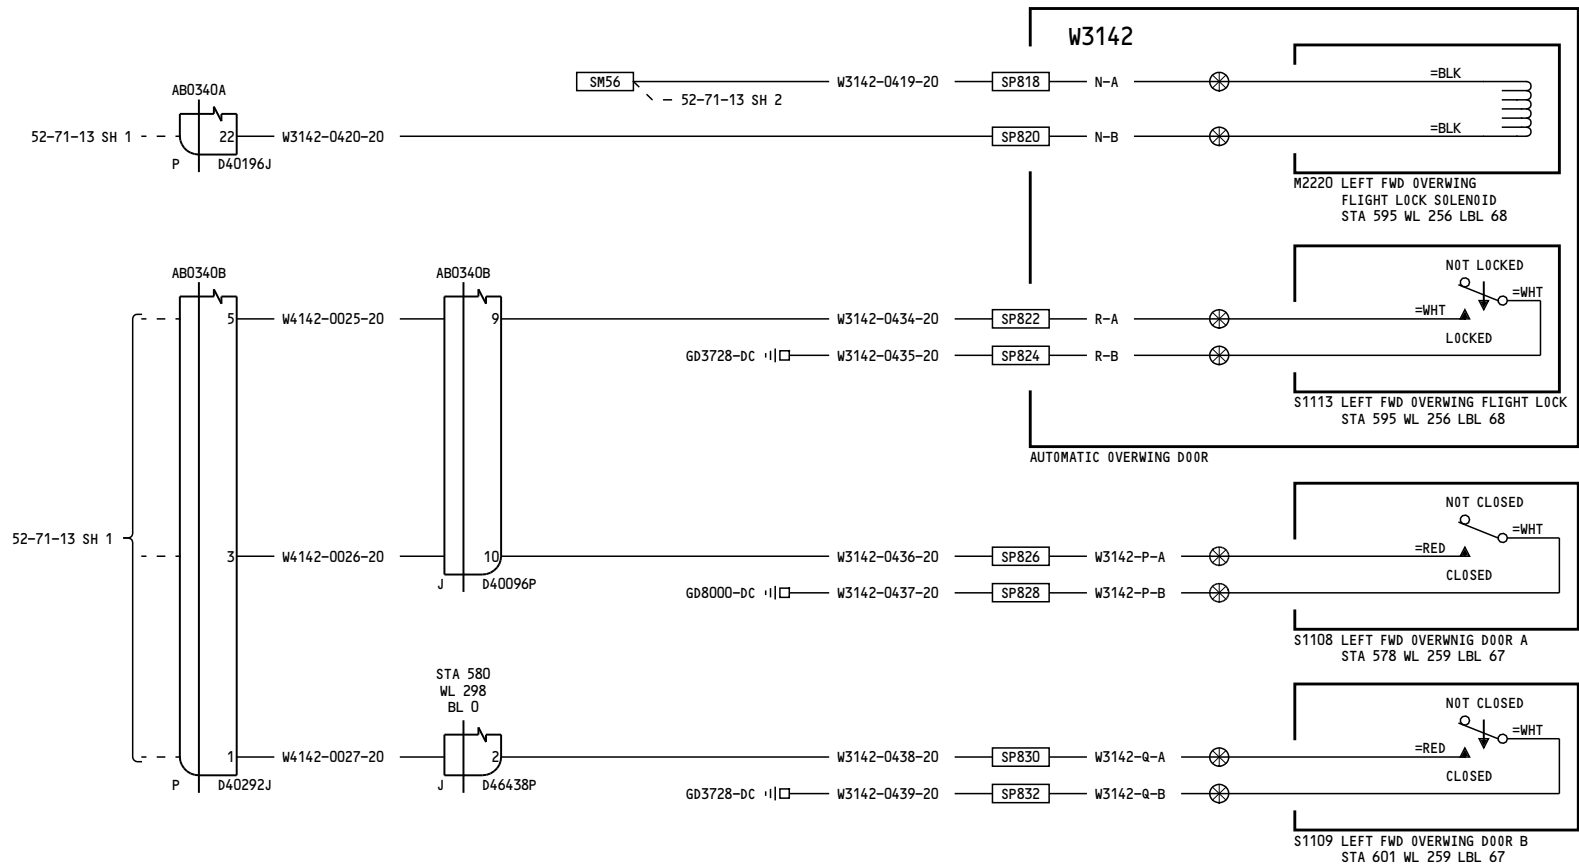

ALL

DOOR WARNING OVERWING -
LEFT OVERWING

D280A351

52-71-13

Page 1
Sheet 3
Jun 21/2016

52-71-13

Page 1
Sheet 3
Jun 21/2016



52-71-14

Page 1
Sheet 1
Jun 21/2016

D280A351

52-71-14

Page 1
Sheet 1
Jun 21/2016

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details



**DOOR WARNING OVERWING -
RIGHT OVERWING**

D280A351

52-71-14


Page 1
Sheet 2
Jun 21/2016

52-71-14

Page 1
Sheet 2
Jun 21/2016



-B
1

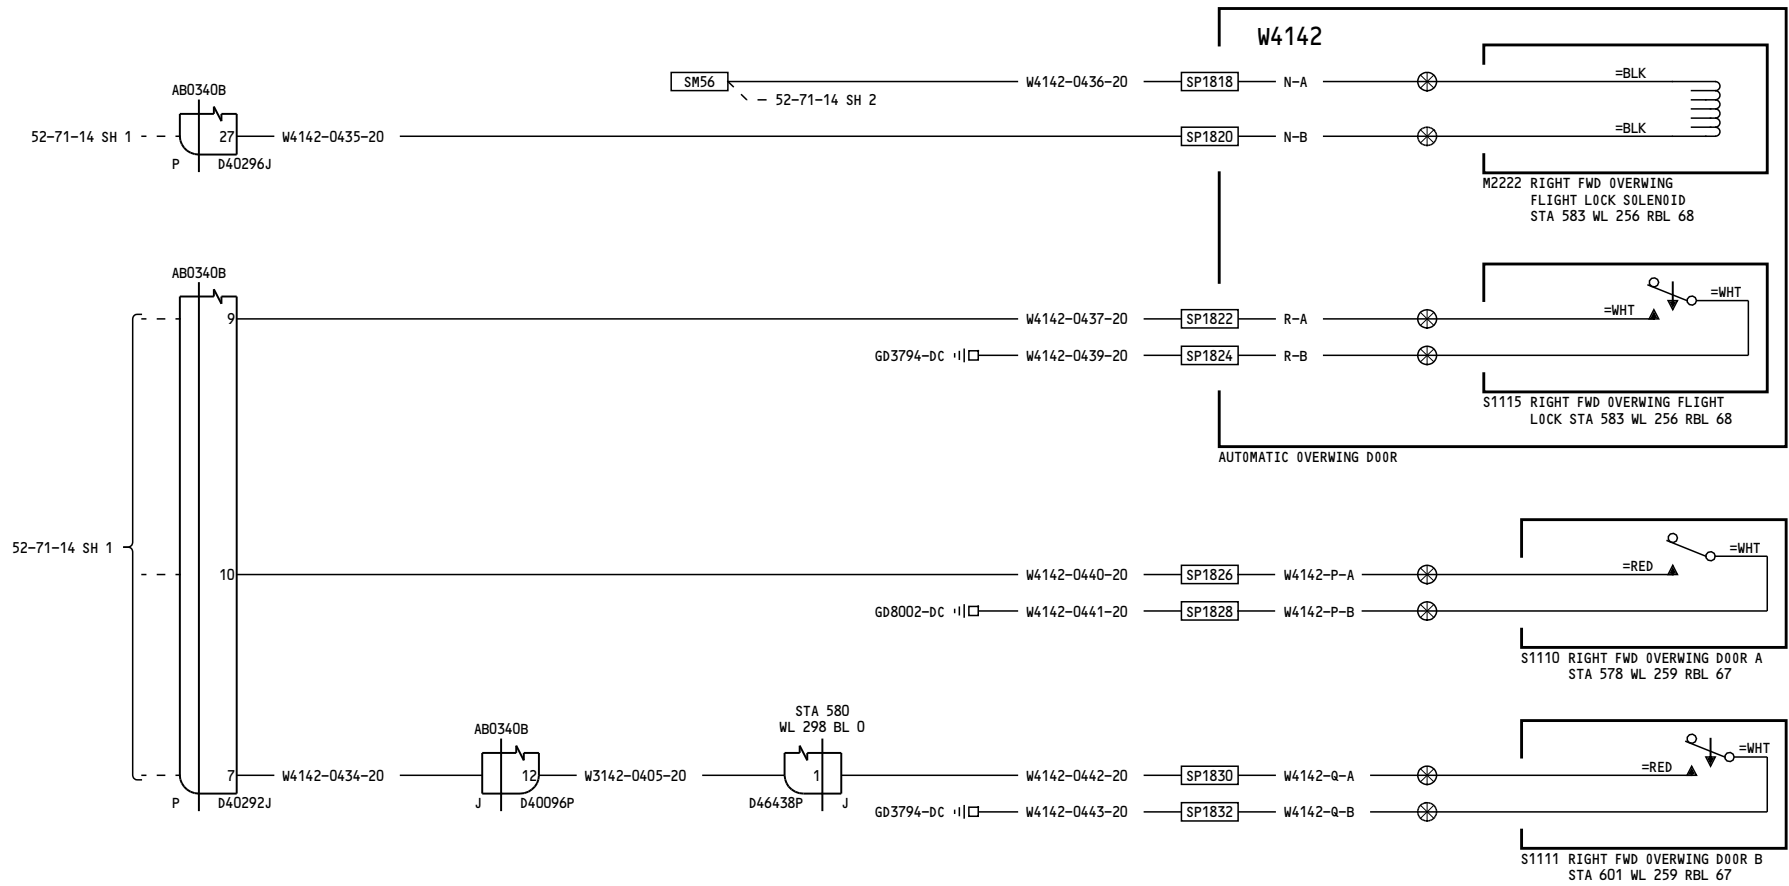

ALL

DOOR WARNING OVERWING -
RIGHT OVERWING

D280A351

52-71-14

Page 1
Sheet 3
Jun 21/2016

52-71-14

Page 1
Sheet 3
Jun 21/2016