


How to put the detergent and softener (Continue)

The standard amount setting.

It is necessary to set the standard volume (volume used per 30 L of water) according to the liquid detergent or fabric softener used. Liquid detergent and fabric softener cannot be set at the same time.


Procedure

1

Press  to switch on.

2

To set the standard amount of liquid detergent


Press  for at least 5 seconds.


*The standard amount is displayed as shown in the display example. (as per fixture)

At the time or shipment from the factory, the standard amount is set for a water volume of 30 L.

- For liquid detergent 35 mL
- For fabric softener 30 mL

To set the standard amount of fabric softener


Press  for at least 5 seconds.


Ex) 

3


Check and set the “amount used for 30 L of water” written on the container.

The amount can be set from 10 to 80 ml.

To reduce the amount, press .


To increase the amount, press .

Check the recommended amount of liquid detergent or fabric softener to use.

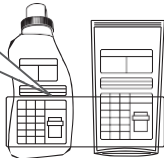


If this information is not available, please contact the detergent manufacturer.

4

Press  to set up.

- **When changing the type of liquid detergent or fabric softener**
 - Clean the dispenser mounting part of the automatic loading section first.
If different types are mixed together, they can clog the automatic loading section and the channels.
 - Change the standard amount setting for liquid detergent or fabric softener.
If you run the machine without setting the standard amount of liquid detergent or fabric softener, the laundry may not be easily cleaned, and it may cause darkening or yellowing. In addition, a large amount of bubbles may be generated, which may cause water leakage or overflow from the drain.
- **How to read the remaining amount of liquid detergent and fabric softener**
"Empty" will flash when the liquid detergent or fabric softener in the fabric softener dispenser is low.
Refill with liquid detergent or fabric softener.




Setting and unsetting automatic loading

Liquid detergent and fabric softener are automatically added every time you wash. You can set the amount of liquid detergent or fabric softener by pressing "More" or "Less".

Procedure

1


Press  **to turn on the power.**

2

You can select only "Liquid Detergent" or "Fabric Softener".


Depending on the setting, it may be deactivated automatically or may not be accepted.

To set and unset liquid detergent

Press 


The display changes with each press.

Display example



The display changes each time you press

3

Press  **to store the settings.**


If you selected the AI wash program, you can choose between "No setting" and "With setting" (Detergent amount: standard) for the automatic loading of liquid detergent. "With setting" (more or less detergent) cannot be set as it is adjusted automatically.

To set and unset fabric softener

Press 



The display changes with each press.

Display example



The display changes each time you press

Program Overview

Program	Type of Laundry / Notes	Model / Max Load					
		BD-D120XGV/BD-D120GV			BD-D100XGV/BD-D100GV		
		Washing	Washing-Drying	Drying	Washing	Washing-Drying	Drying
AI Wash	This is a program for wash your usual laundry.	12 kg	8 kg (Low Temp. 4 kg)	—	10 kg	7 kg (Low Temp. 4 kg)	—
Cotton	This is a program for your cotton laundry.	12 kg	8 kg (**) (Low Temp. 4 kg)	8 kg (**) (Low Temp. 4 kg)	10 kg	7 kg (**) (Low Temp. 4 kg)	7 kg (**) (Low Temp. 4 kg)
Delicate	This is a program for your delicate laundry with symbol  and  .	3 kg	—	—	3 kg	—	—
Rapid 15	This is a program for your lightly soiled laundry in a short time.	2 kg	—	—	2 kg	—	—






(*) is the download program for model BD-D120XGV/BD-D100XGV, please download the program from the application to use.

(**) The Cotton program is for cotton clothing. Drying synthetic or blended garments in this program may make the garments less dry. In that case, please uses the AI Wash program or the Dry Only program.



(***) If you want to wash or dry the blanket not the duvet, if can operate until 3 kg.Dry option can be set to 2 types (Low Temp. and Extra Dry).

Time Dry option can set the drying time from 30 minutes to 2 hours.






Cotton, 60°C, 1200rpm program cycle is the recommended program cycle for a normal soiled load at the rated capacity.

Temperature Setting	Spin Setting		Selectable Options									
	Washing	Washing- Drying	 Prewash	 Rinse Count	 Rinse Hold	 Timer	Auto Self Clean	Wash/Dry Mode			Dry Option	 Time Dry
								Washing	Washing- Drying	Drying		
Cold/ 30-90°C	400-1600 r/min No Spin	1200-1600 r/min	○	○	○	○	○	○	○	—	○	○
Cold/ 30-90°C	400-1600 r/min No Spin	1200-1600 r/min	○	○	○	○	○	○	○	○	○	○
Cold/ 30°C/40°C	400-800 r/min No Spin	—	—	○	○	○	—	○	—	—	—	—
Cold/30°C	400-1200 r/min No Spin	—	—	—	○	—	—	○	—	—	—	—

Program Overview (Continue)

Program	Type of Laundry / Notes	Model / Max Load					
		BD-D120XGV/BD-D120GV			BD-D100XGV/BD-D100GV		
		Washing	Washing-Drying	Drying	Washing	Washing-Drying	Drying
Synthetic (*) (For model BD-D120XGV/BD-D100XGV only)	This program is used when you want to wash synthetic type laundry.	4.5 kg	4.5 kg	4.5 kg	4.5 kg	4.5 kg	4.5 kg
Wool	This is a program for your wool laundry with symbol  and  .	3 kg	—	—	3 kg	—	—


(*) is the download program for model BD-D120XGV/BD-D100XGV, please download the program from the application to use.Dry option can be set to 2 types (Low Temp. and Extra Dry).
Time Dry option can set the drying time from 30 minutes to 2 hours.
Cotton, 60°C, 1200rpm program cycle is the recommended program cycle for a normal soiled load at the rated capacity.

Temperature Setting	Spin Setting		Selectable Options									
	Washing	Washing- Drying	 Prewash	 Rinse Count	 Rinse Hold	 Timer	Auto Self Clean	Wash/Dry Mode			Dry Option	 Time Dry
								Washing	Washing- Drying	Drying		
Cold/ 30-60°C	400-1600 r/min No Spin	1200-1600 r/min	○	○	○	○	○	○	○	○	—	○
Cold/30°C	400 r/min No Spin	—	—	—	○	○	—	○	—	—	—	—

How to Use the Washer Dryer Program

Using AI Wash

This washer dryer consists of multiple sensors to sense various washing conditions and automatically control the washing method and operating time according to the type of detergent, type of clothing, waterhardness, and other conditions.

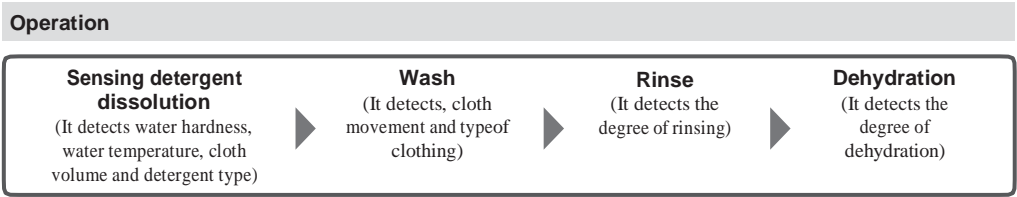

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode or Wash/Dry mode.
5. Select AI Wash program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

NOTICE

- For models with "Autodosing" function and this function activated, it is not necessary to fill detergent, bleach and fabric softener manually.

Using Cotton Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode, Wash/Dry mode or Dry mode.
5. Select Cotton program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Delicate Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode.
5. Select Delicate program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Rapid 15 Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode.
5. Select Rapid 15 program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using 60°C Hygiene Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode or Wash/Dry mode.
5. Select 60°C Hygiene program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Wash&Dry60 Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash/Dry mode.
5. Select Wash&Dry60 program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Air Wash Program

Operation:

1. Open the tap.
2. Put the laundry in the drum.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Dry mode.
5. Select Air Wash program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Steam Iron Program

Operation:

1. Open the tap.
2. Put the laundry in the drum.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Dry mode.
5. Select Steam Iron program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.

Using Wool Program

Operation:

1. Open the tap.
2. Put the laundry in the drum, fill detergent/softener and then close the door.
3. Press the Power On/Off button to turn on the power.
4. Press Wash/Dry Mode button to select Wash mode.
5. Press the Special Program button to select Wool program (the indicator light on the program button will flash).
6. Press the Start/Pause button to start operation.