


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

80027-04

HINT:


The installation is in the reverse order of the removal.

1. **REMOVE STEERING COLUMN COVER LWR** ([See page 50-9](#))
2. **REMOVE STEERING COLUMN COVER UPR** ([See page 50-9](#))

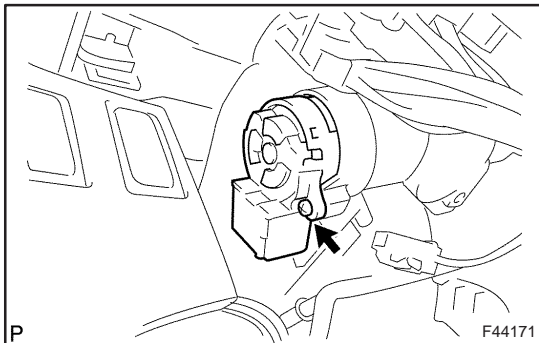

3. **REMOVE IGNITION OR STARTER SWITCH ASSY**
 - (a) Disconnect the ignition switch and unlock warning switch connectors.
 - (b) Remove the clamp.
 - (c) Remove the screw and ignition switch.

INSPECTION

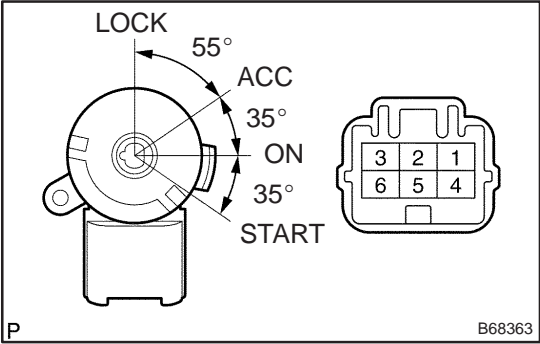

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the switch resistance.

Standard:

Terminal No.	Switch Condition	SpecifiedCondition
2 – 3	ACC	Below 1Ω
1 – 3	ON	
2 – 3		
4 – 6		
1 – 3	START	
4 – 5		
4 – 6		

If the result is not as specified, replace the switch.