


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : L/B]

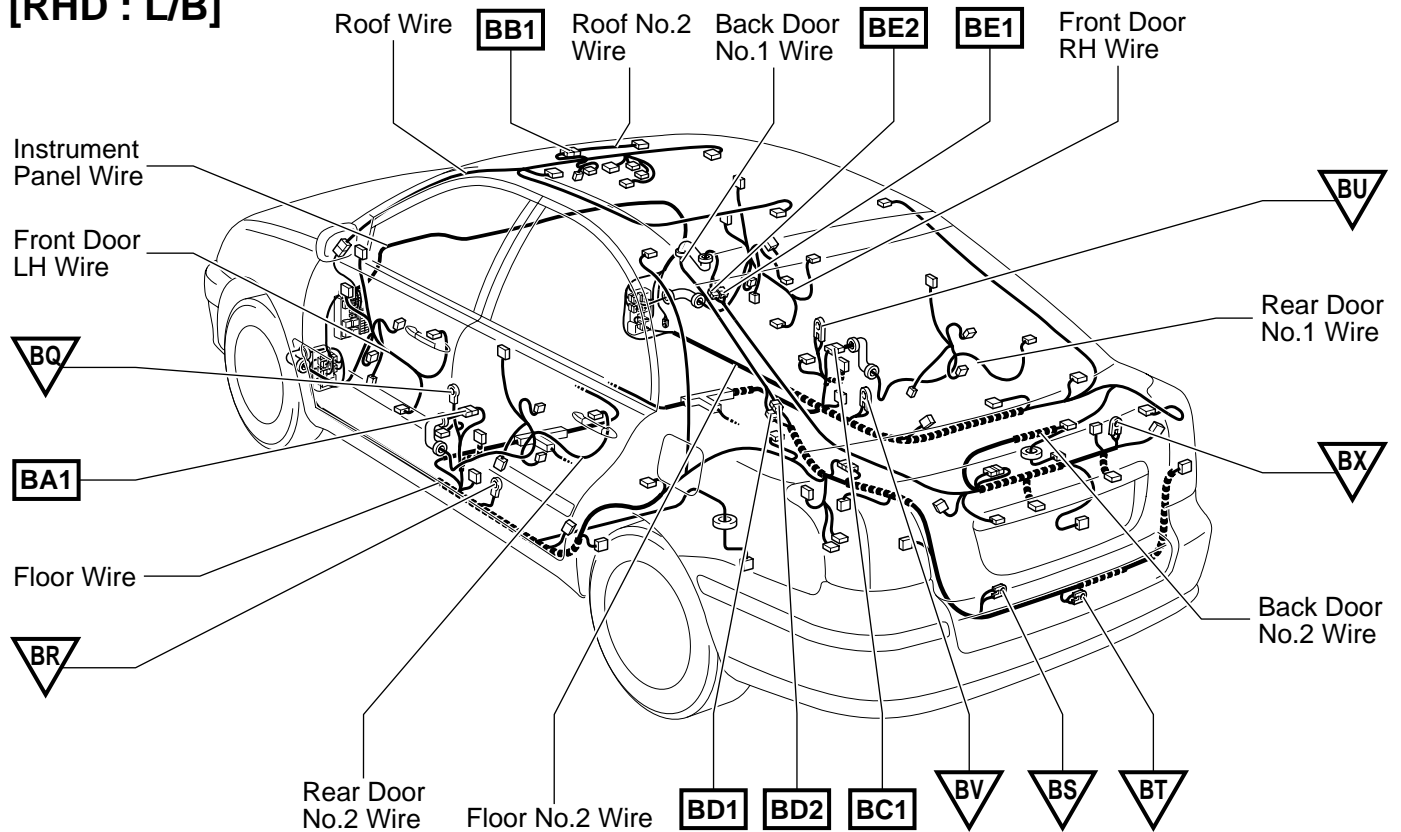

○ : Location of Splice Points

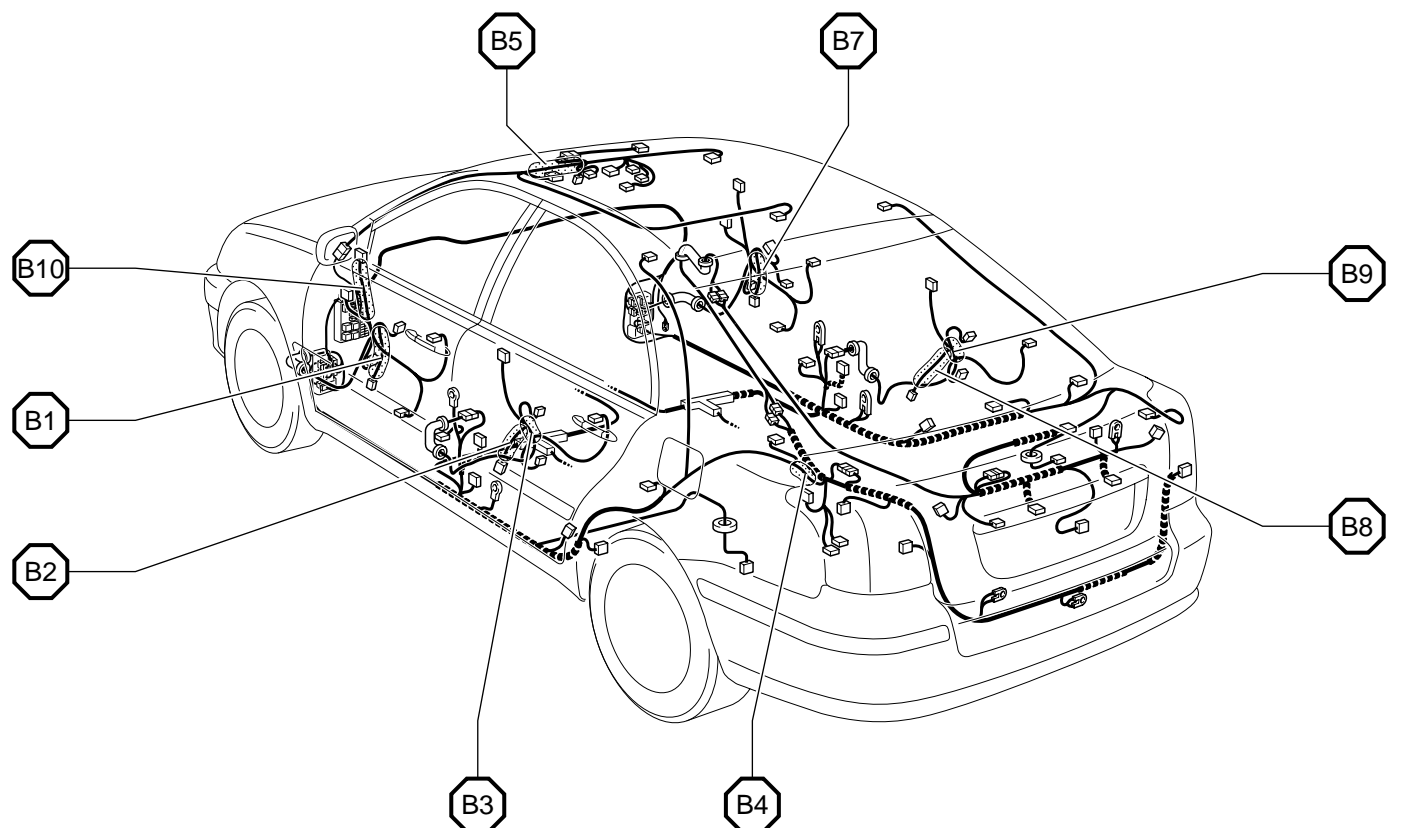


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : S/D]

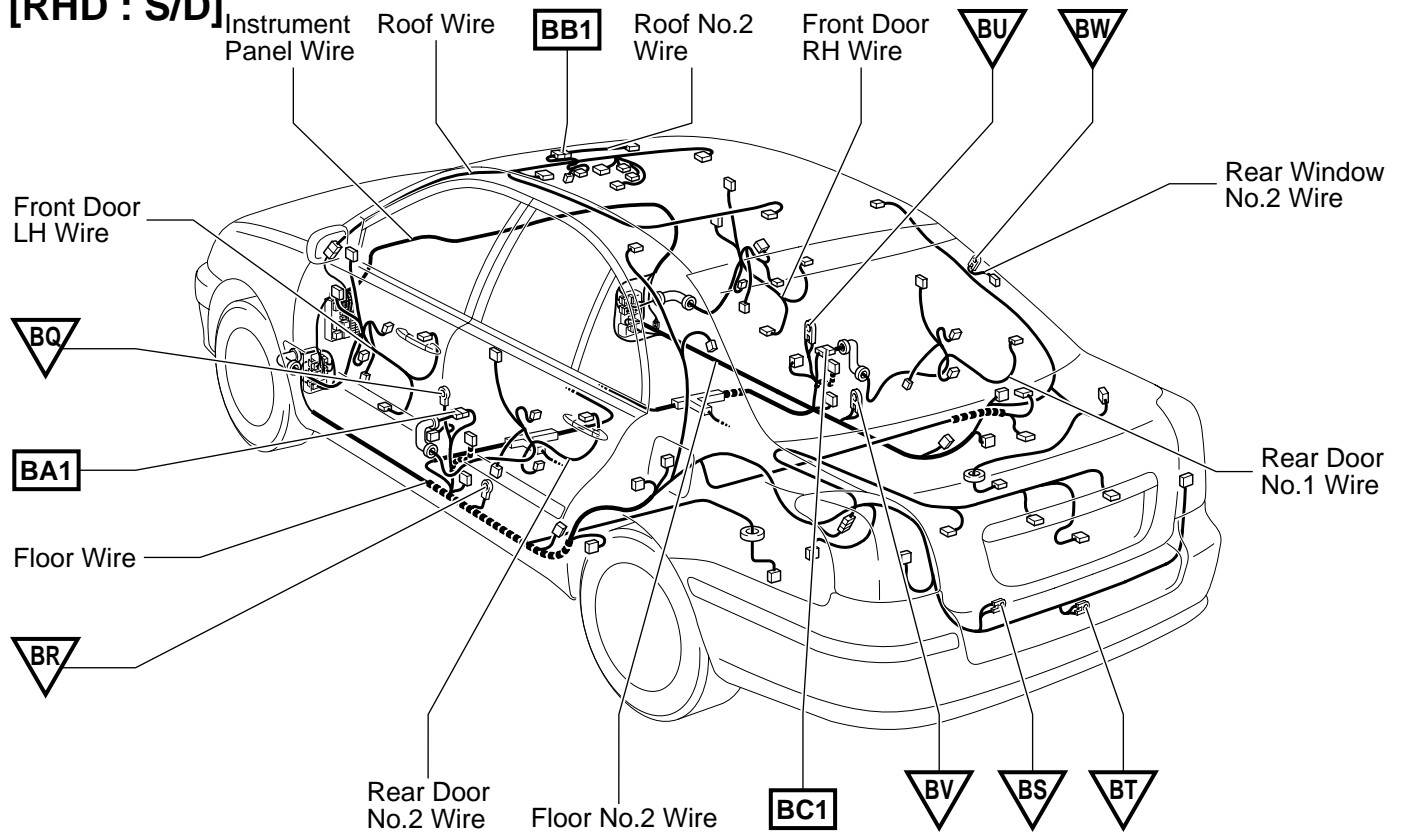

○ : Location of Splice Points

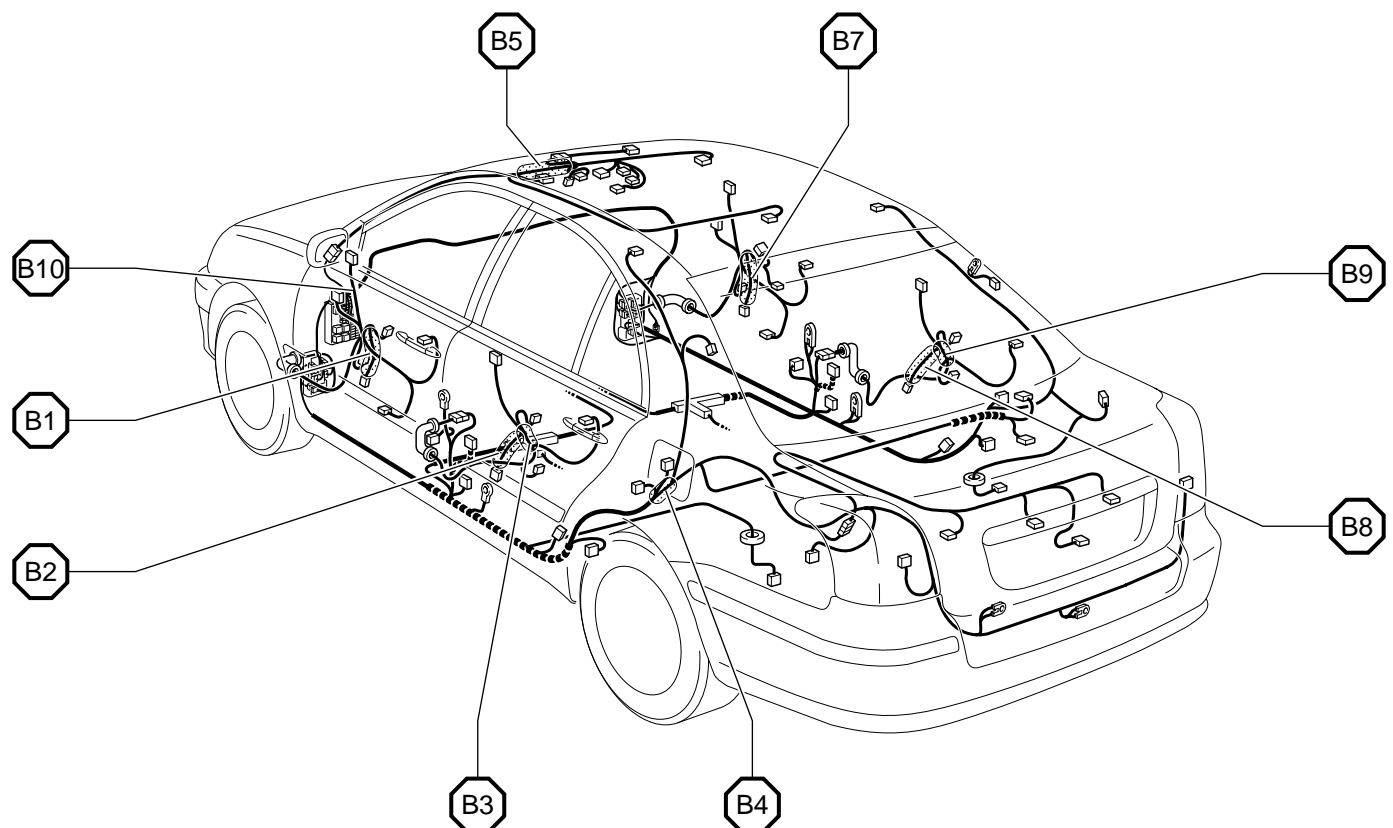


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1AZ-FSE]

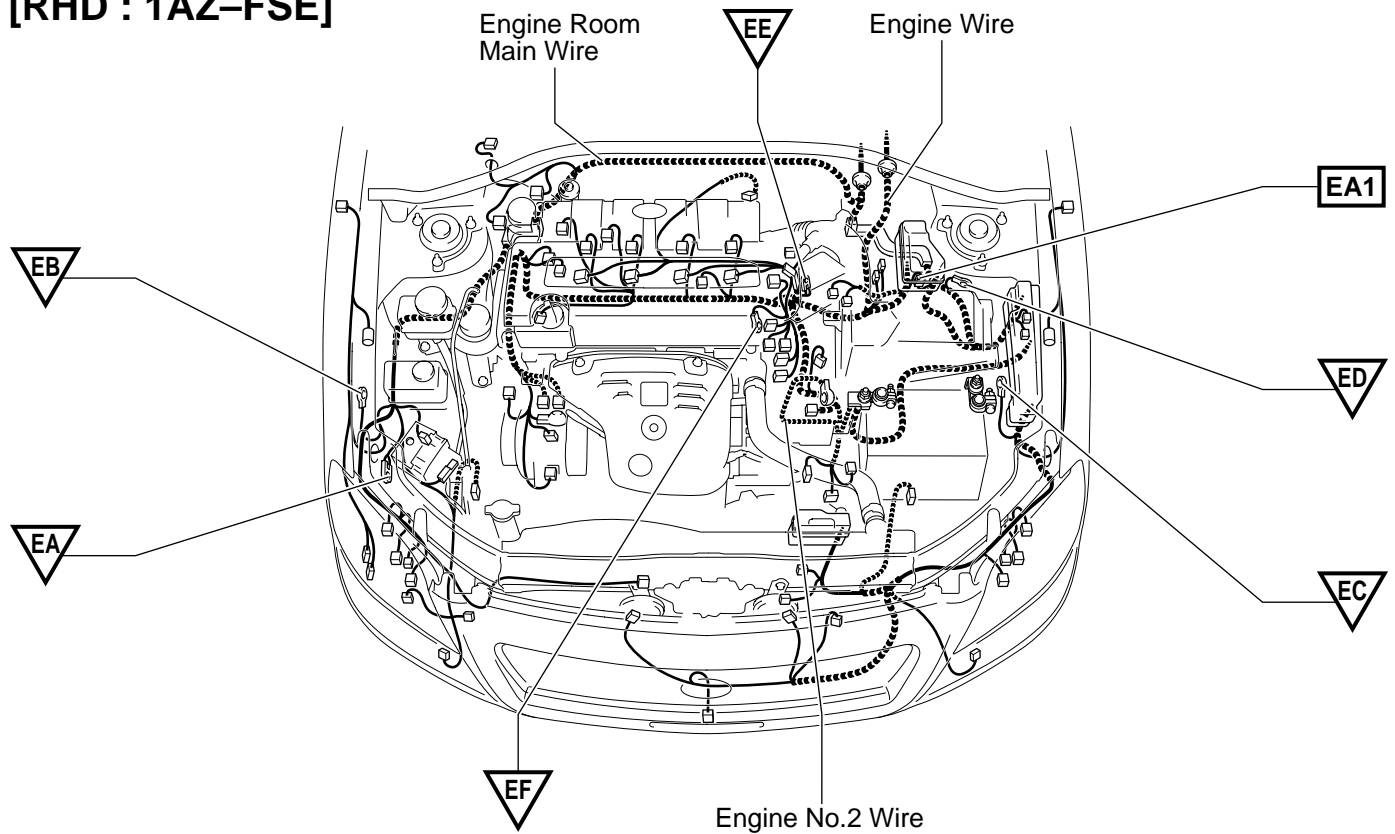

○ : Location of Splice Points

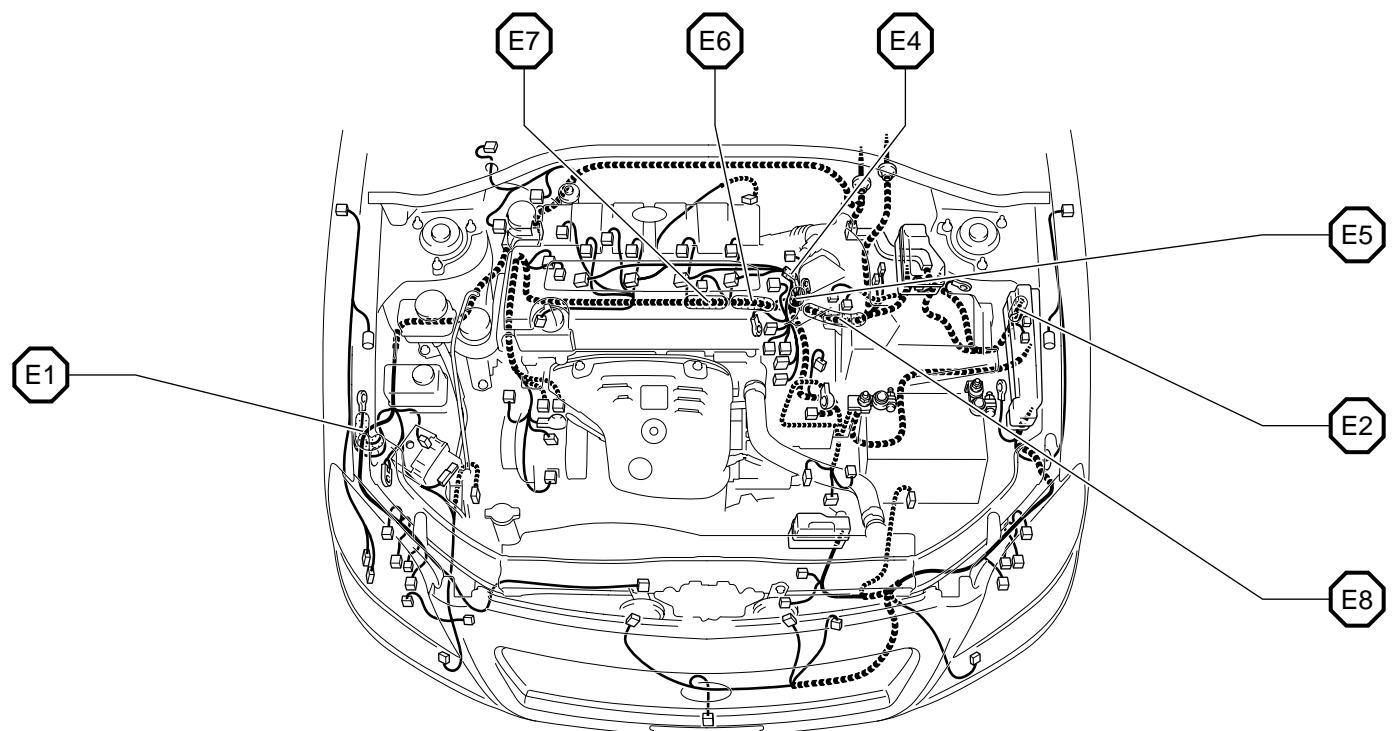


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1CD-FTV]

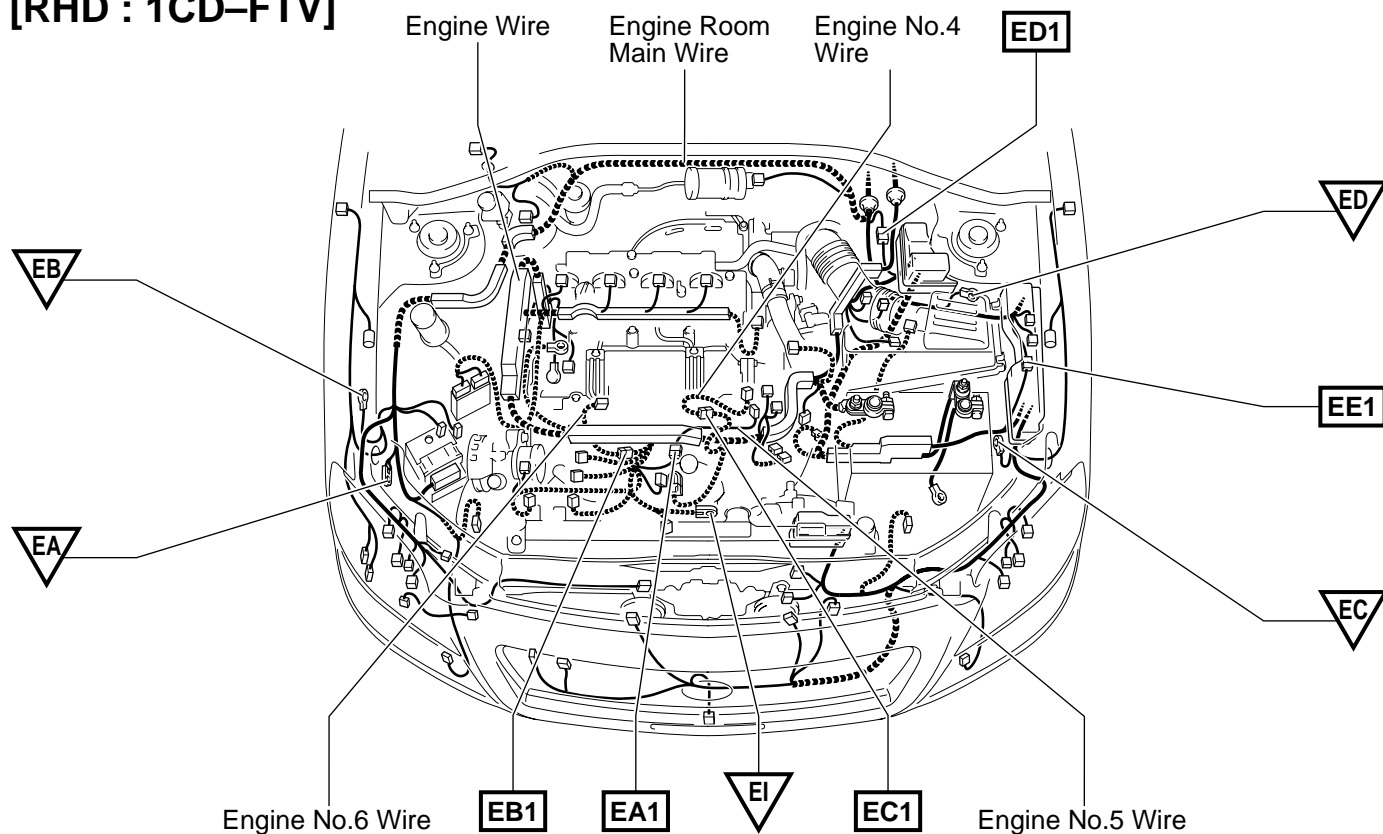

○ : Location of Splice Points

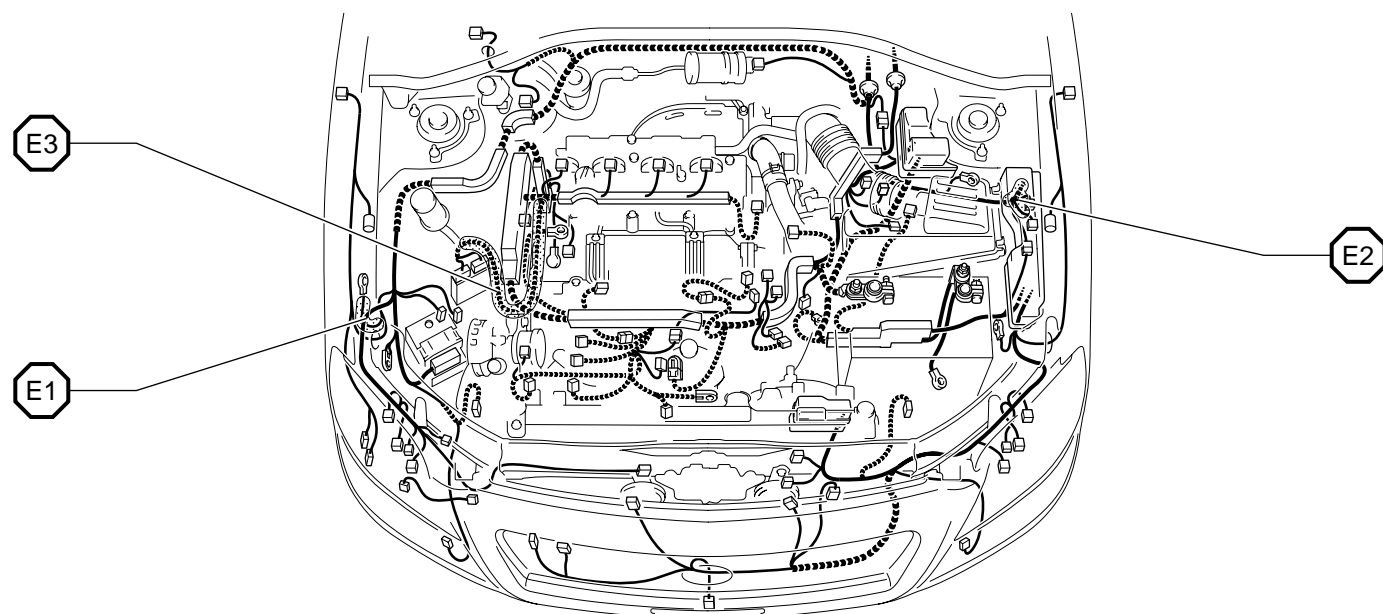


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1ZZ-FE, 3ZZ-FE]

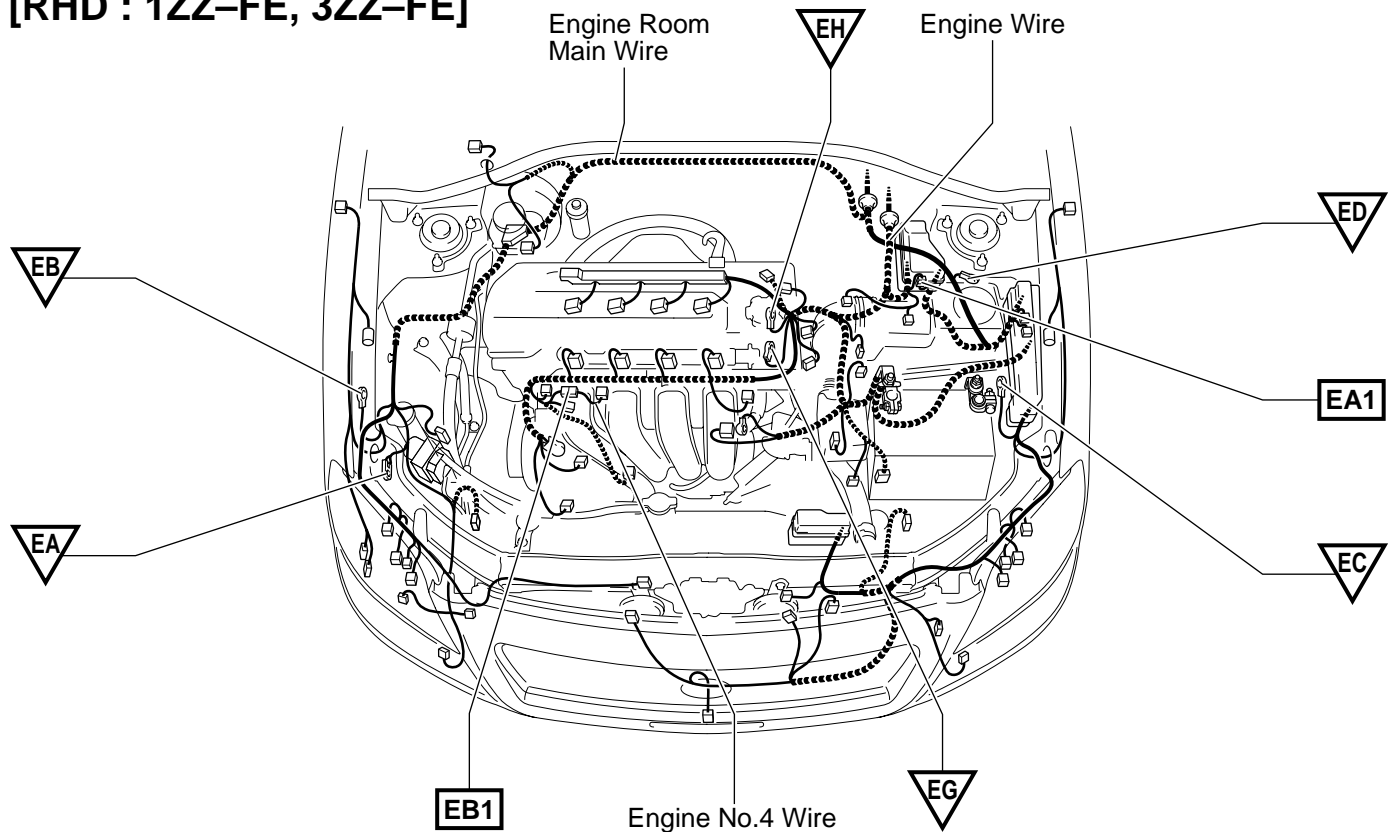


○ : Location of Splice Points

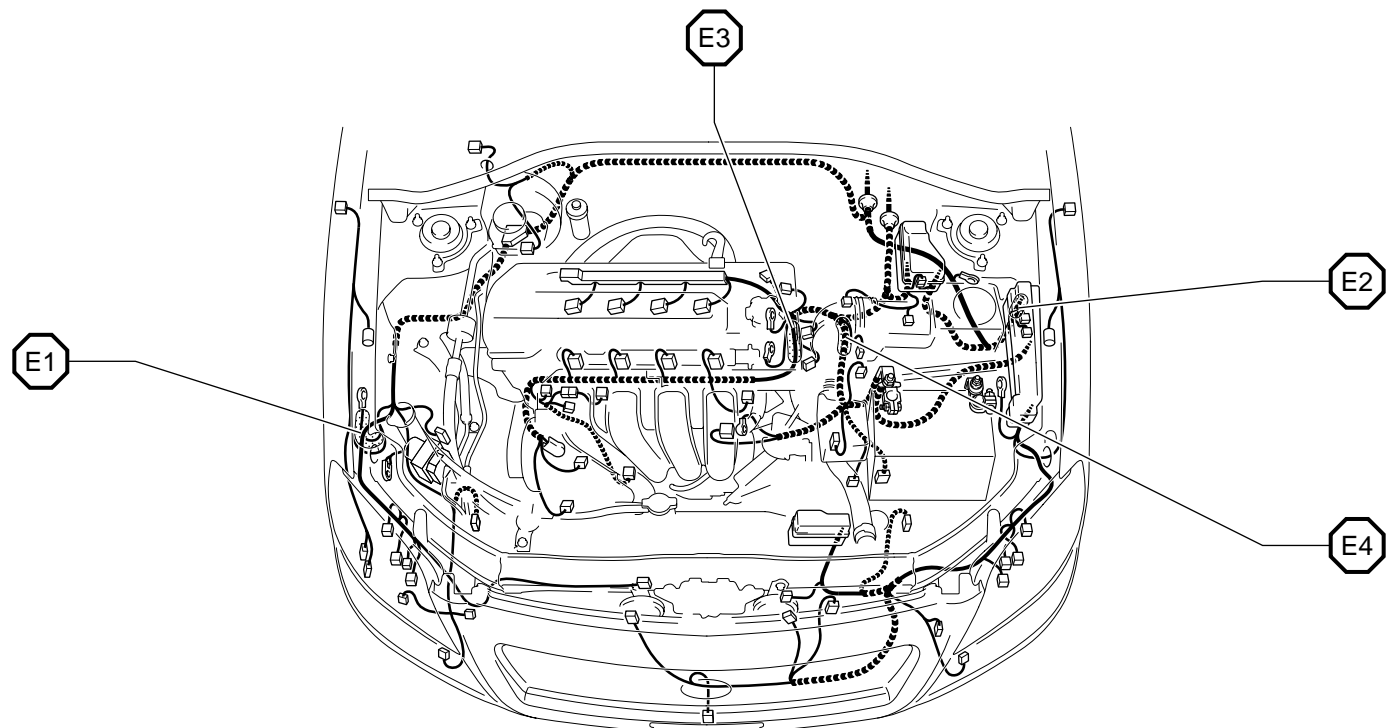


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

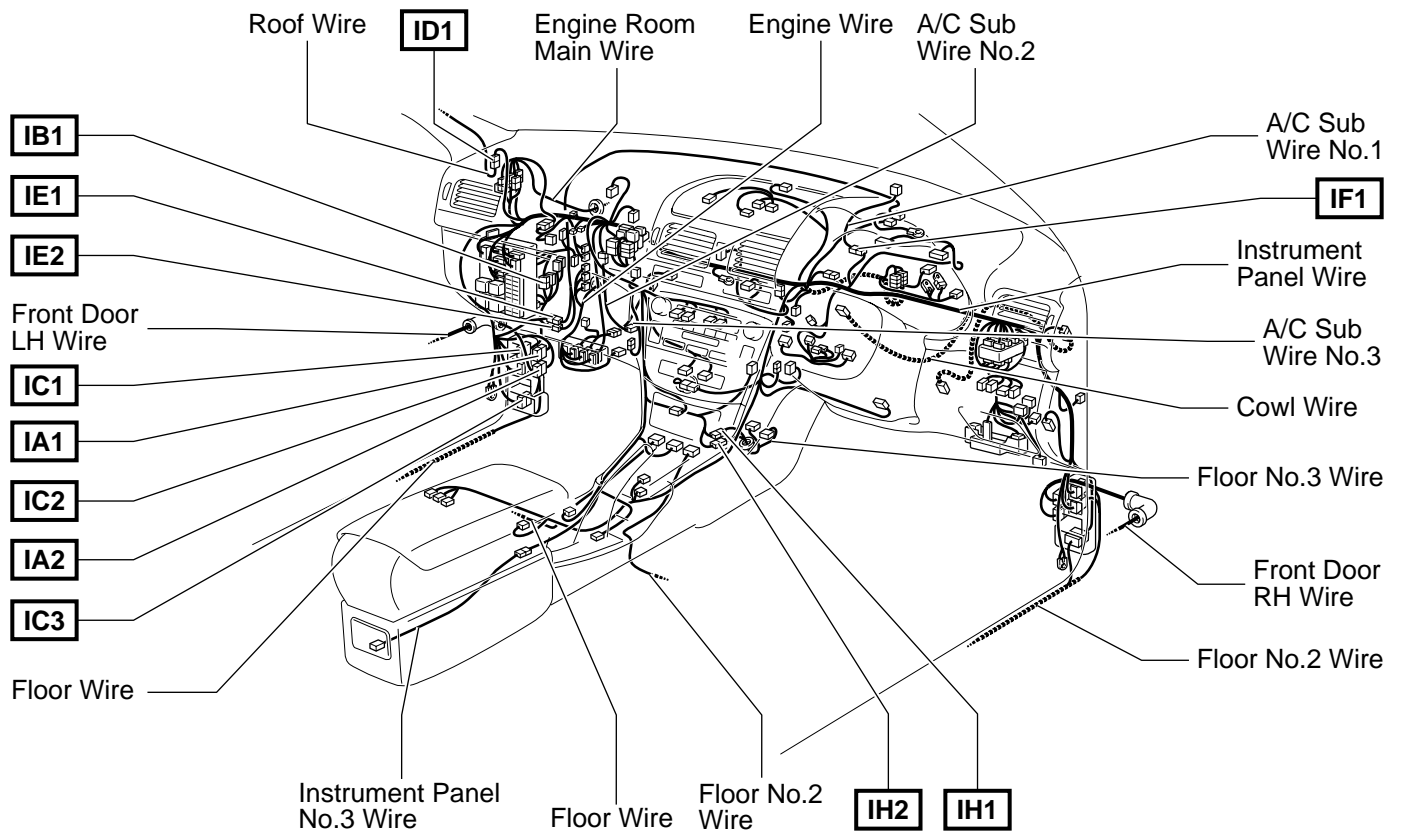

▽ : Location of Ground Points

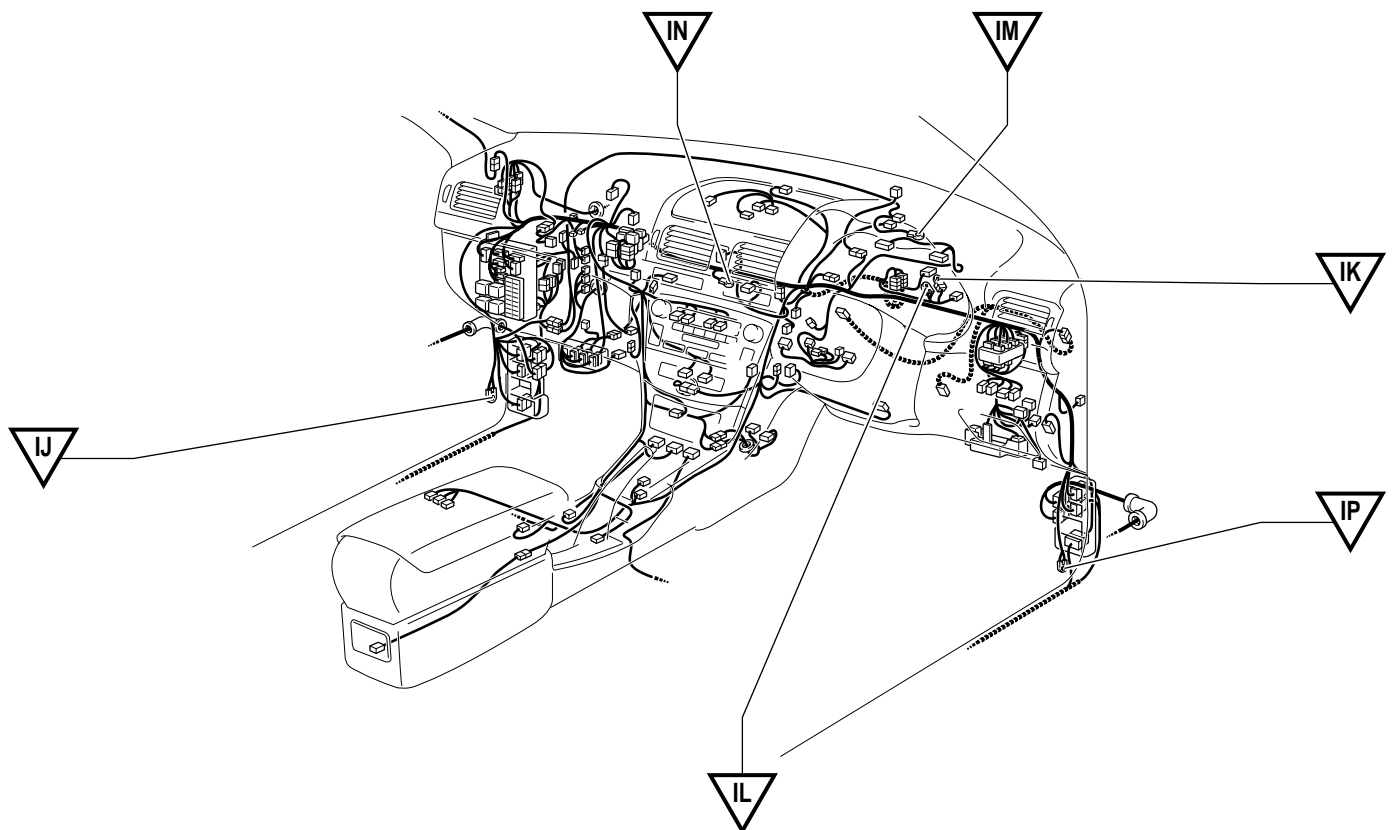


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : W/G]

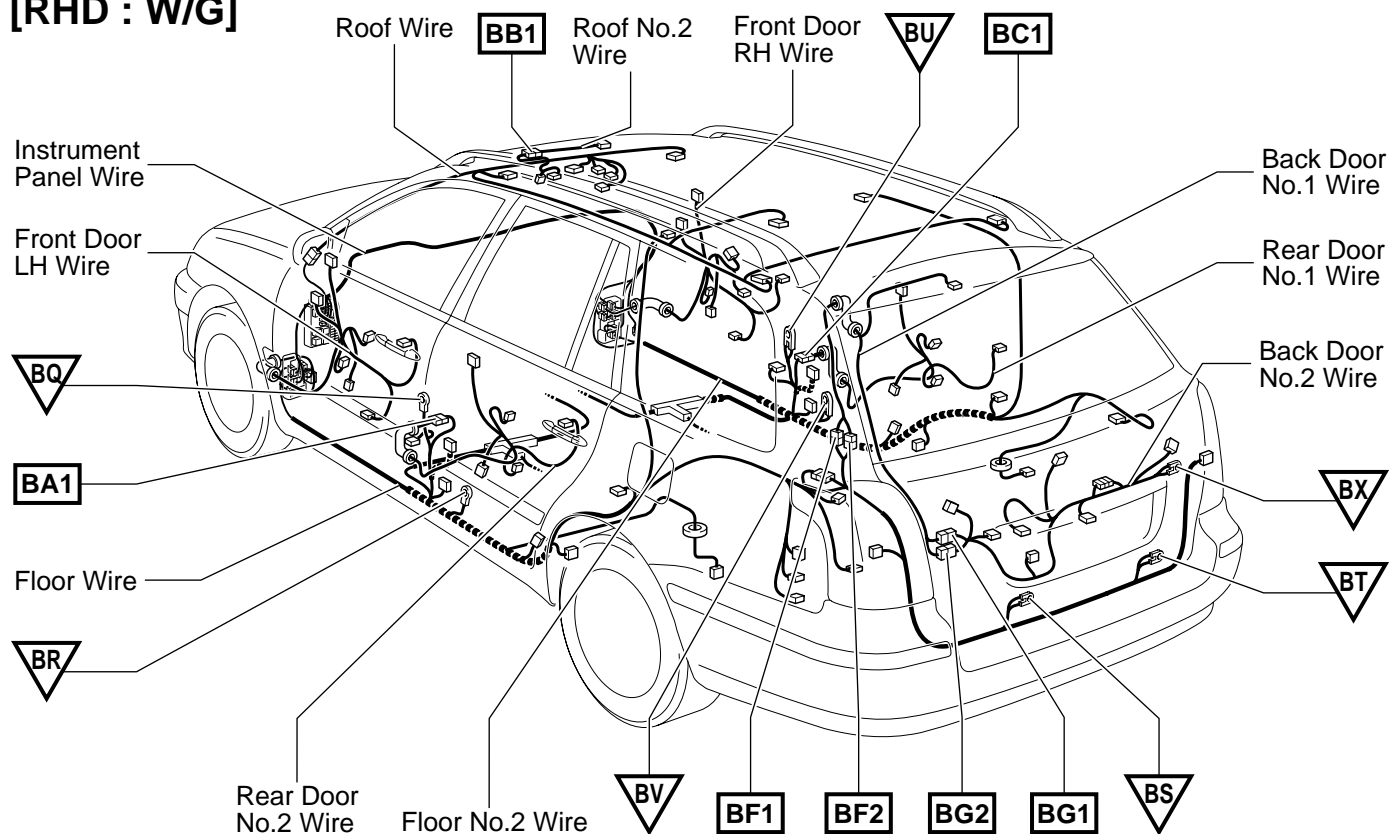

○ : Location of Splice Points

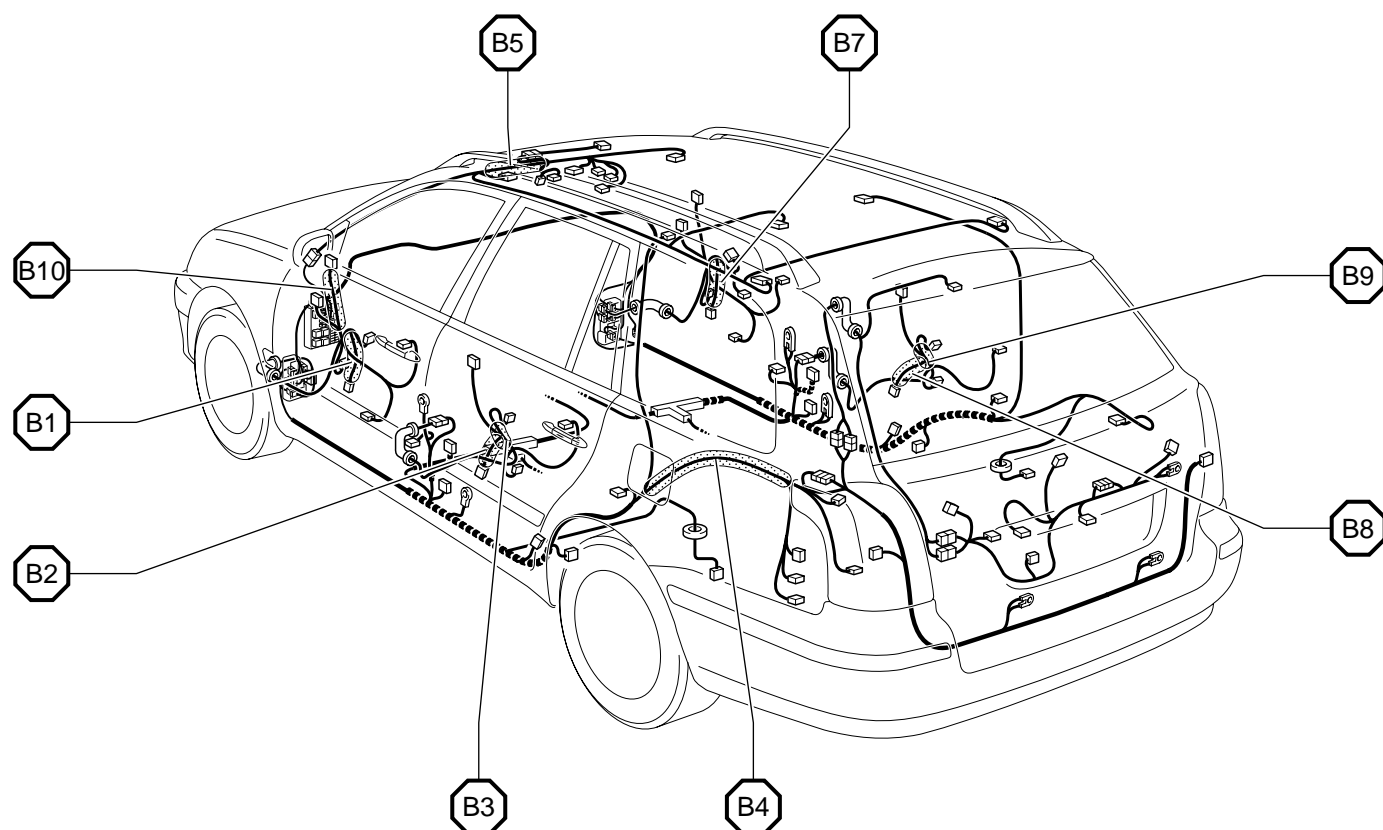


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1AZ-FE]

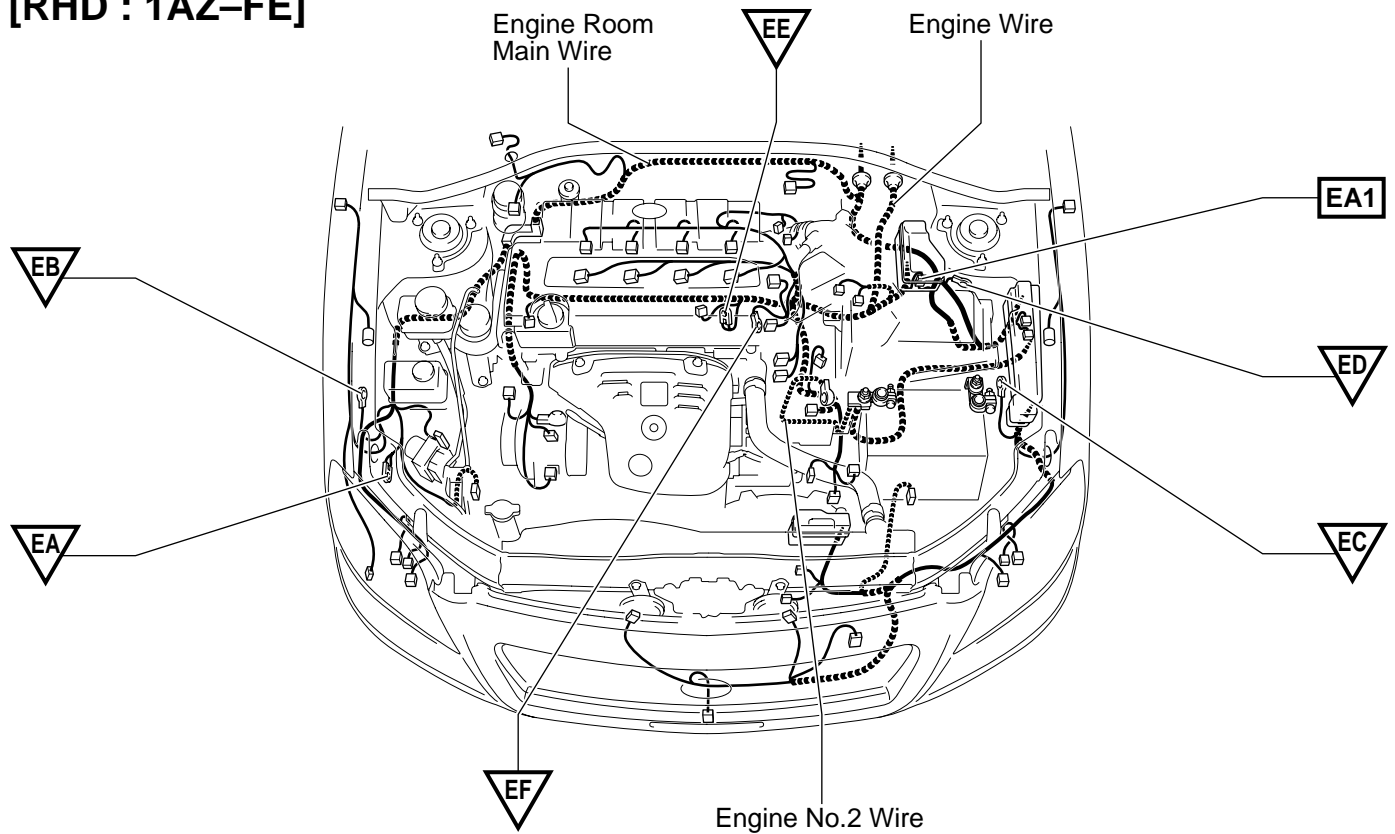


○ : Location of Splice Points

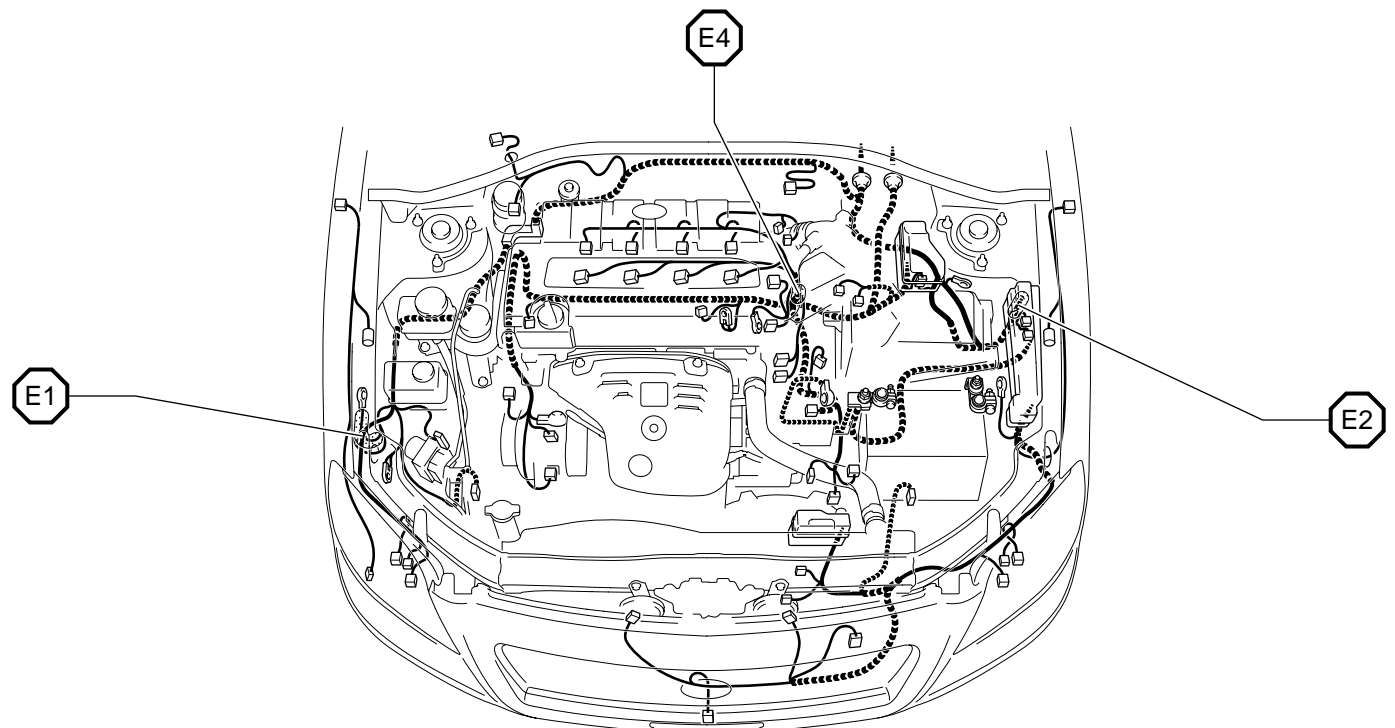

G ELECTRICAL WIRING ROUTING


[RHD]

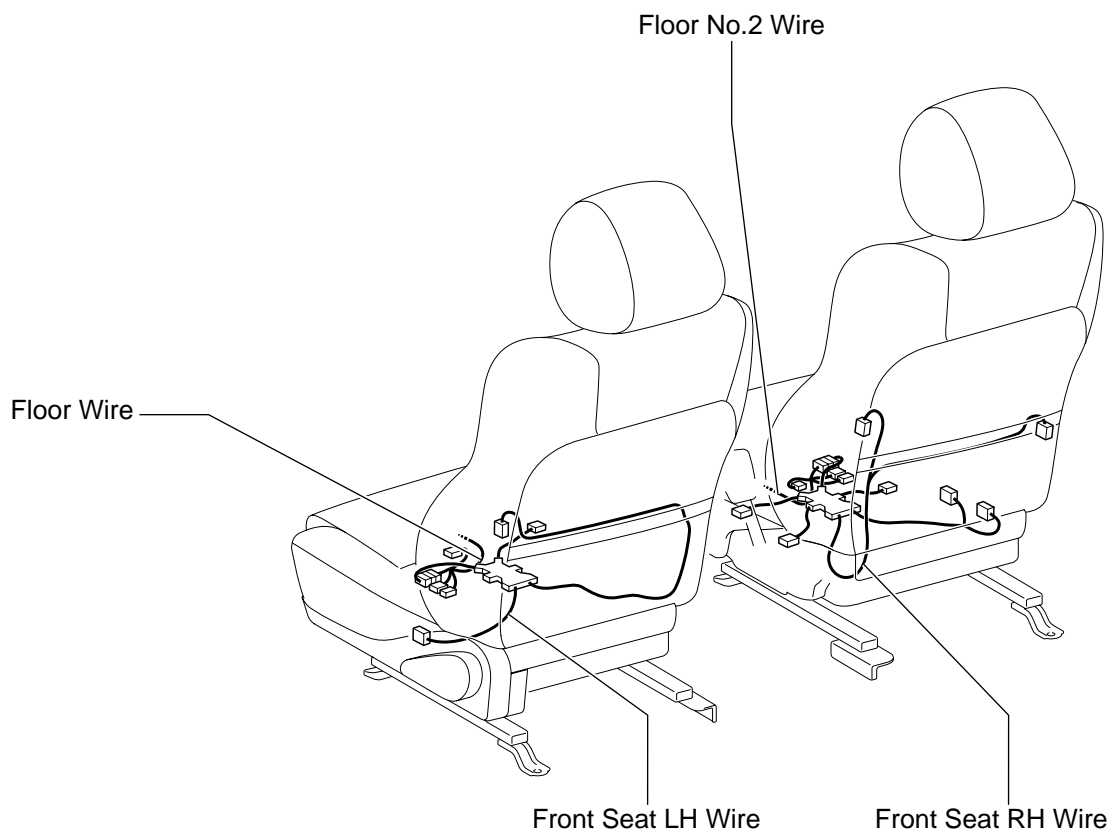

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : L/B]

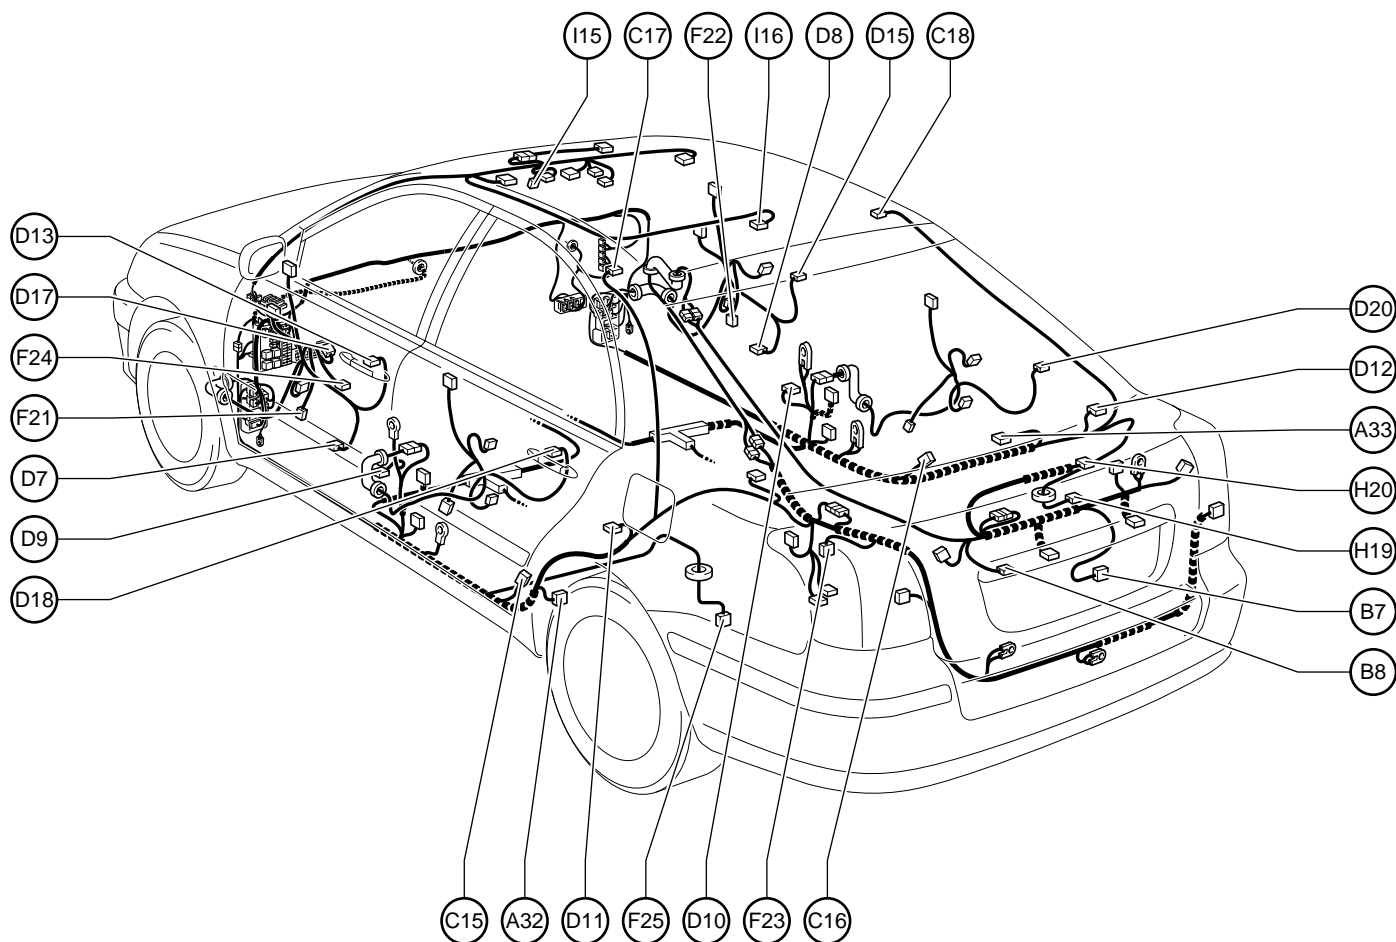

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 7 Back Door Courtesy SW
Back Door Lock Motor
B 8 Back Door Opener SW

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D13 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)

D15 Door Lock Control Motor (Front Passenger's Side)
D17 Door Lock Control SW
Power Window Master SW
D18 Door Lock Motor Rear LH
D20 Door Lock Motor Rear RH

F21 Front Door Speaker LH
F22 Front Door Speaker RH
F23 Fuel Lid Opener Motor
F24 Fuel Lid Opener SW
F25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : S/D]

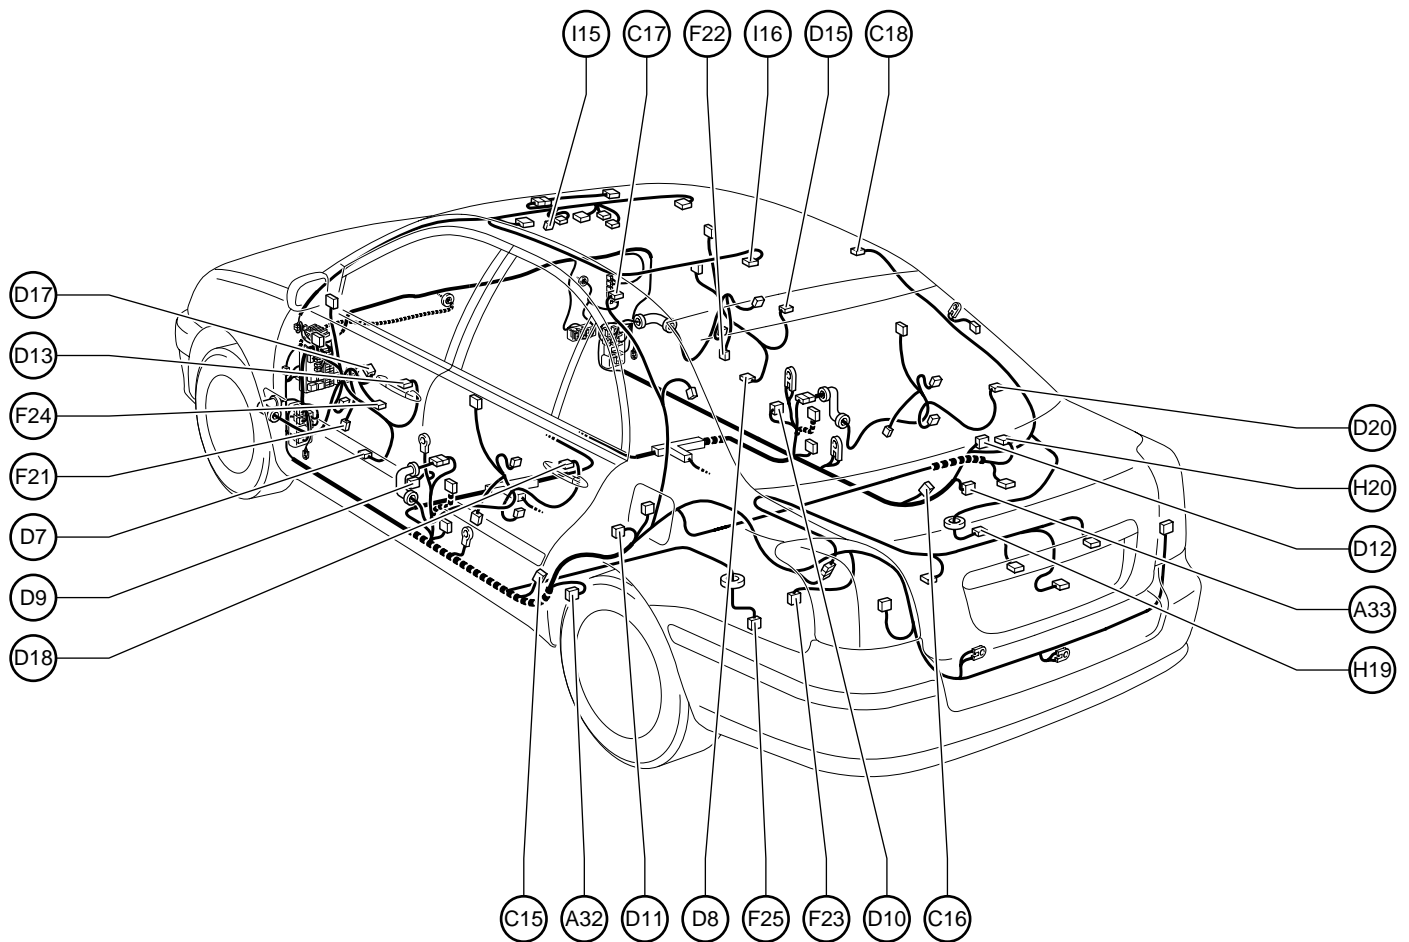

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D13 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
D15 Door Lock Control Motor (Front Passenger's Side)
D17 Door Lock Control SW
Power Window Master SW
D18 Door Lock Motor Rear LH
D20 Door Lock Motor Rear RH

F 21 Front Door Speaker LH
F 22 Front Door Speaker RH
F 23 Fuel Lid Opener Motor
F 24 Fuel Lid Opener SW
F 25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : W/G]

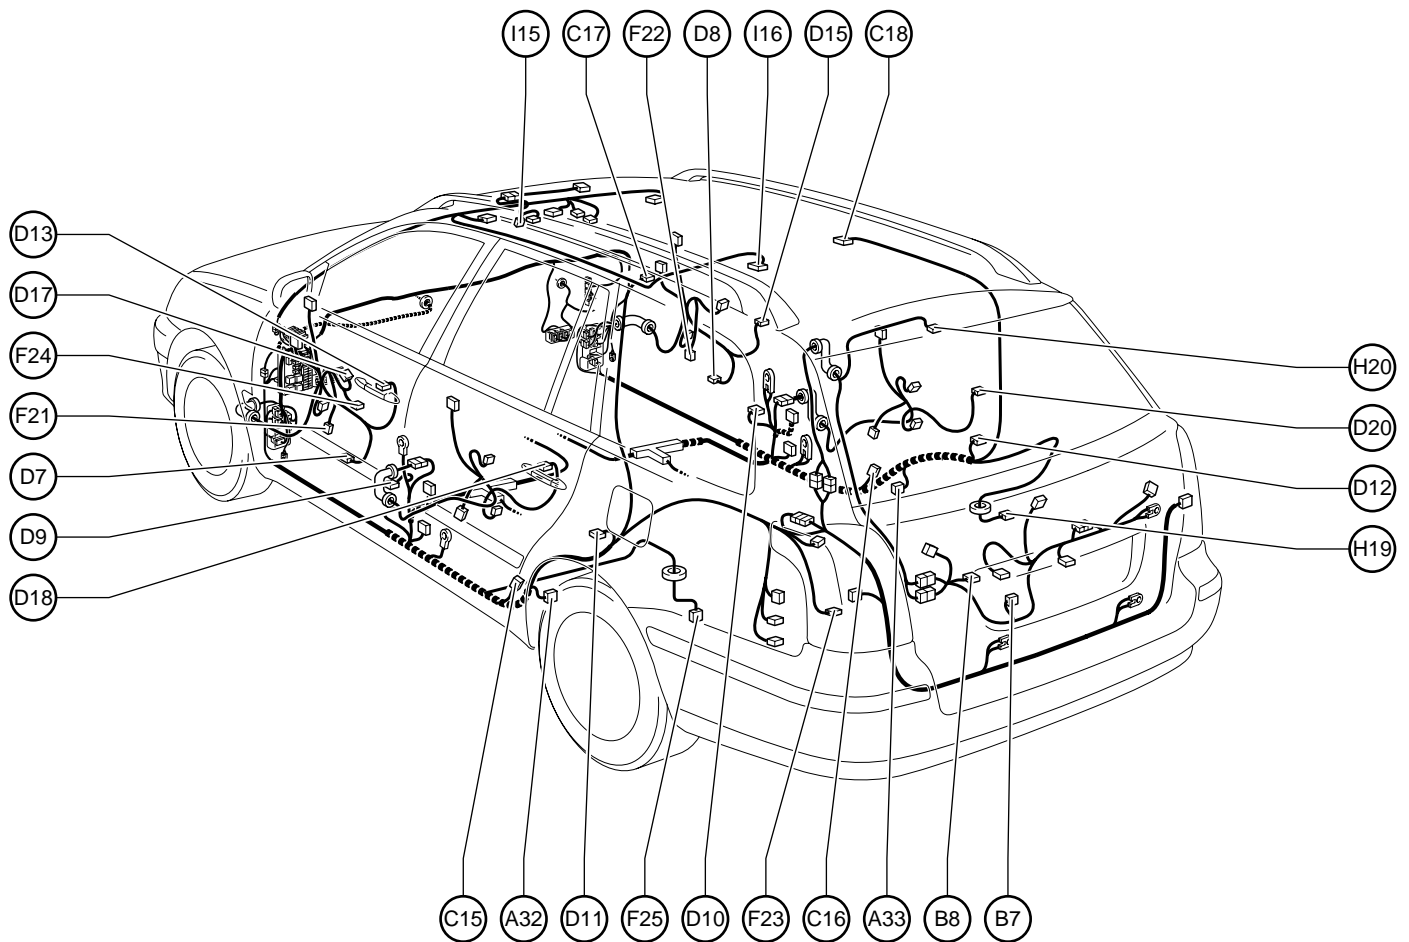

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 7 Back Door Courtesy SW
Back Door Lock Motor
B 8 Back Door Opener SW

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D13 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)

D15 Door Lock Control Motor (Front Passenger's Side)
D17 Door Lock Control SW
Power Window Master SW
D18 Door Lock Motor Rear LH
D20 Door Lock Motor Rear RH

F21 Front Door Speaker LH
F22 Front Door Speaker RH
F23 Fuel Lid Opener Motor
F24 Fuel Lid Opener SW
F25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1AZ-FE]

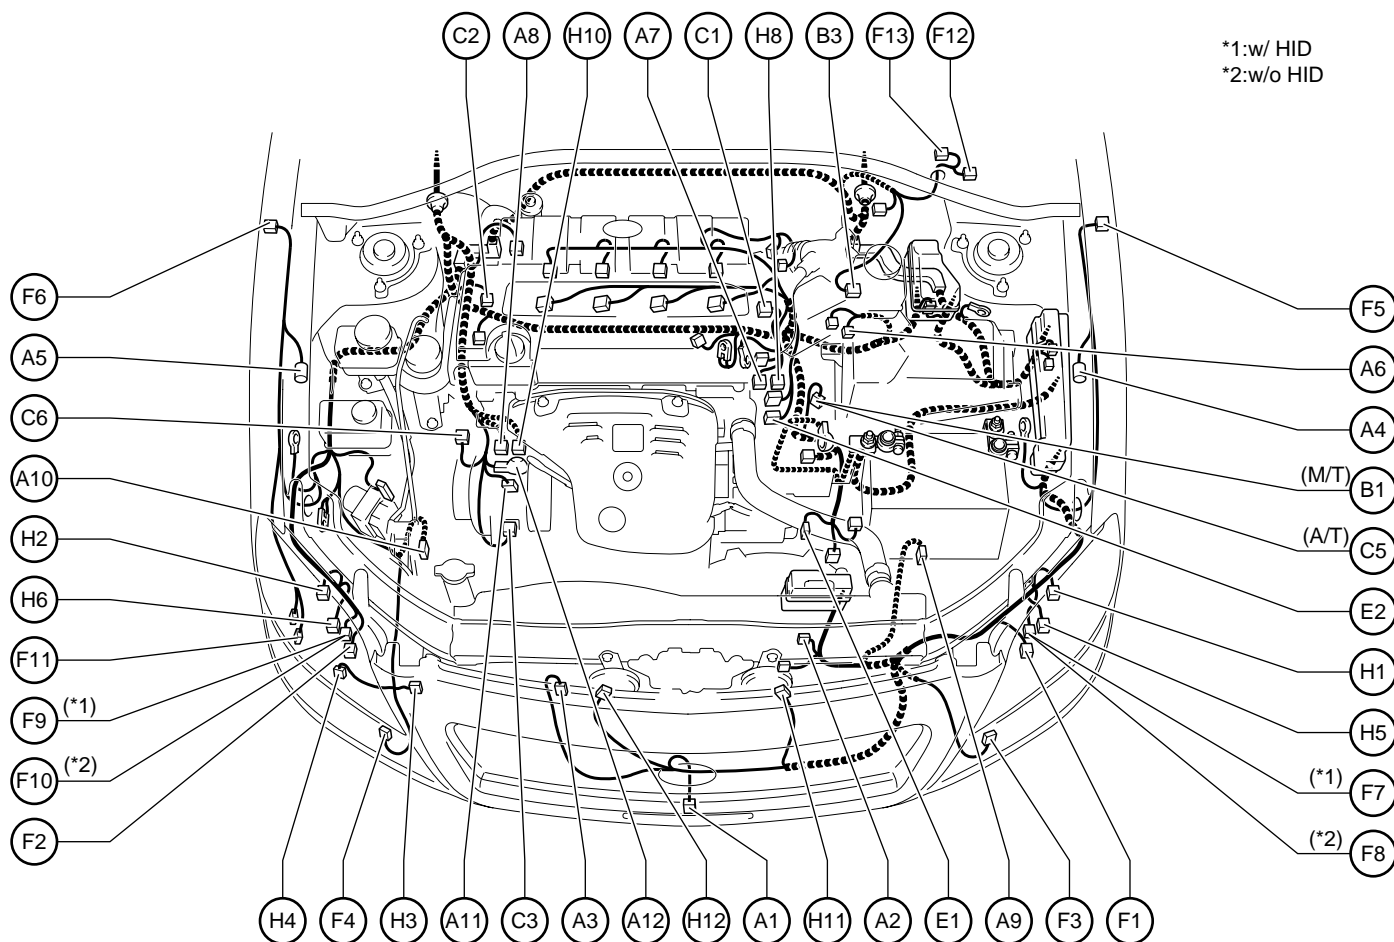

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 8 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 9 Airbag Sensor Front LH
- A 10 Airbag Sensor Front RH
- A 11 Alternator
- A 12 Alternator

- B 1 Back-Up Light SW
- B 3 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 5 Counter Gear Speed Sensor
- C 6 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH


- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
- Headlight LH (Low)
- F 9 Front Turn Signal Light RH
- Headlight Control ECU RH
- F 10 Front Turn Signal Light RH
- Headlight RH (Low)
- F 11 Front Washer Motor
- F 12 Front Window Deicer
- F 13 Front Wiper Motor

- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 10 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 11 Horn LH
- H 12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1AZ-FSE]

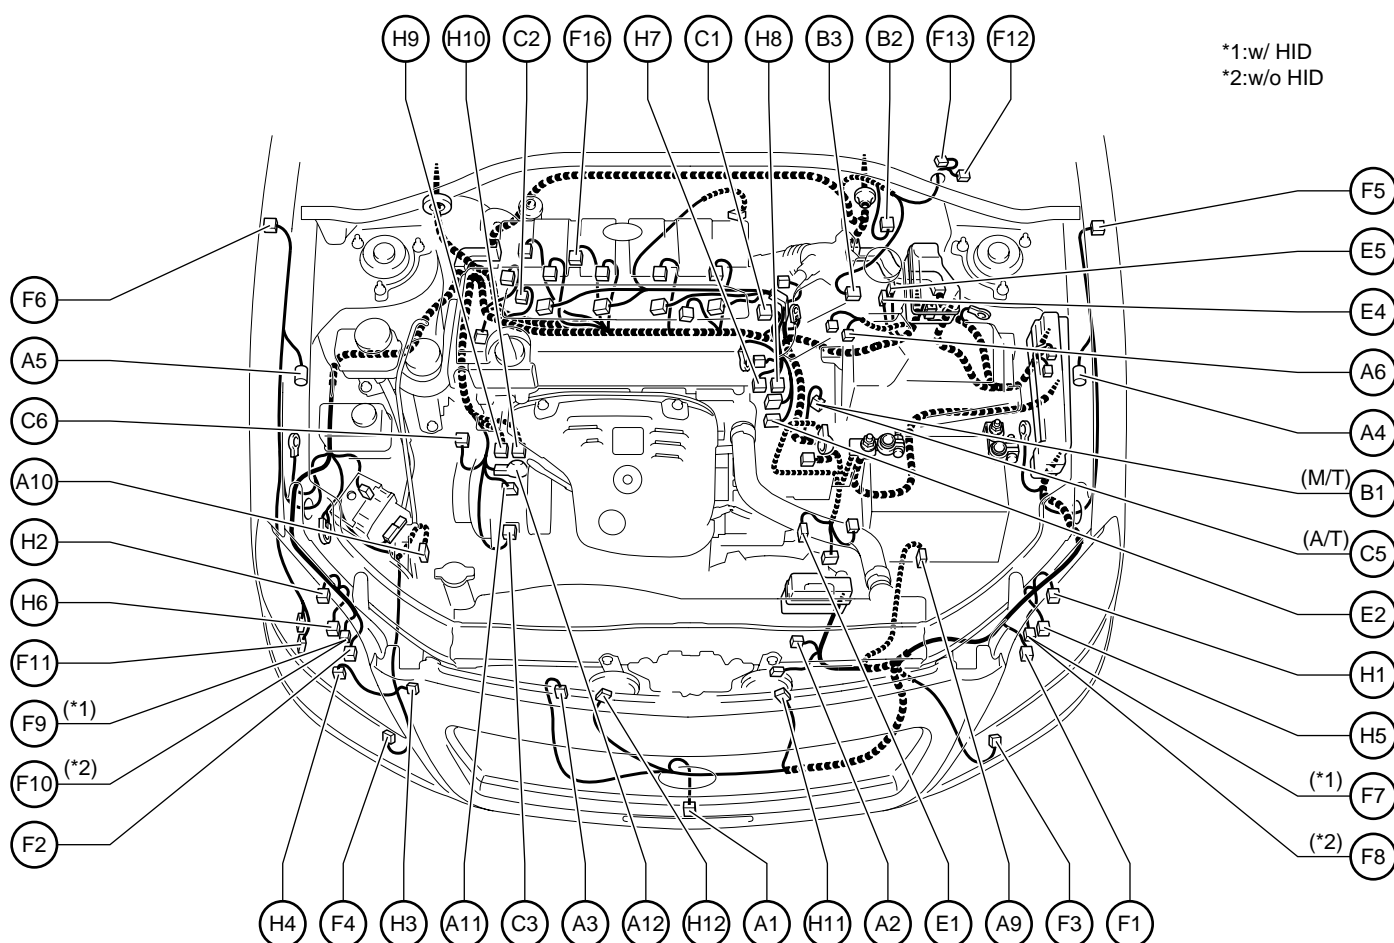

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 9 Airbag Sensor Front LH
- A 10 Airbag Sensor Front RH
- A 11 Alternator
- A 12 Alternator
- B 1 Back-Up Light SW
- B 2 Brake Booster Pressure Sensor
- B 3 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 5 Counter Gear Speed Sensor
- C 6 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 4 Electronic Driver Unit
- E 5 Electronic Driver Unit

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH


- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
- Headlight LH (Low)
- F 9 Front Turn Signal Light RH
- Headlight Control ECU RH
- F 10 Front Turn Signal Light RH
- Headlight RH (Low)
- F 11 Front Washer Motor
- F 12 Front Window Deicer
- F 13 Front Wiper Motor
- F 16 Fuel Pressure Sensor

- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)
- H 10 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 11 Horn LH
- H 12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

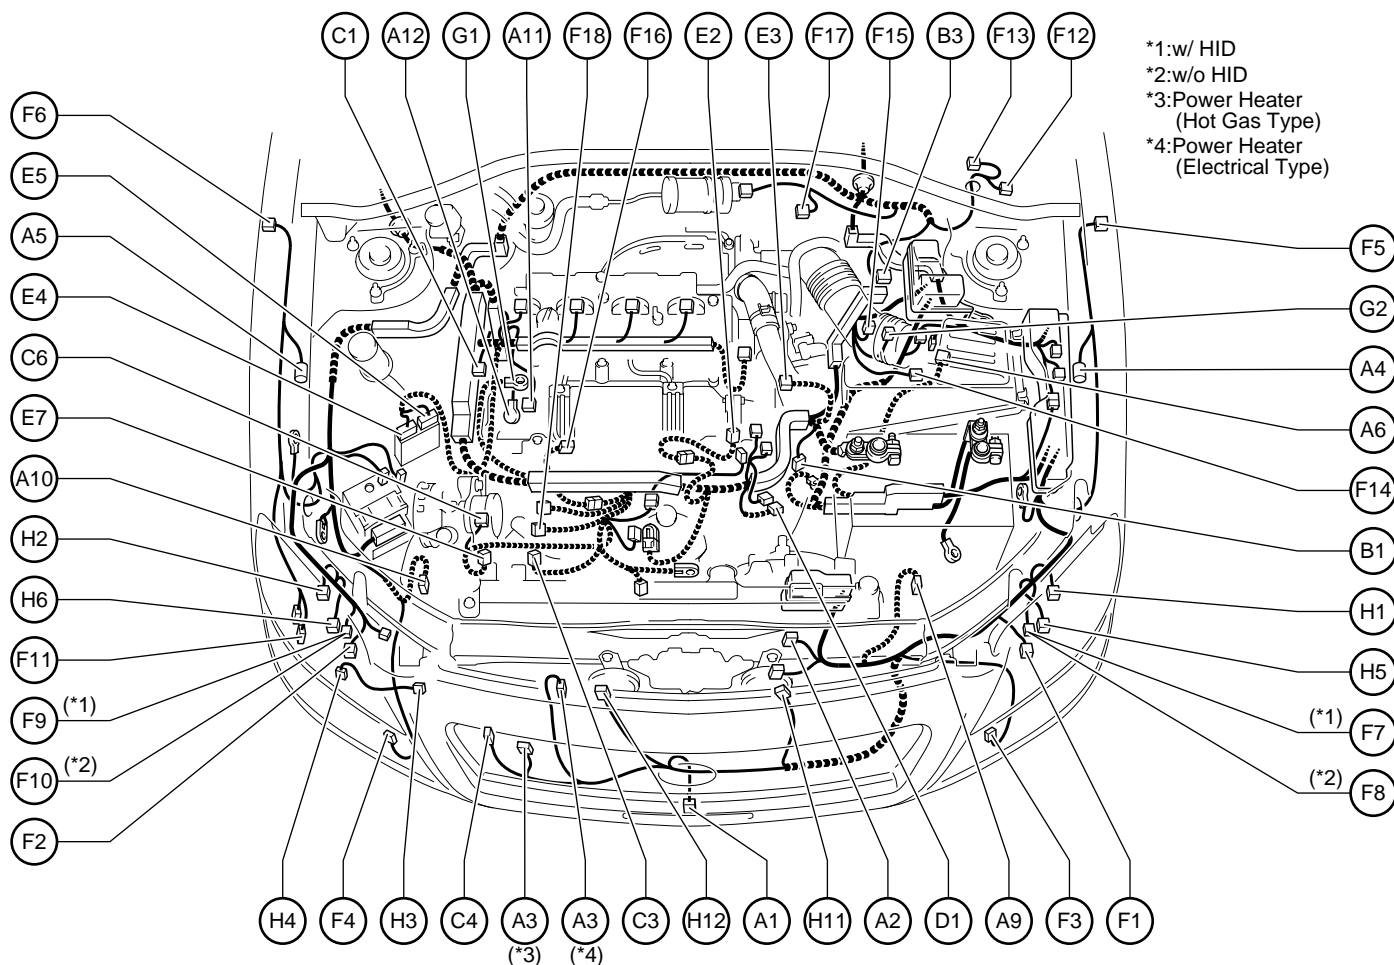

*1:w/ HID
*2:w/o HID
*3:Power Heater
(Hot Gas Type)
*4:Power Heater
(Electrical Type)

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Pressure Sensor
A 4 ABS Speed Sensor Front LH
A 5 ABS Speed Sensor Front RH
A 6 Air Flow Meter
A 9 Airbag Sensor Front LH
A 10 Airbag Sensor Front RH
A 11 Alternator
A 12 Alternator

B 1 Back-Up Light SW
B 3 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Compressor Assembly
C 4 Condenser Assembly
C 6 Crankshaft Position Sensor

D 1 Diesel Throttle Control Motor

E 2 EFI Water Temp. Sensor
E 3 EGR Valve Control Motor
E 4 Electronic Driver Unit
E 5 Electronic Driver Unit
E 7 Engine Oil Level Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH

F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
Headlight Control ECU LH
F 8 Front Turn Signal Light LH
Headlight LH (Low)
F 9 Front Turn Signal Light RH
Headlight Control ECU RH
F 10 Front Turn Signal Light RH
Headlight RH (Low)
F 11 Front Washer Motor
F 12 Front Window Deicer
F 13 Front Wiper Motor
F 14 Fuel Filter Warning SW
F 15 Fuel Heater
F 16 Fuel Pressure Sensor
F 17 Fuel Pump
F 18 Fuel Temp. Sensor


G 1 Glow Plug
G 2 Glow Plug Relay

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Control Relay
H 4 Headlight Cleaner Motor
H 5 Headlight LH (High)
H 6 Headlight RH (High)
H 11 Horn LH
H 12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE, 3ZZ-FE]

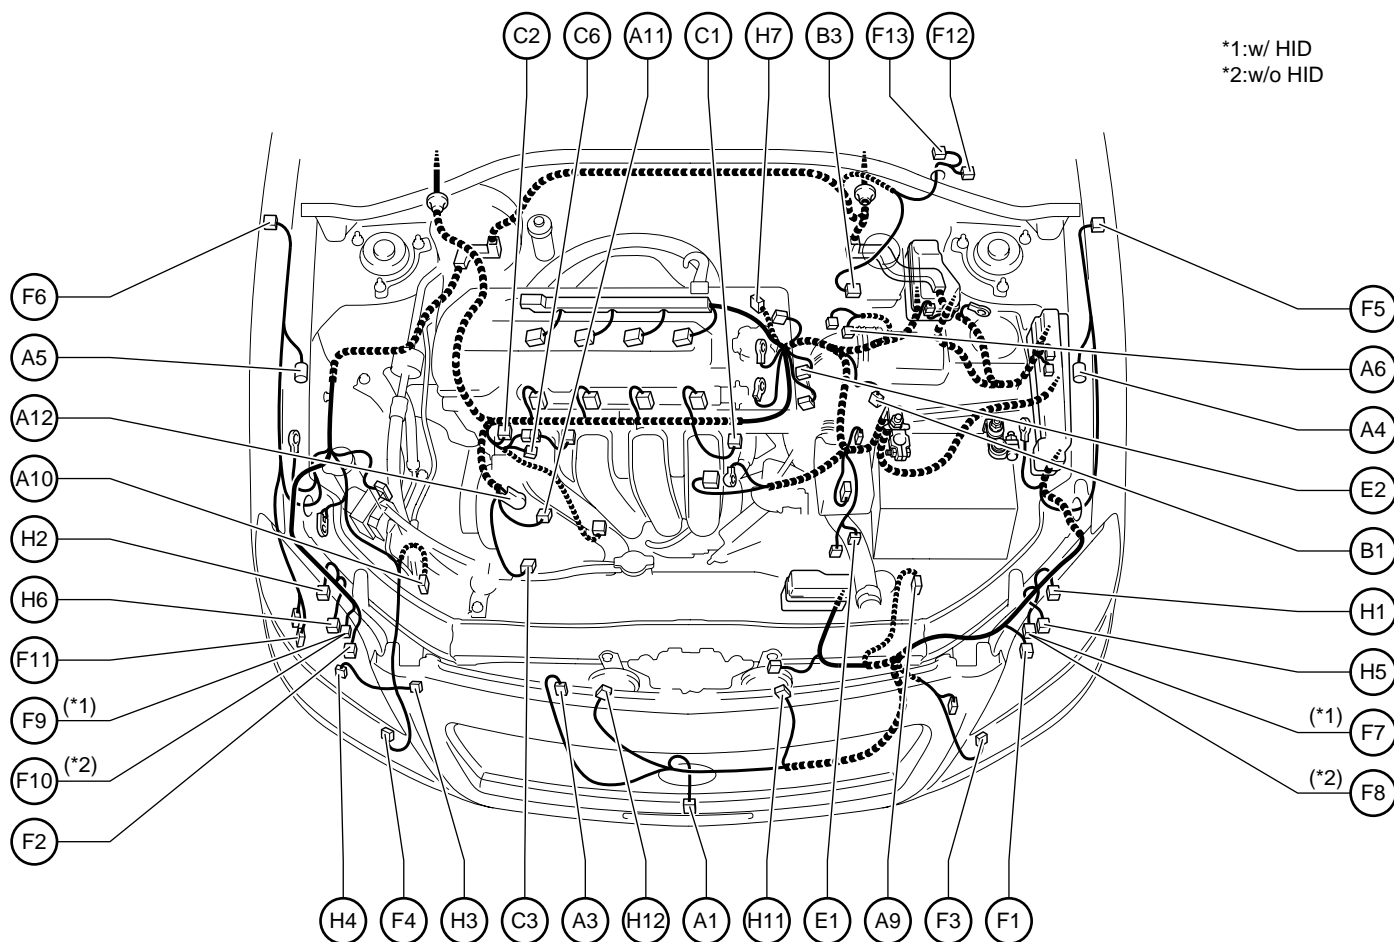

*1:w/ HID
*2:w/o HID


- A 1 A/C Ambient Temp. Sensor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 9 Airbag Sensor Front LH
- A10 Airbag Sensor Front RH
- A11 Alternator
- A12 Alternator
- B 1 Back-Up Light SW
- B 3 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 6 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH

- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
Headlight LH (Low)
- F 9 Front Turn Signal Light RH
Headlight Control ECU RH
- F10 Front Turn Signal Light RH
Headlight RH (Low)
- F11 Front Washer Motor
- F12 Front Window Deicer
- F13 Front Wiper Motor
- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H11 Horn LH
- H12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

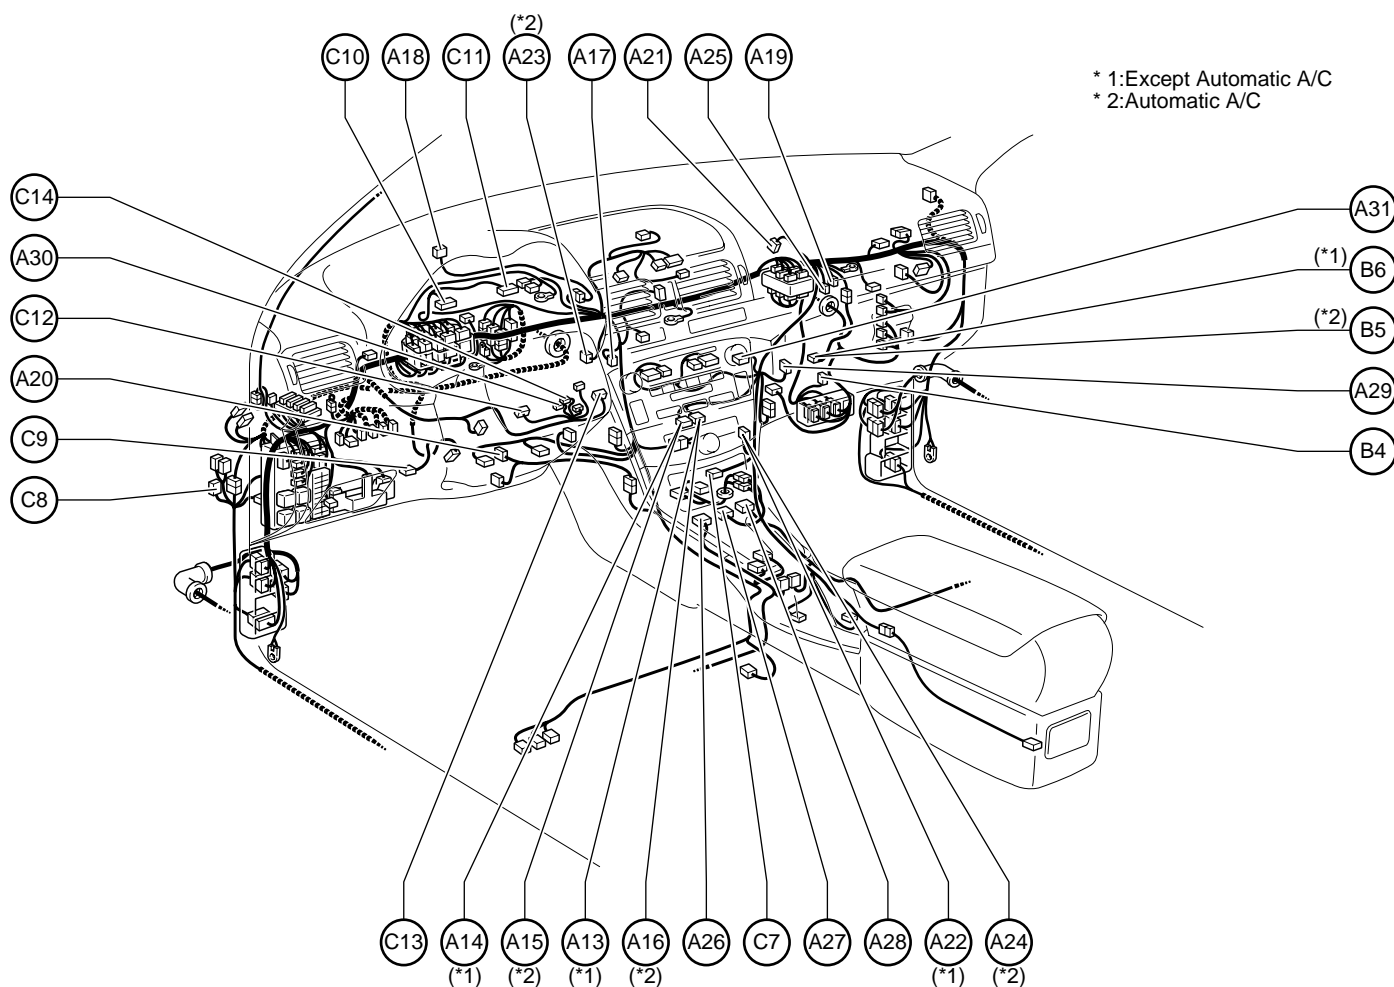


- A 13 A/C Control Assembly
- A 14 A/C Control Assembly
- A 15 A/C Control Assembly
- A 16 A/C Control Assembly
- A 17 A/C Room Temp. Sensor
- A 18 A/C Solar Sensor
- A 19 A/C Thermistor
- A 20 Accel Position Sensor
- A 21 Air Inlet Control Servo Motor
- A 22 Air Mix Control Servo Motor
- A 23 Air Mix Control Servo Motor (Driver Side)
- A 24 Air Mix Control Servo Motor (Front Passenger Side)
- A 25 Air Vent Mode Control Servo Motor
- A 26 Airbag Sensor Assembly
- A 27 Airbag Sensor Assembly
- A 28 Airbag Sensor Assembly
- A 29 Airbag Squib (Front Passenger Airbag Assembly)
- A 30 Airbag Squib (Steering Wheel Pad)
- A 31 Antenna Amplifier

- B 4 Blower Motor
- B 5 Blower Motor Controller
- B 6 Blower Resistor
- C 7 Cigarette Lighter
Cigarette Lighter Illumination
- C 8 Circuit Opening Relay
- C 9 Clutch Start SW
- C 10 Combination Meter
- C 11 Combination Meter
- C 12 Combination SW
- C 13 Combination SW
- C 14 Combination SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[LHD]

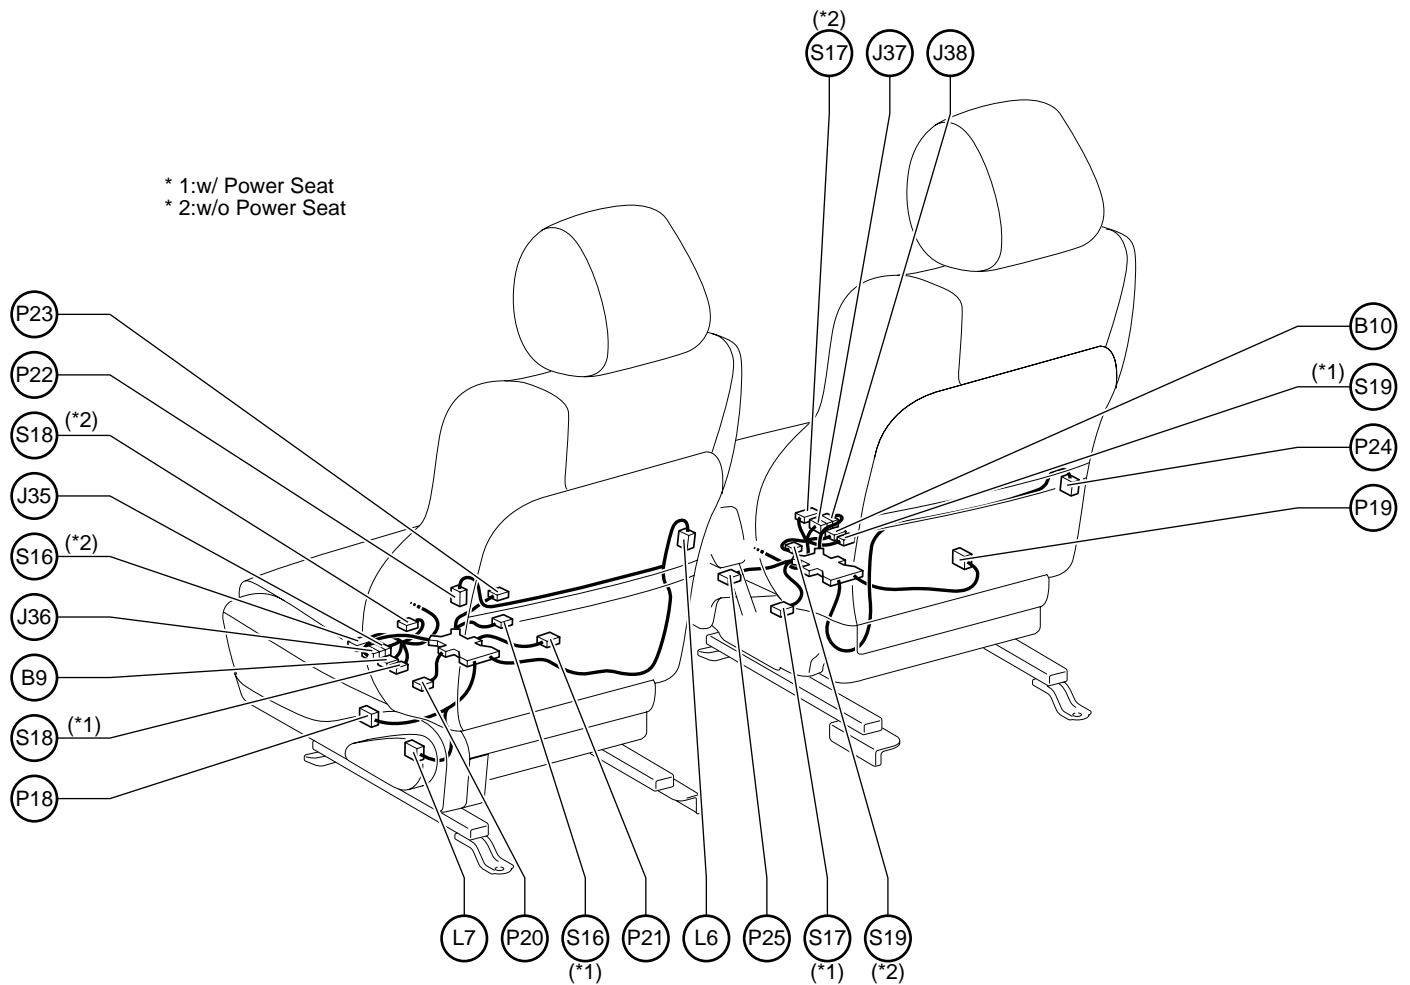

B 9 Buckle SW (Driver's Side)
B 10 Buckle SW (Front Passenger's Side)
Occupant Detection Sensor

J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector

L 6 Lumbar Support Control Motor
L 7 Lumbar Support Control SW


P 18 Power Seat Control SW (Driver's Seat)
P 19 Power Seat Control SW (Front Passenger's Seat)
P 20 Power Seat Motor (Driver's Seat Front Vertical Control)
P 21 Power Seat Motor (Driver's Seat Lifter Control)
P 22 Power Seat Motor (Driver's Seat Reclining Control)
P 23 Power Seat Motor (Driver's Seat Slide Control)
P 24 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 25 Power Seat Motor
(Front Passenger's Seat Slide Control)

S 16 Seat Heater LH
S 17 Seat Heater RH
S 18 Side Airbag Squib LH
S 19 Side Airbag Squib RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : L/B]

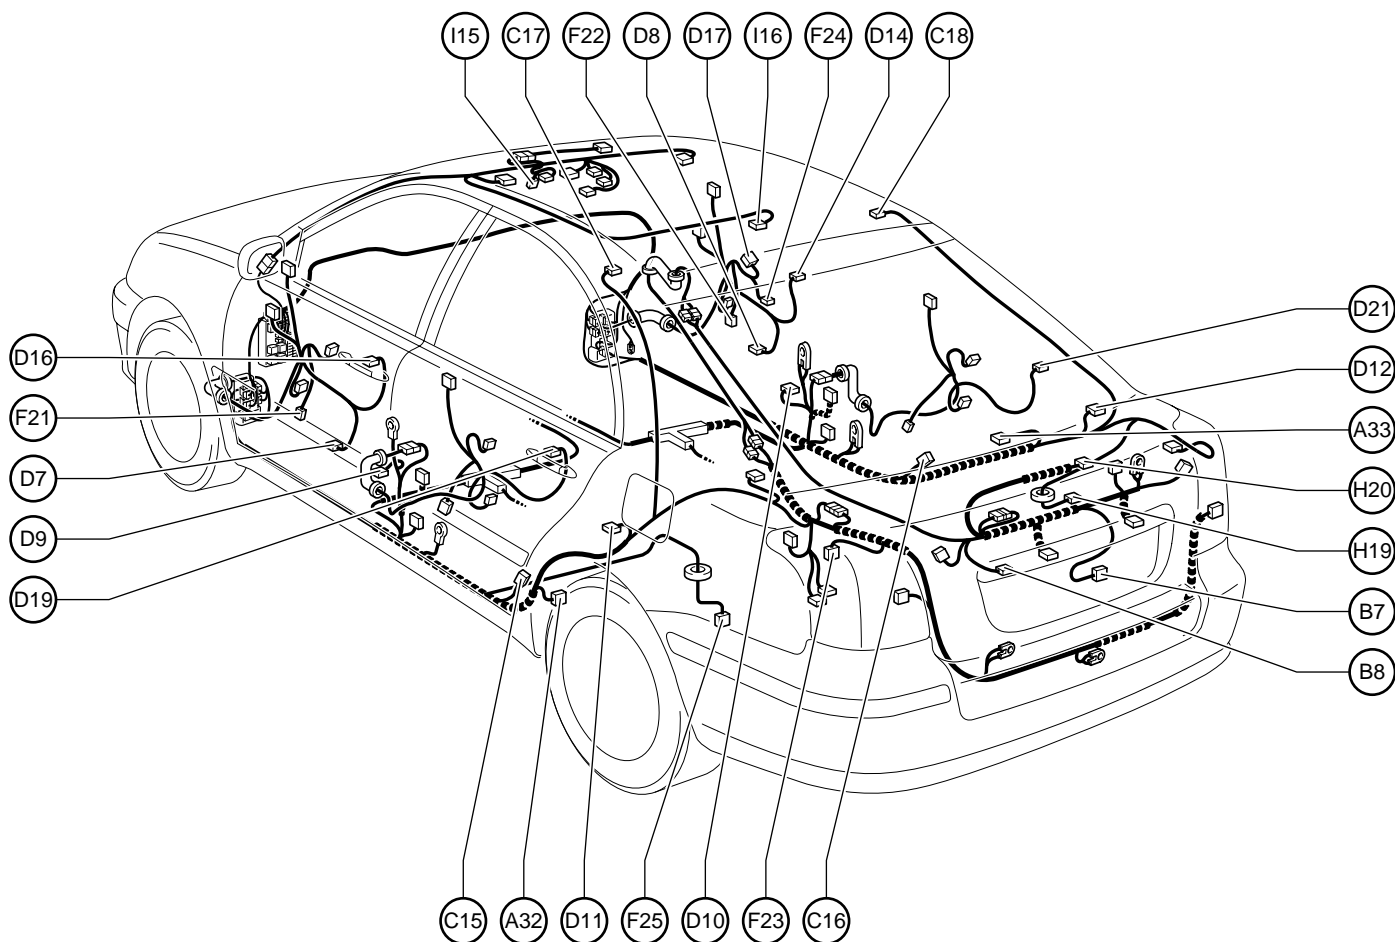

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 7 Back Door Courtesy SW
Back Door Lock Motor
B 8 Back Door Opener SW

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D14 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
Double Lock Motor (Driver's Side)
Double Lock Position SW (Driver's Side)
D16 Door Lock Control Motor (Front Passenger's Side)
Door Unlock Detection SW (Front Passenger's Side)
Double Lock Motor (Front Passenger's Side)
Double Lock Position SW (Front Passenger's Side)

D17 Door Lock Control SW
Power Window Master SW
D19 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D21 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Lock Motor Rear RH
Double Lock Position SW Rear RH

F21 Front Door Speaker LH
F22 Front Door Speaker RH
F23 Fuel Lid Opener Motor
F24 Fuel Lid Opener SW
F25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : S/D]

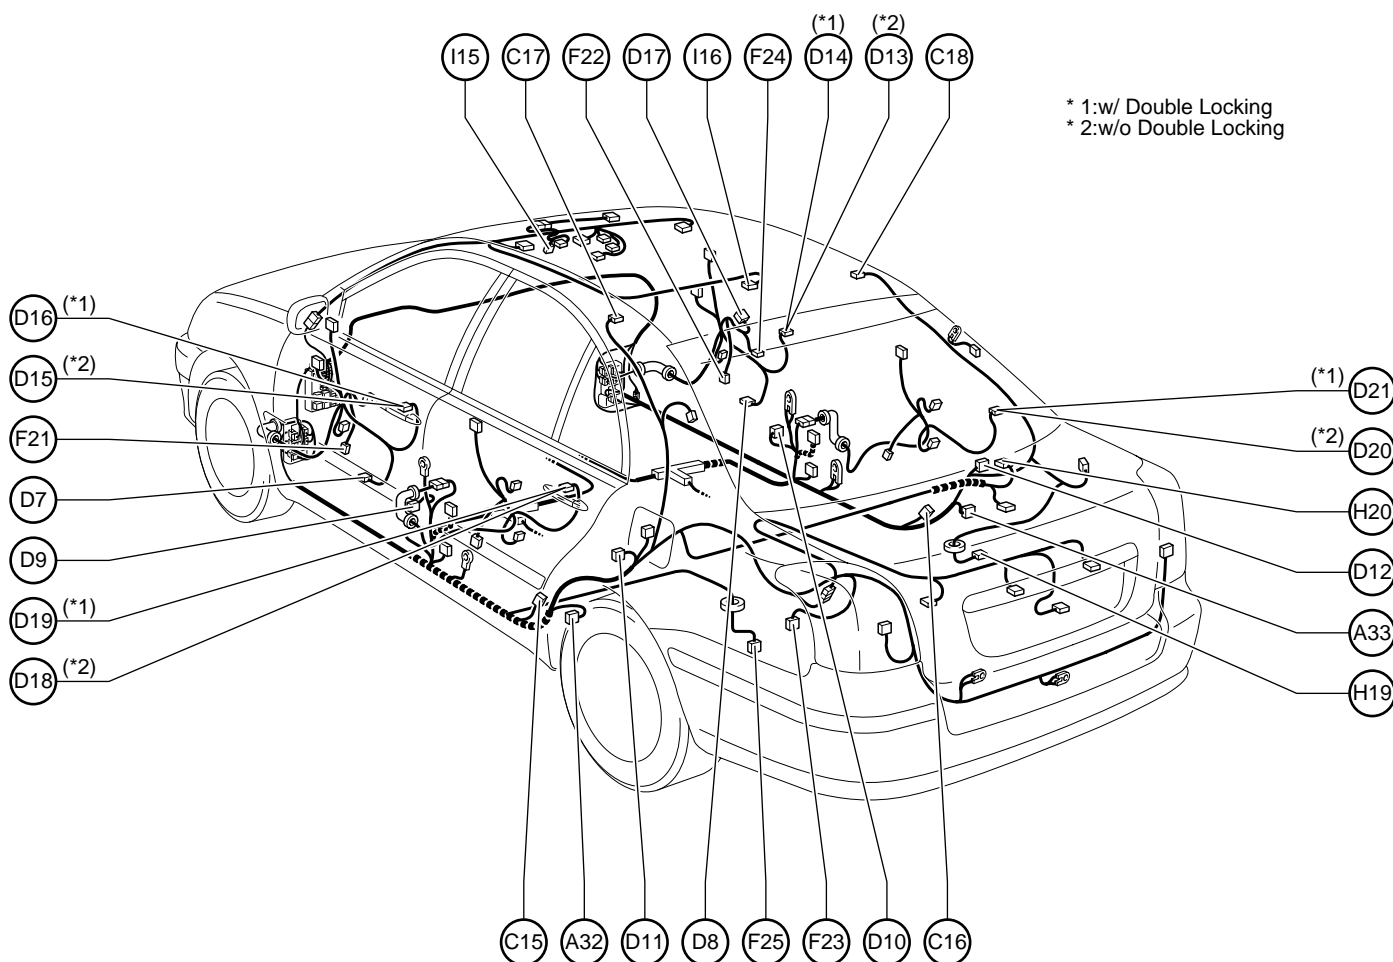

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D13 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
D14 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
Double Lock Motor (Driver's Side)
Double Lock Position SW (Driver's Side)
D15 Door Lock Control Motor (Front Passenger's Side)
D16 Door Lock Control Motor (Front Passenger's Side)
Door Unlock Detection SW (Front Passenger's Side)
Double Lock Motor (Front Passenger's Side)
Double Lock Position SW (Front Passenger's Side)

D17 Door Lock Control SW
Power Window Master SW
D18 Door Lock Motor Rear LH
D19 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D20 Door Lock Motor Rear RH
D21 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Lock Motor Rear RH
Double Lock Position SW Rear RH

F21 Front Door Speaker LH
F22 Front Door Speaker RH
F23 Fuel Lid Opener Motor
F24 Fuel Lid Opener SW
F25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : W/G]

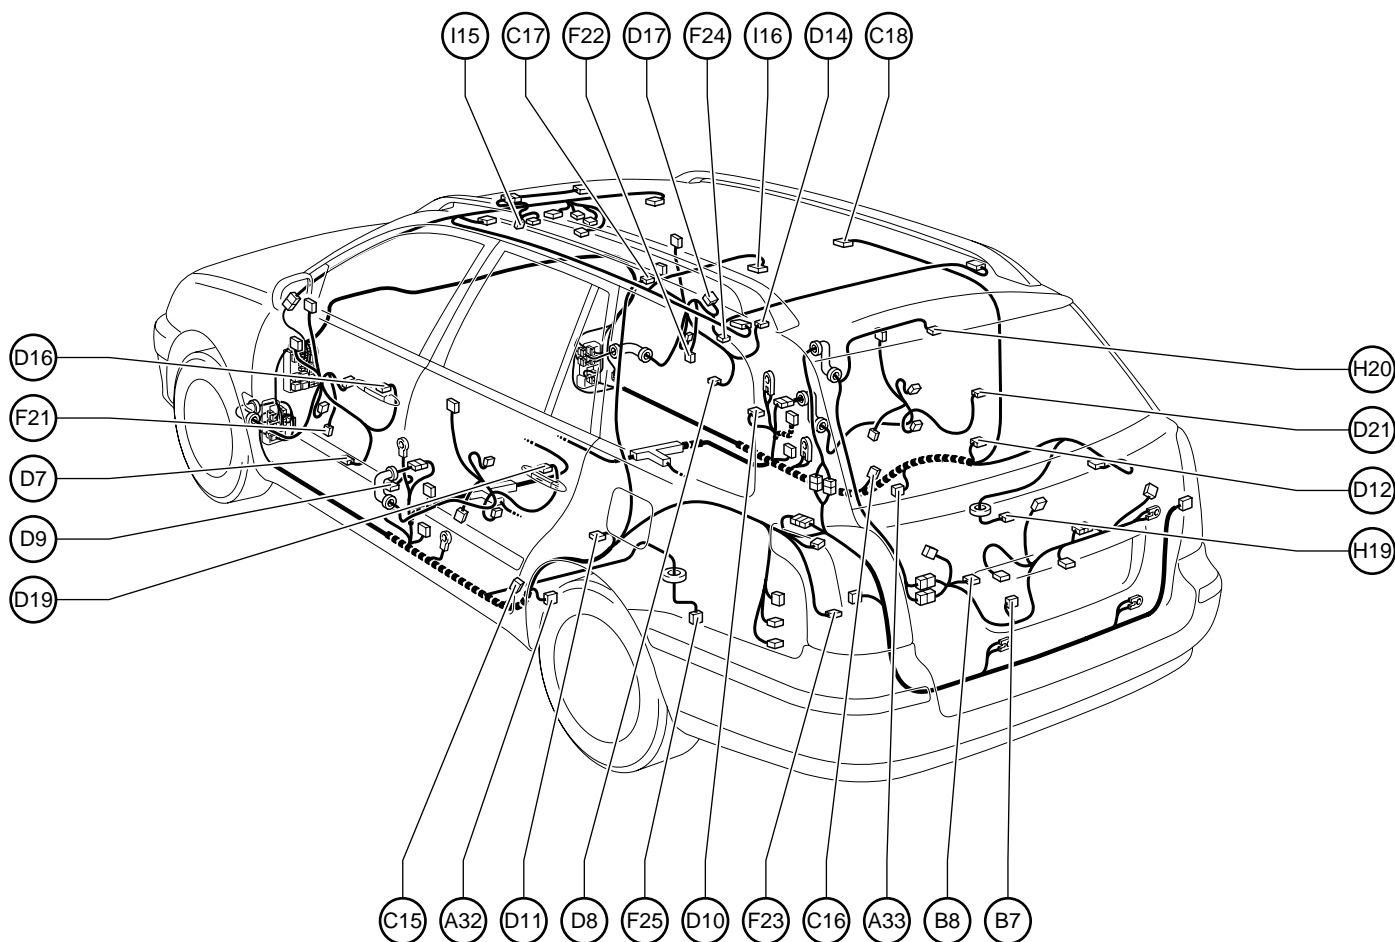

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 7 Back Door Courtesy SW
Back Door Lock Motor
B 8 Back Door Opener SW

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 7 Door Courtesy Light LH
D 8 Door Courtesy Light RH
D 9 Door Courtesy SW Front LH
D10 Door Courtesy SW Front RH
D11 Door Courtesy SW Rear LH
D12 Door Courtesy SW Rear RH
D14 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Control Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
Double Lock Motor (Driver's Side)
Double Lock Position SW (Driver's Side)
D16 Door Lock Control Motor (Front Passenger's Side)
Door Unlock Detection SW (Front Passenger's Side)
Double Lock Motor (Front Passenger's Side)
Double Lock Position SW (Front Passenger's Side)

D17 Door Lock Control SW
Power Window Master SW
D19 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D21 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Lock Motor Rear RH
Double Lock Position SW Rear RH

F21 Front Door Speaker LH
F22 Front Door Speaker RH
F23 Fuel Lid Opener Motor
F24 Fuel Lid Opener SW
F25 Fuel Pump
Fuel Sender


H19 Height Control Sensor (Rear)
H20 High Mounted Stop Light

I 15 Inner Mirror
I 16 Interior Light

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1AZ-FE]

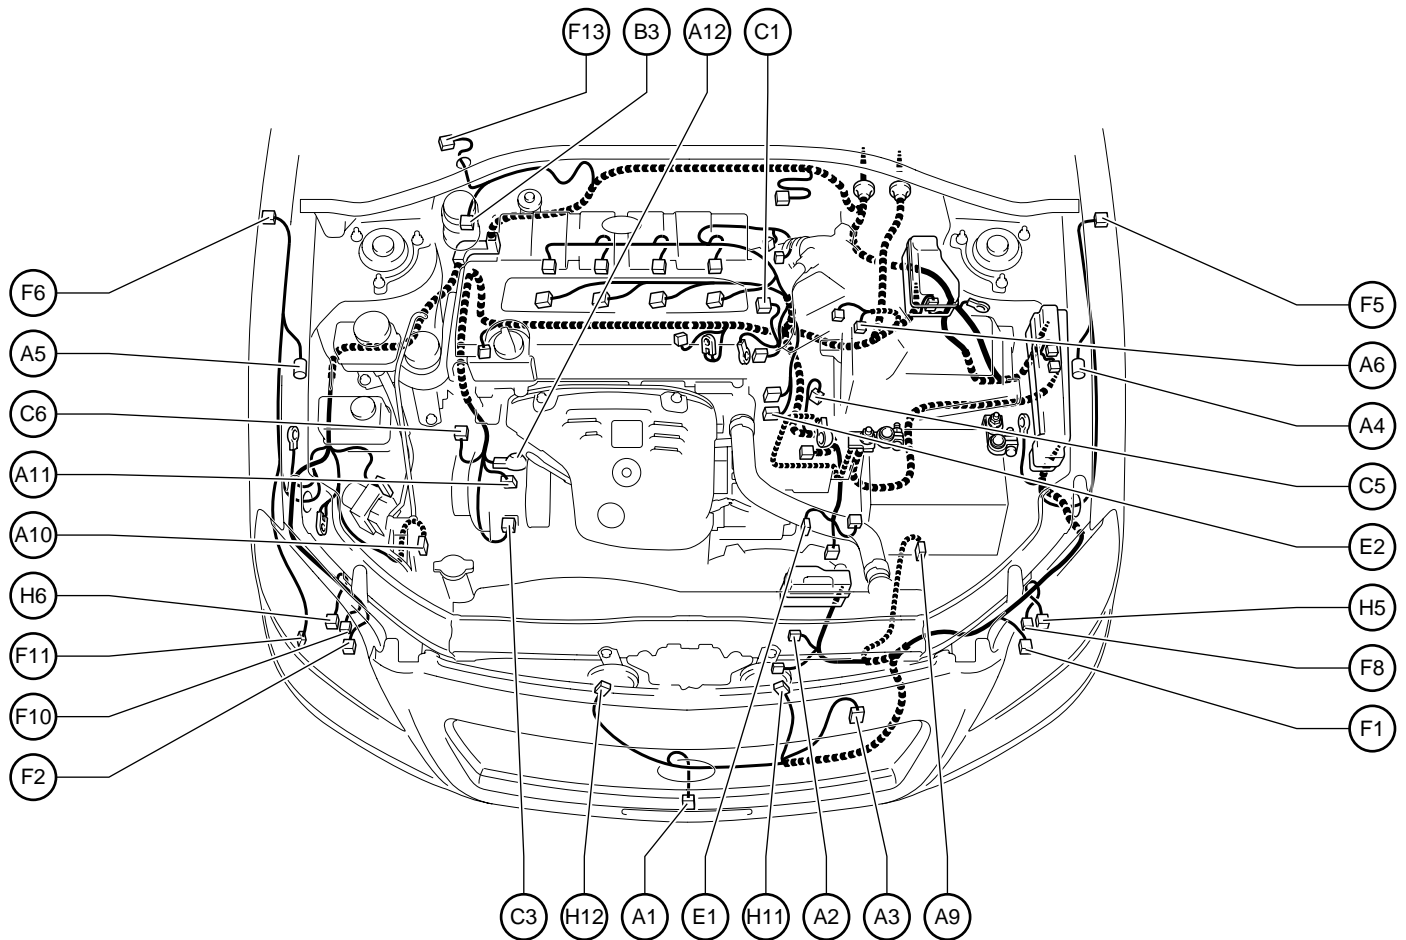

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Pressure Sensor
 A 4 ABS Speed Sensor Front LH
 A 5 ABS Speed Sensor Front RH
 A 6 Air Flow Meter
 A 9 Airbag Sensor Front LH
 A10 Airbag Sensor Front RH
 A11 Alternator
 A12 Alternator

B 3 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 3 Compressor Assembly
 C 5 Counter Gear Speed Sensor
 C 6 Crankshaft Position Sensor

E 1 ECT Solenoid
 E 2 EFI Water Temp. Sensor


F 1 Front Clearance Light LH
 F 2 Front Clearance Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 8 Front Turn Signal Light LH
 Headlight LH (Low)
 F10 Front Turn Signal Light RH
 Headlight RH (Low)
 F11 Front Washer Motor
 F13 Front Wiper Motor

H 5 Headlight LH (High)
 H 6 Headlight RH (High)
 H11 Horn LH
 H12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1AZ-FSE]

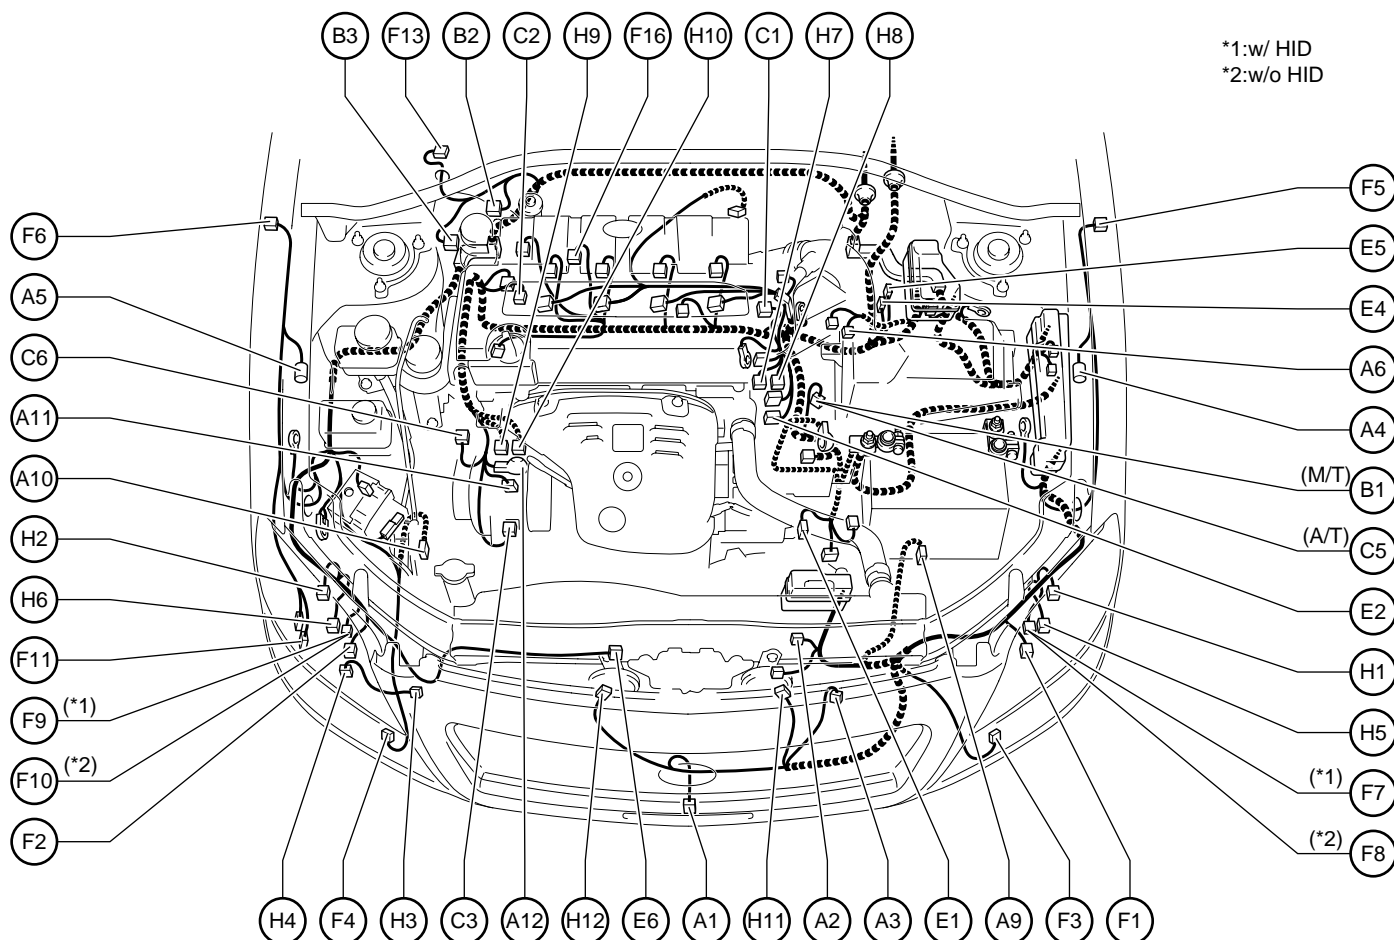

*1:w/ HID
*2:w/o HID


- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 9 Airbag Sensor Front LH
- A 10 Airbag Sensor Front RH
- A 11 Alternator
- A 12 Alternator
- B 1 Back-Up Light SW
- B 2 Brake Booster Pressure Sensor
- B 3 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 5 Counter Gear Speed Sensor
- C 6 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 4 Electronic Driver Unit
- E 5 Electronic Driver Unit
- E 6 Engine Hood Courtesy SW
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH

- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
- Headlight LH (Low)
- F 9 Front Turn Signal Light RH
- Headlight Control ECU RH
- F 10 Front Turn Signal Light RH
- Headlight RH (Low)
- F 11 Front Washer Motor
- F 13 Front Wiper Motor
- F 16 Fuel Pressure Sensor
- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)
- H 10 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 11 Horn LH
- H 12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1AZ-FSE]

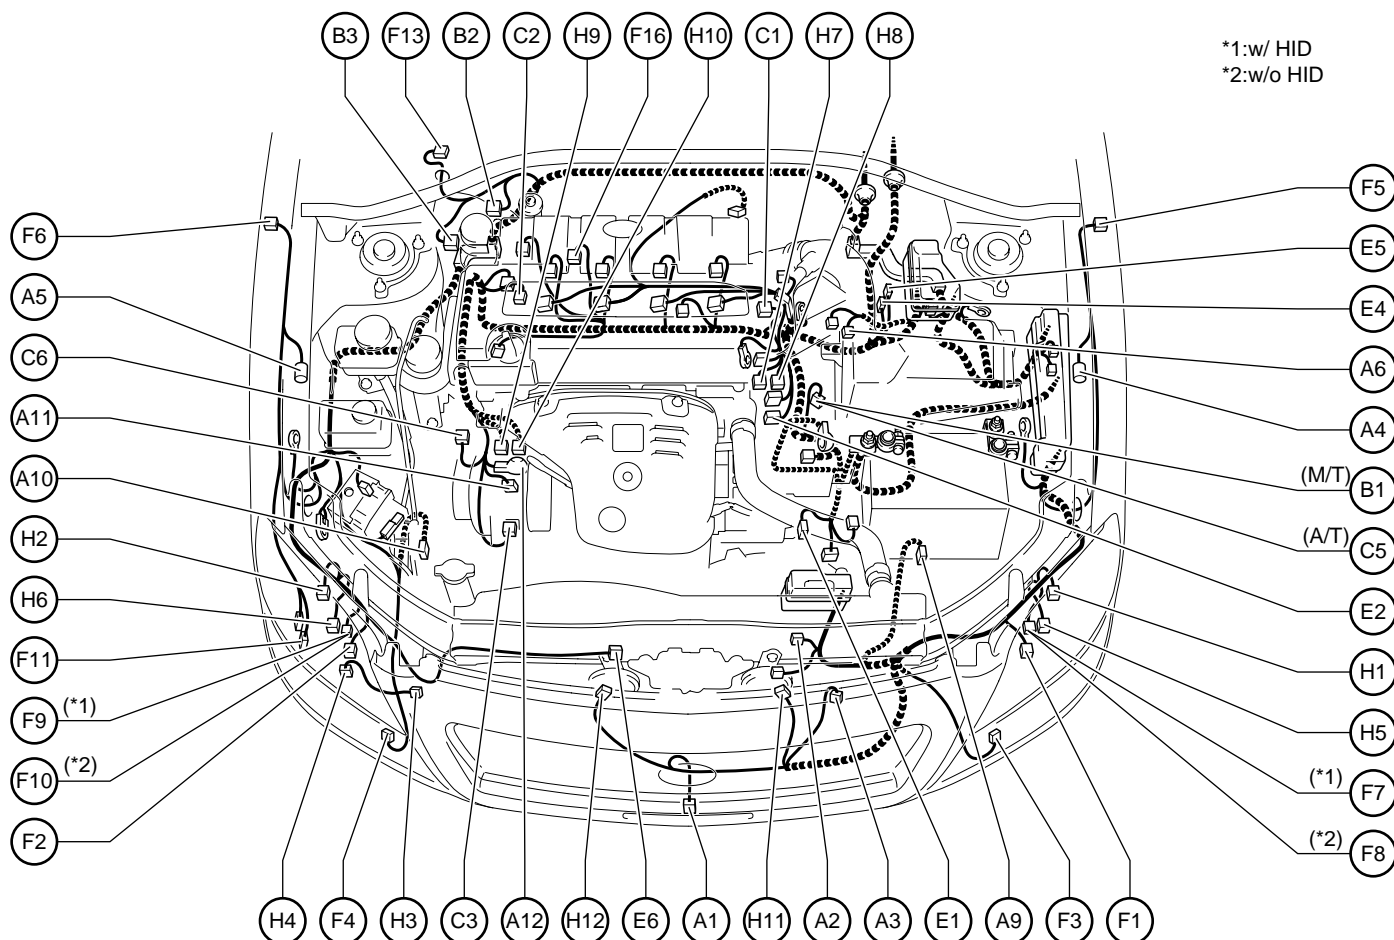

*1:w/ HID
*2:w/o HID


- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 9 Airbag Sensor Front LH
- A 10 Airbag Sensor Front RH
- A 11 Alternator
- A 12 Alternator
- B 1 Back-Up Light SW
- B 2 Brake Booster Pressure Sensor
- B 3 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 5 Counter Gear Speed Sensor
- C 6 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 4 Electronic Driver Unit
- E 5 Electronic Driver Unit
- E 6 Engine Hood Courtesy SW
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH

- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
- Headlight LH (Low)
- F 9 Front Turn Signal Light RH
- Headlight Control ECU RH
- F 10 Front Turn Signal Light RH
- Headlight RH (Low)
- F 11 Front Washer Motor
- F 13 Front Wiper Motor
- F 16 Fuel Pressure Sensor
- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)
- H 10 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 11 Horn LH
- H 12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE, 3ZZ-FE]

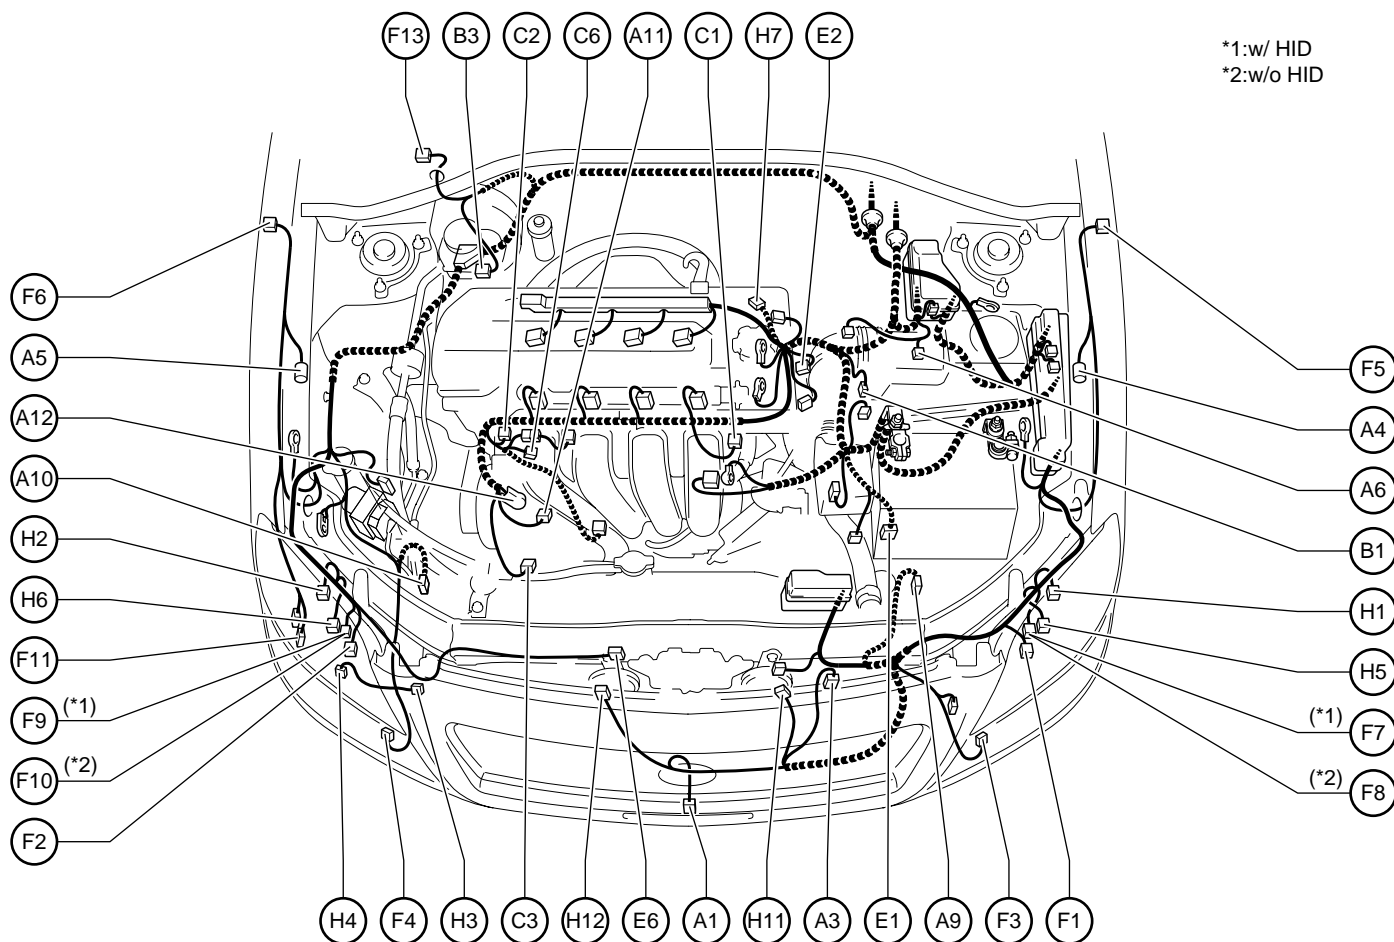

*1:w/ HID
*2:w/o HID


- A 1 A/C Ambient Temp. Sensor
- A 3 A/C Pressure Sensor
- A 4 ABS Speed Sensor Front LH
- A 5 ABS Speed Sensor Front RH
- A 6 Air Flow Meter
- A 9 Airbag Sensor Front LH
- A10 Airbag Sensor Front RH
- A11 Alternator
- A12 Alternator
- B 1 Back-Up Light SW
- B 3 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Compressor Assembly
- C 6 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 6 Engine Hood Courtesy SW
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH

- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
Headlight Control ECU LH
- F 8 Front Turn Signal Light LH
Headlight LH (Low)
- F 9 Front Turn Signal Light RH
Headlight Control ECU RH
- F10 Front Turn Signal Light RH
Headlight RH (Low)
- F11 Front Washer Motor
- F13 Front Wiper Motor
- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight LH (High)
- H 6 Headlight RH (High)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H11 Horn LH
- H12 Horn RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

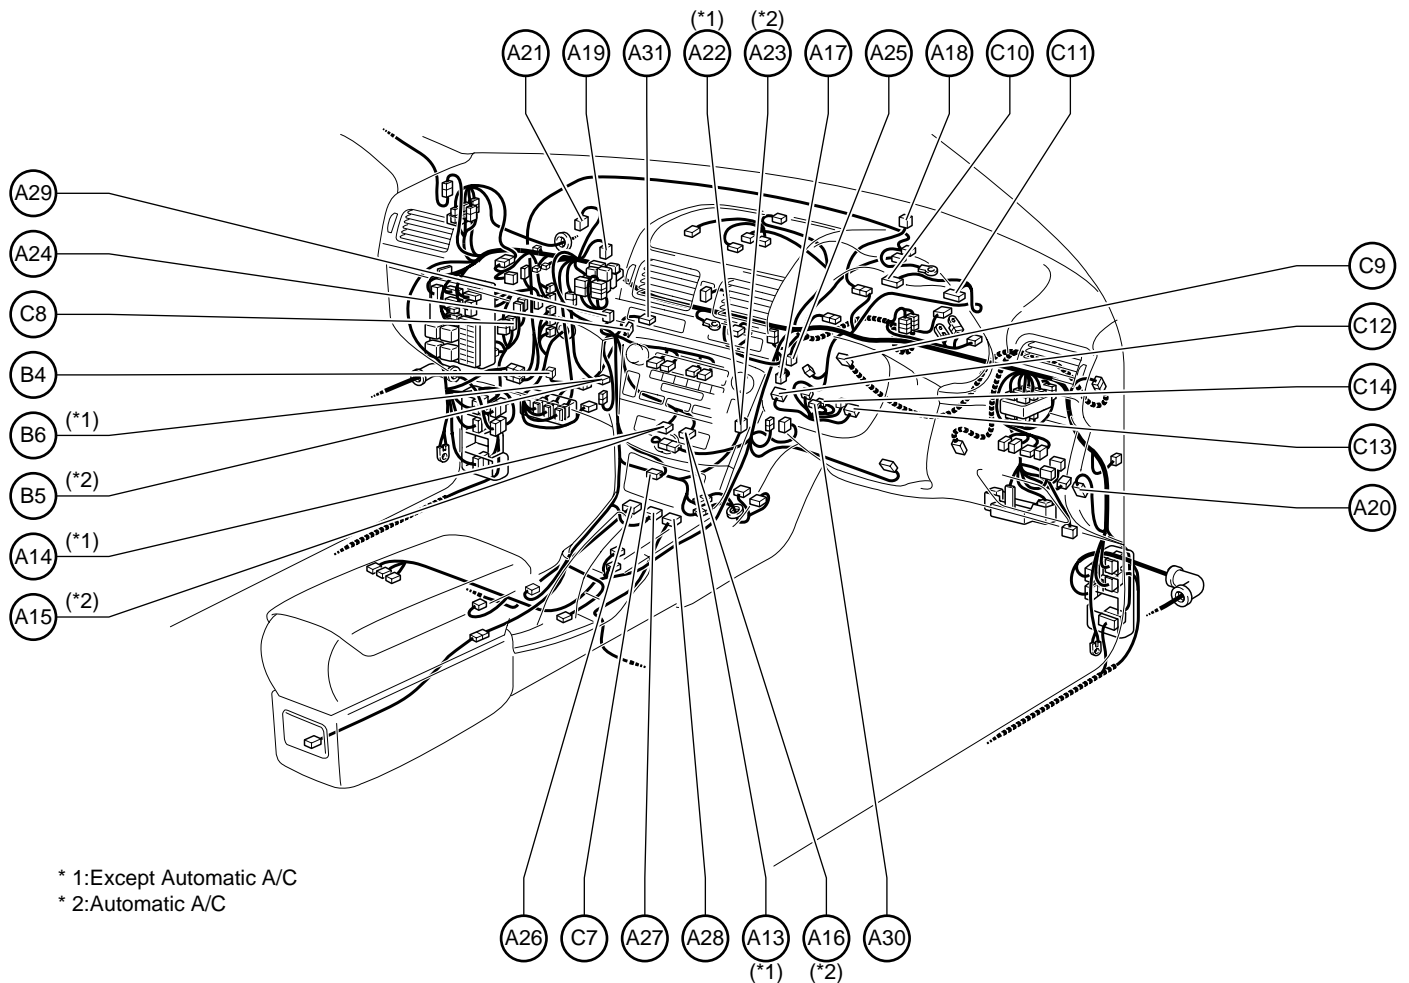


* 1:Except Automatic A/C
* 2:Automatic A/C

A 13	A/C Control Assembly	B 4	Blower Motor
A 14	A/C Control Assembly	B 5	Blower Motor Controller
A 15	A/C Control Assembly	B 6	Blower Resistor
A 16	A/C Control Assembly		
A 17	A/C Room Temp. Sensor	C 7	Cigarette Lighter
A 18	A/C Solar Sensor		Cigarette Lighter Illumination
A 19	A/C Thermistor	C 8	Circuit Opening Relay
A 20	Accel Position Sensor	C 9	Clutch Start SW
A 21	Air Inlet Control Servo Motor	C 10	Combination Meter
A 22	Air Mix Control Servo Motor	C 11	Combination Meter
A 23	Air Mix Control Servo Motor (Driver Side)	C 12	Combination SW
A 24	Air Mix Control Servo Motor (Front Passenger Side)	C 13	Combination SW
A 25	Air Vent Mode Control Servo Motor	C 14	Combination SW
A 26	Airbag Sensor Assembly		
A 27	Airbag Sensor Assembly		
A 28	Airbag Sensor Assembly		
A 29	Airbag Squib (Front Passenger Airbag Assembly)		
A 30	Airbag Squib (Steering Wheel Pad)		
A 31	Antenna Amplifier		

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[RHD]

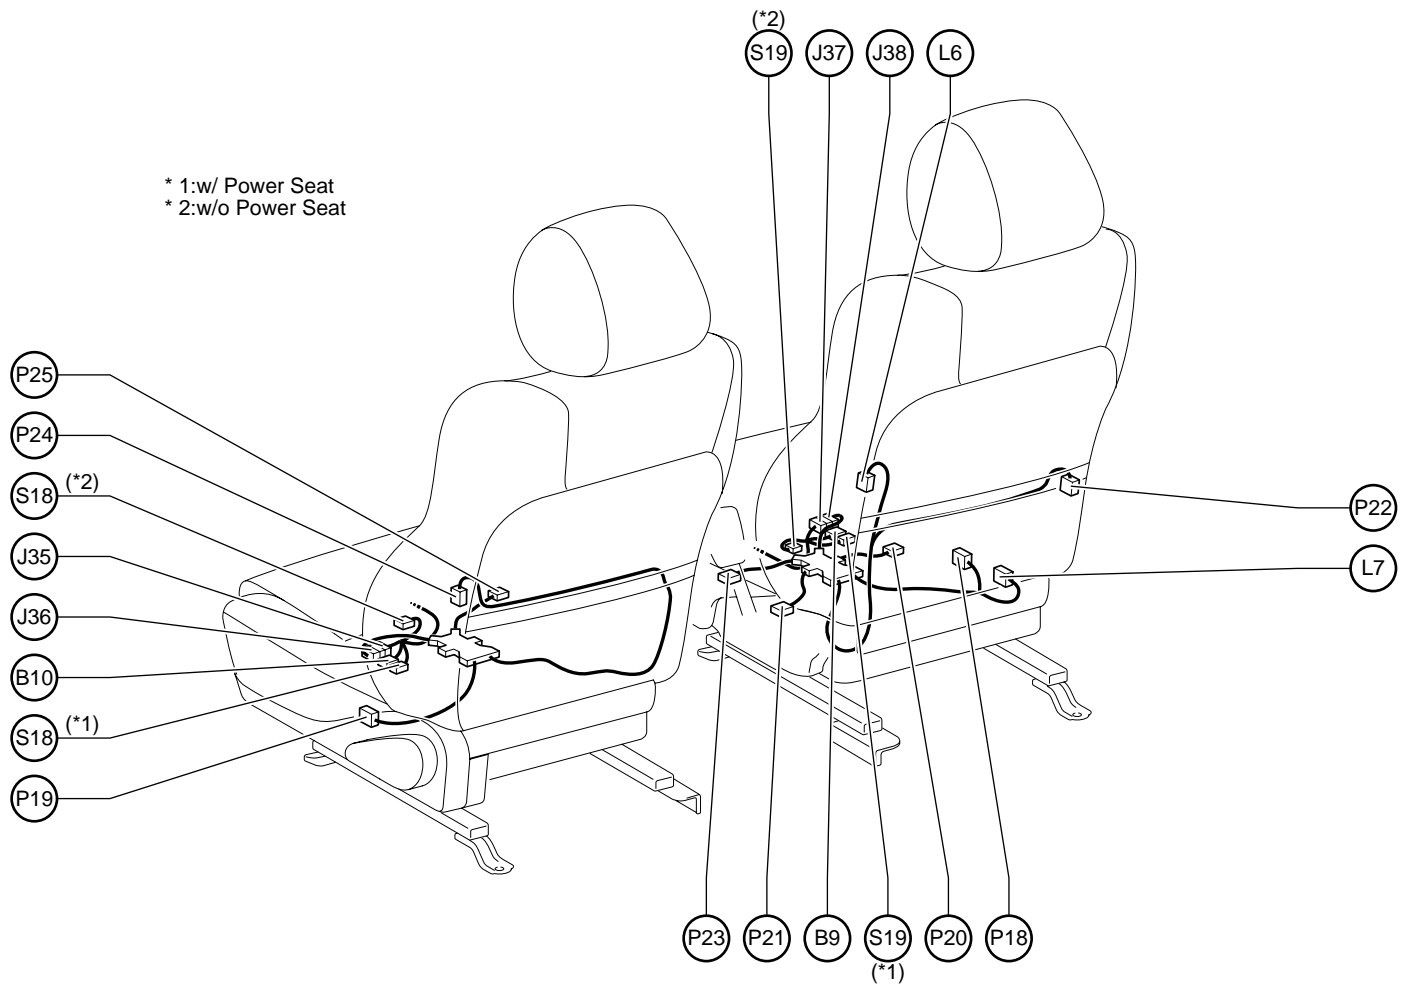

B 9 Buckle SW (Driver's Side)
B 10 Buckle SW (Front Passenger's Side)
Occupant Detection Sensor

J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector

L 6 Lumbar Support Control Motor
L 7 Lumbar Support Control SW

P 18 Power Seat Control SW (Driver's Seat)
P 19 Power Seat Control SW (Front Passenger's Seat)
P 20 Power Seat Motor (Driver's Seat Front Vertical Control)
P 21 Power Seat Motor (Driver's Seat Lifter Control)
P 22 Power Seat Motor (Driver's Seat Reclining Control)
P 23 Power Seat Motor (Driver's Seat Slide Control)
P 24 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 25 Power Seat Motor
(Front Passenger's Seat Slide Control)

S 18 Side Airbag Squib LH
S 19 Side Airbag Squib RH