

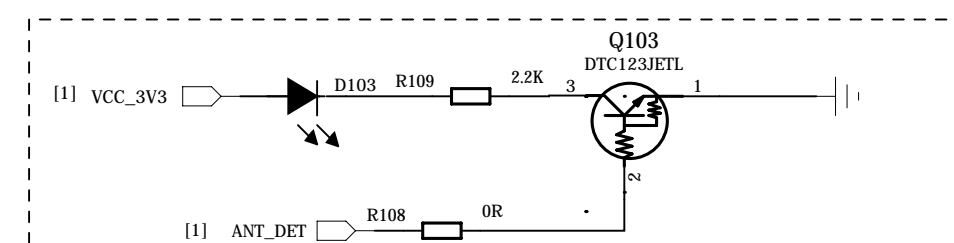



EX_ANT internal has bias voltage, the outside do not need to add the bias voltage.

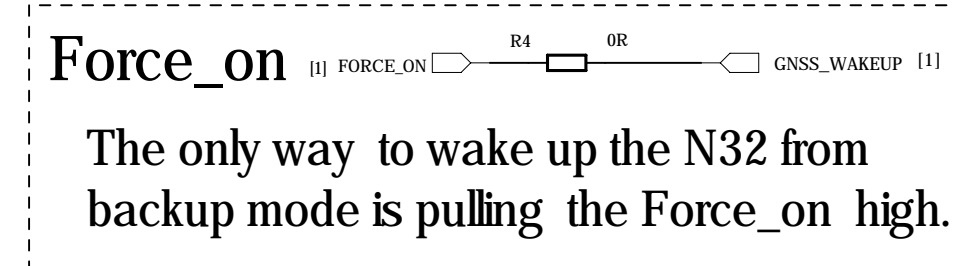

The ANT_DET signal indicates whether the external active antenna is connected well. The high level voltage range is 3.0V~3.6V.

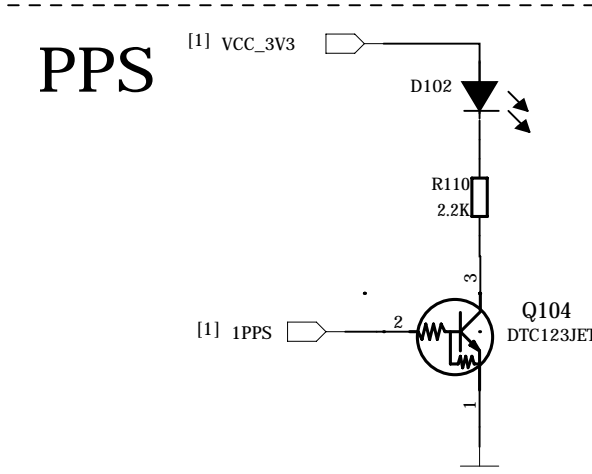

The 1PPS indicator will blink at 1Hz frequency after fixing the position.

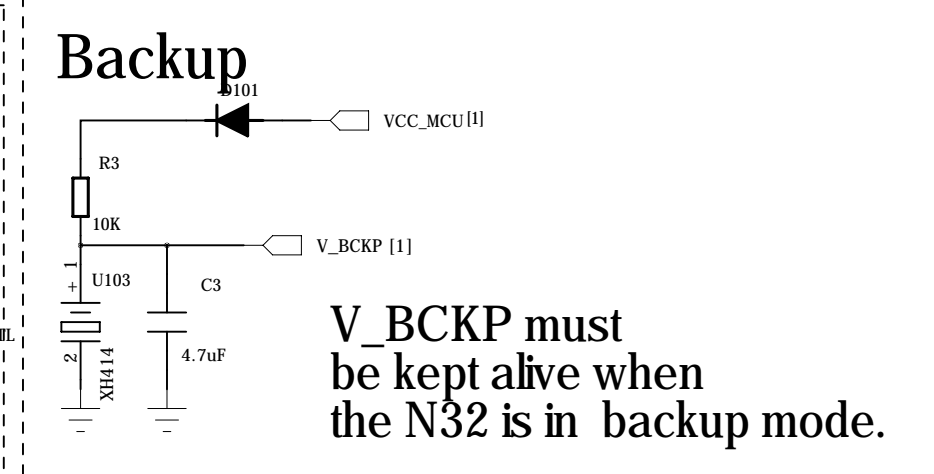

V_BCKP must be kept alive when the N32 is in backup mode.

	EX ANT	Built-in ANT	Short
ANT DET	0	1	1

DRAWN BY	PROJECT	TITLE N32
CHECKED BY	SIZE A1	VER <V1.00>
	SHEET 1 of 1	<DATE HERE>