






# USER GUIDE FOR REMOTE CONTROLS




Rev.00 18/04/2016

| MODEL  | No. OF CHAN- NELS | CLONEABLE RE- MOTE CONTROL                          | CODING       | RECEIVER      | COMPATIBLE CONTROLLER UNIT  |
|--|-------------------|---|--------------|---------------|---|
| <b>E80/TX52R/2</b><br><br> | 2                 | E80/TX52R/2<br>E80/TX54R/2<br>H80/TX22<br>M80/TX44R | Fixed code   | H93/RX22A/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX12A/I   | R70 Series  |
|  |                   |   |              | R93/RX12A/U   | Receiver connected externally to all ROGER electronic controllers |
|  |                   |   |              | R93/RX14M/24  |   |
|  |                   |   |              | R93/RX14M/230 |   |
| <b>E80/TX54R/2</b><br><br> | 4                 | E80/TX52R/2<br>E80/TX54R/2<br>H80/TX22<br>M80/TX44R | Fixed code   | H93/RX22A/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX12A/I   | R70 Series  |
|  |                   |   |              | R93/RX12A/U   | Receiver connected externally to all ROGER electronic controllers |
|  |                   |   |              | R93/RX14M/24  |   |
|  |                   |   |              | R93/RX14M/230 |   |
| <b>E80/TX2R/RC</b><br><br> | 2                 | E80/TX2R/RC<br>E80/TX4R/RC                          | Rolling Code | H93/RX2RC/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX2RC/U   | Receiver connected externally to all ROGER electronic controllers |
| <b>E80/TX4R/RC</b><br><br> | 4                 | E80/TX2R/RC<br>E80/TX4R/RC                          | Rolling Code | H93/RX2RC/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX2RC/U   | Receiver connected externally to all ROGER electronic controllers |
| <b>H80/TX22</b><br><br>  | 2                 | H80/TX22  | Fixed code   | H93/RX22A/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX12A/I   | R70 Series  |
|  |                   |   |              | R93/RX12A/U   | Receiver connected externally to all ROGER electronic controllers |
|  |                   |   |              | R93/RX14M/24  |   |
|  |                   |   |              | R93/RX14M/230 |   |
| <b>M80/TX44R</b><br><br> | 4                 | E80/TX52R/2<br>E80/TX54R/2<br>H80/TX22<br>M80/TX44R | Fixed code   | H93/RX22A/I   | B70 Series<br>H70 Series<br>AG CTRL                               |
|  |                   |   |              | R93/RX12A/I   | R70 Series  |
|  |                   |   |              | R93/RX12A/U   | Receiver connected externally to all ROGER electronic controllers |
|  |                   |   |              | R93/RX14M/24  |   |
|  |                   |   |              | R93/RX14M/230 |   |

## Programming procedure


### E80/TX52R/2 • E80/TX54R/2 • M80/TX44R • H80/TX22

#### Receiver

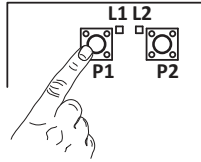

- 1** Press the required channel


#### Receiver

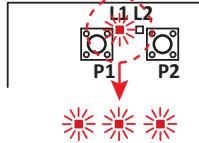

- 2** When the LED flashes 3 times ...  
Press one of the buttons on the transmitter




#### Receiver

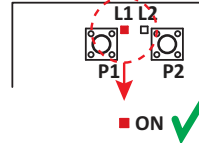

- 2** If the LED remains lit  
the transmitter has been stored


### E80/TX2R/RC • E80/TX4R/RC

#### Receiver

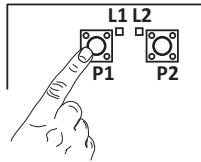

- 1** Press the required channel


#### Receiver

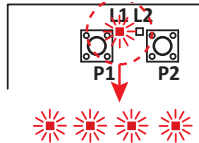

- 2** When the LED flashes 4 times ...  
Press one of the buttons on the transmitter



#### Receiver

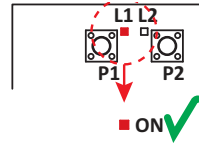

- 2** If the LED remains lit  
the transmitter has been stored

## Additional information

ROGER TECHNOLOGY is the exclusive proprietor holder of all rights regarding this publication. ROGER TECHNOLOGY reserves the right to implement any modifications without prior notification. Copying, scanning or any alterations to this document are prohibited without express prior authorised from by ROGER TECHNOLOGY.

This instruction manual and the warnings for the installer are given in printed form and included in the box containing the product.

The digital version of this documentation (in PDF format) and all future revisions are available from the reserved area of our website [www.rogertechnology.com/B2B](http://www.rogertechnology.com/B2B), in the section 'Self Service'.

### ROGER TECHNOLOGY CUSTOMER SERVICE:

business hours: Monday to Friday  
08:00 to 12:00 - 13:30 to 17:30  
Telephone no: +39 041 5937023  
E-mail: [service@rogertechnology.it](mailto:service@rogertechnology.it)  
Skype: [service\\_rogertechnology](https://www.skype.com/name/roger_technology)

To request support for any problems or for any other queries regarding the automation system, please compile the online form "REPAIRS" in the 'Self Service' area of our website [www.rogertechnology.com/B2B](http://www.rogertechnology.com/B2B).