


## The Electric Gate Shop

### Roger H85/TDR/E Wireless Keypad - Quick User Guide

#### Step 1.



Open the unit and attach the battery lead.

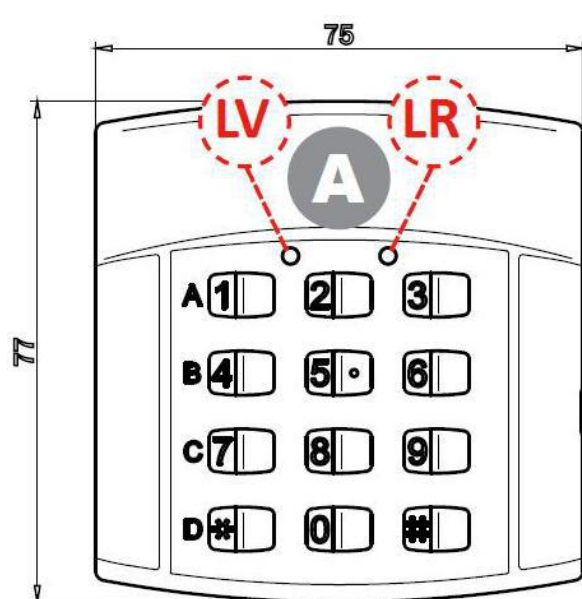

#### Key -

Green Led	LV
Red Led	LR
Entry Button	*
Channel 1	A
Channel 2	B
Channel 3	C
Channel 4	D
Clear	#
Engineers Password	0000

#### Changing the engineer's password.

- 1) Key in **\*\*0000\*** (This is the factory default password)
- 2) Key in **1234\*** (This sets the keypad engineer's password to 1234 or use a 4 digit password of your choice)
- 3) Key in **1234\*** (This confirms and saves the engineer's password as 1234 or use a 4 digit password of your choice)
- 4) Done (The green led lights and the unit buzzes for 2 seconds)

### Storing a simple user entry code (Example to open the gate).

(Assuming the engineer's code is 0000, if you have changed it use your new 4 digit engineer's password)


- 1) Key in **\*0000\*** (This enters programming using the engineers password)
- 2) Key in **5555##** (This sets the new entry code to 5555 or use a 4 digit code of your choice)
- 3) Done

### Using the keypad – Simple user entry code

(The enter button is \*, and it is assuming you have changed the entry code to 5555 or if not use the actual code you have set)

- 1) Key in **5555\*\*** (This enters your user entry code, and opens the gate)

### Learning Procedure - Roger control box or standalone receiver.

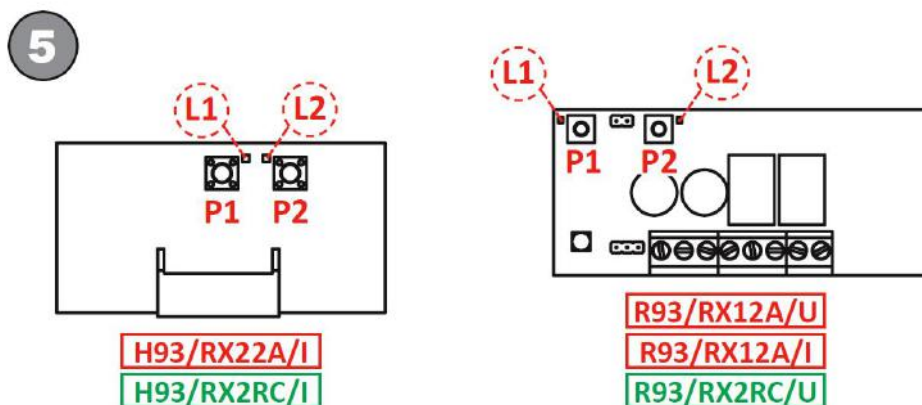

(The keypad learns in the same way that you learn the gate remotes, refer to the control box instructions)

After pressing **P1** on the radio card the led will flash slowly.

- 1) Then key in **5555\*\*** (This enters your user entry code 5555\*\* into the receiver)

### Troubleshooting

If the unit does not learn to the receiver, try speeding up the process as the receiver may have timed out. Or when entering the code 5555\*\* hold the second \* for longer (This is the same as holding your remote button longer).

### **Advanced Features**

(For all the advanced features refer to the manufacturer's booklet that comes with the keypad)

**Storing a simple user entry code with multiple channels (Example using two channels, to open the gate (A) and pedestrian function (B), or to use all 4 functions (A) (B) (C) & (D)).**

(Assuming the engineers code is 0000, if you have changed it use your new 4 digit engineer's password)

- 1) Key in **\*0000\*** (This enters programming using the engineers password)
- 2) Key in **5555#A#** (This sets the new entry code to 5555\*A to operate channel A or use a 4 digit code of your choice)

- 1) Key in **\*0000\*** (This enters programming using the engineers password)
- 2) Key in **5555#B#** (This sets the new entry code to 5555\*B to operate channel B or use a 4 digit code of your choice)

- 1) Key in **\*0000\*** (This enters programming using the engineers password)
- 2) Key in **5555#C#** (This sets the new entry code to 5555\*C to operate channel C or use a 4 digit code of your choice)


- 1) Key in **\*0000\*** (This enters programming using the engineers password)
- 2) Key in **5555#D#** (This sets the new entry code to 5555\*D to operate channel D or use a 4 digit code of your choice)

**Using the keypad - User entry code with multiple channels (Example using two channels to open the gate (A) and pedestrian function (B) (The enter button is \*, and assuming you have changed the entry code to 5555 or use the actual code you have set)**

- 1) Key in **5555\*A** (This enters your user entry code, and opens the gate)

2) Key in **5555\*B** (This enters your user entry code, and opens the gates pedestrian function)

### Learning Procedure - Roger control box or standalone receiver.

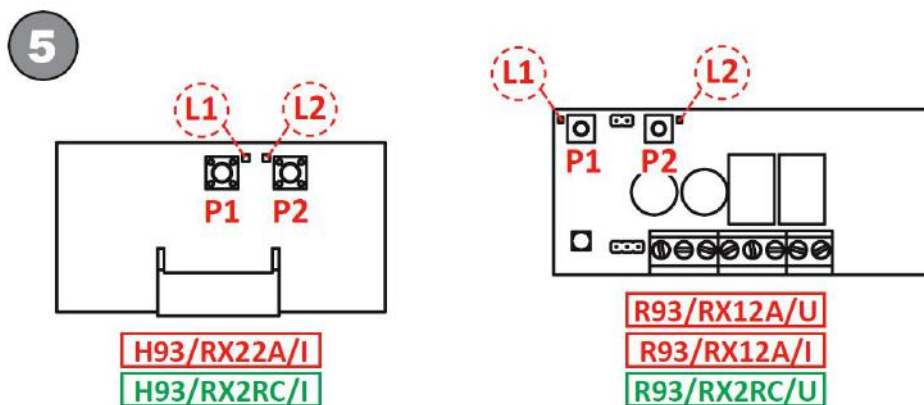

(The keypad learns in the same way that you learn the gate remotes, refer to the control box instructions)

- 1) Press **P1** on the radio card the led will flash slowly.
- 1) Then key in **5555\*A** (This enters your user entry code 5555\*A into the receiver channel 1)
- 1) Press **P2** on the radio card the led will flash slowly.
- 1) Then key in **5555\*B** (This enters your user entry code 5555\*B into the receiver channel 2)

### Troubleshooting

If the unit does not learn to the receiver, try speeding up the process as the receiver may have timed out. Or when entering the code 5555\*A or B hold the second A or B for longer (This is the same as holding your remote button longer).

### Deleting a user code. (Example – user code 5555)

- 1) Key in **##5555\*** (This enters the user code 5555 that you wish to delete)
- 2) If the code exists the red led flashes and stays lit.
- 3) Key in **5555\*** (The user code 5555 is deleted, the green led lights and the unit buzzes for two seconds)