


Integrity Instruments

P.O. Box 451
Pine River Minnesota
56474 USA

Order Phone 800-450-2001
Fax Phone 218-587-3414
Tech Phone 218-587-3120

<http://www.integrityusa.com>

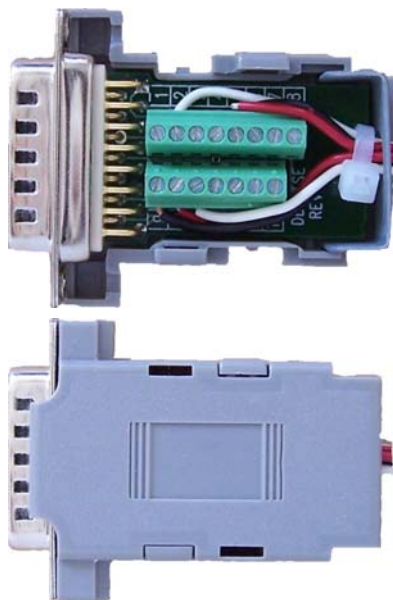

DB15TSFE
DB15TSME

Installation
Instruction Manual

Integrity Instruments DB15TSE Installation Manual

GENERAL

The DB15TSME and DB15TSFE are DB15 connectors with terminal strips with an enclosure. Terminals on units are 2.54 mm space and accept 28 to 18 AWG wire. The terminal numbers are plainly marked by the terminal strip which correspond to the DB15 connector pins

The DB15TS is very easy to wire and assemble. If you follow the instructions you should have no problem whatsoever.

INSTRUCTION

Pass the wires through the metal bracket before connecting to the terminals. Connect the wires to the terminals required. Route the wires around the ends of the terminal strips so they can be routed out the rear of the case. See Figure 1

Insert the terminal board into one of the case halves and tuck the wires inside the case. Position the bracket inside the case. See Figure 2. You can add tie wrap if you desire.

Position the other half of the case over the first half, and apply pressure. The case will “snap” together. The screws and saddle washers can be installed before or after this process. Disregard the other components with the case. See Figure 3

The case can be opened easily by inserting a small blade screwdrivers in the slots on the side of the case and apply downward pressure releasing the locking tabs. See Figure 4.

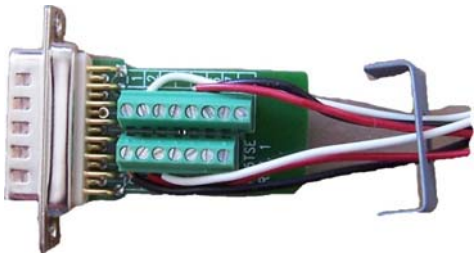


Figure 1

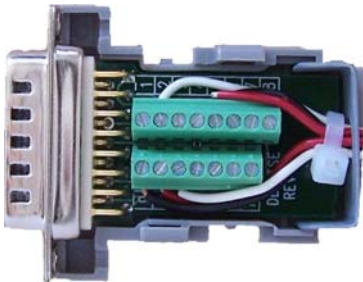


Figure 2

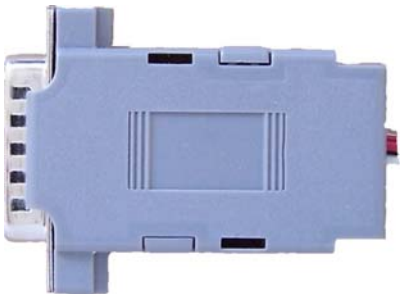


Figure 3



Figure 4

WARRANTY

Integrity Instruments warrants **all** products against defective workmanship and components for the life of the unit. Integrity Instruments agrees to repair or replace, at its sole discretion, a defective product if returned to Integrity Instruments with proof of purchase. Products that have been mis-used, improperly applied, or subject to adverse operating conditions fall beyond the realm of defective workmanship and are not covered by this warranty.

Copyright © 2000-2006, Integrity Instruments

All trademarks and/or registered trademarks are the property of their respective owners.