



NOTE:  
INSTALL LIMIT SWITCH AT CLOSED POSITION OF VALVE  
AND CONNECT TO (N.O.) NORMALLY OPENED CONTACT.

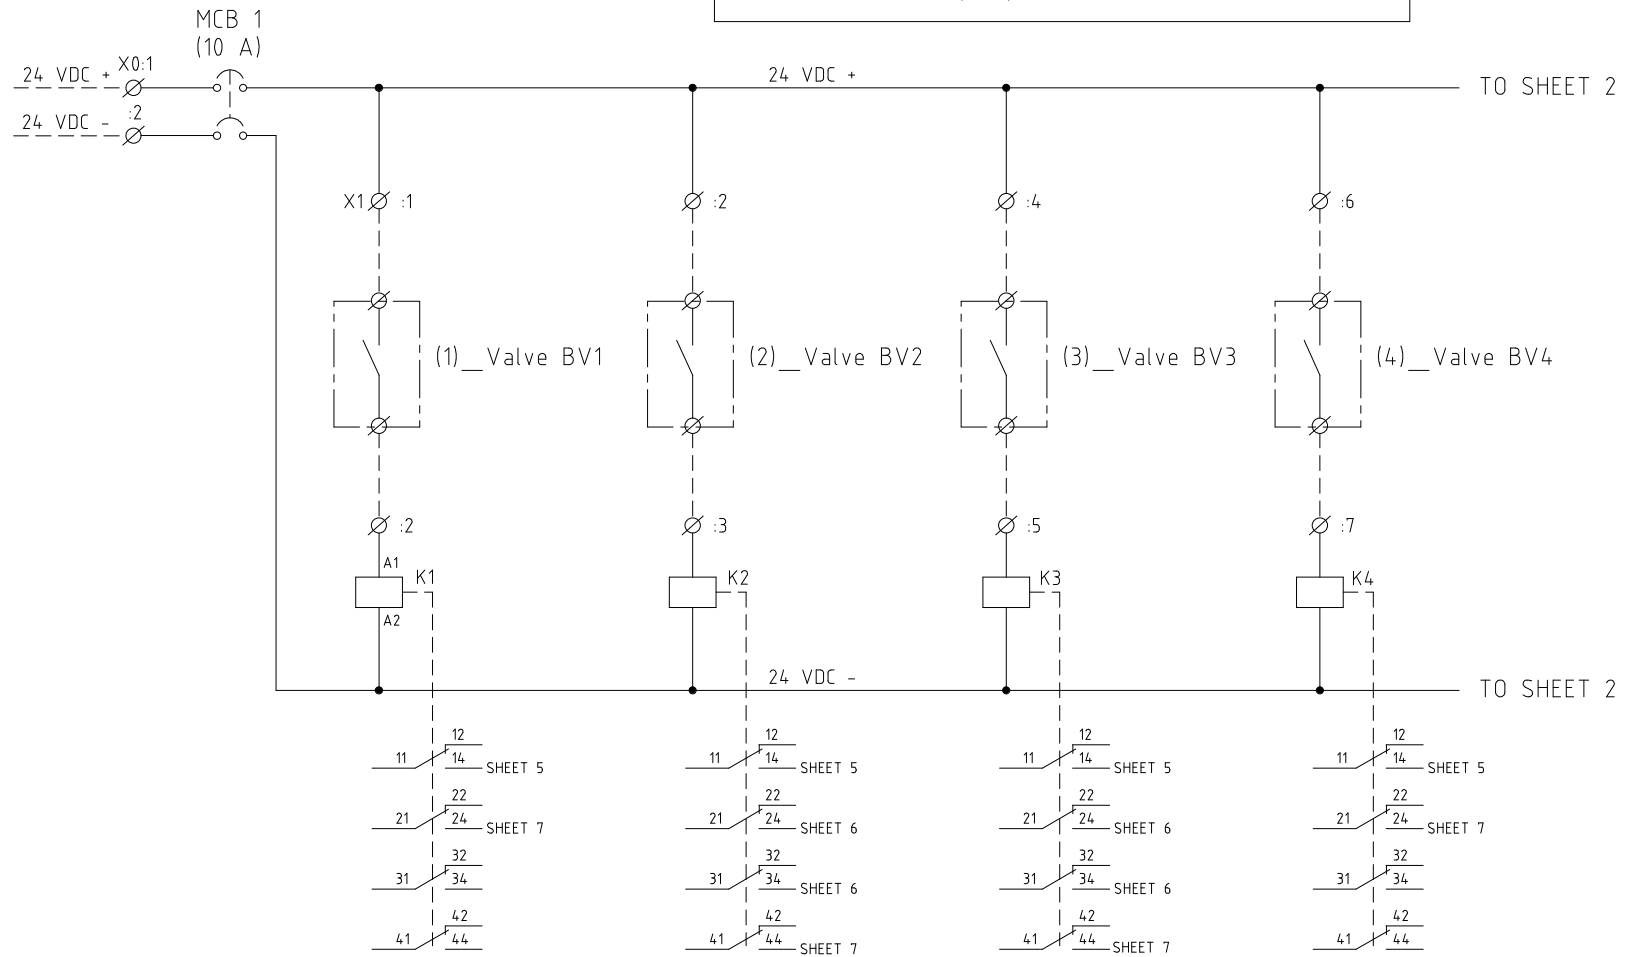

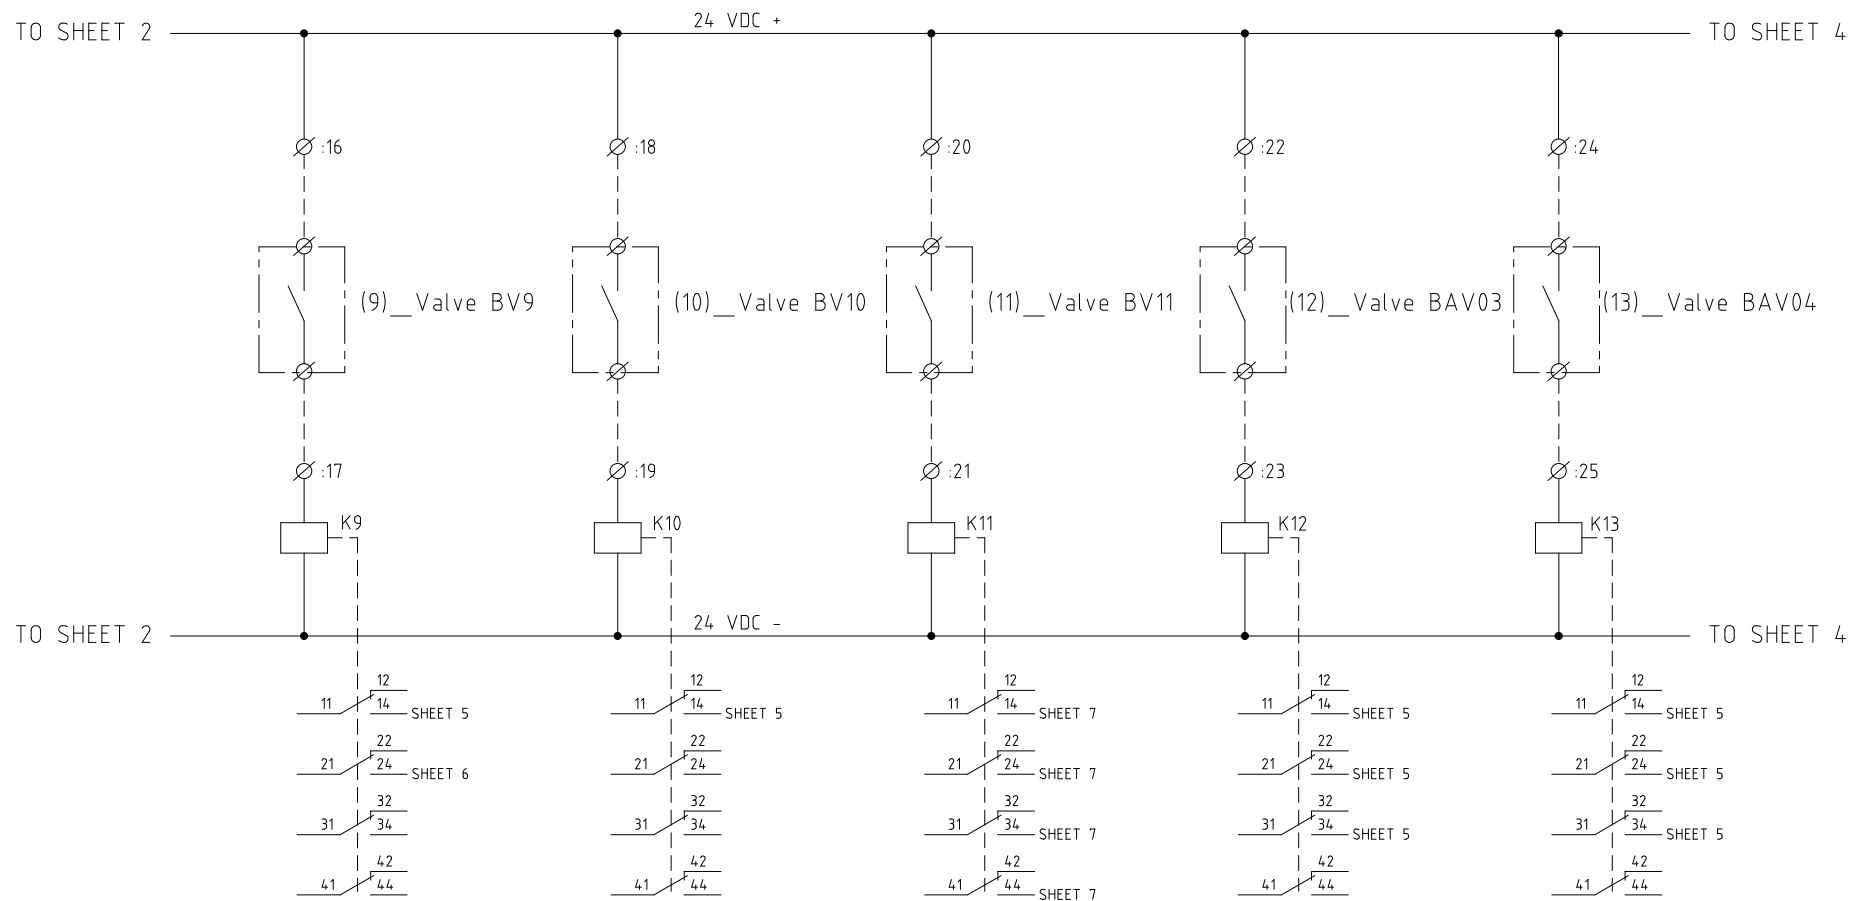





J88 STORK  
BWTS BYPASS VALVES  
ALARM BOX

REV B


SHEET 3 OF 7

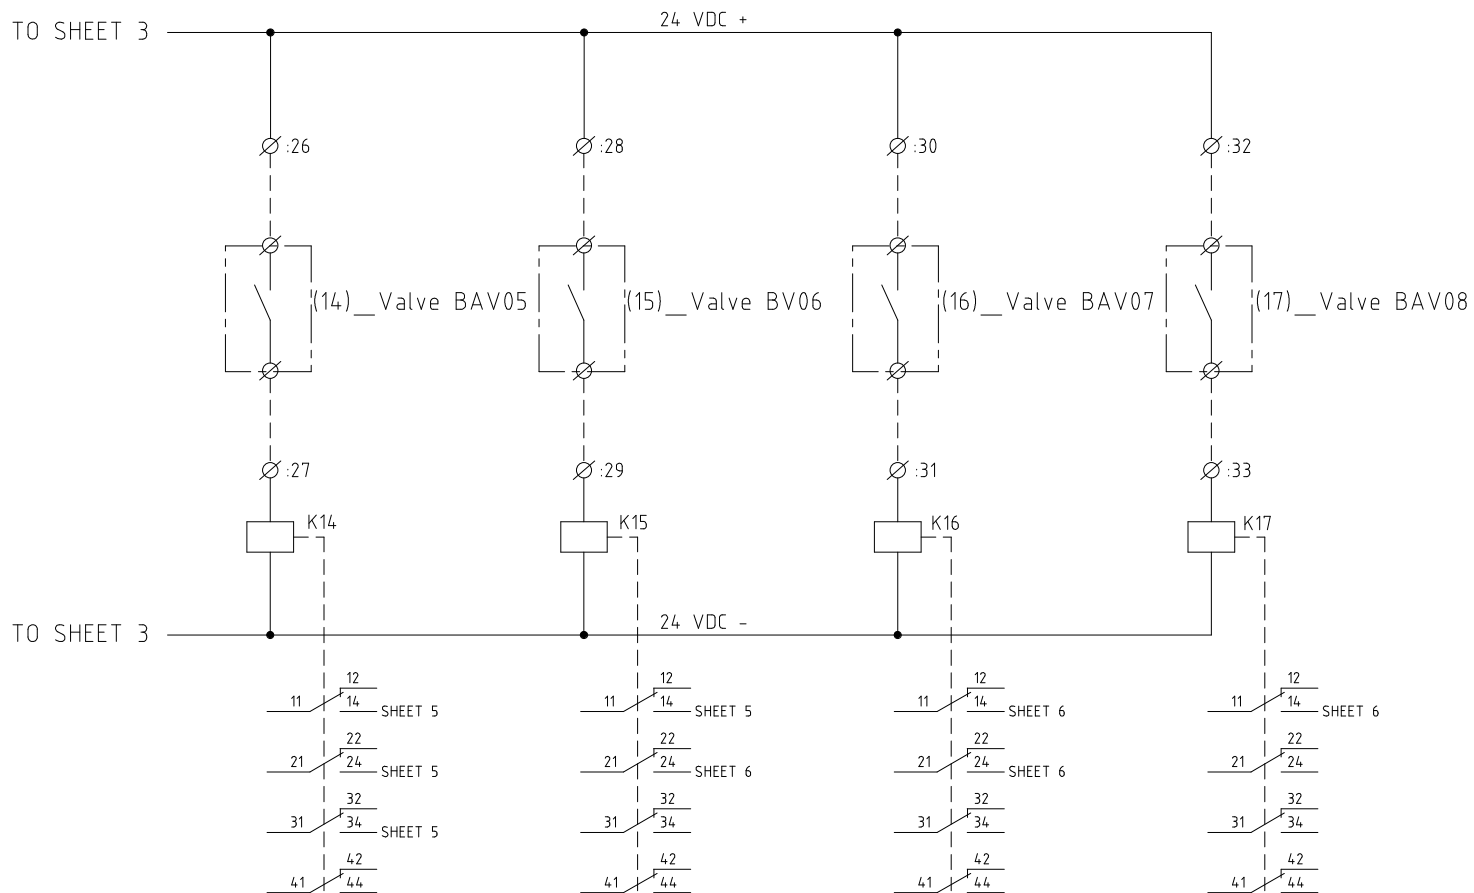


CONFIGURATION 1  
GRAVITY FILLING THROUGH SEACHEAST

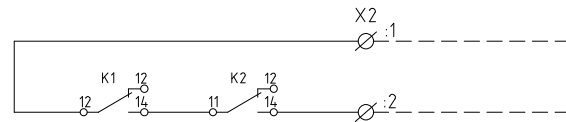


CONFIGURATION 2  
GRAVITY FILLING THROUGH SEACHEAST




CONFIGURATION 3  
GRAVITY DISCHARGE/FILLING  
THROUGH OBD-CONDITION 1




CONFIGURATION 4  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 1



CONFIGURATION 5  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 2



CONFIGURATION 6  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 3



TO BWTS CONTROL PANEL




J88 STORK  
BWTS BYPASS VALVES  
ALARM BOX


REV B

SHEET 5 OF 7


CONFIGURATION 7  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 4




CONFIGURATION 8  
SYSTEM BYPASS TO  
FIRE HYDRANTS 1




CONFIGURATION 9  
SYSTEM BYPASS TO  
FIRE HYDRANTS 2




CONFIGURATION 10  
SYSTEM BYPASS TO  
EMERGENCY COOLING 1



CONFIGURATION 11  
SYSTEM BYPASS TO  
EMERGENCY COOLING 2



CONFIGURATION 12  
SYSTEM BYPASS



TO BWTS CONTROL PANEL




J88 STORK  
BWTS BYPASS VALVES  
ALARM BOX


REV B

SHEET 6 OF 7


CONFIGURATION 13  
SYSTEM BYPASS FILLING TO  
BILGE HOLD. CONDITION 1

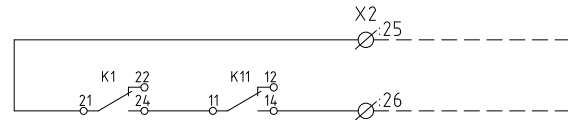


CONFIGURATION 14  
SYSTEM BYPASS FILLING TO  
BILGE HOLD. CONDITION 2



CONFIGURATION 15  
SYSTEM BYPASS FILLING TO  
BILGE HOLD. CONDITION 3



CONFIGURATION 16  
SYSTEM BYPASS FILLING TO  
BILGE HOLD. CONDITION 4



TO BWTS CONTROL PANEL



J88 STORK  
BWTS BYPASS VALVES  
ALARM BOX

REV B

SHEET 7 OF 7