




CONFIGURATION 1  
GRAVITY FILLING THROUGH SEACHEAST

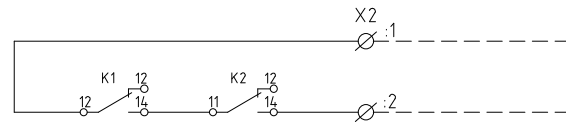


CONFIGURATION 2  
GRAVITY FILLING THROUGH SEACHEAST




CONFIGURATION 3  
GRAVITY DISCHARGE/FILLING  
THROUGH OBD-CONDITION 1




CONFIGURATION 4  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 1



CONFIGURATION 5  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 2



CONFIGURATION 6  
SYSTEM BYPASS TO  
OVERBOARD CONDITION 3



TO BWTS CONTROL PANEL



J88 STORK  
BWTS BYPASS VALVES  
ALARM BOX

REV B

SHEET 5 OF 7