


code[®]

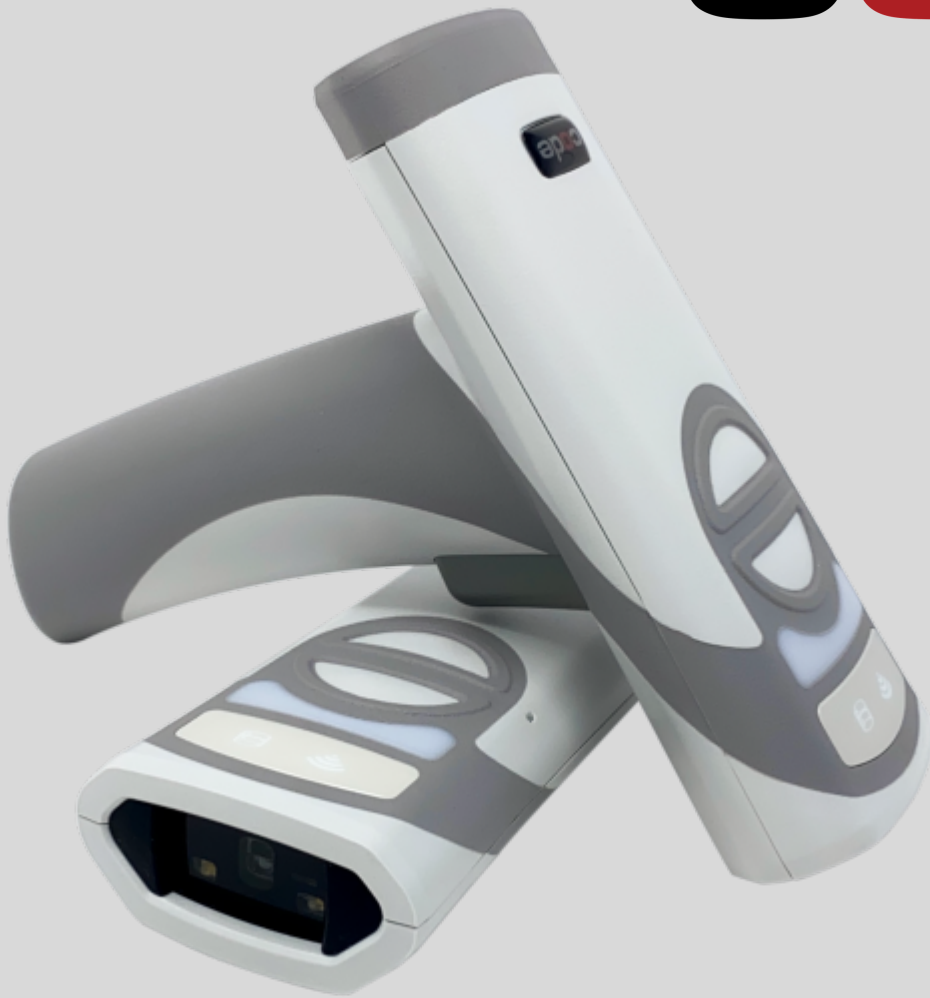

**BARCODE SCANNING
CONFIGURATION
GUIDE**

Code Reader 2700

Welcome To Your Configuration Guide

To use the configurations simply print or open the pdf on your pc or mobile and scan the QR with you scanner. Thats all all you need to do. If you here one beep followed by anohter it was successful. If you hear multiple beeps it means the code was not compatable and you might need to regerate your config guide.

Thanks for using our configuration software; We would like to let you know that while these QR's are in the generator, they might change or be adjusted over time as we are constantly adding to our scanners and this software. If, for some reason, your combined QR that holds all the options you selected does not work the way you anticipate, please try the individual code on the following pages of this pdf or contact our support team. They would love to help you with any issues you are having.

You can reach us anytime at <https://codecorp.com/contact>

Code Reader 2700 1

Welcome To Your Configuration Guide 2

 Welcome message and instructions 2

Table Of Contents 4

Combined Configuration QR 5

 QR for installing all your features at once. 5

 All selected features in combined QR. 5

Individual Funtions QR's 7


 M20398: Get Bluetooth parameters 7

 M20399: Set reader into USB Full Speed mode 7

 M20427: Enable Reconnect Beep 30 Seconds 7

Combined Configuration QR

Scan this code to configure all the functions at once from what you selected in our generator.



Bluetooth Settings

M20398 Get Bluetooth parameters

M20399 Set reader into USB Full Speed mode

M20427 Enable Reconnect Beep 30 Seconds

M20428 Clear connection (pairing) history on base

M20429 Enable IBM surePOS mode

M10495 T500 Bluetooth Apple iOS App Mode

M10497 T500 Bluetooth Serial Port Profile (SPP) Two-Way Mode

M10498 T500 Bluetooth Serial Port Profile (SPP) One-Way Mode

M10500 T500 Bluetooth HID Keyboard Mode

M10501 T500 Bluetooth Disconnect

M10502 T500 Bluetooth Apple iOS Keyboard Mode




M20398

Get Bluetooth parameters



M20399

Set reader into USB Full Speed mode

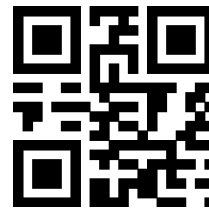

M20427

Enable Reconnect Beep 30 Seconds