

# Setting procedure for GUT800 ultrasonic level sensor


## Step 1 :

Press **PAG** key one time ,  
show **P1** as below :




## Step 2 :

Press **MOV** key one time , then  
press **PAG** four times ,  
show the **E** word in the display .  
Then it will show **0000** as below

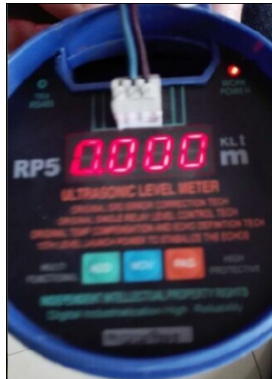

## Step 3:

Press **MOV** key ,  
show **POL-** , as below

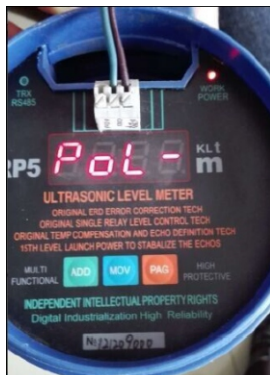

## Step 4 :

Press **ADD** key , the “-” of the “**POL-**”  
will be disappear , and show the **POL**

## Step 5 :

Press **MOV** key , show **0000** , the  
first **0** is twinkling

## Step 6 :

Press **ADD** key twice , show **1000** ,  
the first **1** is twinkling

## Step 7 :

Press **MOV** key , the **0** is  
twinkling (which close to 1 )

## Step 8:

Press **ADD** key 11 times ,  
show **15.00** , the **5** is twinkling

## Step 9 :

Press **MOV** key 3 times ,  
show **15.00** , no numbers twinkle .  
The setting is finished

