




Weatherlink Cloud and Weatherlink Software

"How to Upload Data From Weatherlink Software to Weatherlink.com Account"

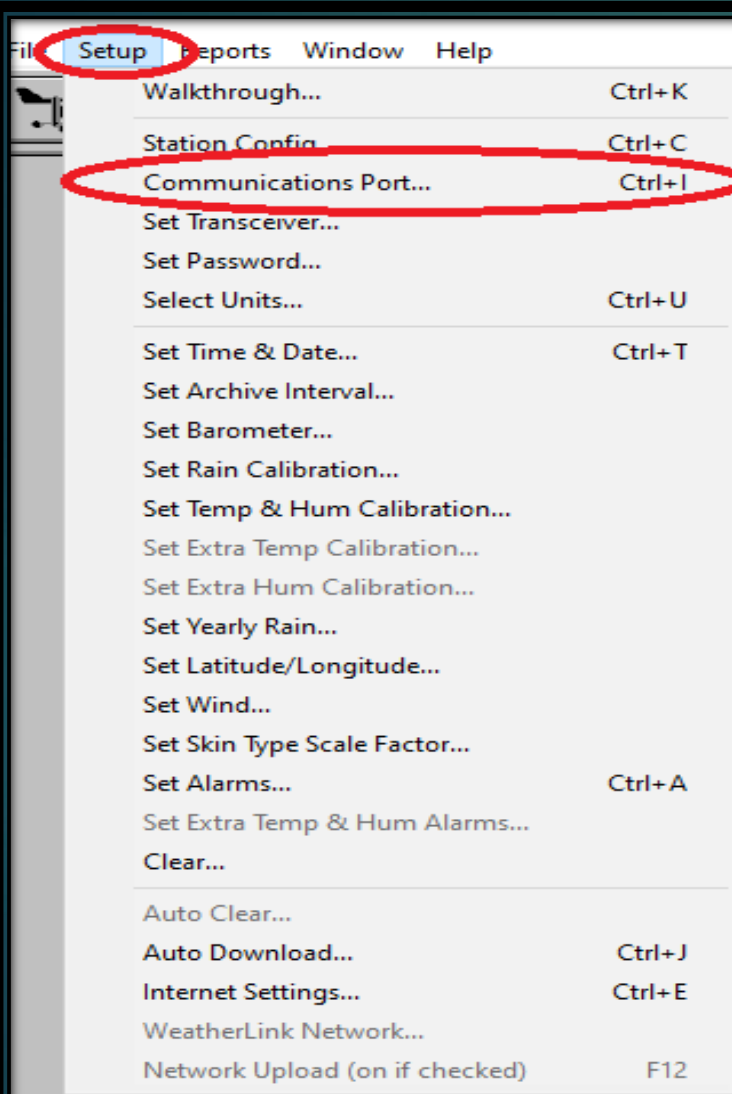

Station Setup

Each station connected to the computer must have its own "station" within the software. The software creates a database for the station and other station specific information, and requires that the necessary communication settings (communication type, etc.) be set.


**If you have already a station proceed to the communication port settings.*

Communication Port Settings

Use the Communications Port dialog box to select the communications type and to test communication between the computer and the station.

1. Go to "Setup" and Click "Communication Port"

“How to Upload Data From Weatherlink Software to Weatherlink.com Account”

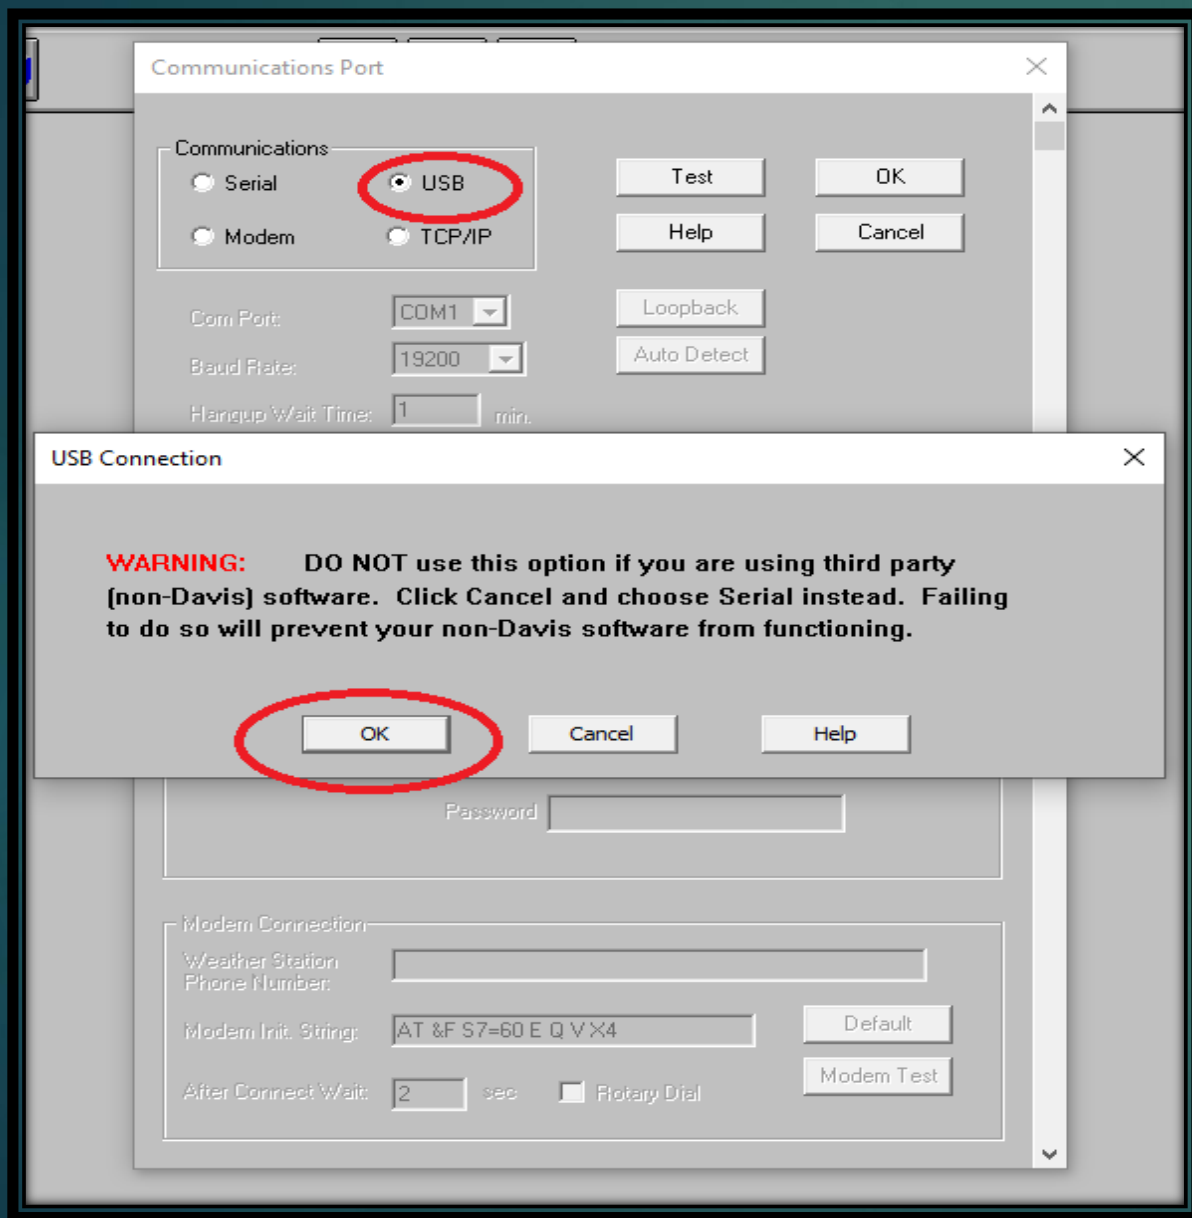


2. Select “**USB**” if USB is not selected in the communications field and Click “**OK**”.

3. Click “**Test**” to verify communication between the station and the software. Click Test to verify communication between the station and the software.

*To verify that the driver is installed, look in Windows' System Properties -> Device Manager -> Ports and see if the Silicon Labs USB to UART Bridge is listed.

"How to Upload Data From Weatherlink Software to Weatherlink.com Account"

4. In the WeatherLink Computer software, click on "WeatherLink Network" in the Setup menu.

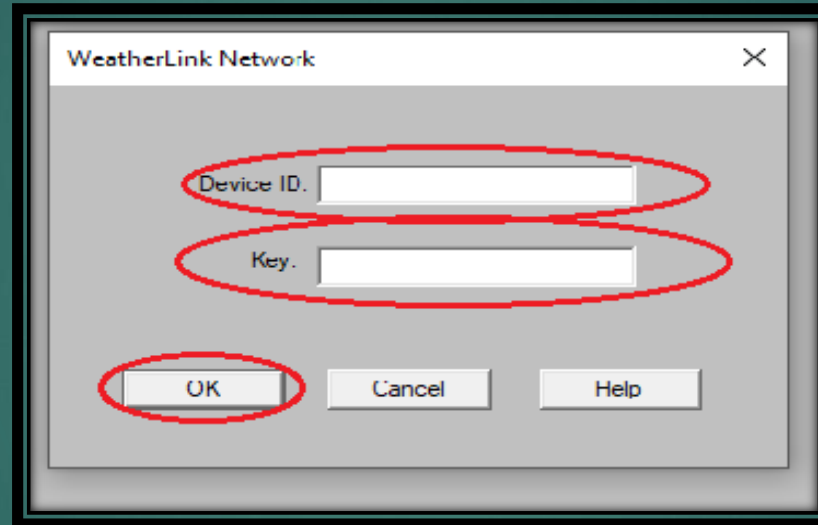

The WeatherLink Network dialog box is shown. It contains two input fields: "Device ID." and "Key.", both of which are circled in red. Below these fields are three buttons: "OK", "Cancel", and "Help". The "OK" button is also circled in red.

5. Enter the "Device ID" and "Key" you received during your WeatherLink.com account setup, and click "OK".

6. You will notice the "Checked Sign" if the Network Upload is "ON"

