


To computer

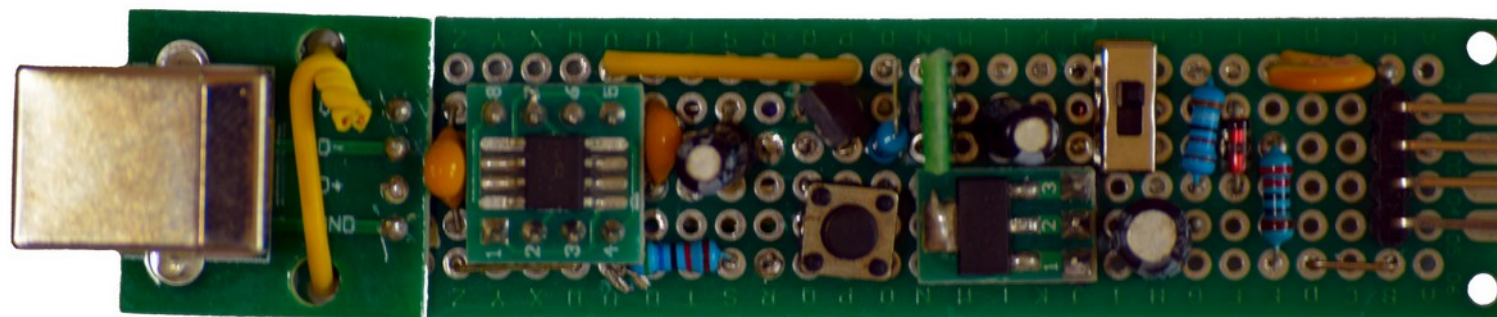

Target board supply
voltage selection

5V
|
3.3V

Vcc
RxD
TxD
GND

To target
board

Target board
manual reset