


To computer

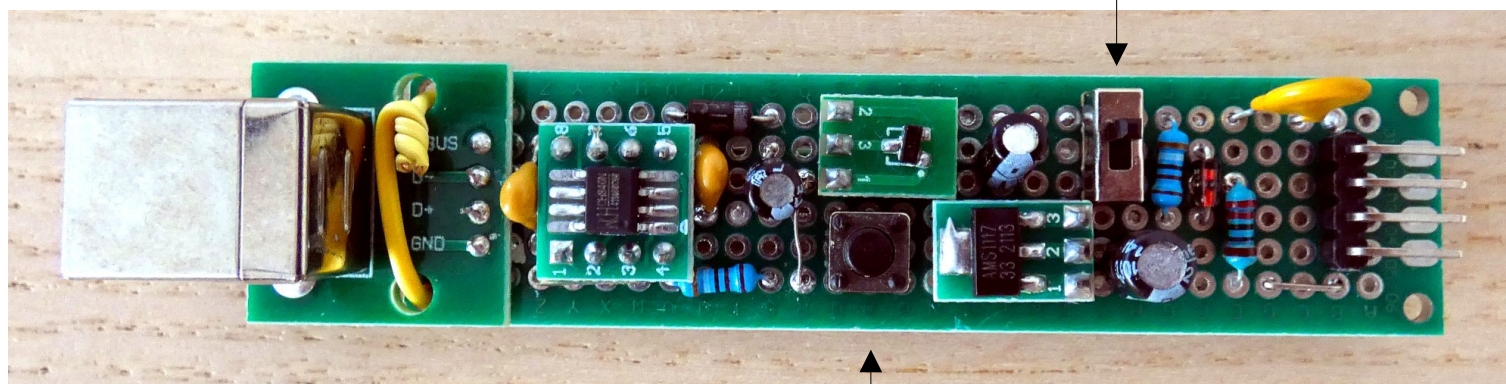

Target board supply  
voltage selection

5V  
|  
3.3V

Target board  
manual reset

Vcc  
RxD  
TxD  
GND

To target  
board