



Basic Switch and End Device Configuration

Dmytro Zubov, PhD

dmytro.zubov@ucentralasia.org




Naryn, 12:21pm, Sept 8, 2022



Lessons learnt last time

- Outline of the course
- Syllabus
- Network Components
- Network Representations and Topologies
- Common Types of Networks
- Internet Connections
- Reliable Networks
- Network Trends
- Network Security

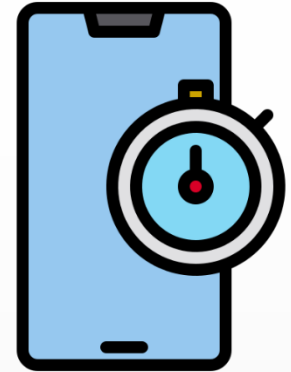


What we gonna discuss today?



- **IOS Navigation:** Explain how to navigate Cisco IOS to configure network devices
- **The Command Structure:** Describe the command structure of Cisco IOS software
- **Basic Device Configuration:** Configure a Cisco IOS device using CLI
- **Save Configurations:** Use IOS commands to save the running configuration
- **Ports and Addresses:** Explain how devices communicate across network media
- **Configure IP Addressing:** Configure a host device with an IP address
- **Verify Connectivity:** Verify connectivity between two end devices

Cisco IOS Access

- **Operating Systems**
 - **Shell** - The user interface that allows users to request specific tasks from the computer. These requests can be made either through the CLI or GUI interfaces.
 - **Kernel** - Communicates between the hardware and software of a computer and manages how hardware resources are used to meet software requirements.
 - **Hardware** - The physical part of a computer including underlying electronics.

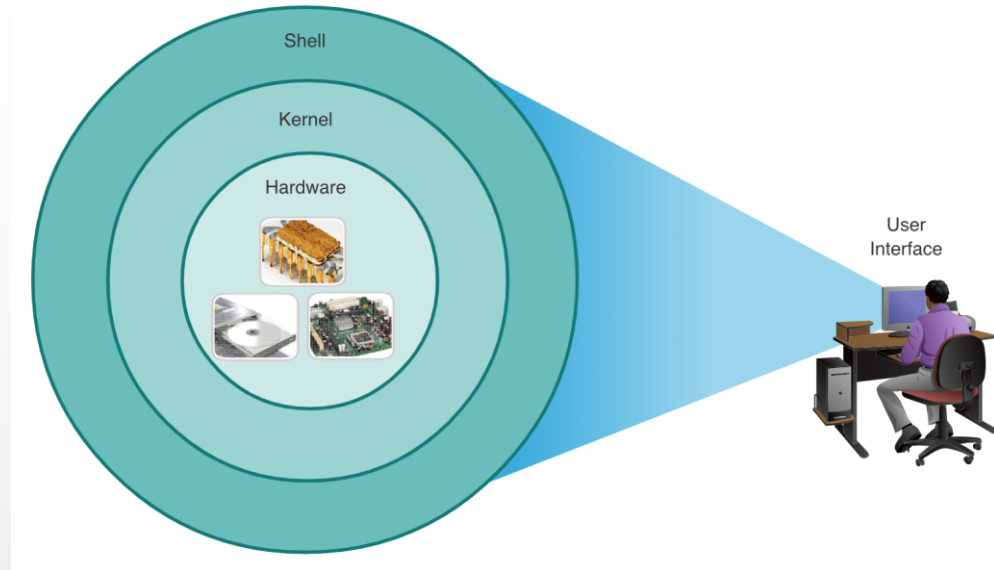

Cisco IOS Access

A decorative blue wavy line that spans across the upper portion of the slide, below the title.

- Cisco IOS Access

Cisco IOS Access



- CLI-based network operating system enables a network technician to do the following:
 - Use a keyboard to run CLI-based network programs
 - Use a keyboard to enter text and text-based commands
 - View output on a monitor

Enter privileged EXEC mode using the **enable** command.

```
Switch> enable
```

Return to user EXEC mode using the **disable** command.

```
Switch# disable
```


Re-enter privileged EXEC mode.

```
Switch> enable
```

Cisco IOS Access

• Access Methods



- **Console** – A physical management port used to access a device in order to provide maintenance, such as performing the initial configurations.
- **Secure Shell (SSH)** – Establishes a secure remote CLI connection to a device, through a virtual interface, over a network. (Note: This is the recommended method for remotely connecting to a device)
- **Telnet** – Establishes an insecure remote CLI connection to a device over the network. (Note: User authentication, passwords and commands are sent over the network in plaintext)

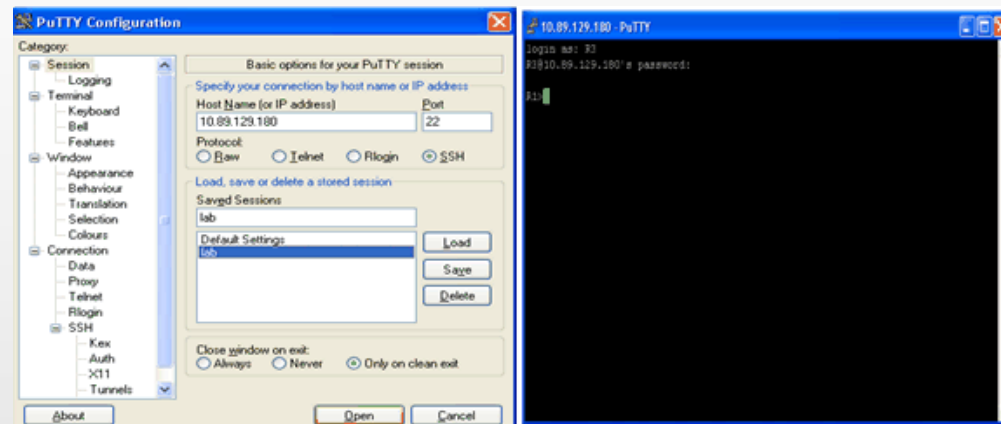

Cisco IOS Access

- Terminal Emulation Programs

- Terminal emulation programs are used to connect to a network device by either a console port or by an SSH/Telnet connection
- There are several terminal emulation programs to choose from such as **PuTTY**, Tera Term and SecureCRT

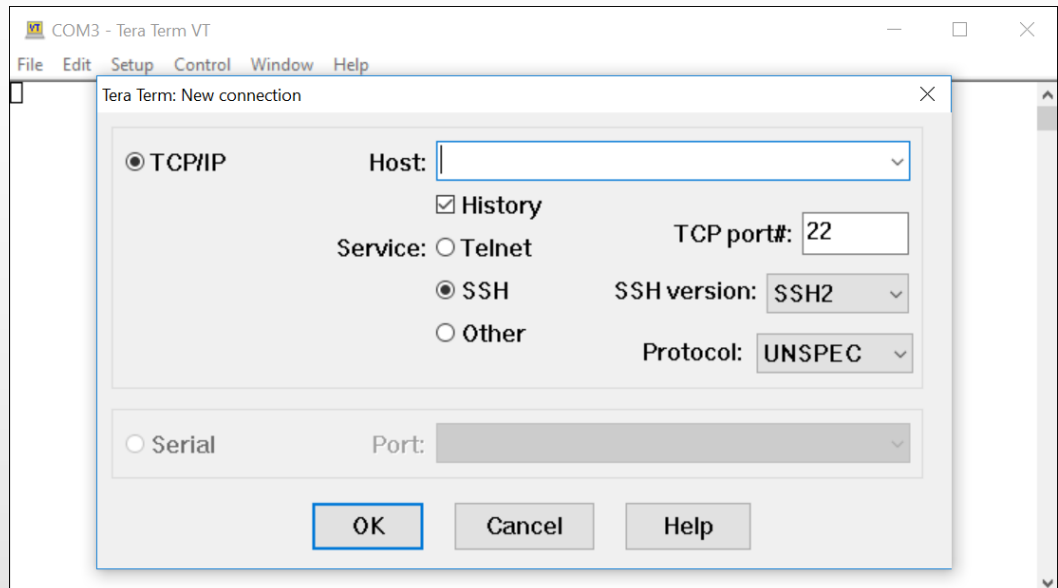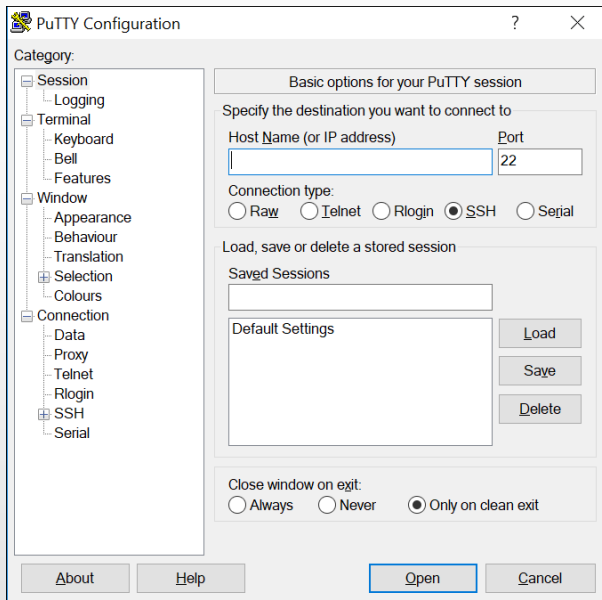

IOS Navigation

A decorative blue wavy line that spans across the upper portion of the slide, below the title.

- IOS (Internetwork Operating System) Navigation

IOS Navigation



- Primary Command Modes

- **User EXEC Mode (>):**

- Allows access to only a limited number of basic monitoring commands
 - Identified by the CLI prompt that ends with the > symbol

- **Privileged EXEC Mode (#):**

- Allows access to all commands and features
 - Identified by the CLI prompt that ends with the # symbol

```
Router>
```

```
Switch>
```

```
Router#
```

```
Switch#
```

IOS Navigation



- Configuration Mode and Subconfiguration Modes

- **Global Configuration Mode:**

- Used to access configuration options on the device

```
Switch(config)#
```

- **Line Configuration Mode:**

- Used to configure console, SSH, Telnet or AUX access

```
Switch(config-line)#
```

- **Interface Configuration Mode:**

- Used to configure a switch port or router interface

```
Switch(config-if)#
```

IOS Navigation



- Navigation Between IOS Modes

- Privileged EXEC Mode:

- To move from user EXEC mode to privilege EXEC mode, use the **enable** command.

```
Switch> enable  
Switch#
```

- Global Configuration Mode:

- To move in and out of global configuration mode, use the **configure terminal** command. To return to privilege EXEC mode, use the **exit** command.

```
Switch(config)#  
Switch(config)#exit  
Switch#
```

- Line Configuration Mode:

- To move in and out of line configuration mode, use the **line** command followed by the management line type. To return to global configuration mode, use the **exit** command.

```
Switch(config)#line console 0  
Switch(config-line)#exit  
Switch(config)#
```

IOS Navigation

- Navigation Between IOS Modes (cont.)

- Subconfiguration Modes:

- To move out of any subconfiguration mode to get back to global configuration mode, use the **exit** command. To return to privilege EXEC mode, use the **end** command or key combination **Ctrl +Z**.

```
Switch(config)#line console 0
Switch(config-line)#end
Switch#
```

- To move directly from one subconfiguration mode to another, type in the desired subconfiguration mode command. In the example, the command prompt changes from **(config-line)#** to **(config-if)#**.

```
Switch(config-line)#interface FastEthernet 0/1
Switch(config-if)#
```



The Command Structure

A decorative blue wavy line that spans across the top of the slide, below the title.

- The Command Structure

The Command Structure

- Basic IOS Command Structure

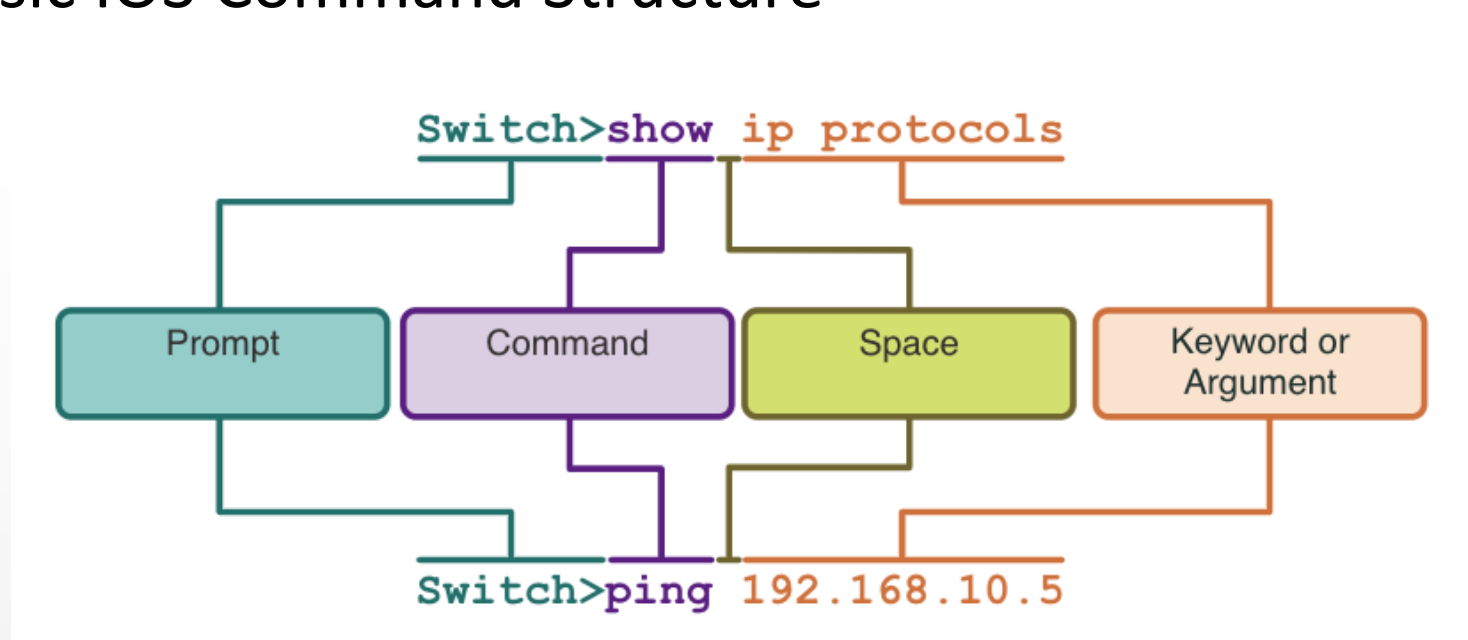

- **Keyword** – This is a specific parameter defined in the operating system (in the figure, **ip protocols**).
- **Argument** - This is not predefined; it is a value or variable defined by the user (in the figure, **192.168.10.5**).

The Command Structure



- IOS Command Syntax Check

- A command might require one or more arguments. To determine the keywords and arguments required for a command, refer to the command syntax
 - Boldface text indicates commands and keywords that are entered as shown
 - Italic text indicates an argument for which the user provides the value

Convention	Description
boldface	Boldface text indicates commands and keywords that you enter literally as shown.
<i>italics</i>	Italic text indicates arguments for which you supply values.
[x]	Square brackets indicate an optional element (keyword or argument).
{x}	Braces indicate a required element (keyword or argument).
[x {y z }]	Braces and vertical lines within square brackets indicate a required choice within an optional element. Spaces are used to clearly delineate parts of the command.

The Command Structure

- IOS Command Syntax Check (cont.)

- The command syntax provides the pattern, or format, that must be used when entering a command

- The command is **ping** and the user-defined argument is the *ip-address* of the destination device. For example, **ping 10.10.10.5**

```
ping ip-address
```

- The command is **traceroute** and the user-defined argument is the *ip-address* of the destination device. For example, **traceroute 192.168.254.254**

```
traceroute ip-address
```

- If a command is complex with multiple arguments, you may see it represented like this:

```
Switch(config-if)# switchport port-security aging { static | time time | type {absolute | inactivity}}
```

The Command Structure



- IOS Help Features

- The IOS has two forms of help available: context-sensitive help and command syntax check.

- Context-sensitive help enables you to quickly find answers to these questions:
 - Which commands are available in each command mode?
 - Which commands start with specific characters or group of characters?
 - Which arguments and keywords are available to particular commands?
- Command syntax check verifies that a valid command was entered by the user.
 - If the interpreter cannot understand the command being entered, it will provide feedback describing what is wrong with the command.

```
Router#ping ?  
WORD  Ping destination address or hostname  
ip     IP echo  
ipv6   IPv6 echo
```

```
Switch#interface fastEthernet 0/1  
                ^  
% Invalid input detected at '^' marker.
```

The Command Structure

- Hot Keys and Shortcuts

- The IOS CLI provides hot keys and shortcuts that make configuring, monitoring, and troubleshooting easier
- Commands and keywords can be shortened to the minimum number of characters that identify a unique selection. For example, the **configure** command can be shortened to **conf** because **configure** is the only command that begins with **conf**.

```
Router#con
% Ambiguous command: "con"
Router#con?
configure  connect
```

```
Router#conf t
Enter configuration commands, one per line.  End with CNTL/Z.
Router(config)#
```


The Command Structure



- Hot Keys and Shortcuts (cont.)

- The table below is a brief list of keystrokes to enhance command line editing:

Keystroke	Description
Tab	Completes a partial command name entry.
Backspace	Erases the character to the left of the cursor.
Left Arrow or Ctrl+B	Moves the cursor one character to the left.
Right Arrow or Ctrl+F	Moves the cursor one character to the right.
Up Arrow or Ctrl+P	Recalls the commands in the history buffer, beginning with the most recent commands.

The Command Structure

• Hot Keys and Shortcuts (cont.)

- When a command output produces more text than can be displayed in a terminal window, the IOS will display a “**--More--**” prompt. The table below describes the keystrokes that can be used when this prompt is displayed.

- The table below lists commands that can be used to exit out of an operation:

Keystroke	Description
Enter Key	Displays the next line.
Space Bar	Displays the next screen.
Any other key	Ends the display string, returning to privileged EXEC mode.

Keystroke	Description
Ctrl-C	When in any configuration mode, ends the configuration mode and returns to privileged EXEC mode.
Ctrl-Z	When in any configuration mode, ends the configuration mode and returns to privileged EXEC mode.
Ctrl-Shift-6	All-purpose break sequence used to abort DNS lookups, traceroutes, pings, etc.

The Command Structure



- In-class practice:
 - Use the file “ProblemSolvingSessionCN2.pka” from this week tutorial assignment
 - Switch the CLI mode: from the user EXEC mode to the privileged EXEC mode
 - Switch the CLI mode: from the the privileged EXEC mode to the configuration mode
 - ... and backward ... :)

The Command Structure

- In-class practice:

The screenshot displays the Cisco Packet Tracer interface. On the left, a network diagram shows two switches, S1 and S2, connected by a dashed line. Each switch is connected to a PC (PC1 and PC2 respectively) via a solid line. The interface includes a menu bar (File, Edit, Options, View, Tools, Extensions) and a toolbar with various icons. Below the toolbar, there are tabs for 'Logical' and 'Physical' views, with the 'Logical' tab selected. The main area shows the network topology. At the bottom, there is a status bar with a timer (Time: 00:43:18) and a row of icons.

On the right, a window titled 'S1' is open, showing the 'CLI' (Command Line Interface) for switch S1. The window has a title bar with standard window controls and a 'CLI' tab. The main area of the window displays the following text:

```
Switch>enable
Switch#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#exit
Switch#
#SYS-5-CONFIG_I: Configured from console by console
Switch#exit
```

Below the main text area, there is a message: 'Switch con0 is now available'. At the bottom of the CLI window, there is a prompt 'Switch>' and a status bar with the text 'Ctrl+F6 to exit CLI focus'. To the right of the CLI window, there is a vertical scrollbar and a 'Simulation' button. At the bottom right, there is a 'Destination' button.

Basic Device Configuration

• Device Names

- The first configuration command on any device should be to give it a unique hostname
- By default, all devices are assigned a factory default name. For example, a Cisco IOS switch is "Switch."
- Guideline for naming devices:
 - Start with a letter
 - Contain no spaces
 - End with a letter or digit
 - Use only letters, digits, and dashes
 - Be less than 64 characters in length

```
Switch# configure terminal
Switch(config)# hostname Sw-Floor-1
Sw-Floor-1(config)#
```

Note: To return the switch to the default prompt, use the **no hostname** global config command.

Basic Device Configuration

Recommendation: Pls use password “**CISCO**” in the class assignments :)

• Password Guidelines

- The use of weak or easily guessed passwords are a security concern
- All networking devices should limit administrative access by securing privileged EXEC, user EXEC, and remote Telnet access with passwords. In addition, all passwords should be encrypted and legal notifications provided

- Password Guidelines:

- Use passwords that are more than eight characters in length
- Use a combination of upper and lowercase letters, numbers, special characters, and/or numeric sequences
- Avoid using the same password for all devices
- Do not use common words because they are easily guessed



Note: Most of the assignments in this course use simple passwords such as **cisco** or **class**. These passwords are considered weak and easily guessable and should be avoided in production environments.

Basic Device Configuration

• Configure Passwords

- Securing user EXEC mode access:

- First enter line console configuration mode using the **line console 0** command in global configuration mode
- Next, specify the user EXEC mode password using the **password** *password* command.
- Finally, enable user EXEC access using the **login** command

```
Sw-Floor-1# configure terminal
Sw-Floor-1(config)# line console 0
Sw-Floor-1(config-line)# password cisco
Sw-Floor-1(config-line)# login
Sw-Floor-1(config-line)# end
Sw-Floor-1#
```

- Securing privileged EXEC mode access:

- First enter global configuration mode
- Next, use the **enable** **secret** *password* command

```
Sw-Floor-1# configure terminal
Sw-Floor-1(config)# enable secret class
Sw-Floor-1(config)# exit
Sw-Floor-1#
```

Basic Device Configuration

- Configure Passwords (cont.)

- Securing VTY line access:

- First enter line VTY configuration mode using the **line vty 0 15** command in global configuration mode.
 - Next, specify the VTY password using the **password** *password* command.
 - Finally, enable VTY access using the **login** command.

```
Sw-Floor-1# configure terminal
Sw-Floor-1(config)# line vty 0 15
Sw-Floor-1(config-line)# password cisco
Sw-Floor-1(config-line)# login
Sw-Floor-1(config-line)# end
Sw-Floor-1#
```

- Note: VTY lines enable remote access using Telnet or SSH to the device. Many Cisco switches support up to 16 VTY lines that are numbered 0 to 15.

Basic Device Configuration

- Encrypt Passwords

- The startup-config and running-config files display most passwords in plaintext

- To encrypt all plaintext passwords, use the **service password-encryption** global config command

```
Sw-Floor-1# configure terminal
Sw-Floor-1(config)# service password-encryption
Sw-Floor-1(config)# exit
Sw-Floor-1#
```

- Use the **show running-config** command to verify that the passwords on the device are now encrypted

```
Sw-Floor-1# show running-config
!
!
line con 0
password 7 094F471A1A0A
login
!
Line vty 0 4
Password 7 03095A0F034F38435B49150A1819
Login
!
!
end
```

Basic Device Configuration

- Banner Messages

- A banner message is important to warn unauthorized personnel from attempting to access the device

- To create a banner message of the day on a network device, use the **banner motd** *# the message of the day* **#** global config command

```
Sw-Floor-1# configure terminal
Sw-Floor-1(config)# banner motd #Authorized Access Only!#
```

The banner will be displayed on attempts to access the device:



```
Press RETURN to get started.
```

```
Authorized Access Only!
```

```
User Access Verification
```

```
Password:
```

Note: The “#” in the command syntax is called the delimiting character. It is entered before and after the message.

Basic Device Configuration



- In-class practice: Please delete the banner displayed when the switch is loaded

Save Configurations

• Configuration Files

- There are two system files that store the device configuration:
 - **startup-config** : This is the saved configuration file that is stored in NVRAM. It contains all the commands that will be used by the device upon startup or reboot. Flash does not lose its contents when the device is powered off.
 - **running-config** : This is stored in Random Access Memory (RAM). It reflects the current configuration. Modifying a running configuration affects the operation of a Cisco device immediately. RAM is volatile memory. It loses all of its content when the device is powered off or restarted.
 - To save changes made to the running configuration to the startup configuration file, use the **copy running-config startup-config** privileged EXEC mode command.

```
Router#show startup-config
Using 624 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
```

```
Router#show running-config
Building configuration...

Current configuration : 624 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
```


Save Configurations

• Alter the Running Configurations

- If changes made to the running config do not have the desired effect and the running-config has not yet been saved, you can restore the device to its previous configuration. To do this you can:

```
Router# reload
Proceed with reload? [confirm]
Initializing Hardware ...
```

- Remove the changed commands individually.
- Reload the device using the **reload** command in privilege EXEC mode. *Note: This will cause the device to briefly go offline, leading to network downtime.*

- If the undesired changes were saved to the startup-config, it may be necessary to clear all the configurations using the **erase startup-config** command in privilege EXEC mode.

- After erasing the startup-config, reload the device to clear the running-config file from RAM.

```
Router# erase startup-config
Erasing the nvram filesystem will remove all configuration files! Continue? [confirm]
[OK]
Erase of nvram: complete
%SYS-7-NV_BLOCK_INIT: Initialized the geometry of nvram
Router#
```

Ports and Addresses

A decorative blue wavy line that spans across the upper portion of the slide, below the title.

- Ports and Addresses

Ports and Addresses

• IP Addresses

- The use of IP addresses is the primary means of enabling devices to locate one another and establish end-to-end communication on the internet
- The structure of an IPv4 address is called **dotted decimal notation** and is represented by four decimal numbers between 0 and 255
- An IPv4 subnet mask is a 32-bit value that differentiates the network portion of the address from the host portion. Coupled with the IPv4 address, the subnet mask determines to which subnet the device is a member.
- The default gateway address is the IP address of the router that the host will use to access remote networks, including the Internet

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 192 . 168 . 1 . 10

Subnet mask: 255 . 255 . 255 . 0

Default gateway: 192 . 168 . 1 . 1

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternate DNS server: . . .

☐ Validate settings upon exit

Advanced...

OK Cancel

Ports and Addresses

- IP Addresses (cont.)

- IPv6 addresses are 128 bits in length and written as a string of hexadecimal values. Every four bits is represented by a single hexadecimal digit; for a total of 32 hexadecimal values. Groups of four hexadecimal digits are separated by a colon “:”.
- IPv6 addresses are not case-sensitive and can be written in either lowercase or uppercase.

Internet Protocol Version 6 (TCP/IPv6) Properties

General

You can get IPv6 settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IPv6 settings.

☐ Obtain an IPv6 address automatically

☒ Use the following IPv6 address:

IPv6 address: 2001:db8:acad:10::10

Subnet prefix length: 64

Default gateway: fe80::1

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server:

Alternate DNS server:

☐ Validate settings upon exit

Advanced...

OK Cancel

Note: IP in this course refers to both the IPv4 and IPv6 protocols. IPv6 is the most recent version of IP and is replacing the more common IPv4.


Ports and Addresses

- Network communications depend on end user device interfaces, networking device interfaces, and the cables that connect them
- Types of network media include twisted-pair copper cables, fiber-optic cables, coaxial cables, or wireless
- Different types of network media have different features and benefits. Some of the differences between various types of media include:
 - Distance the media can successfully carry a signal
 - Environment in which the media is to be installed
 - Amount of data and the speed at which it must be transmitted
 - Cost of the media and installation

• Interfaces and Ports



Copper

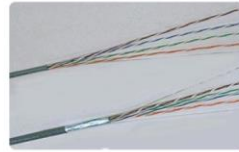

Fiber-optics



Wireless



Configure IP Addressing

A decorative blue wavy line that spans across the top of the slide, below the title.

- Configure IP Addressing

Configure IP Addressing

- Manual IP Address Configuration for End Devices

- End devices on the network need an IP address in order to communicate with other devices on the network

- IPv4 address information can be entered into end devices manually, or automatically using Dynamic Host Configuration Protocol (DHCP)

- To manually configure an IPv4 address on a Windows PC, open the **Control Panel > Network Sharing Center > Change adapter settings** and choose the adapter. Next right-click and select **Properties** to display the **Local Area Connection Properties**.

- Next, click **Properties** to open the **Internet Protocol Version 4 (TCP/IPv4) Properties** window. Then configure the IPv4 address and subnet mask information, and default gateway.

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 192 . 168 . 1 . 10

Subnet mask: 255 . 255 . 255 . 0

Default gateway: 192 . 168 . 1 . 1

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternate DNS server: . . .

☐ Validate settings upon exit

Advanced...


OK Cancel

Note: IPv6 addressing and configuration options are similar to IPv4

Configure IP Addressing

- Automatic IP Address Configuration for End Devices

- DHCP enables automatic IPv4 address configuration for every end device that is DHCP-enabled.
- End devices are typically by default using DHCP for automatic IPv4 address configuration.
 - To configure DHCP on a Windows PC, open the **Control Panel > Network Sharing Center > Change adapter settings** and choose the adapter. Next right-click and select **Properties** to display the **Local Area Connection Properties**.
 - Next, click **Properties** to open the **Internet Protocol Version 4 (TCP/IPv4) Properties** window, then select **Obtain an IP address automatically** and **Obtain DNS server address automatically**.

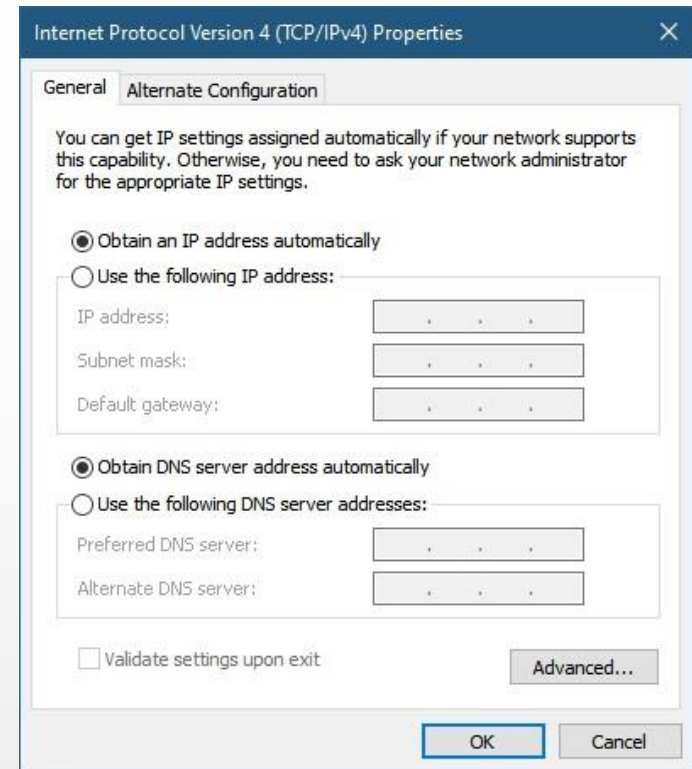

Note: IPv6 uses DHCPv6 and SLAAC (Stateless Address Autoconfiguration) for dynamic address allocation

Configure IP Addressing



- Switch Virtual Interface Configuration

- To access the switch remotely, an IP address and a subnet mask must be configured on the SVI.

- To configure an SVI on a switch:

- Enter the **interface vlan 1** command in global configuration mode
 - Next assign an IPv4 address using the **ip address** *ip-address subnet-mask command*
 - Finally, enable the virtual interface using the **no shutdown** command

```
Switch# configure terminal
Switch(config)# interface vlan 1
Switch(config-if)# ip address 192.168.1.20 255.255.255.0
Switch(config-if)# no shutdown
```


Verify Connectivity



- Verify Connectivity

Verify Connectivity

- In(out)-class practice: assign static IP-addresses to the PCs, and then verify connectivity using the command ping
 - Please use the CPT file “ProblemSolvingSessionCN2.pka” in this activity

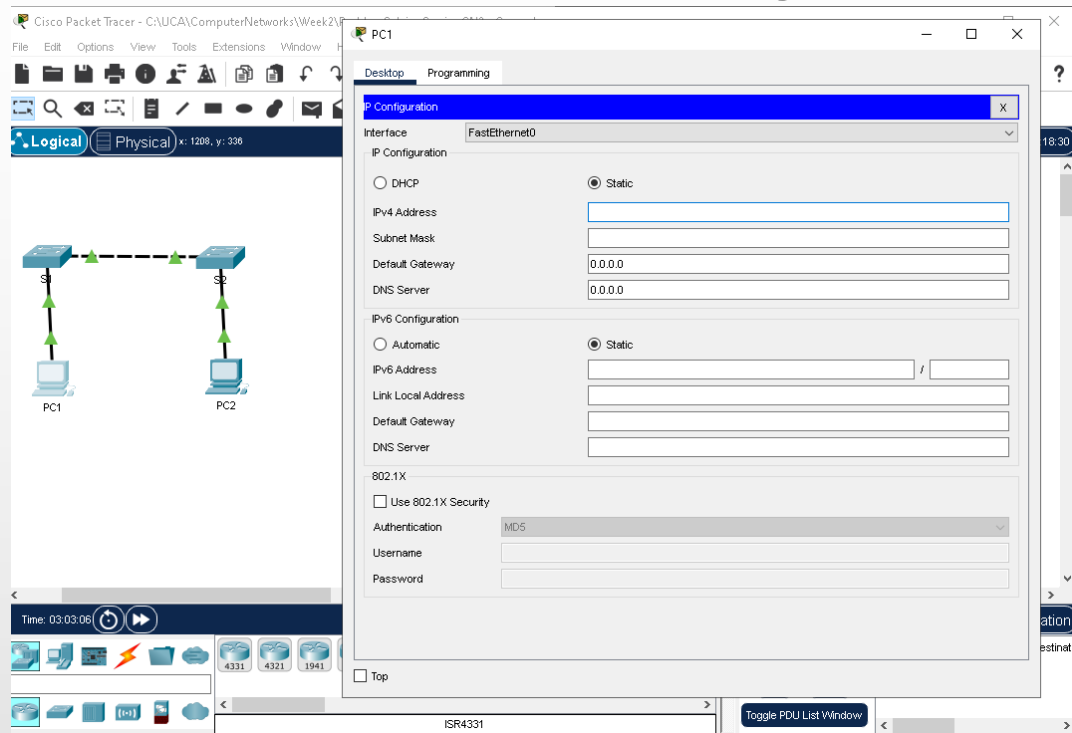

Do you have any
questions or
comments?



An abstract graphic consisting of multiple concentric, overlapping circular bands in shades of blue and grey, creating a sense of depth and motion. The bands are composed of various widths and colors, some appearing as solid lines and others as fragmented, pixelated segments.

Thank you
for your attention !

In this presentation:

- Some icons were downloaded from flaticon.com and iconscout.com