



INSTALLING THE BATTERY

Remove the screws from both sides of the case and then remove the back cover. Install single AA battery in the direction indicated on the circuit board.

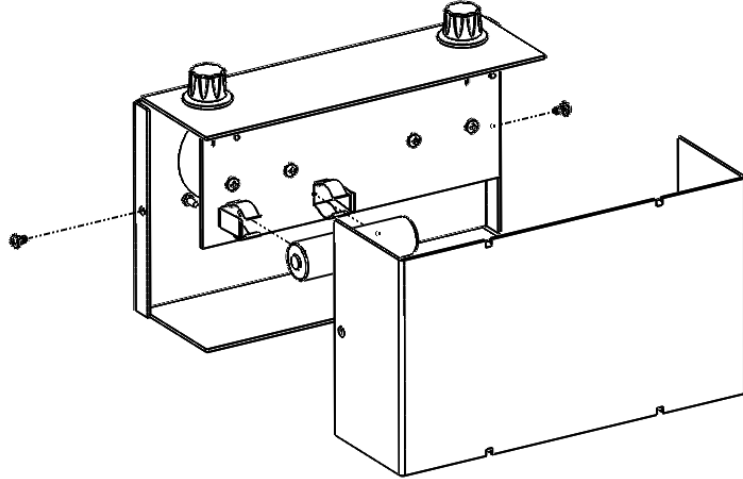

INSTALLING THE BATTERY

Remove the screws from both sides of the case and then remove the back cover. Install single AA battery in the direction indicated on the circuit board.

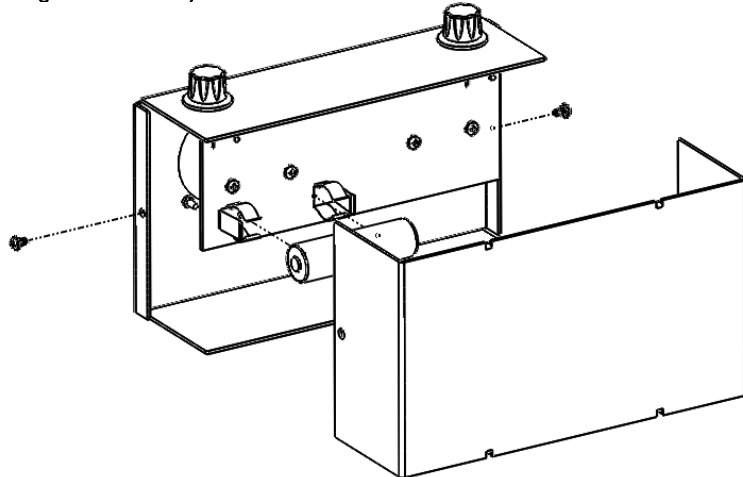


MODEL

AWK-105

"Analog Voltmeter Clock"

Made
in the
USA

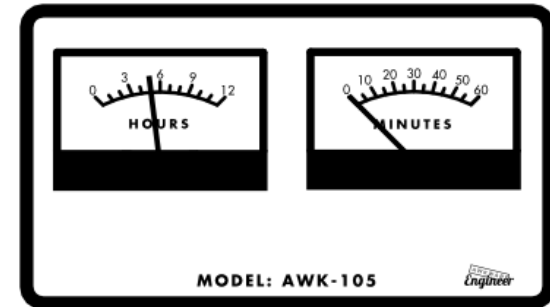

AWKWARD
Engineer


www.awkwardengineer.com

MODEL

AWK-105

"Analog Voltmeter Clock"

Made
in the
USA

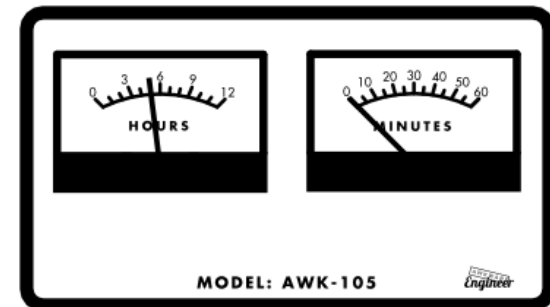


AWKWARD
Engineer

www.awkwardengineer.com


READING THE CLOCK

Read the time below as 4:57 (almost 5 o'clock somewhere.) The hours hand moves in whole hour increments.

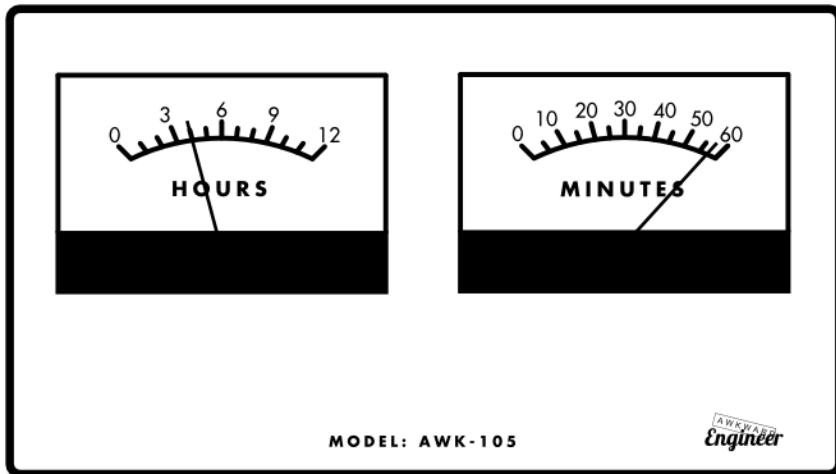

READING THE CLOCK

Read the time below as 4:57 (almost 5 o'clock somewhere.) The hours hand moves in whole hour increments.

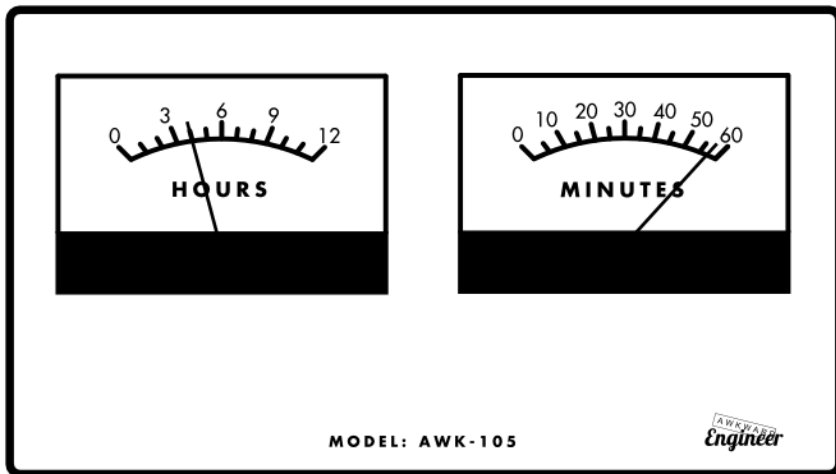

CONTROL KNOB FUNCTIONS

note: Calibration modes are to adjust meter sensitivity, not time!

MODE	METERS STATUS	ADJUST KNOB FUNCTION
TIME	Meters point to full scale for 2 seconds before returning to zero, then displays the time.	Adjust knob sets time. The minutes and hours hand are connected, so may take several rotations.
WARBLE	Meters point to half scale for 2 seconds and then briefly show full scale before displaying the time. The needles twitch randomly.	None.
CAL 1	Minutes meter points to zero, hours meter points to 12 hours. Use a screwdriver to adjust the zero point.	Adjust knob sets calibration of hours meter. Meter should point exactly to 12 hours.
CAL 2	Hours meter points to zero, minutes meter points to 60 min. Use a screwdriver to adjust the zero point.	Adjust knob sets calibration of minutes meter. Meter should point exactly to 60 minutes.

CONTROL KNOB FUNCTIONS

note: Calibration modes are to adjust meter sensitivity, not time!

MODE	METERS STATUS	ADJUST KNOB FUNCTION
TIME	Meters point to full scale for 2 seconds before returning to zero, then displays the time.	Adjust knob sets time. The minutes and hours hand are connected, so may take several rotations.
WARBLE	Meters point to half scale for 2 seconds and then briefly show full scale before displaying the time. The needles twitch randomly.	None.
CAL 1	Minutes meter points to zero, hours meter points to 12 hours. Use a screwdriver to adjust the zero point.	Adjust knob sets calibration of hours meter. Meter should point exactly to 12 hours.
CAL 2	Hours meter points to zero, minutes meter points to 60 min. Use a screwdriver to adjust the zero point.	Adjust knob sets calibration of minutes meter. Meter should point exactly to 60 minutes.