


RS485 DRIVER:

| RTS_RS | Driver status |
|--------|---|
| LOW | Transmitter disabled (HiZ output), Receiver enabled |
| HIGH | Transmitter enabled, Receiver Disabled (HiZ output) |

| Title | | Serial Interface (500) |
|-----------------------|---------------------------|------------------------|
| PLC Prime Modem board | | |
| Size | Document Number | Rev |
| A4 | 23FT11 | 4.0 |
| Date: | Tuesday, October 16, 2012 | Sheet 5 of 6 |

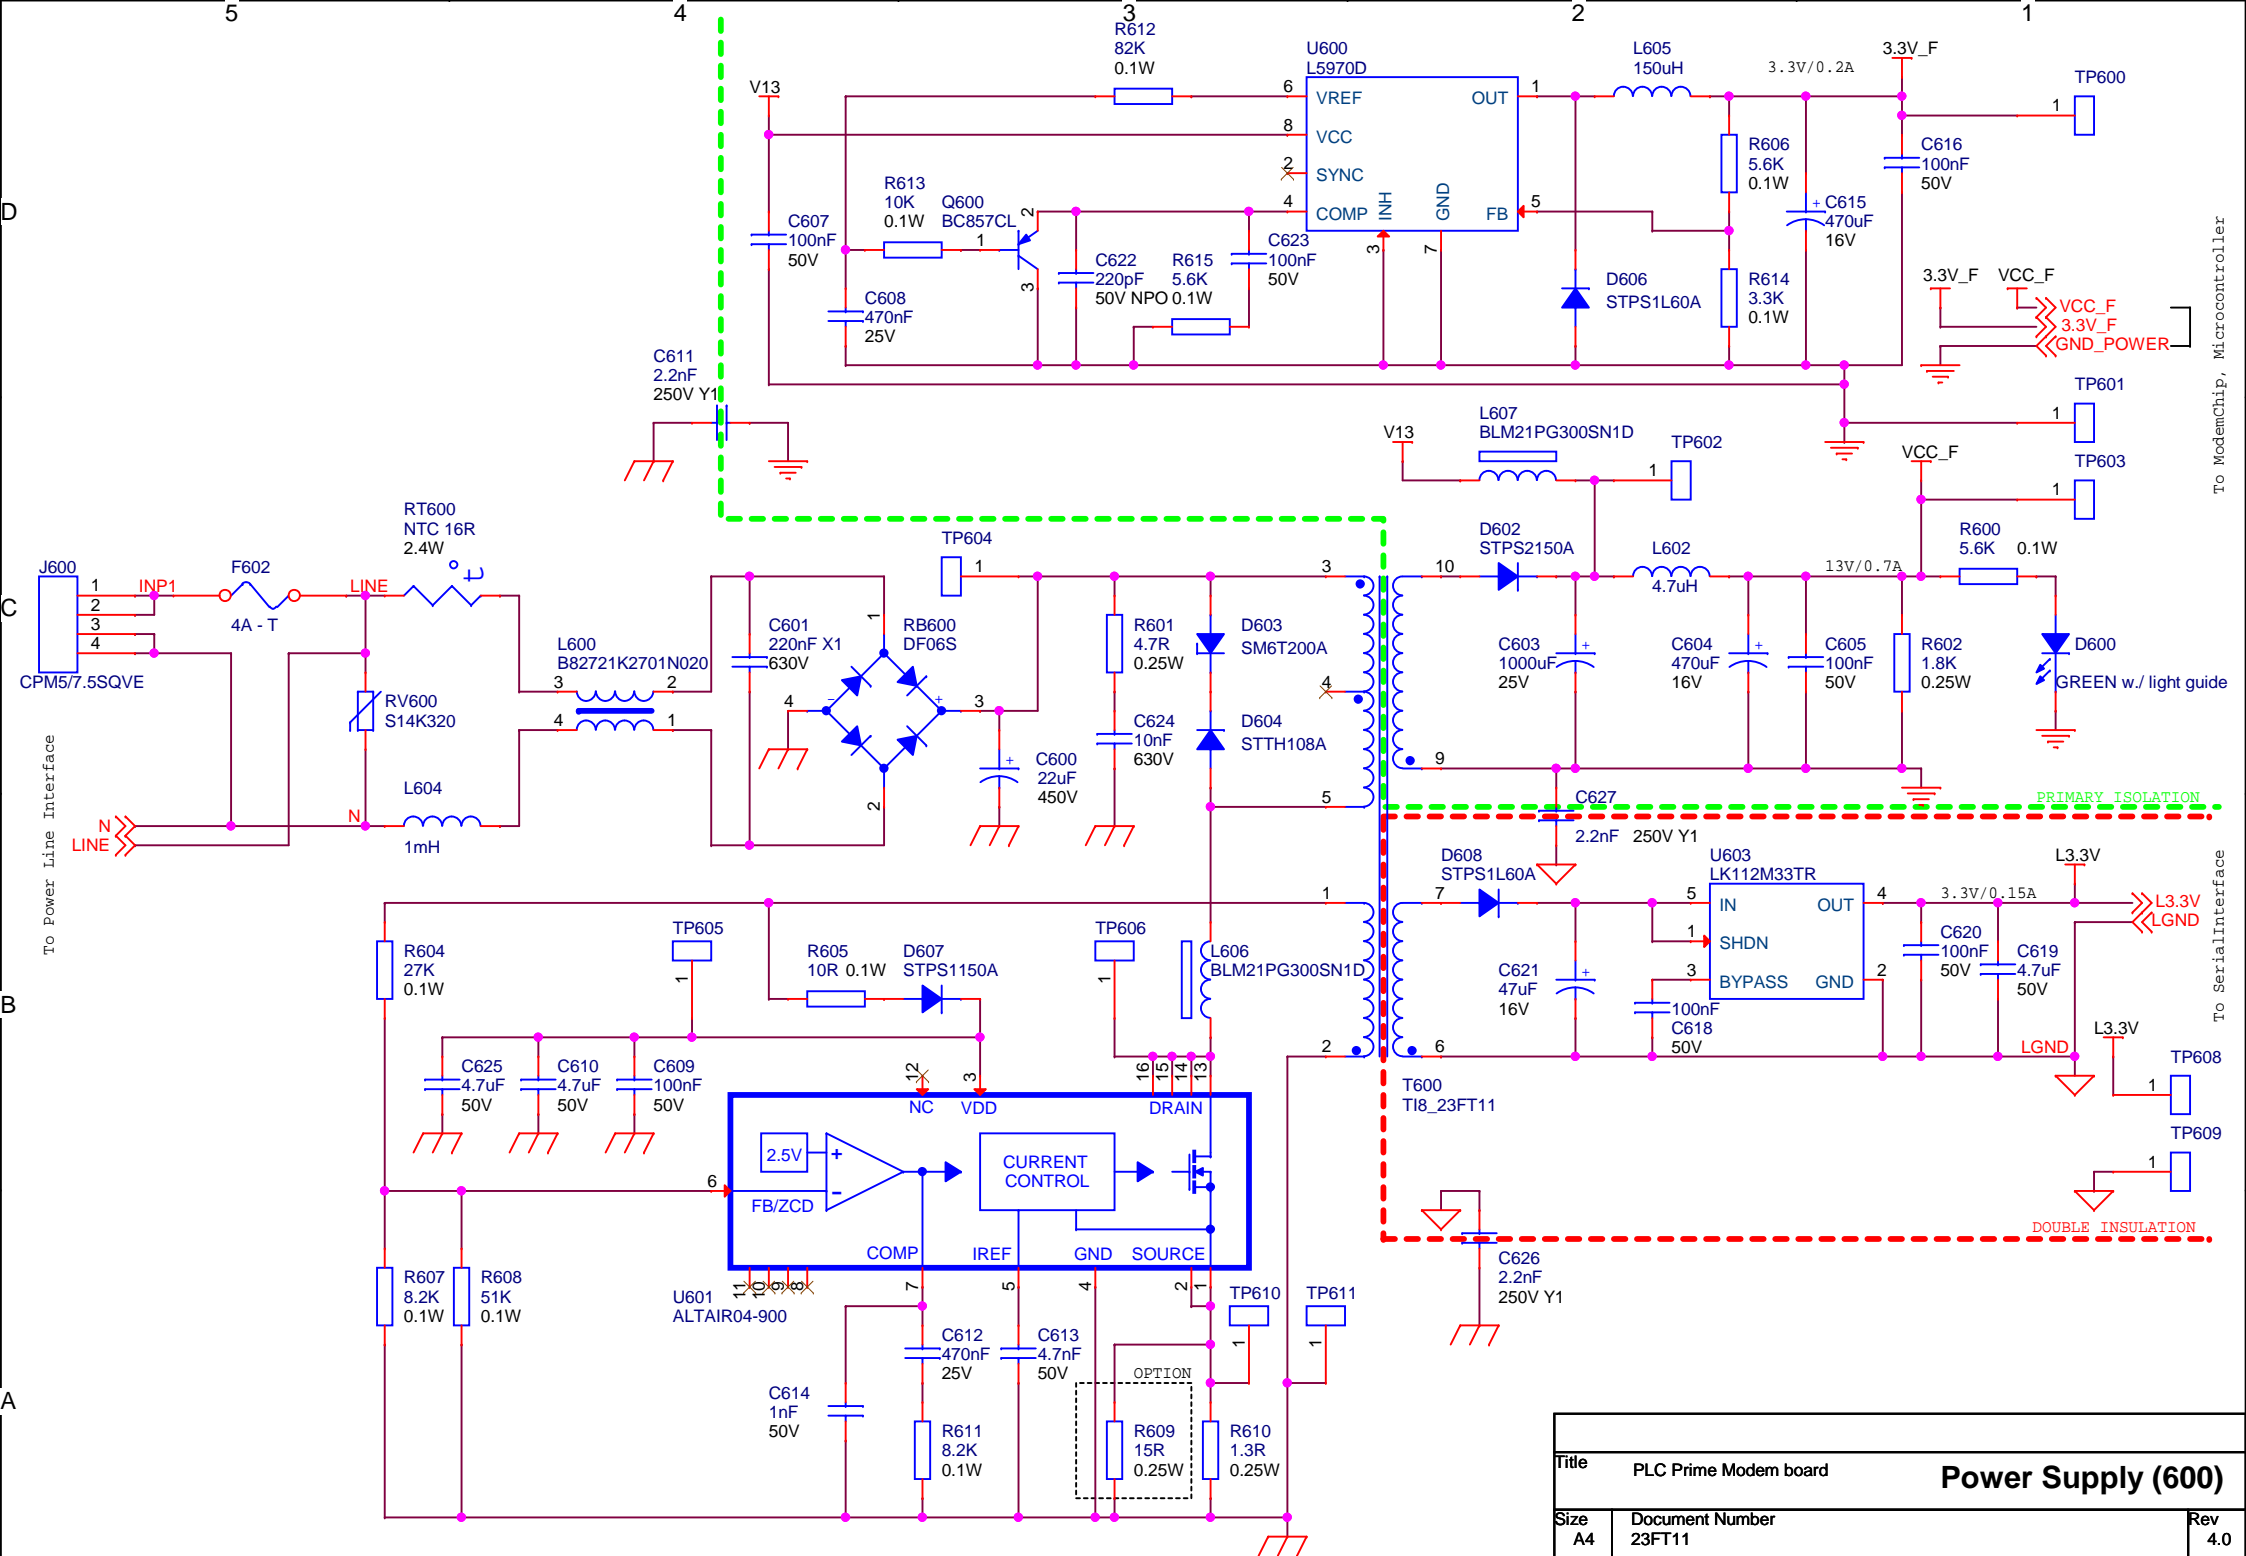

| | | | | | |
|-------|----------------------------|-----------------------|--------|--------------------|------|
| Title | | PLC Prime Modem board | | Power Supply (600) | |
| Size | A4 | Document Number | 23FT11 | Rev | 4.0 |
| Date: | Thursday, October 18, 2012 | | Sheet | 6 | of 6 |