


Components

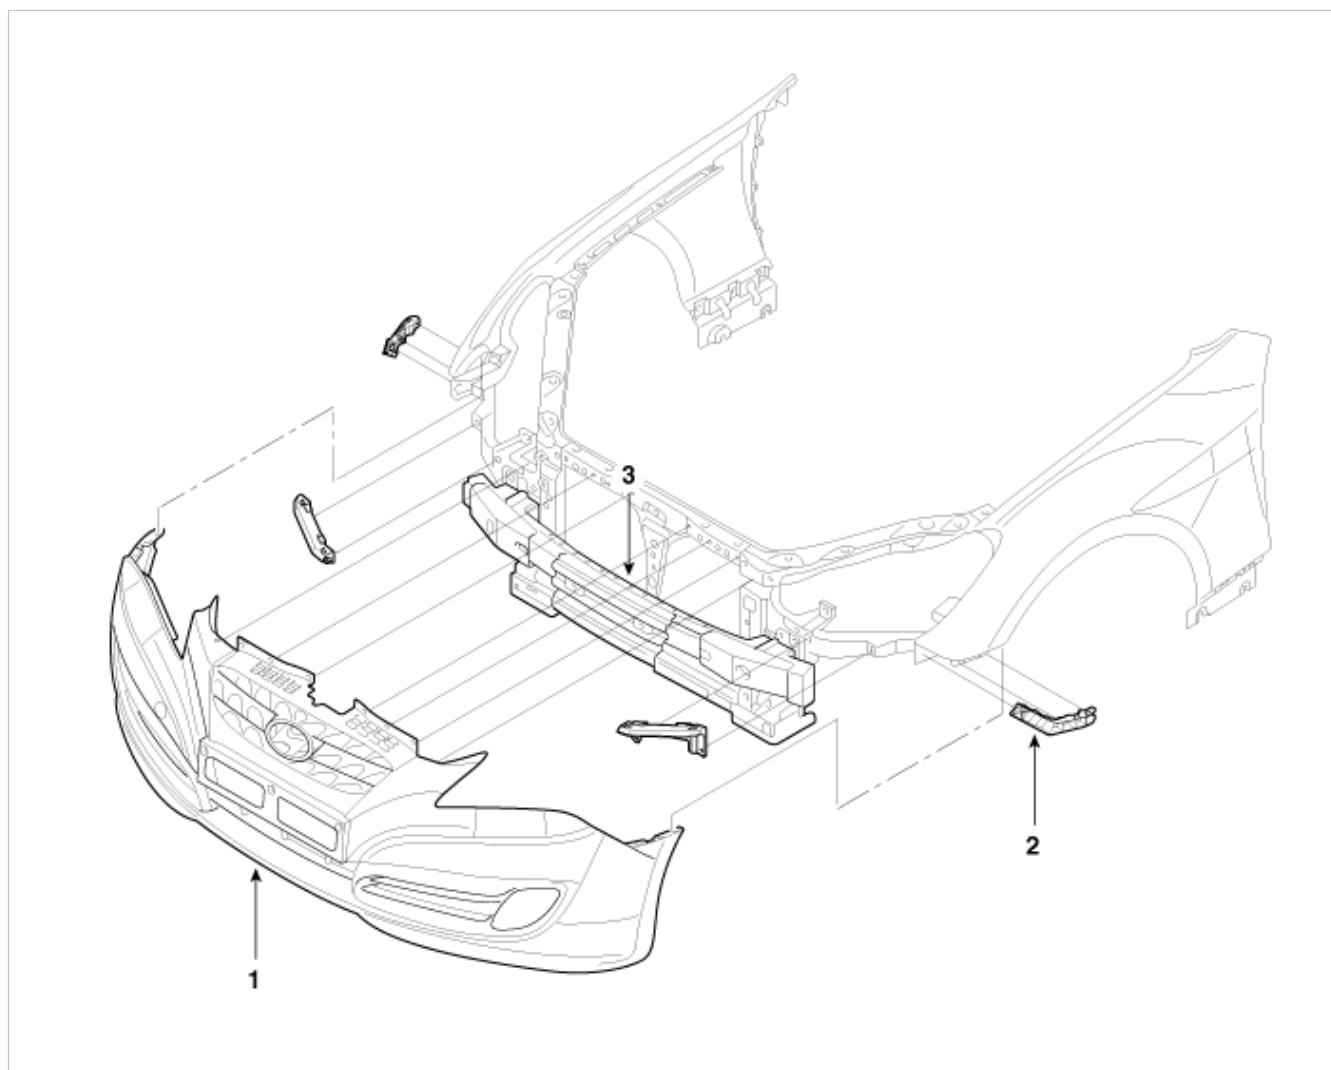

- 1. Front bumper cover
- 2. Front bumper side bracket


- 3. Front bumper rail

Replacement


NOTE

- Put on gloves to protect your hands.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not bend or scratch the cover and other parts.


1. Remove the clips (A).

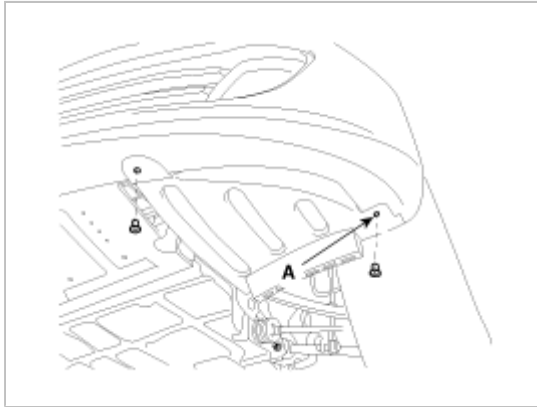


2. Remove the radiator upper cover mounting clips.

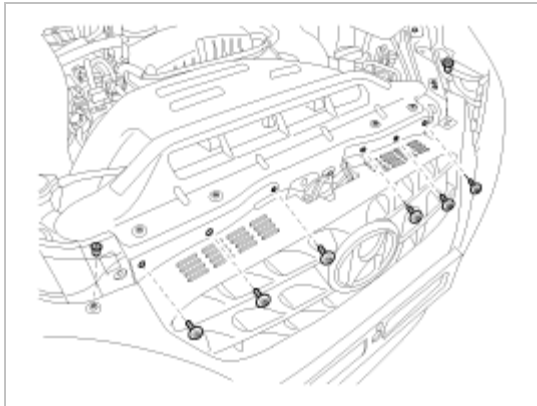

3. Remove the screw (A).

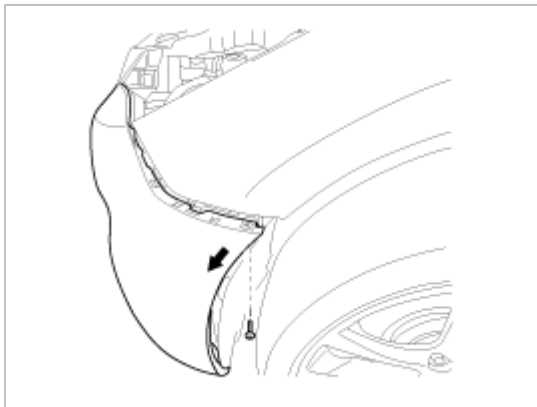


4. Remove the headlamp.
5. Remove the front bumper cover.
6. Disconnect the fog lamp connector (A).

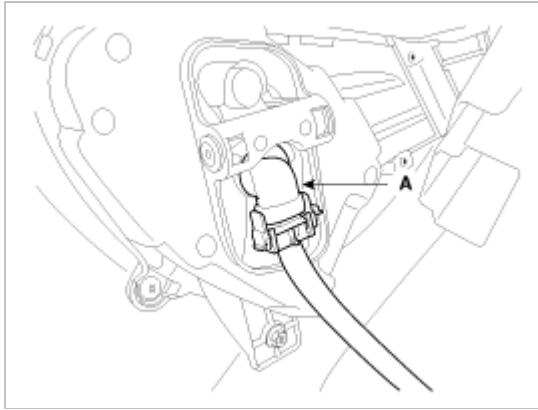

7. Installation is the reverse of removal.

Components

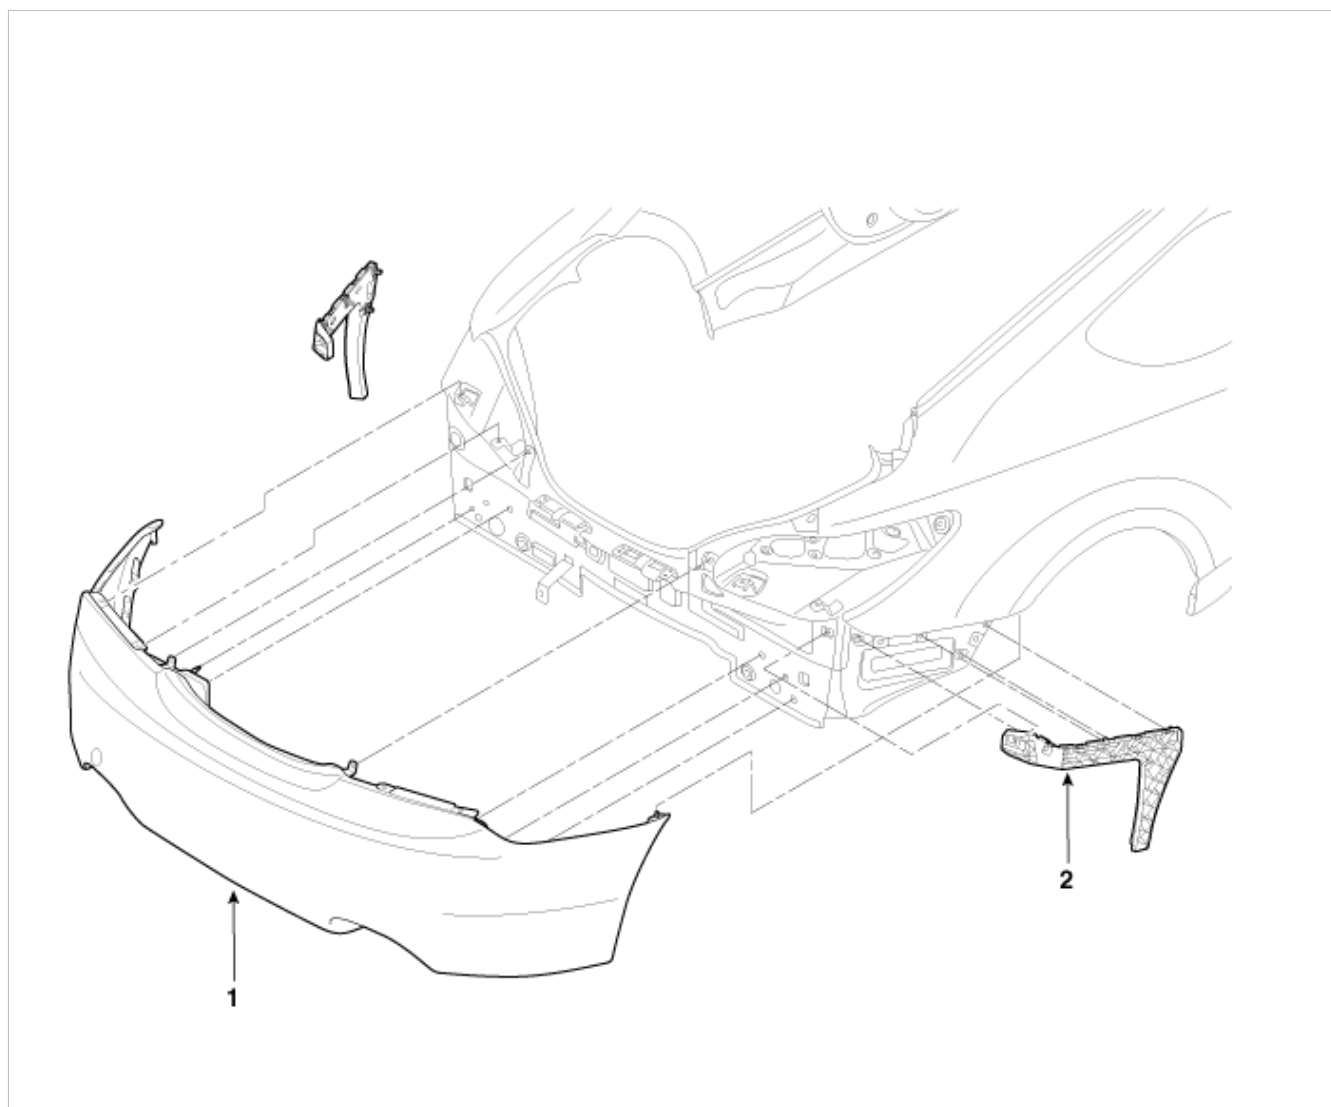

1. Rear bumper assembly


2. Rear bumper mounting bracket

Replacement


NOTE

- After remove the rear combination lamp.
- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts your hands.
- Put on gloves to protect your hands.
- Take care not bend or scratch the cover and other parts.


1. Remove the transverse trim.
2. Luggage side trim.
3. Remove the mounting screw.

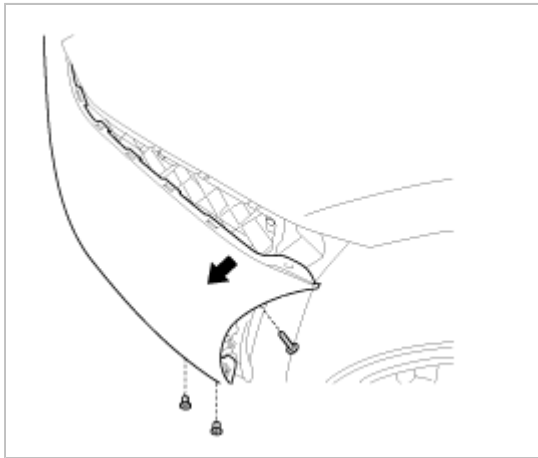


4. Remove the mounting bolts.

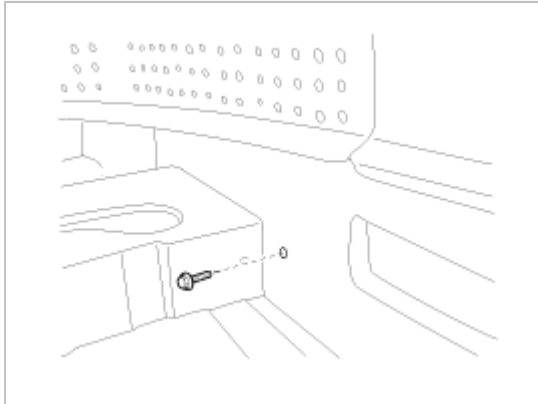

5. Disconnect the connector (A).

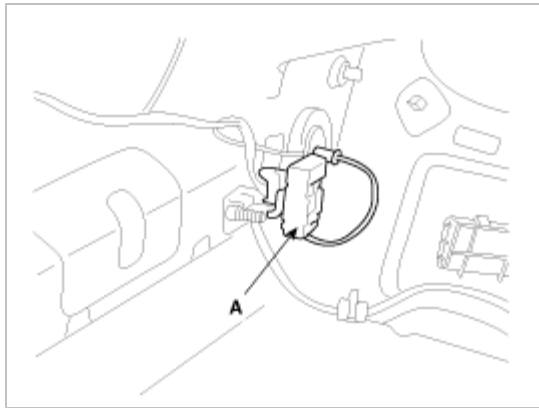

6. Loosen the rear bumper cover screws and clips.
7. Remove the rear bumper cover (A).

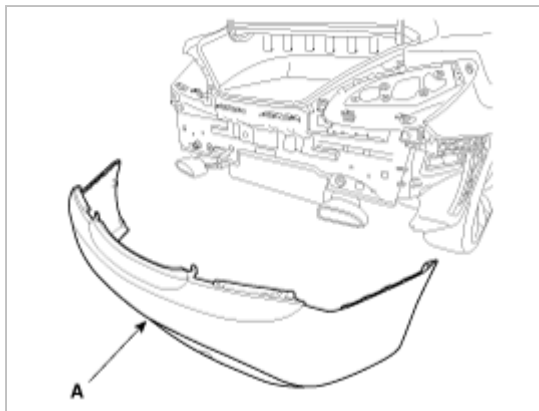

8. Installation is the reverse of removal.

NOTE

- Replace any damage clips.