


Components

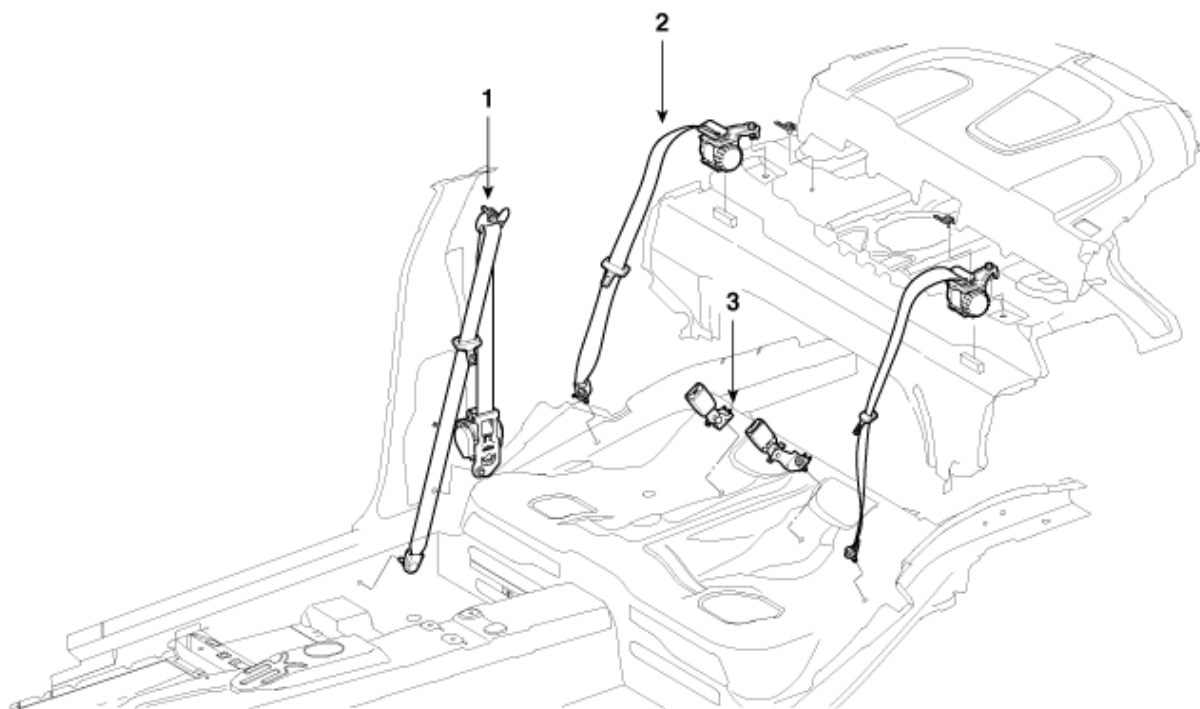

1. Front seat belt
2. Rear seat belt

3. Rear seat belt buckle

Replacement

Front Seat Belt Replacement


CAUTION

- When installing the belt, make sure not to damage the pretensioner.

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the following items fist.
 - A. Front seat assembly.
 - B. Door scuff trim.
 - C. Rear seat assembly.
3. After raise the lower anchor cover (A), loosen the lower anchor mounting bolt (B).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

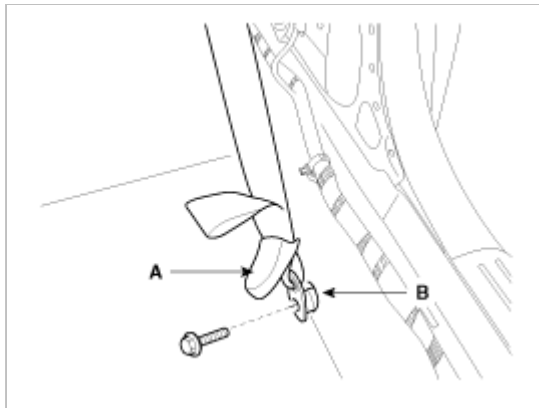


4. Remove the center pillar lower trim.
5. Remove the center pillar upper trim.
6. Remove the upper anchor (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

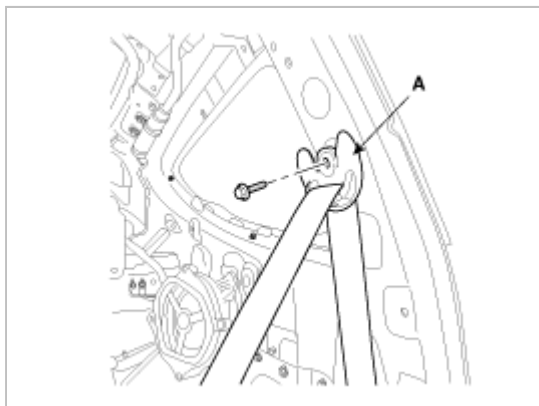

7. After disconnecting the pretensioner connector lock pin, remove the pretensioner connector (A), Loosen the mounting bolt, then remove the pretensioner (C).

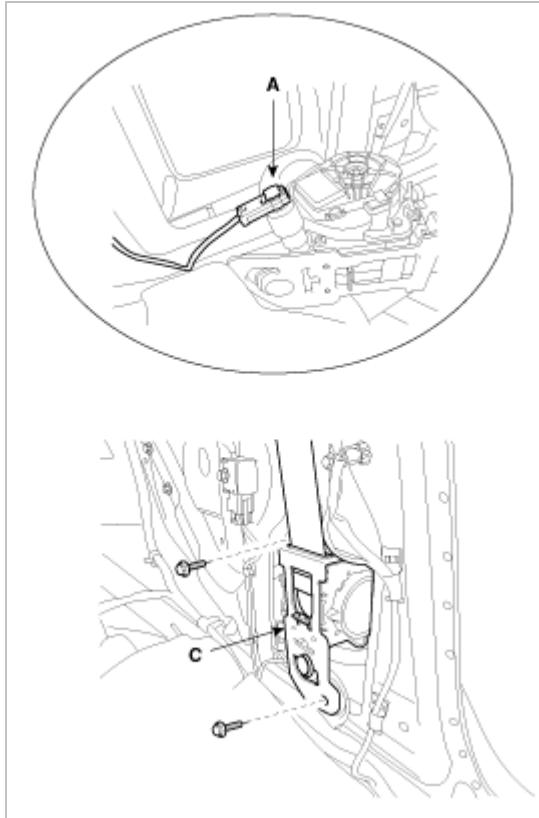


Front Seat Belt Buckle Replacement

1. Remove the following items first.
 - A. Front seat assembly.
2. Remove the wire harness of buckle from seat.
3. Remove the seat belt buckle (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

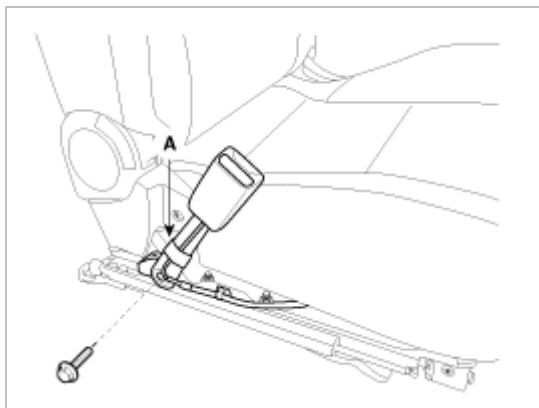

4. Installation is the reverse of removal.


Replacement

Rear Seat Belt Relacement

1. Remove the following items first:
 - A. Front seat assembly.
 - B. Rear seat assembly.
 - C. Door scuff trim.
 - D. Tranverse trim.
2. Remove the lower anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

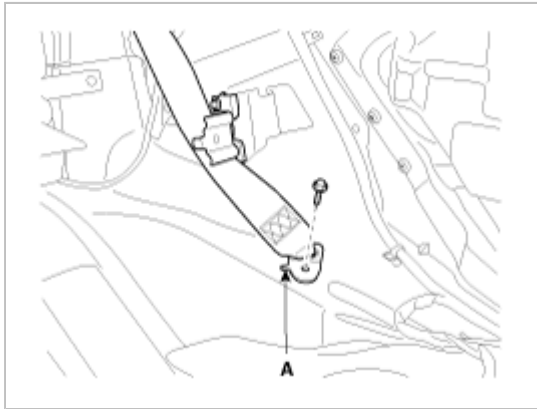

3. Remove the package tray trim.
4. After loosening the retractor (B) mounting bolt, remove the rear seat belt (C).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

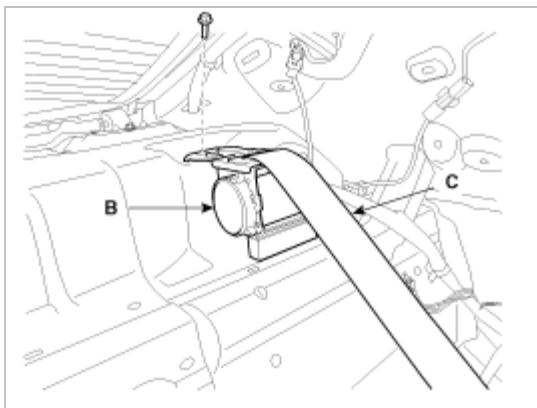


5. Installation is the reverse of removal.

Rear Seat Belt Buckle Replacement

1. Remove the rear seat assembly.
2. Remove the rear seat belt buckle (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

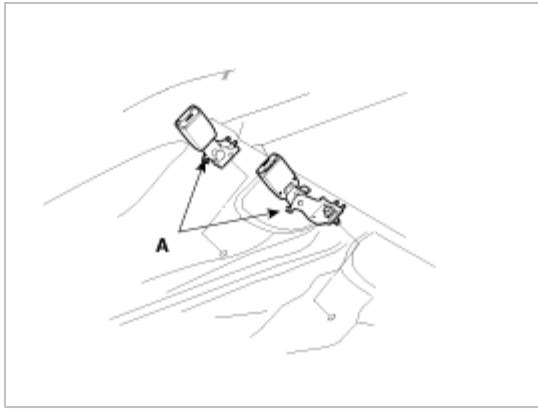

3. Installation is the reverse of removal.