


Component Location

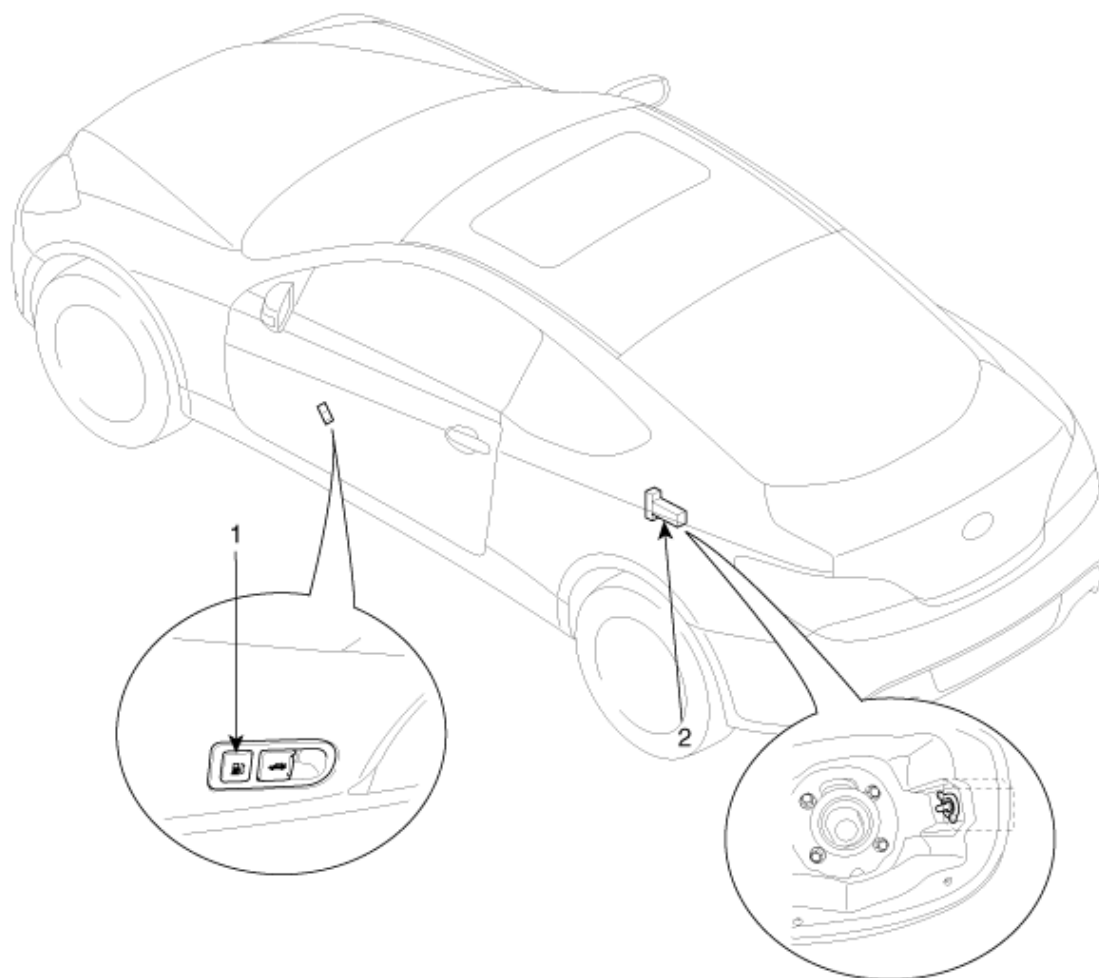


1. Fuel filler door open switch


2. Fuel filler door release actuator

Inspection


1. Remove the fuel filler door housing.
(Refer to BD group - "Interior trim")
2. Loosen the mounting bolts and remove the fuel filler door release actuator(A).

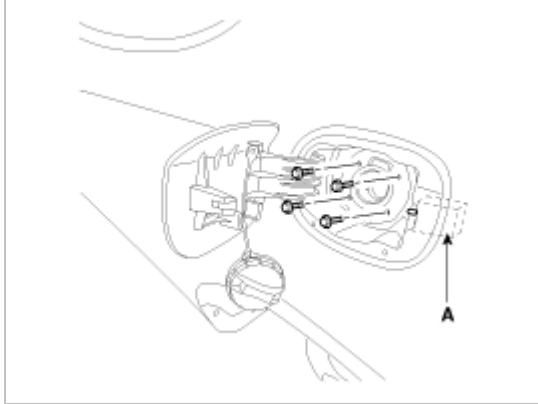

3. Disconnect the fuel filler door connector(A).

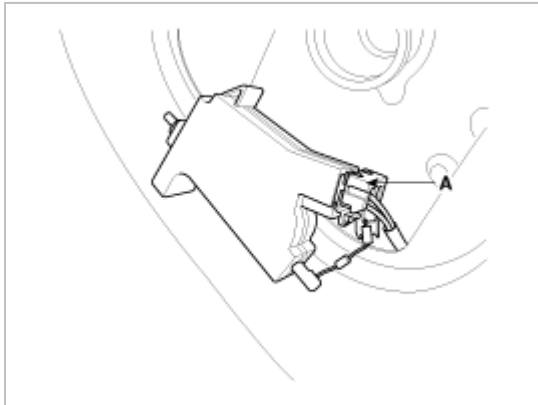

4. Check for continuity between terminal No. 1 and No. 2. If there is no continuity replace the fuel filler door release actuator(A).

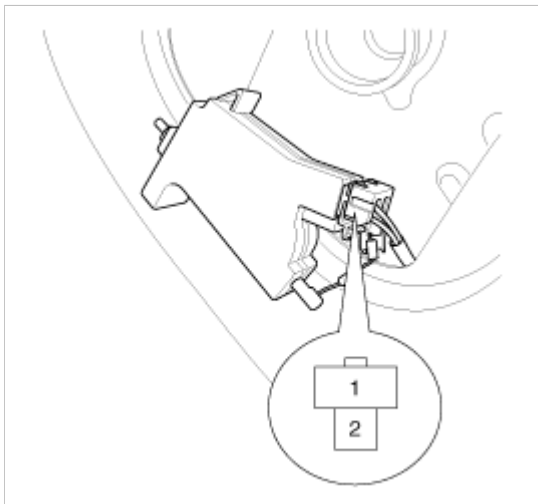

Inspection

1. Remove the front door trim panel.
(Refer to the Body group - "Front door")
2. Disconnect the switch connector.
3. Check the switch for continuity between the No. 1 and No. 2 terminals.
4. If the continuity is not as specified, replace the switch.

