



How to use BLE(Xirgo)

1. Navigate to the MORE section of the app, and select “BLE” at the top of the page.

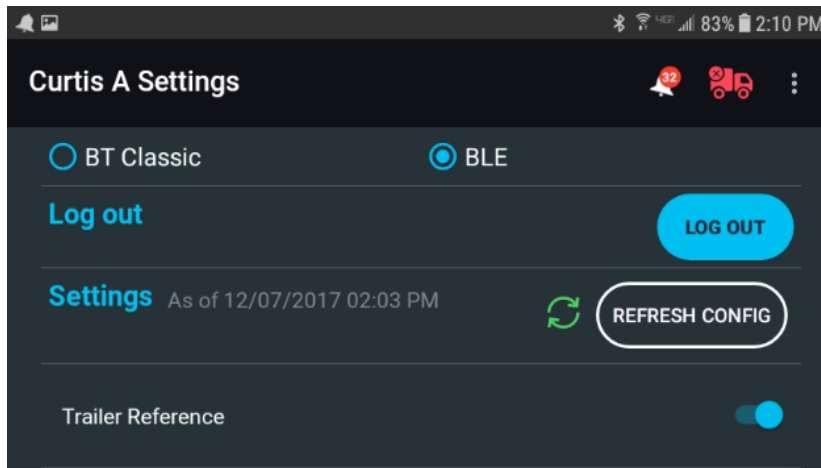

2. Click on truck icon, to initiate search (should see Using BLE at the top right corner).

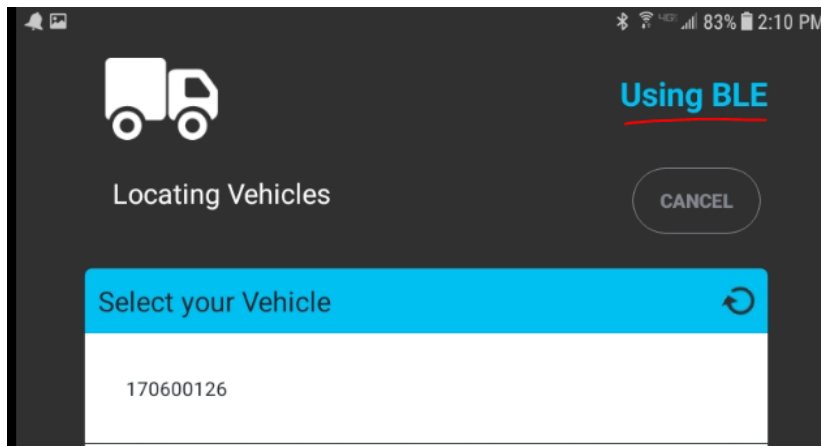

3. Select vehicle to connect and business as usual!

