

Fuses and relays

PASSENGER COMPARTMENT FUSE BOX (1016)

Location

This fuse box is located in the passenger compartment on the driver's side.

Table of fuses




















1016			18	24	30
			17	23	29
			16	22	28
			15	21	27
			14	20	26
			13	19	25
10	11	12	10A	30A	30A
9	8	7	6	5	4
10A	10A	20A	15A	15A	15A
					3
					2
					1

SE2008

Allocation of fuses (according to the equipment level)

N°	Symbol	Amps	Description
F1	MEMO INJECT	30A	Injection engine
F2	Interior lighting	20A	Interior lighting - Short circuit
F3	Key	20A	Engine immobiliser
F4	STOP	15A	Brake lights
F5	Petrol or diesel injection engine	15A	Petrol or diesel injection engine
F6	Reversing lights	15A	Reversing lights - "Lights on" warning buzzer
F7	Front windscreen wiper	20A	Front windscreen wiper

Fuses and relays


F8		10A	Right hand dipped headlight
F9		10A	Left hand dipped headlight
F10		10A	Left hand main beam headlight
F11		10A	Right hand main beam headlight
F12		15A	Horn
F13		20A	Indicators and hazard warning lights
F14		10A	Left side lights - Interior accessories lighting
F15		10A	Right hand side lights
F16		15A	Radio - Cigar lighter - Clock and display
F17		30A	Heating fan assembly
F18		--	Not in use
F19		15A	Rear fog lights
F20		30A	Heated rear screen
F21		15A	Rear screen wiper
F22		15A	Air bag and pretensioners
F23		30A	Electric window winders
F24		10A	ABS
F25	DIAG	10A	Diagnostic socket
F26		30A	Air conditioning fan assembly
F27		20A	Central door locking
F28		20A	Front fog lights
F29		--	Not in use
F30		--	Not in use

Fuses and relays

PASSENGER COMPARTMENT RELAY UNIT

Location

This fuse box is located in the passenger compartment on the driver's side.

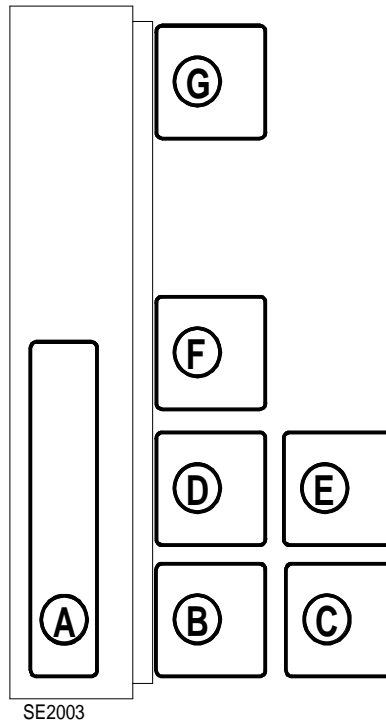


Allocation (according to the equipment level)

Track	Description
A	Decoder unit (503)
B	Front timer unit (113)
C	"Lights on" warning buzzer (117)
D	Central flasher unit (137)
E	Rear screen wiper timer (459)
F	Front fog light relay (231)
G	Central door locking timer (264)

Fuses and relays

ENGINE AND RELAYS FUSE BOX (597)

Engine and relays fuse box (engine side)

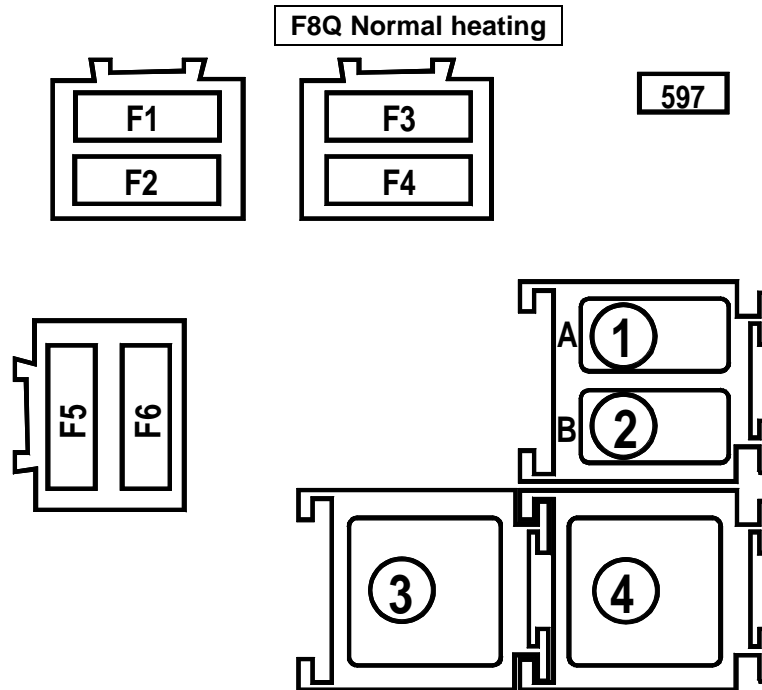

SE2007


Allocation (according to the equipment level)

Track	Amps	Description
1		Altimetric corrector relay (743)
2		Injection locking relay (238)
3		Fan 2 speed relay (336)
4		Diesel fuel heater relay (450)
F1	40A	Anti-lock braking system fuse
F2	40A	Engine fan assembly fuse - Diesel fuel heater
F3	60A	Fuse + passenger compartment battery
F4	60A	Fuse + passenger compartment battery
F5	--	Not in use
F6	70A	Pre-heating fuse

Fuses and relays

ENGINE AND RELAYS FUSE BOX (597)

Engine and relays fuse box (engine side)

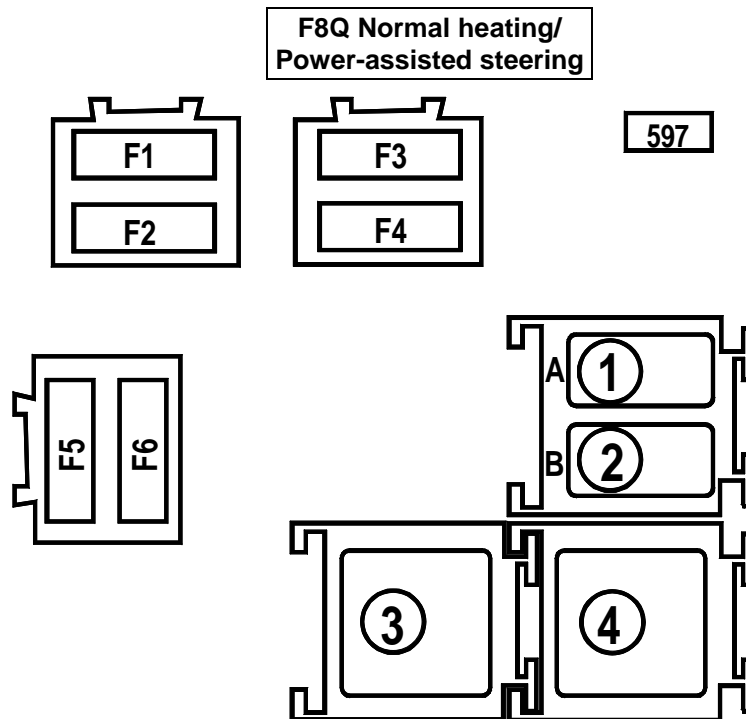

SE2006


Allocation (according to the equipment level)

Track	Amps	Description
1		Altimetric corrector relay (743)
2		Injection locking relay (238)
3		Fan 2 speed relay (336)
4		Diesel fuel heater relay (450)
F1	40A	Anti-lock braking system fuse
F2	40A	Engine fan assembly fuse - Diesel fuel heater
F3	60A	Fuse + passenger compartment battery
F4	60A	Fuse + passenger compartment battery
F5	--	Not in use
F6	70A	Pre-heating fuse

Fuses and relays

ENGINE AND RELAYS FUSE BOX (597)

Engine and relays fuse box (engine side)

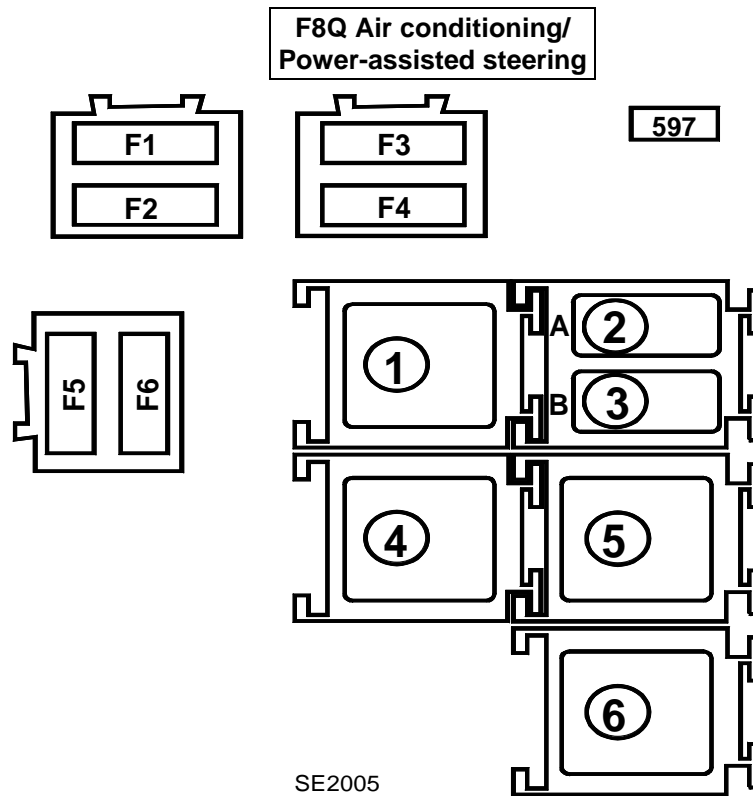

SE2005


Allocation (according to the equipment level)

Track	Amps	Description
1		Twin relay : fan speed 1 (335)- air conditioning compressor control (474)
2		Altimetric corrector relay (743)
3		Injection locking relay (238)
4		Fan speed 2 relay (336)
5		Diesel fuel heater relay (450)
6		Power-assisted steering pump assembly relay (409)
F1	40A	Anti-lock braking system fuse
F2	40A	Engine fan assembly fuse - Diesel fuel heater
F3	60A	Fuse + passenger compartment battery
F4	60A	Fuse + passenger compartment battery
F5	80A	Power-assisted steering pump assembly fuse
F6	70A	Pre-heating fuse

Fuses and relays

ENGINE AND RELAYS FUSE BOX (597)

Engine and relays fuse box (engine side)

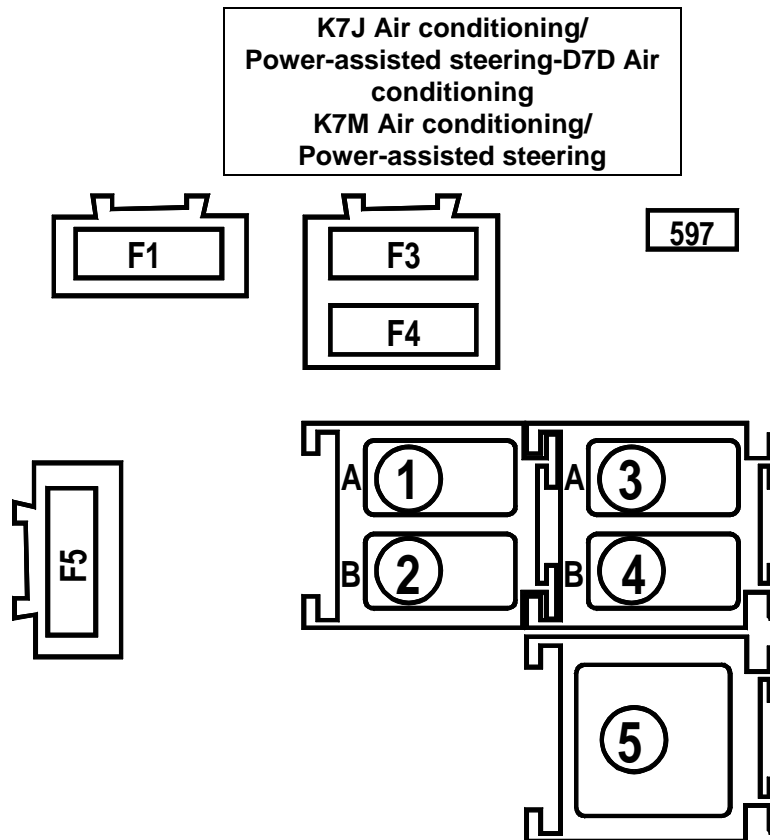

SE2002


Allocation (according to the equipment level)

Track	Amps	Description
1	--	Fan 1 speed relay (335)
2	--	Air conditioning compressor control relay (474)
3	--	Fuel pump relay (236)
4	--	Injection locking relay (238)
5	--	Fan 2 speed relay (336)
F1	40A	Anti-lock braking system fuse
F3	60A	Fuse + passenger compartment battery
F4	60A	Fuse + passenger compartment battery
F5	40A	Engine fan assembly fuse

Fuses and relays

ENGINE AND RELAYS FUSE BOX (597)

Engine and relays fuse box (engine side)

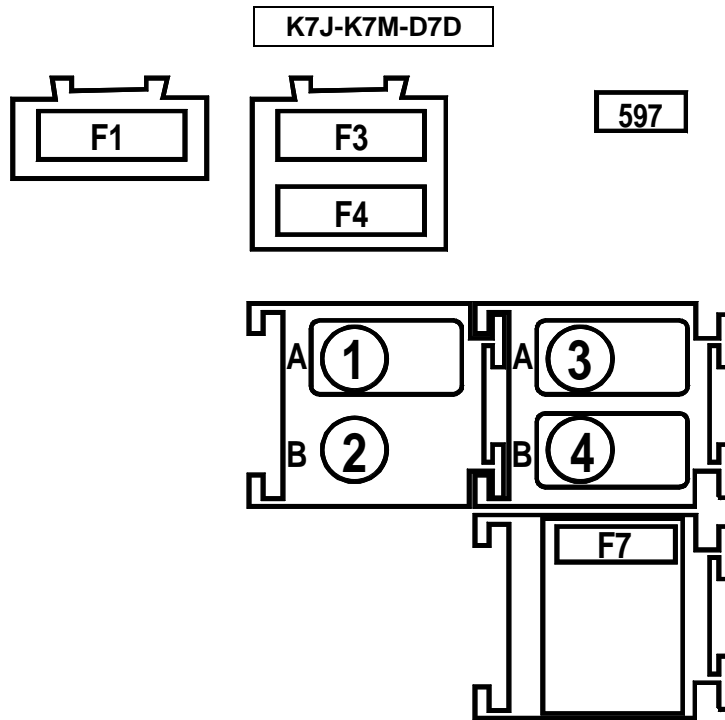

SE2004

Allocation (according to the equipment level)

Track	Amps	Description
1		Fan 1 speed relay (335)
2		Not in use
3		Fuel pump relay (236)
4		Injection locking relay (238)
5		Engine fuse
F1	40A	Anti-lock braking system fuse
F3	60A	Fuse + passenger compartment battery
F4	60A	Fuse + passenger compartment battery
F7	30A	Engine fan assembly fuse