

Driver section


AMB Laboratories / LinuxWorks Labs

delta1 R/2R Relay Attenuator


Copyrighted
Material

Rev 1.0
August 2010


Page 1 of 2

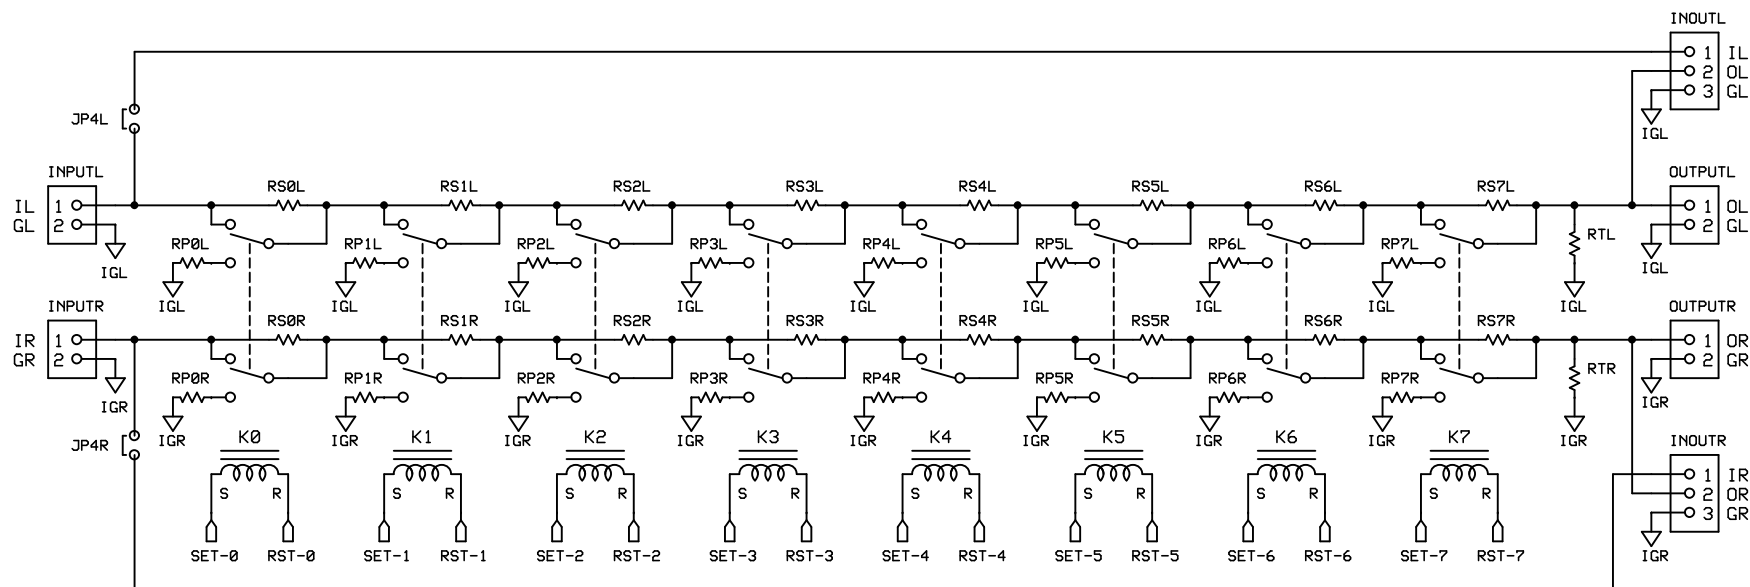

Ground loop breaker (optional)

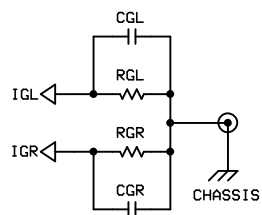

J5
Interconnect
(to Driver section)

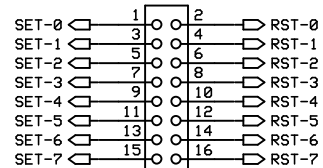

Notes:

- See documentation for parts values and jumper settings.

www.amb.org/audio
www.netstuff.org/audio

Attenuator section

AMB Laboratories / LinuxWorks Labs

delta1 R/2R Relay Attenuator

Copyrighted
Material

Rev 1.0
August 2010

Page 2 of 2