
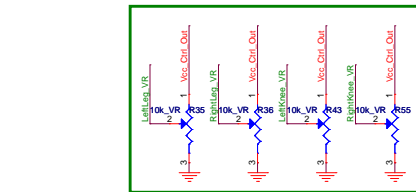
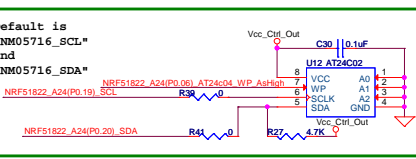
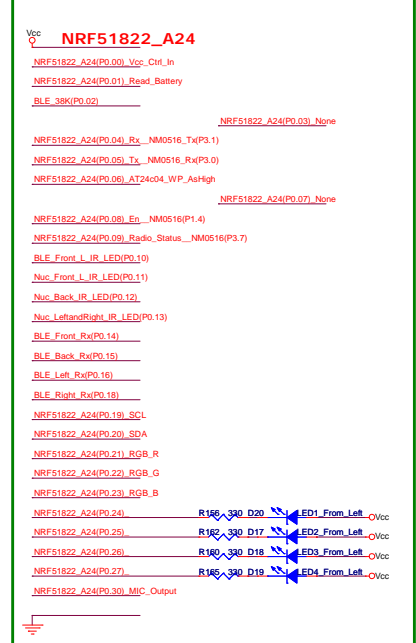


Note:
Put the Snappet on the head of robot. Do not use rechargeable battery. Use 5v output for Snappet. And control the Snappet by its SW IO with simple commands.

Snappet Board

Batteries J3
Snappet SW Input Pin(NRF51822_A24_P0.10)
GND(In J3)

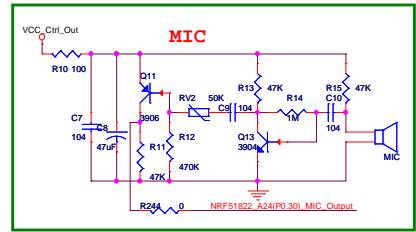

Title	SwitchBot_EVB_V1
Size	Document Number
C	<Doc>
Date	Thursday, May 07, 2015
Sheet	1 of 2
Rev	0.2

