


ARNETWORKAL_Manager_t

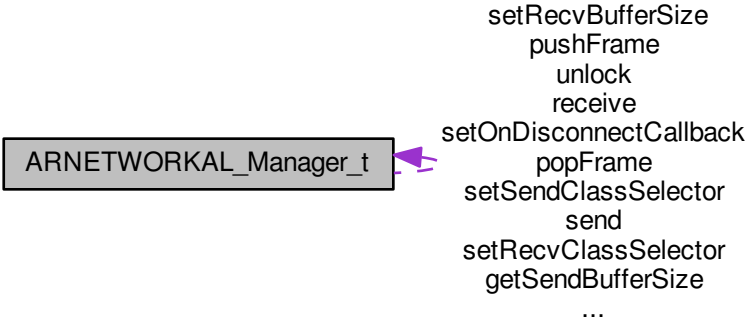

setRecvBufferSize

pushFrame

unlock

receive

setOnDisconnectCallback

popFrame

setSendClassSelector

send

setRecvClassSelector

getSendBufferSize

...