

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

Revision:

Version	Status	Author	Date	Remarks
1.0	Release	Kendrick	20200702	First Edition
1.1	Function Upgrade	Kendrick	20200715	ROIC RW Function
1.2	Function Upgrade	Kendrick	20200805	ROIC Wrapper Function

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

Contents

Chapter 0 Environment Setting

- Connecting to Computer
- Connecting to Device

Chapter 1 UI Overview

- Software UI Overview

Chapter 2 Basic Function

- Image Streaming
- Backlight Control
- Pixel Information
- Save Current Image
- ROIC Performance Function

Chapter 3 Additional Function

- Zoom In/Out
- Image Rotate

Chapter 4 Development Function


- ROIC Control Function

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

Chapter 0 Environment Setting:


● Connecting to Computer:


Use USB Type-C cable connect between FP device and computer at first, verify cable was connected stably that computer can enumerate^{*1} the device.

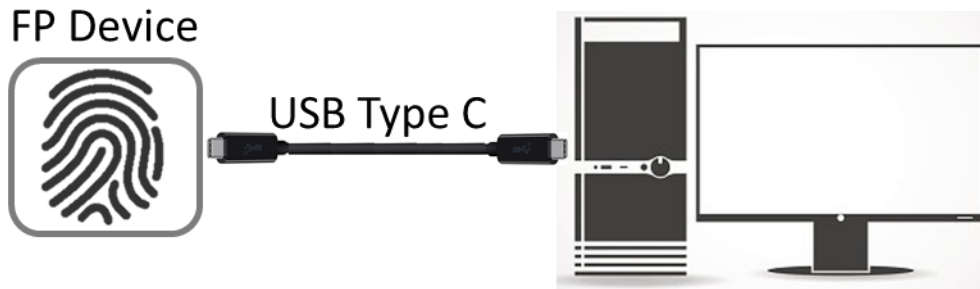

● Connecting to Device :

After Cable connected, open this program and hit the connect button.

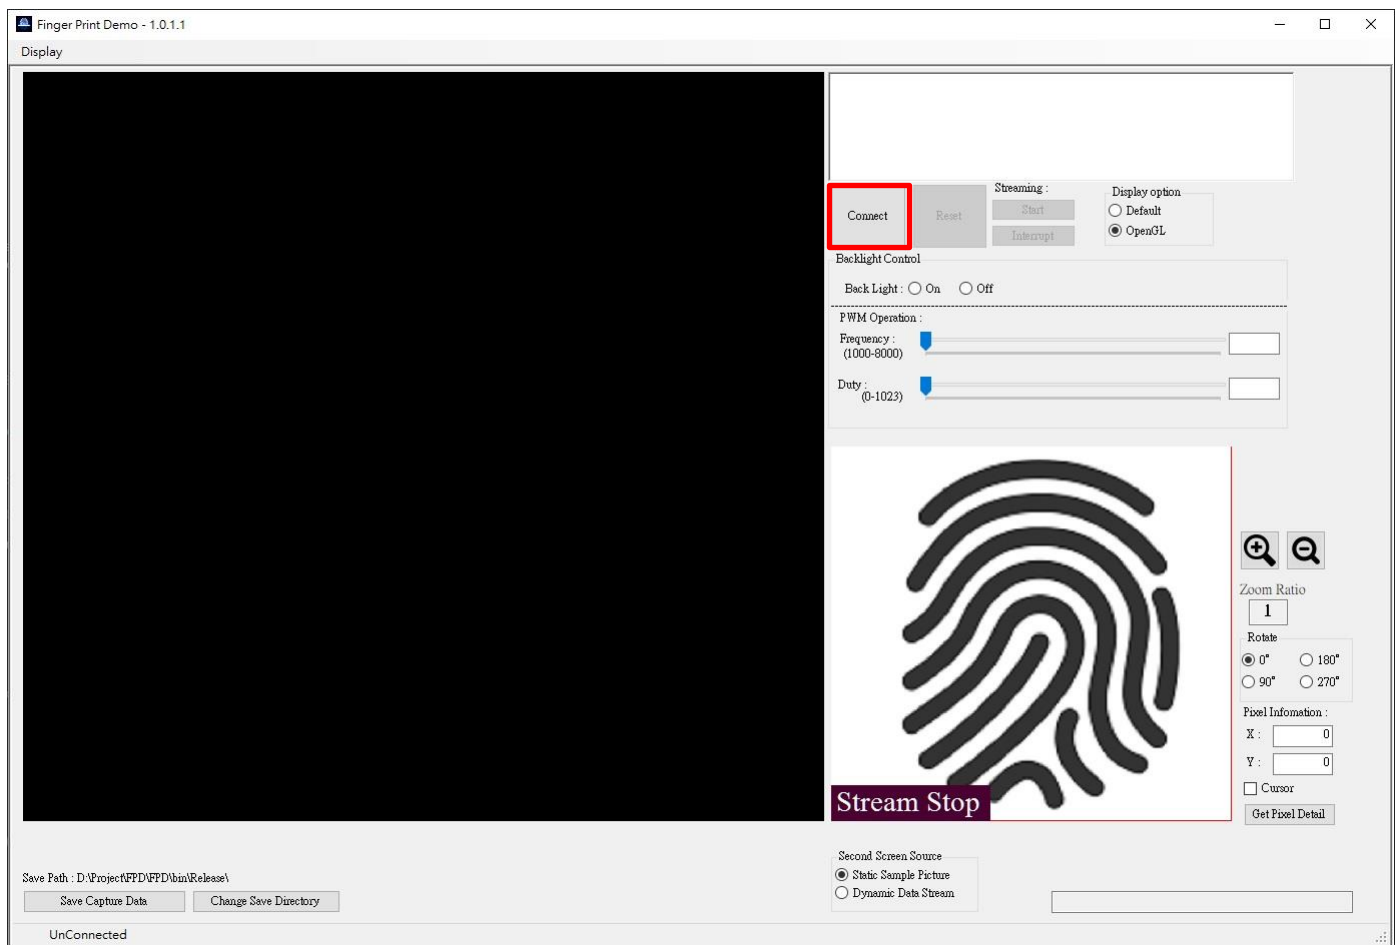


	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

After successful connecting, the log area will display device description like: FW version...etc. , till this step, the device connecting and initializing is done.

FAQ:


1. How to know the device has been enumerated?

A: Open the Device Manager, and check the device.

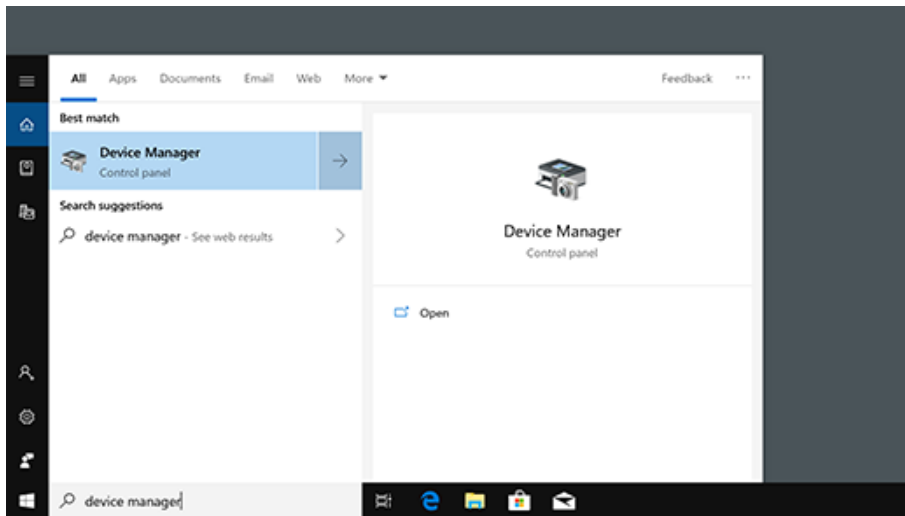

2. How to do when the program connect to device failed?

A:

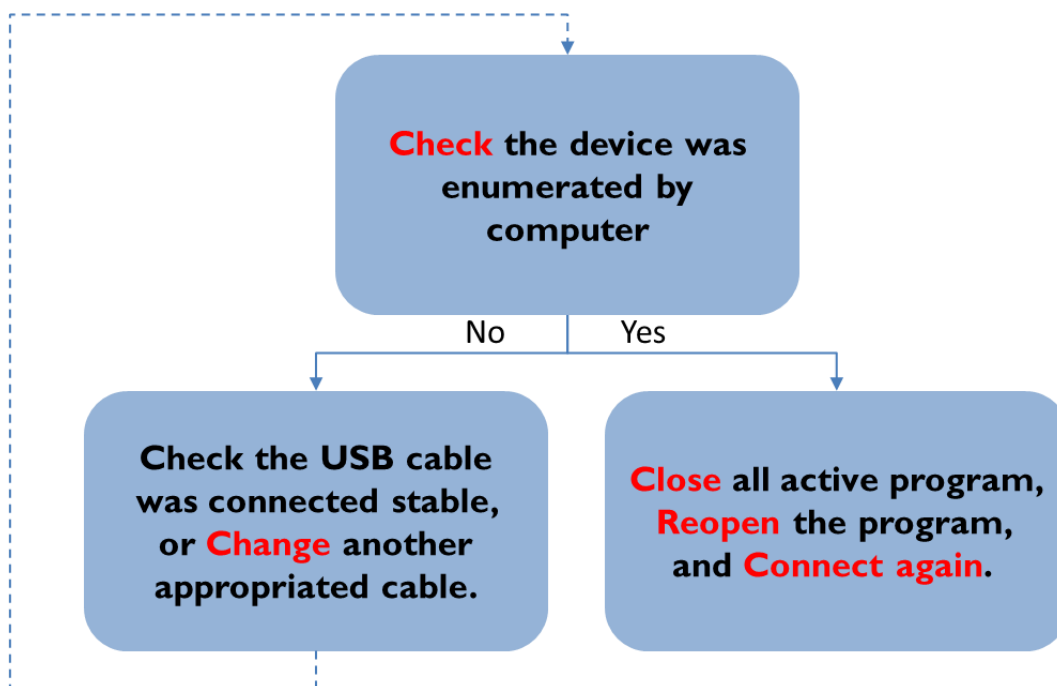


AUO-General

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07


	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

Chapter 1 UI Overview:


● Software UI Overview

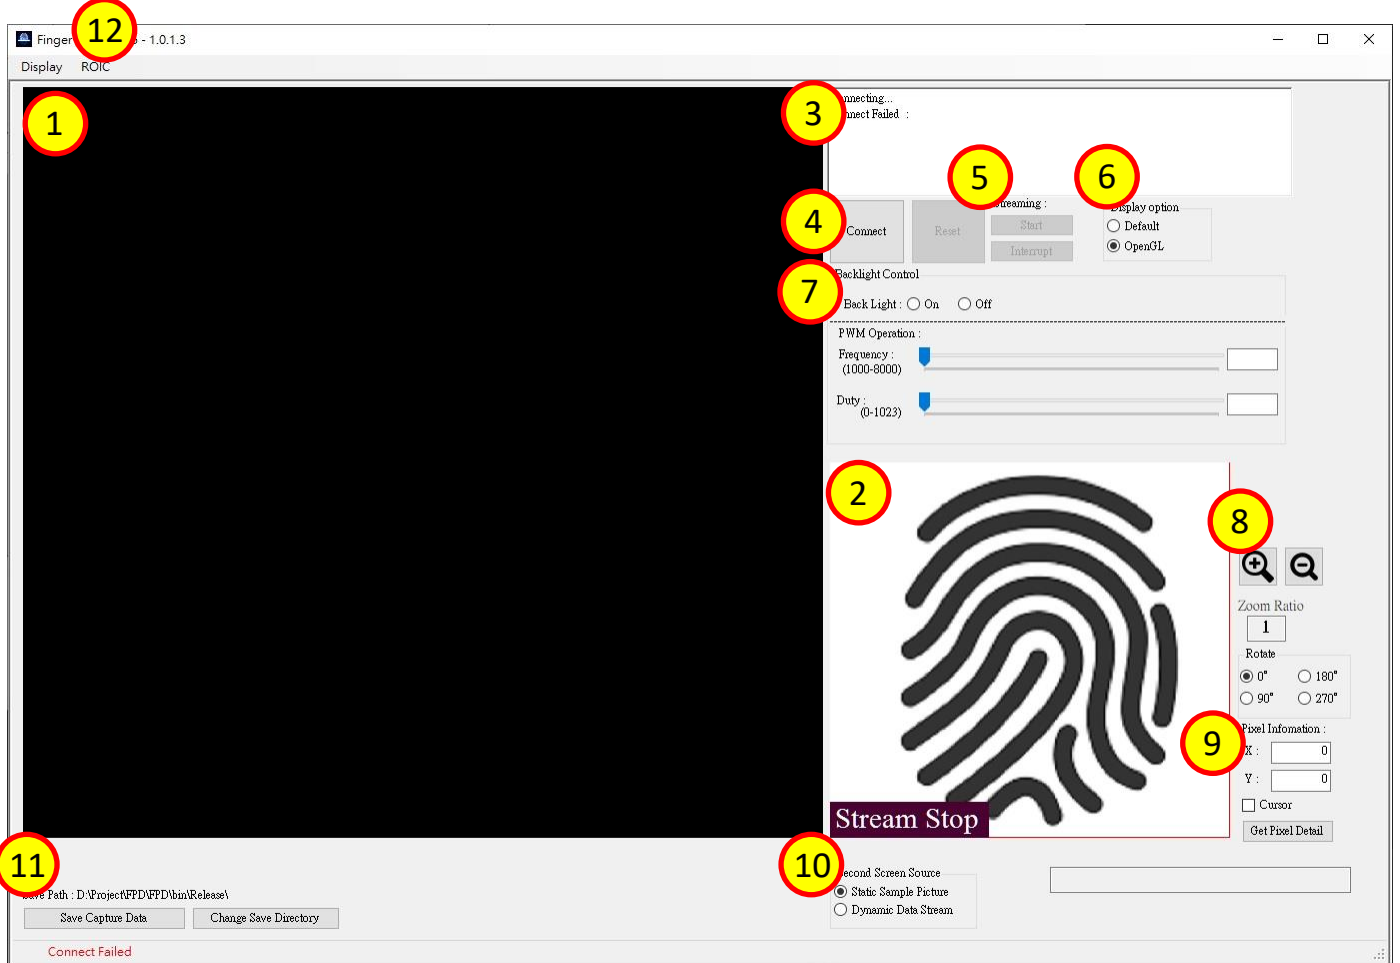

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

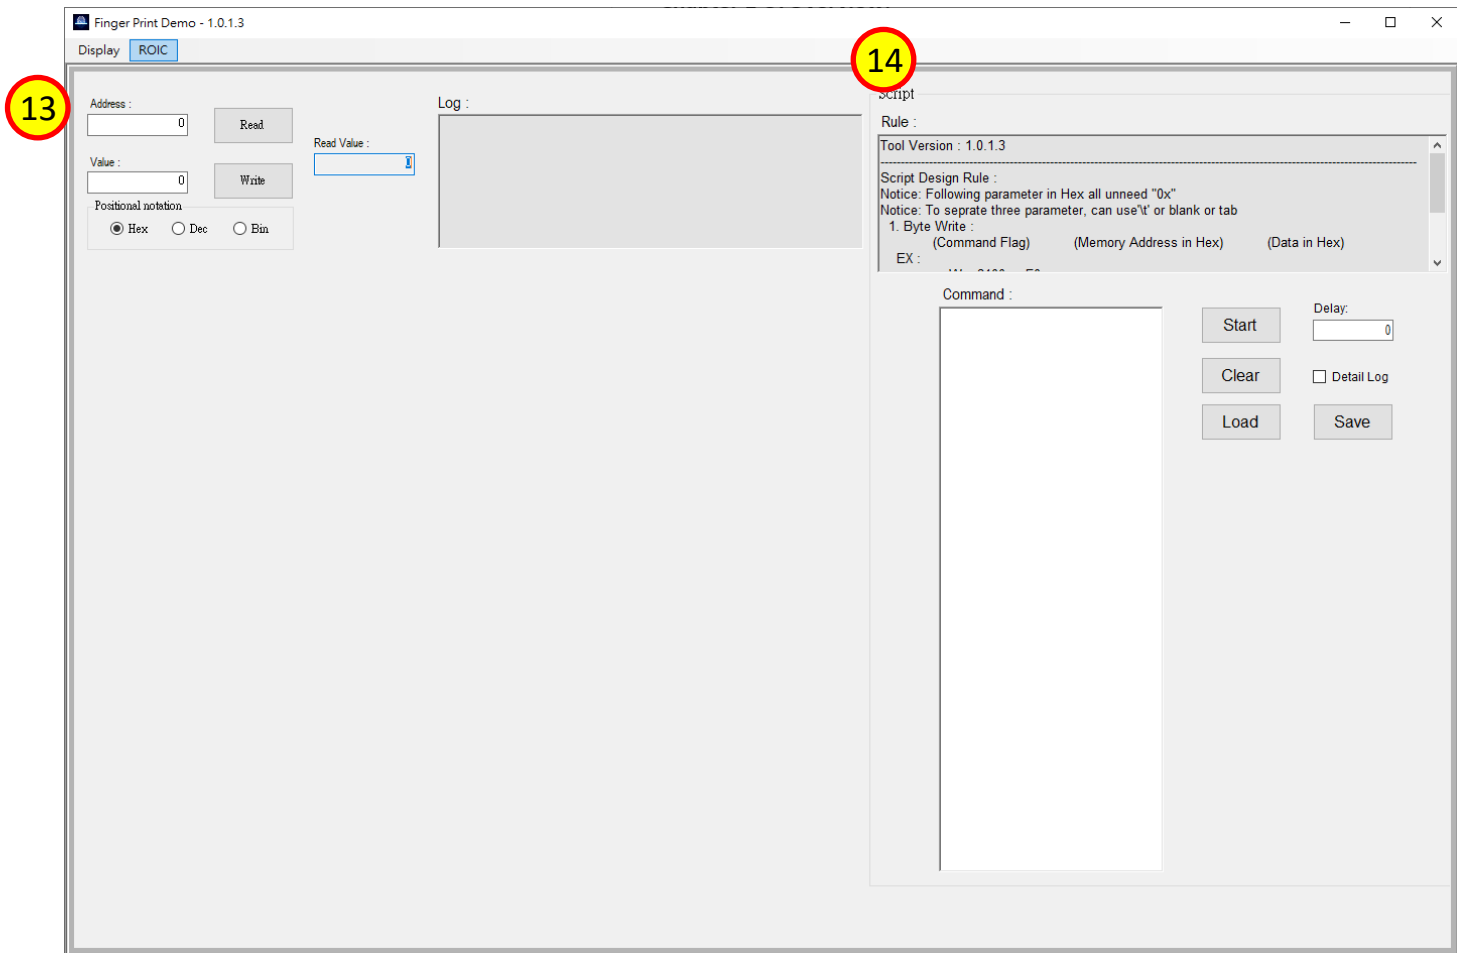

1. **Main Display Area : 800 x 750 (pixel²)**
Display compressed image at this area. *Raw image (1600 x 1500)
2. **Sub Display Area : 400 x 375 (pixel²)**
Choosing and moving zoom in area.
Display compressed image at this area (option).
3. **Log :**
Display device feedback message.
4. **Device Connect & Reset :**
Connect to device or reset the device.
5. **Stream Control :**
Control the stream start or interrupt.
6. **Display Option :**
Offer two way to generating image.
7. **Backlight Control**
Control backlight by PWM duty.
8. **Additional Feature**
Offer zoom In/Out function and image rotate function.

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

9. Pixel Information

Offer user check the pixel detail.

10. Sub Display Source

Change sub display source between static image and streaming.

11. Save Image

Saving the current frame of image.

12. ROIC Control Form


Open the ROIC control form

13. Byte Read/Write Function

Do the specific byte read/write to ROIC

14. Script Read/Write Function

Load/Write the operated script, do several bytes read/write to ROIC

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

Chapter 2 Basic Function

● Image Streaming:

When device was connected, streaming function will be enabled.

Click start will trigger device start the data transfer, and generate the image at main display area, according to the chosen method.

When you want to stop the streaming, press the interrupt.


This program offer two way to generating image:


1. Default is use window default drawing function, mainly use CPU source.
2. OpenGL is calling the GL library, mainly use GPU source.



● Backlight Control:

This program support device's backlight control with simple control and advance control. Simple control offer on/off switch, duty memory (re-open backlight). Advance control offer duty and frequency precisely control.

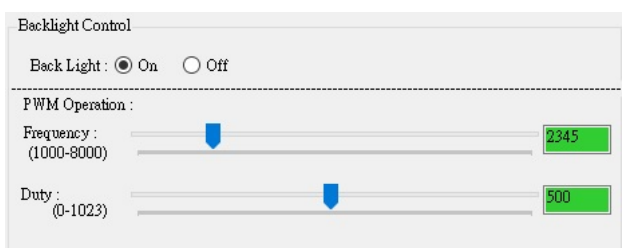

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

● Pixel Information:

This program support user monitor the specific pixel's RGB value by two way.

1. Use mouse click to check this position's pixel RGB
2. Key in specific pixel coordinate, to get pixel RGB.

This program offer an additional feature, draw a cursor on image, help user know where the pixel at.



● Save Current Image:




When click the “Save Capture Data” to Save the current Image to the save path.
Click the “Change Save Directory” to change the save path.

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

● ROIC Performance Function :

This program support ROIC operating Function, with performance tuning.

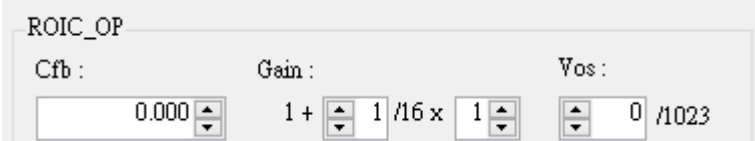

ROIC_OP

Cfb : 0.000

Gain : 1 + 1 /16 x 1

Vos : 0 /1023

This area has three tuning item: Cfb, Gain and ADC V offset;

Cfb : Range is between 0 ~ 3.875 (0.125 per step)

Gain : Is combine with two parameter, Ratio and Times, the actually gain value as UI display

Vos : Range is between 0 ~ 1023 (1 per step)

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07


Chapter 3 Additional Function


● Zoom In/Out:

APP support zoom in/out function, to display non-compress image, support zoom ratio about 1-8, click the zoom in/out button or scroll the wheel on the display area.


When zoom in function active, sub display will marked out the display area of main display.

Can move the display area thru sub display area by mouse dragging.

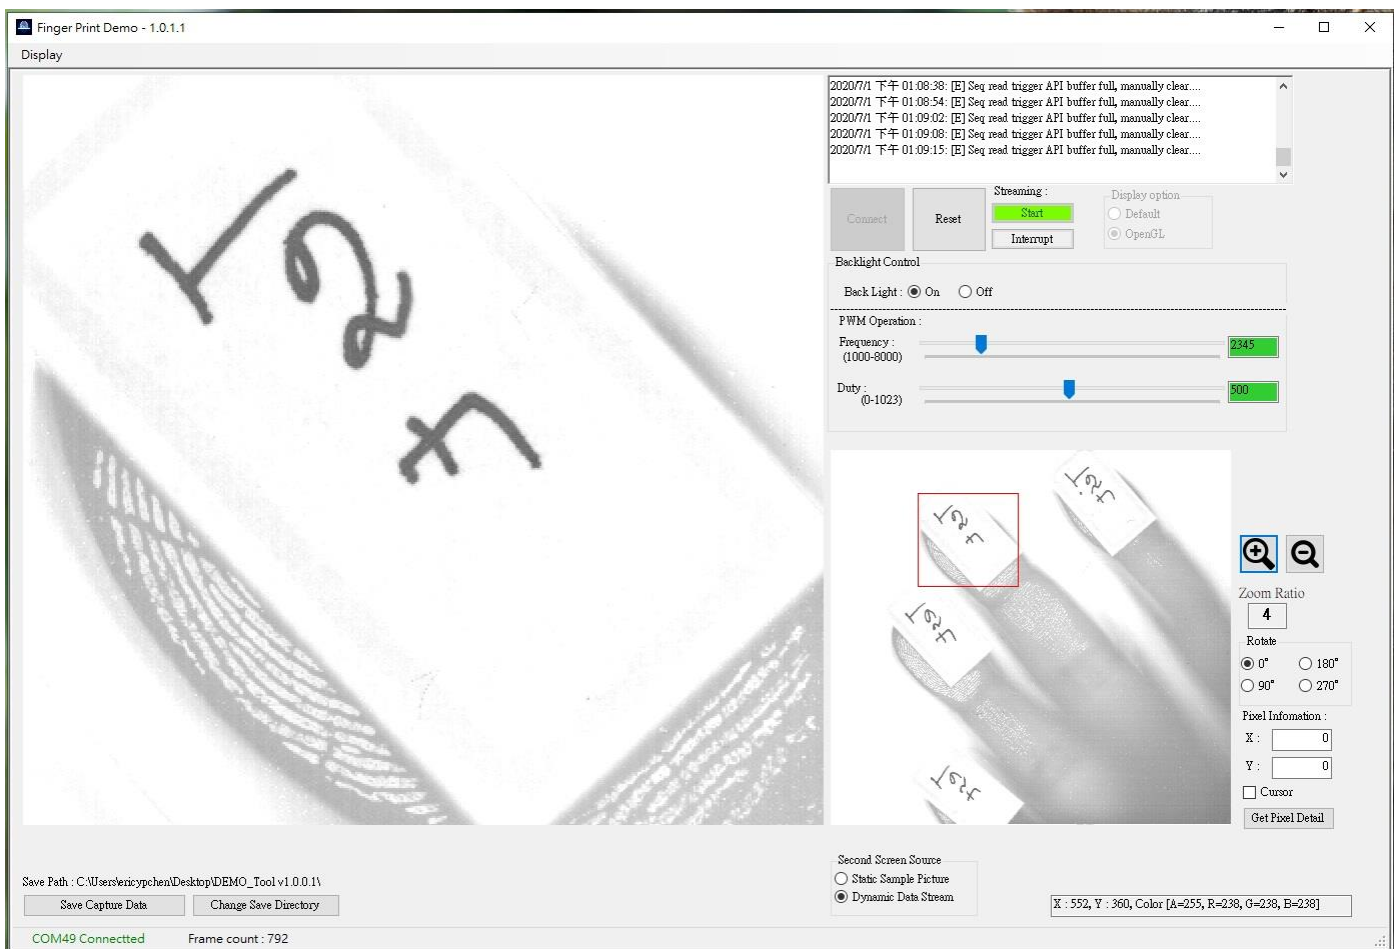

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

- **Image Rotate:**
APP support image rotate with four designed angle.

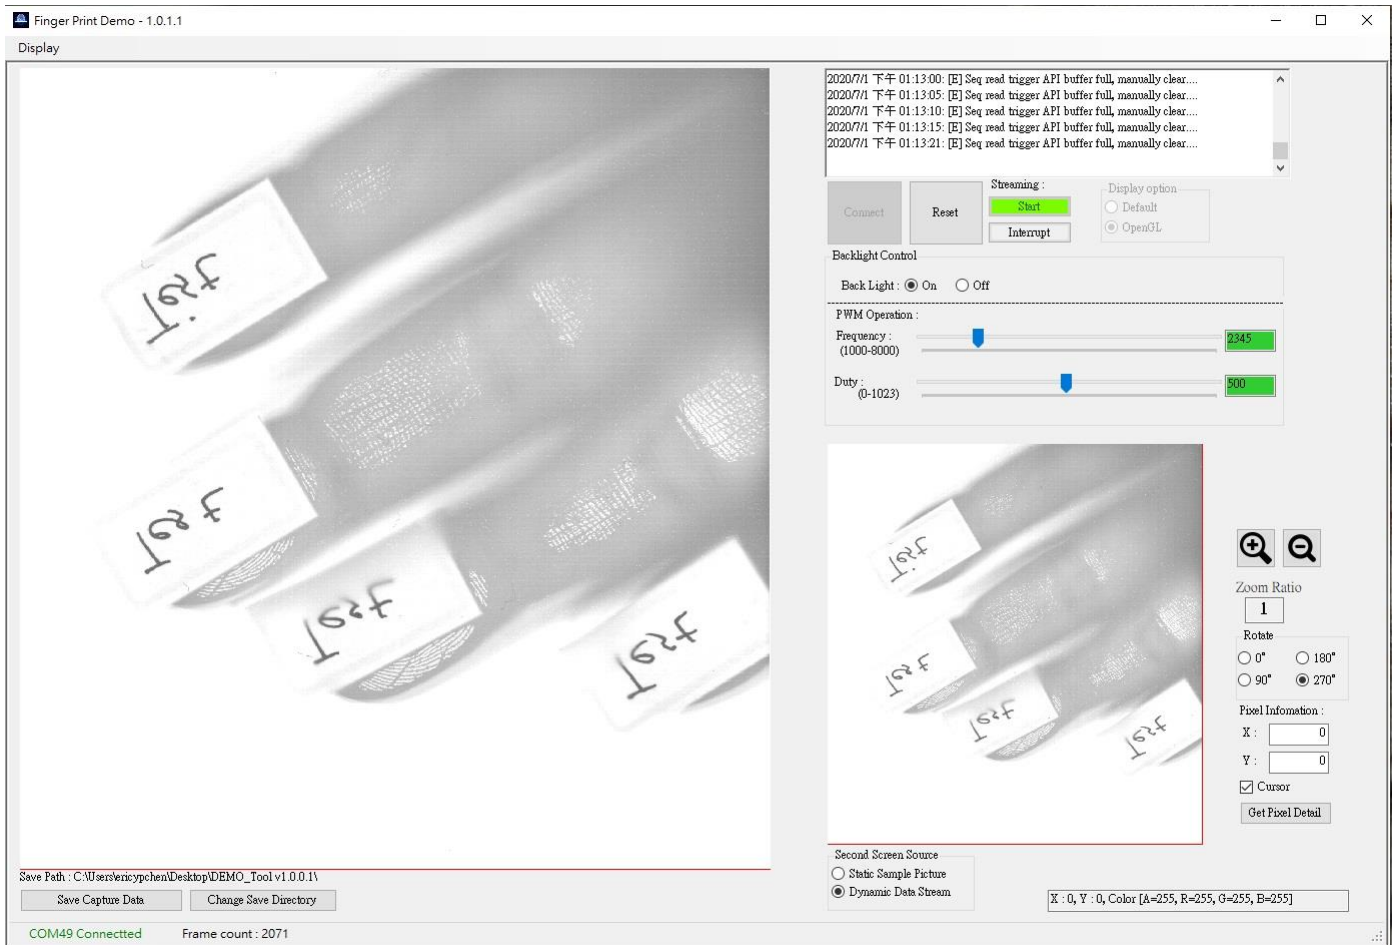


	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07


Chapter 4 Development Function

● ROIC Control Function :

This program support Byte/Script type ROIC Read/Write Function.

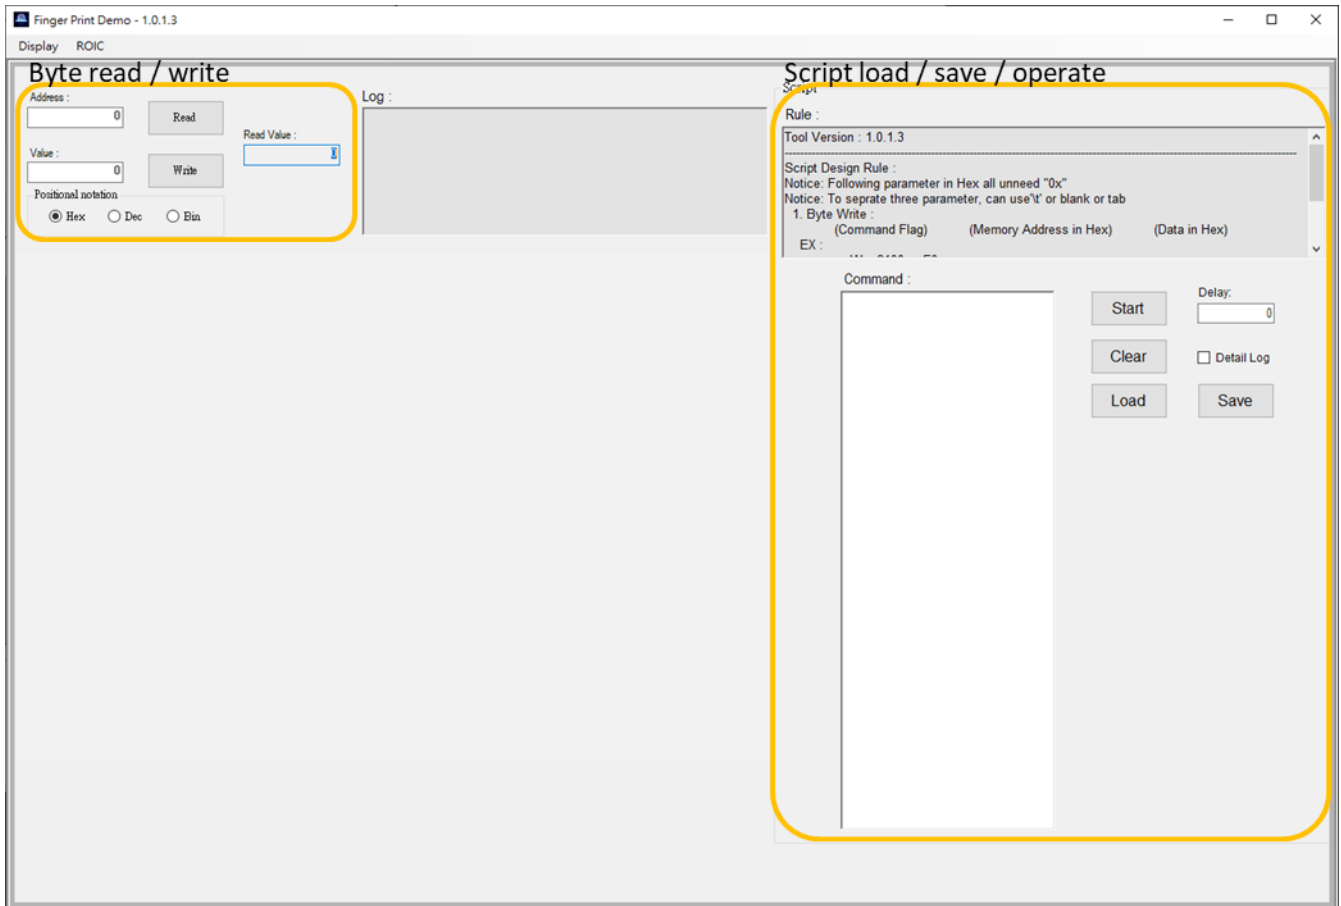


➤ Byte Read/Write Function:

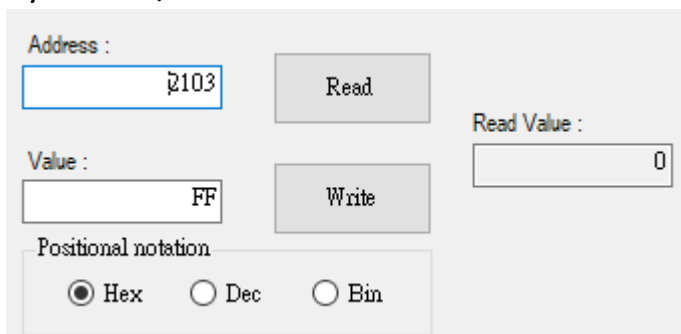

Key in address to read byte, Key in address and value to write byte.

Address and value default use Hex, but this program support Dec and Bin input by change the selection of "Positional notation".

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

➤ Script Read/Write Function:

Script

Rule :

Tool Version : 1.0.1.3

Script Design Rule :

Notice: Following parameter in Hex all unneed "0x"

Notice: To seprate three parameter, can use't' or blank or tab

1. Byte Write :

(Command Flag) (Memory Address in Hex) (Data in Hex)

EX :

Command :

W	2100	05
W	2101	00
W	2102	03
W	2103	E8
W	2104	00
W	2105	0F
W	2106	00
W	2107	00
W	2108	00
W	2109	0F
W	210A	07
W	210B	94
W	210C	00
W	210D	00
W	210E	00
W	210F	00
W	2110	00
W	2111	00
W	2112	00
W	2113	00
W	2114	00
W	2115	00
W	2116	00
W	2117	00
W	2118	00
W	2119	00
W	211A	00
W	211B	00
W	211C	00
W	211D	69
W	211E	01

Start

Delay:


Clear

☐ Detail Log

Load

Save

Script function support "Load or Write" the "Script", and do the byte read/write

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07

following the script.

✧ Script Design Rule:

- ✓ Following parameter in Hex all unneeded "0x"
- ✓ To separate three parameter, can use '\t' or blank or tab

1. Byte Write :

(Command Flag) (Memory Address in Hex) (Data in Hex)

EX :

W 2100 F0

2. Byte Read :

(Command Flag) (Memory Address in Hex)

EX :

R 2100

AUO-General

	ACSBA2 User Guide	Version	1.2
	FP_APP_1.0.1.7	Effective Date	2020/08/07