



WHEELS AND MOTORS

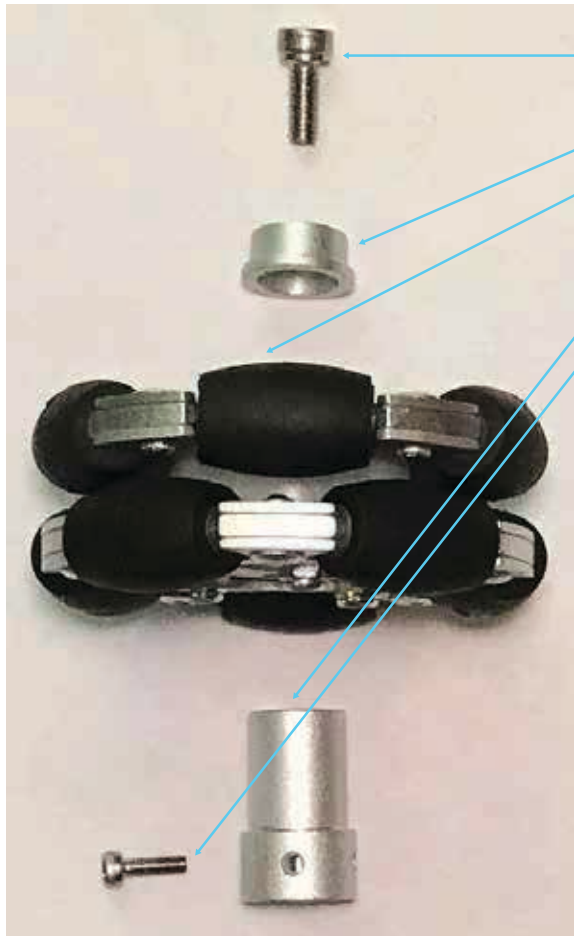

- Hub Screw
- Front Hub
- Omni Wheel
- Back Hub
- Axle Screw
- 6V Motors
- Motor Brackets
(Screws and Nuts inc)

PARTS

x	4
x	4
x	4
x	4
x	4
x	4
x	4

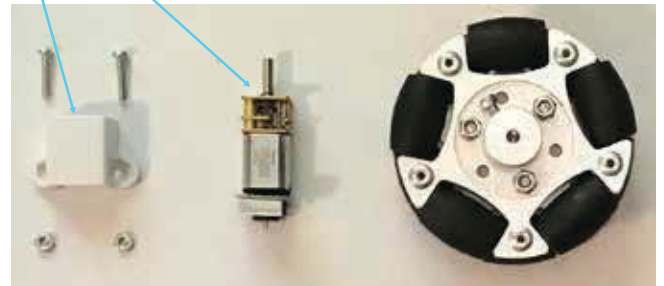

ASSEMBLY

- Screw in the Hub screw through the Front hub, through the Omni Wheel and into the Back Hub. -
- Tighten
- Insert Motor axle into Back Hub and tighten Axle Screw
- Place Motor Bracket on Motor Oriented like this
- Repeat for all wheels

