

| | | | |
|--------------------------|---|--------------------------------------|--------|
| ASUSTeK COMPUTER INC. | ENGTX 470 Standard Operation Procedure | Doc. No: | |
| | | Date: Aug. 17. 2010 Revision:1.01 | |
| | | Page: 10 | Grade: |

| 0Rev . | Modified Chapters | Modification Description | Issued Dept. | Issued by | Revised Date |
|-----------|----------------------|--------------------------|-----------------|------------|--------------|
| 1.00 | | First release | GTC | Ariel_wang | Jun.21.2010 |
| 1.01 | | Add new PCBA(C1CPD0-A13) | GRMA | Chongling | Aug.17.2010 |

| | | | | | |
|-----------------|--|--------------|--|------------------|-----------|
| Authorize by | | Review by | | Originator By | Chongling |
|-----------------|--|--------------|--|------------------|-----------|

| | | |
|----------------------|---|--|
| ASUSTeK COMPUTER INC | ENGTX 470 Standard Operation Procedure | Doc. No: |
| | | Date: Aug. 17. 2010 Rev. : 1.01 Page: 1 |

1.Objectives

Create test procedure.

2.Scope

Model: ENGTX 470

PN: C1CPD0(A01&A11)

3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark06(contain HDMI test)

3.3 Temperature test

3.4 Suspend Test

4.Relevant Document

None.

5.Definition : 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

3. Please use Nvidia platform (P5Q) to test in DOS.

| | | |
|----------------------|---|--|
| ASUSTeK COMPUTER INC | ENGTX 470 Standard Operation Procedure | Doc. No: |
| | | Date: Aug. 17. 2010 Rev. : 1.01 Page: 2 |

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 667/800 2GB Memory to DIMM1~4.

6.2.3 Plug PS2 Mouse and PS/2 Keyboard into P5Q Motherboard.

6.2.4 Plug VGA Card EN GTX 470 into PCIEX16.

6.2.5 This card has 6 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.

(6 PIN of Power supply to 6 PIN of VGA card)




6.2.6 Connect SATA HDD & SATA con via SATA cable



6.2.7 Plug 4PIN 12V (1200W) power cable into CON12V.

6.2.8 Plug ATX Power (1200W) on Power Connector.

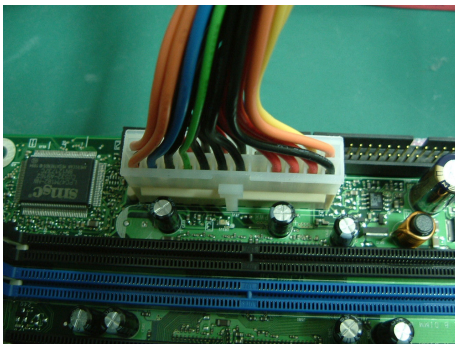

6.3 Diagnostic test in DOS

6.3.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



6.3.2 Press Power Switch then turn on power button.

6.3.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.



6.3.4 System will reboot, select DOS to run test program.

Path: VBAT\ENGTX470\BATCH\

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run mats.exe.

Path: VBAT\ENGTX470\470\

6.3.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\ENGTX470\BIOS

Command: **nvflash xxx.rom -4 -5 -6 -A -y**

Notice:


If you can not flash bios because of the bios locked, please use **nvflash.exe /r** to unlock bios. And then, please use **nvflash.exe /w** to lock bios after updating latest bios.

6.3.7 After finish DOS testing, please enter Windows environment to test 3DMark.

6.4 3DMark test(contain HDMI test)

6.4.1 Please install 3DMark program by yourself.

6.4.2 Please connect VGA card to LCD via HDMI cable.

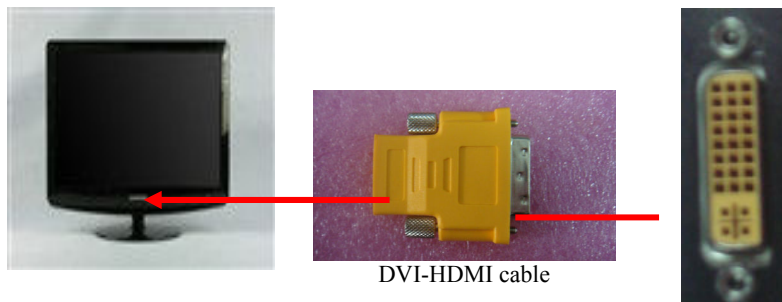


HDMI CON


6.4.3 Please install VGA card driver in Windows (You must use individual driver of this card).

6.4.4 Please run 3DMark06 base on this card (please test 1 cycle).

6.4.5 Press “Select” to enter Select test menu. You can choose “HDR1” for default setting.

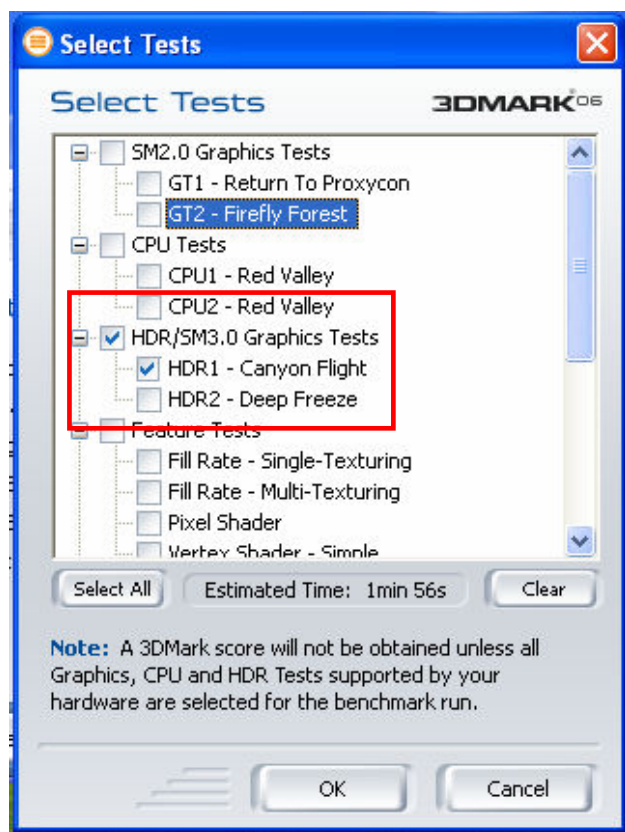

6.4.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting.

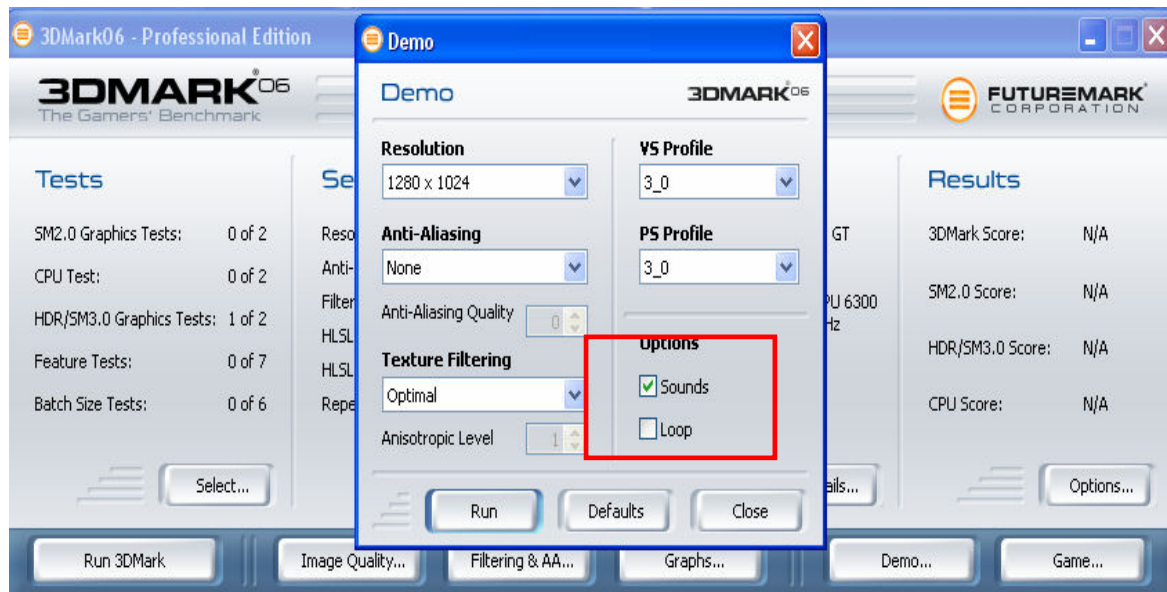

6.4.7 Please pay attention to check if there is flickering, discolor, crash and so on.

If there's no problem, it can be judged OK!

6.4.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.




6. 4.9 If test OK, please test **MINI HDMI port**.
6. 4.10 Connect VGA card to LCD via Display cable test HDMI function.
 (Please refer to step 6.4.4&6.4.5&6.4.6&6.4.7&6.4.8)




MINI HDMIN CON

6.5 Temperature test


- 6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.5.2 Please run ThermalTest.exe.

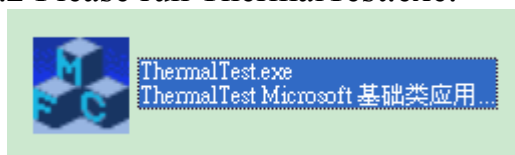

- 6.5.3 If test ok, show pass.

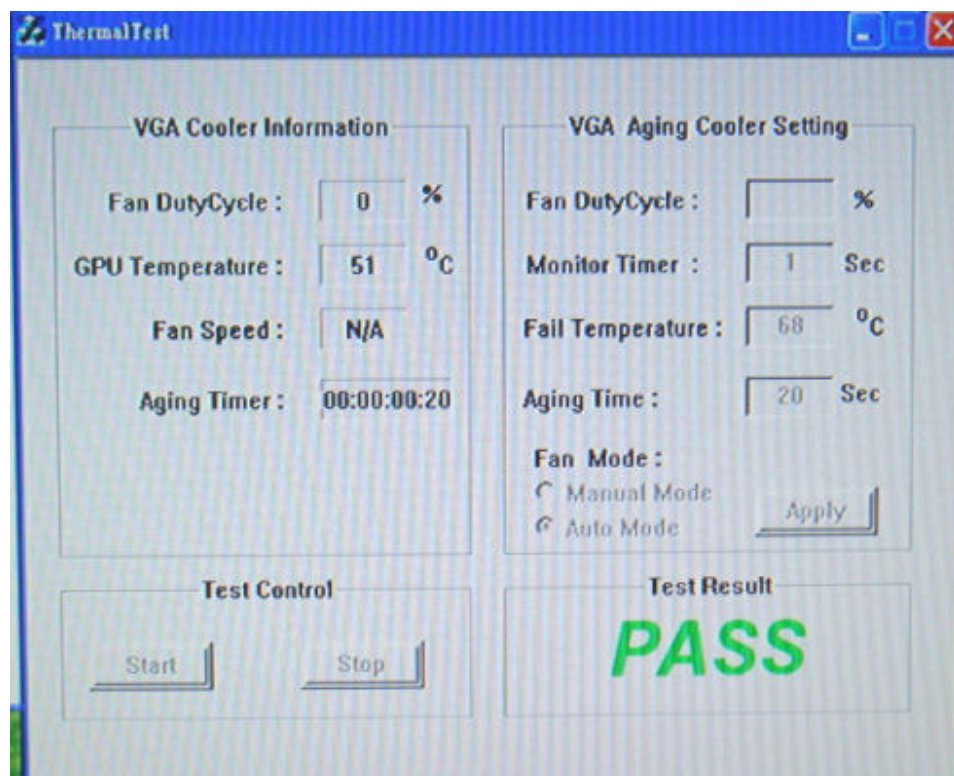

6.5.4 If test fail, show fail.

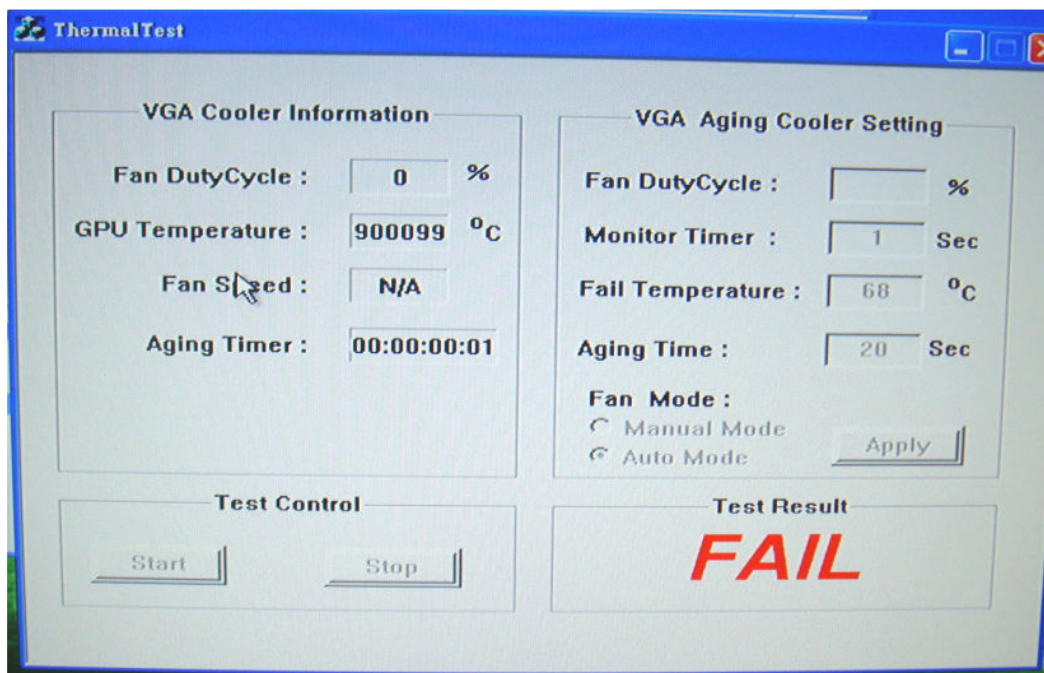

6.5.5 If test OK, NTF test.

| | | |
|----------------------|---|--|
| ASUSTeK COMPUTER INC | ENGTX 470 Standard Operation Procedure | Doc. No: |
| | | Date: Aug. 17. 2010 Rev. : 1.01 Page: 9 |

7 Appendix

| NO# | Equipment Description | ASUS Part# | Supplier | Quantity | Remarks |
|-----|--|-------------------------------|----------|----------|---|
| 1 | SAMSUNG 2232MW | | | 1 |  |
| 2 | USB MOUSE | | | 1 | |
| 3 | PS/2 KEYBOARD | | | 1 |  |
| 4 | ATX POWER SUPPLY(1200W) | | | 1 |  |
| 5 | INTEL Celeron E1200 | | | 1 |  |
| 6 | Heat sink + FAN | 22-240000160 | | 1 |  |
| 7 | APACER 800MHz 1G | | | 2 |  |
| 8 | TEST HDD | | | 1 |  |
| 9 | SATA HDD Cable | 14-000107070 | ASUS | 1 |  |
| 10 | PCIEX16 VGA CARD | | | 1 | |
| 11 | D-SUB extend cable (Buying a local D-SUB cable by yourself) | | | 1 |  |
| 12 | Dual link DVI cable (Buying a local DVI cable by yourself) | | | 1 |  |
| 13 | HDMI extend cable (Buying a local HDMI cable by yourself) | | | 1 |  |
| 14 | TV extend cable (Buying a local TV cable by yourself) | | | 1 |  |
| 15 | DVI-HDMI | 04G460002400 /04G460002450 | | 1 |  |
| 16 | HDMI to MINI HDMI cable (Buying a local cable by yourself) | | | 1 |  |
| 17 | LCD "Y" Cable | 14-010230000 | | 1 |  |
| 18 | P5Q | 80-MIB4P0-G0A01 | | 1 | |