

ASUSTeK COMPUTER INC.	ENG310 Standard Operation Procedure	Doc. No:	
		Date: Feb.14, 2011 Revision:1.04	
		Page: 12	Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		Frist release	GRMA	Chongling	Oct.29.2010
1.01		ADD new PCBA(C1CPM0-A01)	GRMA	Chongling	Oct.29.2010
1.02		ADD new PCBA(C1CNT5-A12)	GRMA	Ariel_wang	Jan.17.2011
1.03		ADD new P/N(C1CPMA-A01)	GRMA	Ariel_wang	Feb.10.2011
1.04		ADD new PCBA(C1CNT5-A22)	GRMA	Ariel_wang	Feb.14.2011

Authorize by		Review by		Originator By	chongling
-----------------	--	--------------	--	------------------	-----------

ASUSTeK COMPUTER INC	ENG310 Standard Operation Procedure	Doc. No:
		Date: Feb.14, 2011 Rev. : 1.04 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: ENG310

PN: C1CPM0(A01)C1CNT5(A01&A12&A22) C1CPMA(A01)

3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark06(**contain HDMI test**)

3.3 Temperature test

4.Relevant Document


None.

5.Definition : 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

3. Please plug the card into P5Q MB(R1.03G) to do function test.
(P5Q MB BIOS Ver: 2102)

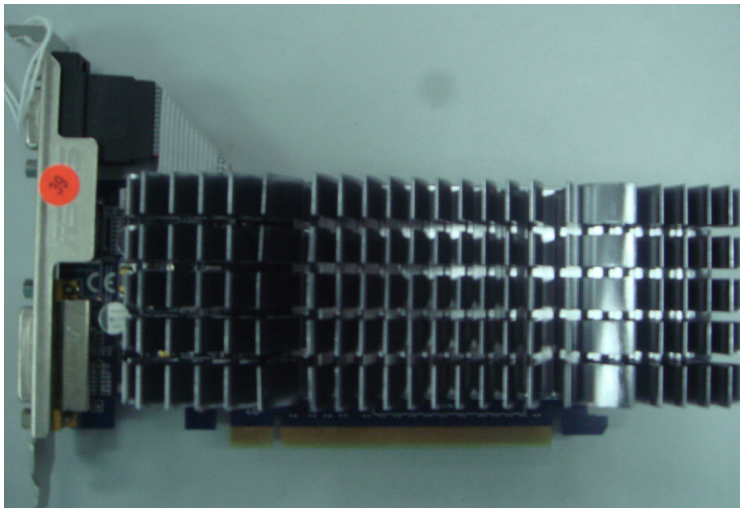

(C1CPM0-A01)

ASUSTeK COMPUTER INC	ENG310 Standard Operation Procedure	Doc. No:
		Date: Feb.14, 2011
		Rev. : 1.04 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 **667/800M** 1GB Memory to DIMM1~2.

6.2.3 Plug PS/2 Mouse and Keyboard into PS/2 port.


6.2.4 Plug VGA Card ENG310 into PCIEX16.

6.2.5 Connect SATA HDD with SATA CON.



6.2.6 Plug 4PIN 12V power cable into CON12V.


6.2.7 Plug ATX Power on Power Connector.

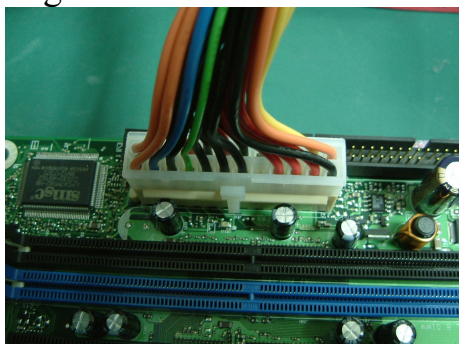

6.3 Certain test.

6.3.1 Diagnostic test in DOS

6.3.1.1 Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

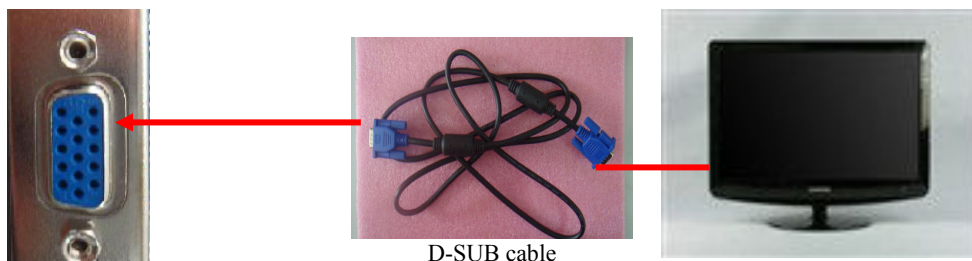

Please connect LCD monitor & card's DVI CON via a DVI cable.



6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.



ASUSTeK COMPUTER INC	ENG310 Standard Operation Procedure	Doc. No:
		Date: Feb.14, 2011
		Rev. : 1.04 Page: 5

6.3.1.4 System will reboot, select DOS to run test program.

Path:VBAT\ENG310\BATCH\

Run the test program refer to the prompt.

6.3.1.5 Memory test

If you want to test memory,please run Mats.exe.

Path:VBAT\ENG310\

6.3.1.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:VBAT\ENG310\BIOS

Command: [Nvflash -4 -5 -6 -A XXX.rom](#)

Notice:


If you can not flash bios because of the bios locked, please use [nvflash.exe /r](#) to unlock bios. And then, please use [nvflash.exe /w](#) to lock bios after updating latest bios.

6.3.1.7 After finish DOS testing, please enter Windows environment to test 3DMark.

6.3.2 3DMark test(contain HDMI test)

6.3.2.1 Please install 3DMark program by yourself.


6.3.2.2 Please connect LCD monitor & card's HDMI CON via a HDMI cable.

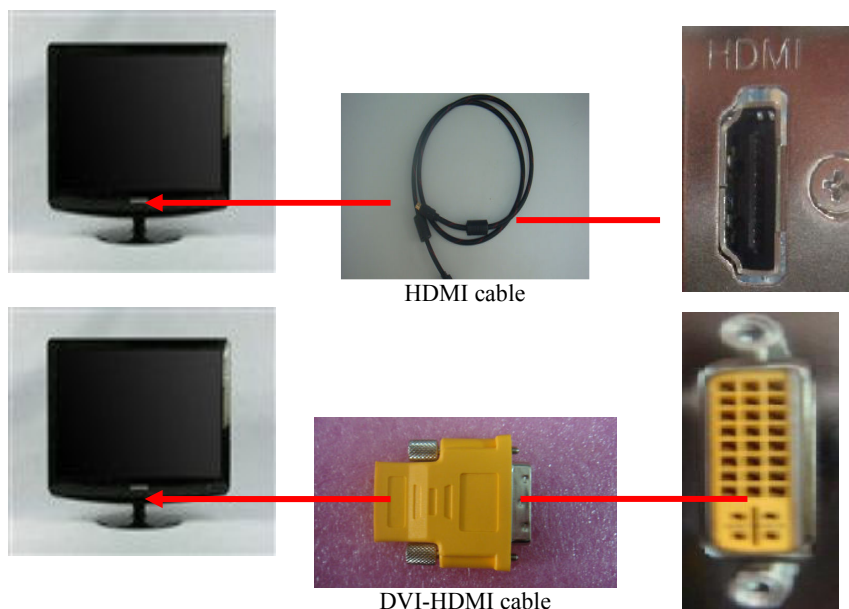


6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).

6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).

6.3.2.5 Press “Select” to enter Select test menu. You can choose “HDR1” for default setting.

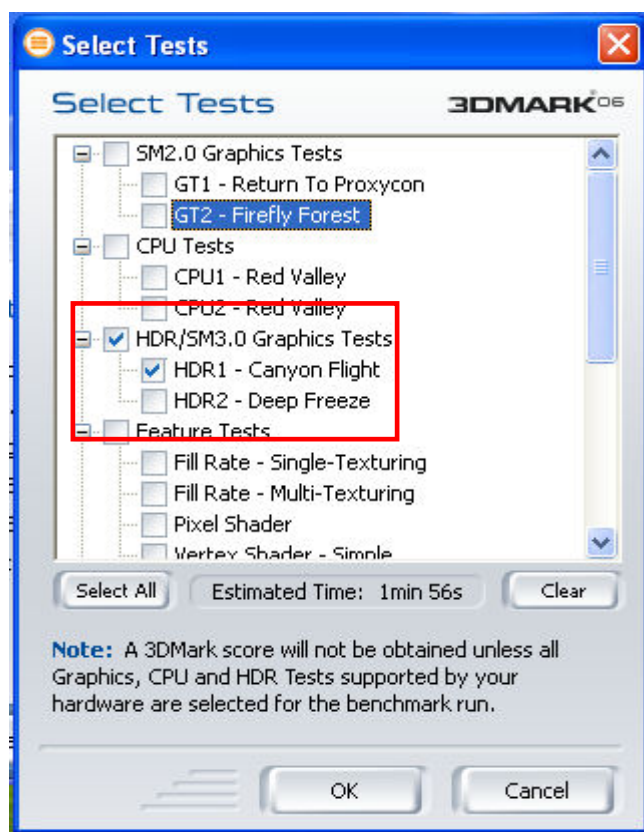

6.3.2.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting(for HDMI function).

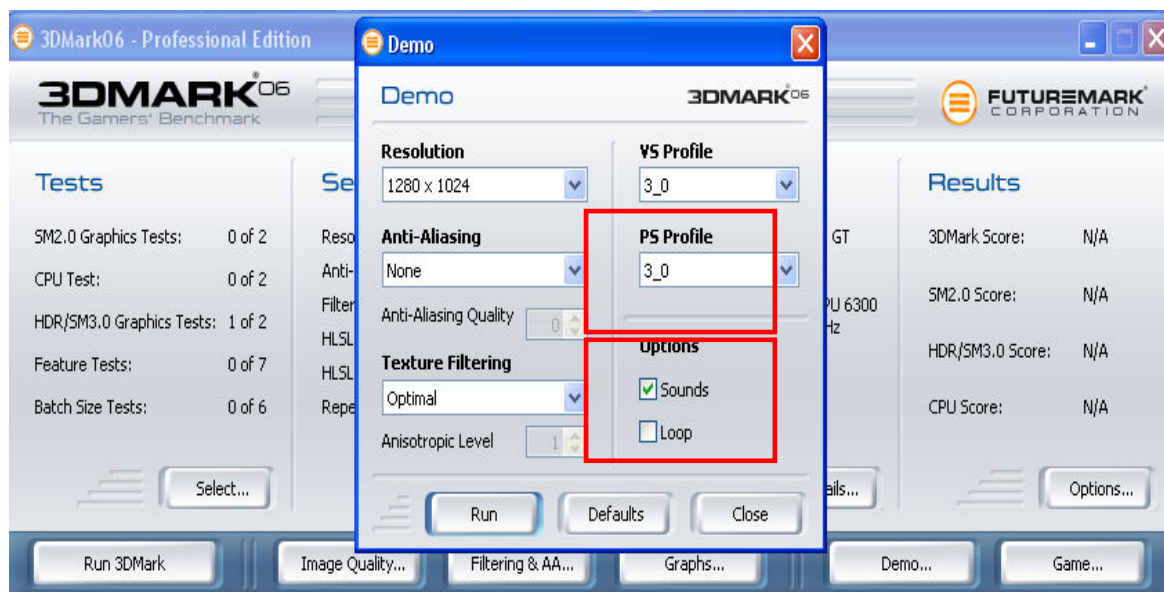

6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on.


If there's no problem, it can be judged OK!

6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail(for HDMI function).




6.4 Temperature test


- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.

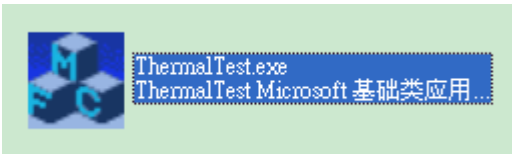

- 6.4.3 If test ok, show pass.

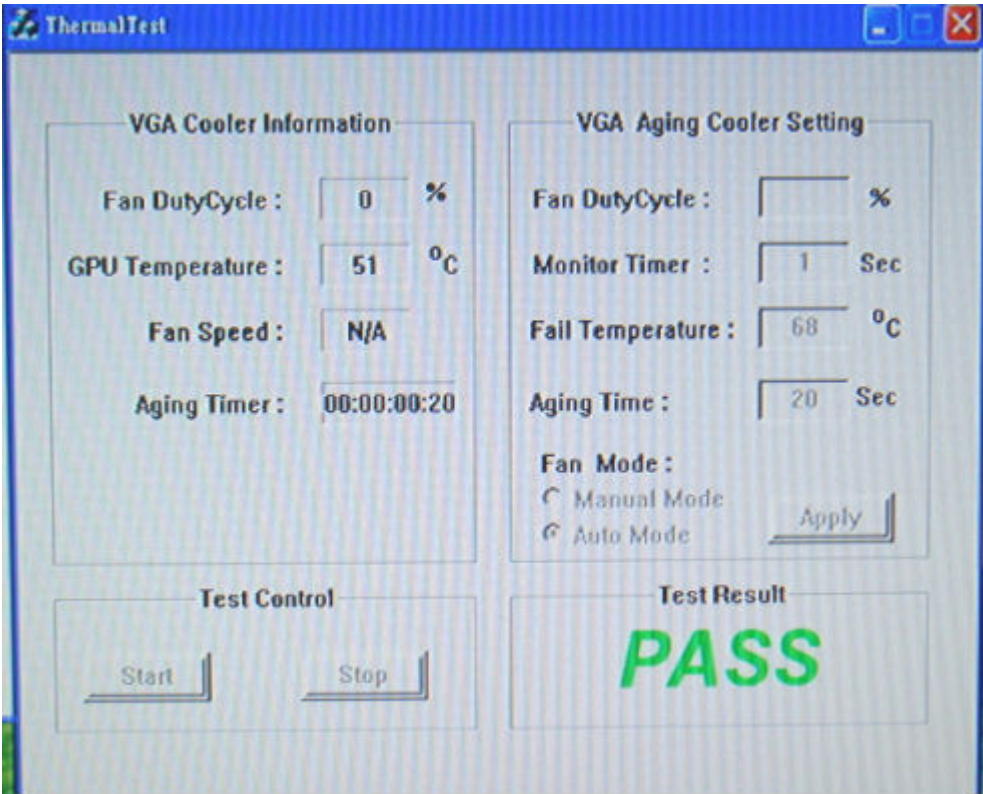

6.4.4 If test fail, show fail.

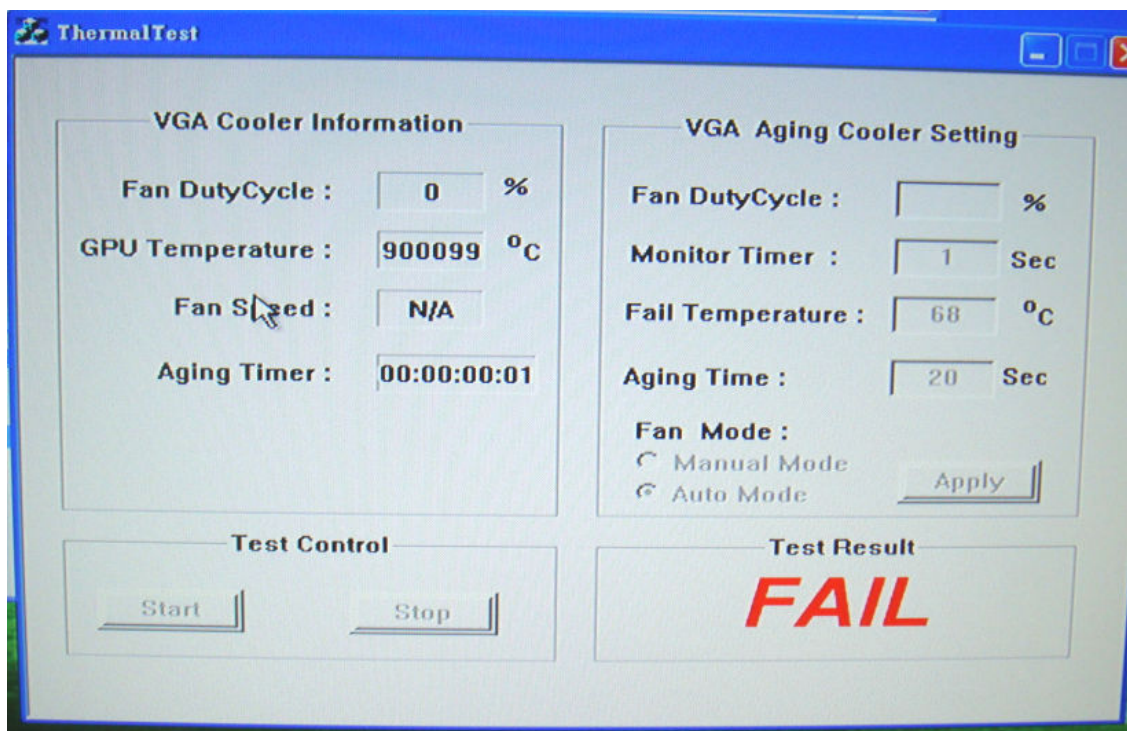


6.4.5 If test OK, please NTF test.

7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	LCD MONITOR		SAMSUNG 2232MW	1	
2	PS/2 MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(1200W)			1	
5	INTEL P5 CPU			1	
6	Heat sink + FAN	22-240000160		1	
7	MEMORY DDR	APACER 400MHz 512M or 400MHz 1G		1	
8	SATA HDD (TEST HDD)			1	
9	SATA HDD Cable	14G00012707B	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
12	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
13	DVI-HDMI	04G460002400 /04G460002450		1	
14	TV extend cable (Buying a local TV cable by yourself)			1	
15	ATI S CABLE	14G001801801		1	
16	P5Q R1.03G	80-MIB4P0-G0A02		1	
17	Power Cable	14G000602510 /14G000602502		1	

ASUSTeK COMPUTER INC	ENG310 Standard Operation Procedure	Doc. No:
		Date: Feb.14, 2011 Rev. : 1.04 Page: 11

18	LCD “Y” Cable	14-010230000		1		
19	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	