

ASUSTeK COMPUTER INC.	HD5450 Standard Operation Procedure	Doc. No:	
		Date: Jun, 11. 2014 Revision: 1.22	
		Page: 9	Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release	GRMA	Ariel_wang	Aug.1,2012
1.01		Add new PCBA(YV00JG-A11)	GRMA	Ariel_wang	Oct.25,2012
1.02		Add new PCBA(YV00JG-A21)	GRMA	Ariel_wang	Oct.25,2012
1.03		Add new P/N(YV00I2-A01)	GRMA	Ariel_wang	Oct.25,2012
1.04		Add new PCBA(YV00I2-A12)	GRMA	Ariel_wang	Oct.25,2012
1.05		Add new PCBA(YV00JH-A12)	GRMA	Ariel_wang	Oct.25,2012
1.06		Add new PCBA(YV00JH-A02)	GRMA	Ariel_wang	Nov.7,2012
1.07		Add new PCBA(YV00JH-A23)	GRMA	Ariel_wang	Jan.15,2013
1.08		Add new PCBA(YV00JH-A33)	GRMA	Ariel_wang	Jan.15,2013
1.09		Add new PCBA(YV00I2-A23)	GRMA	Ariel_wang	Jan.15,2013
1.10		Add new PCBA(YV00I2-A33)	GRMA	Ariel_wang	Jan.15,2013
1.11		Add new PCBA(YV00JG-Q11)	GRMA	Ariel_wang	Feb.20,2013
1.12		Add new PCBA(YV00JH-Q23)	GRMA	Ariel_wang	Feb.20,2013
1.13		Add new PCBA(YV00JG-A31)	GRMA	Ariel_wang	Mar.4,2013
1.14		Add new PCBA(YV00JG-A41)	GRMA	Ariel_wang	Mar.4,2013
1.15		Add new PCBA(YV00JG-Q31)	GRMA	Jory_yuan	May.20.2013
1.16		Add new PCBA(YV00I2-A45)	GRMA	Jory_yuan	Nov.6.2013
1.17		Add new PCBA(YV00I2-B11)	GRMA	Jory_yuan	Dec.4.2013
1.18		Add new PCBA(YV00I4-A01)	GRMA	Jory_yuan	Dec.18.2013
1.19		Add new PCBA(YV00I2-A55)	GRMA	Jory_yuan	Dec.18.2013
1.20		Add new PCBA(YV00I2-B21)	GRMA	Jory_yuan	Jan.8.2014
1.21		Add new P/N(YV0600-A01)	GRMA	Jory_yuan	Feb.19.2014
1.22		Add new PCBA(YV00I2-B32)	GRMA	Jory_yuan	Jun.11.2014

Authorize by		Review by		Originator By	Ariel
--------------	--	-----------	--	---------------	-------

ASUSTeK COMPUTER INC	HD5450 Standard Operation Procedure	Doc. No:
		Date: Jun. 11, 2014
		Rev. : 1.22 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: HD5450

PN: YV00JG(A01&A11&A21&Q11&A31&A41&Q31)

YV00I2(A01&A12&A23&A33&A45&A55&B11&B21&B32)YV00JH(A12&A02&A23&A33&Q23)YV00I4(A01)YV0600(A01)

3.Test Item

3.1 Diagnostic test in 64-bit Linux system

3.2 3DMark03(contain HDMI test)

3.3 Temperature test

4.Relevant Document

None.

5.Definition : 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration

ASUSTeK COMPUTER INC	HD5450 Standard Operation Procedure	Doc. No:
		Date: Jun. 11, 2014
		Rev. : 1.22 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. **(Please install windows test environment by yourself).**

ASUSTeK COMPUTER INC	HD5450 Standard Operation Procedure	Doc. No: Date: Jun. 11, 2014 Rev. : 1.22 Page: 3
----------------------	--	--

6.2 Fixture connect

6.2.1 Install Intel P7 CPU & CPU Fan.

6.2.2 Install DDR3 Memory to DIMM1~4. **(a minimum memory of 2GB for Linux test)**

6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.


6.2.4 Plug VGA Card HD5450 into PCIEX16_1.

6.2.5 Connect SATA HDD & SATA con via SATA cable



6.2.6 Plug 4PIN 12V power **(a minimum power of 600W)** cable into CON12V.

6.2.7 Plug ATX Power on Power **(a minimum power of 600W)** Connector.

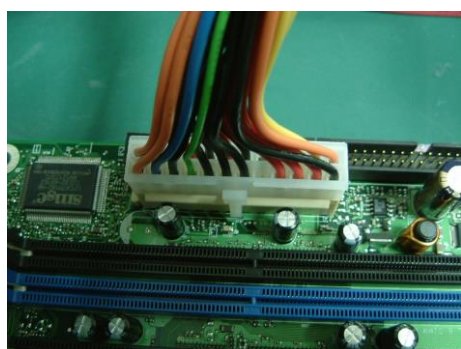


6.3 Certain test.

6.3.1 Diagnostic test in **32-bit LINUX system or 64-bit LINUX system.**

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.




Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

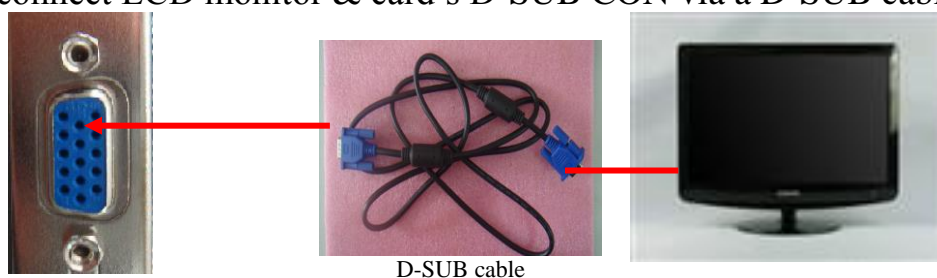

6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press “Del” to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.

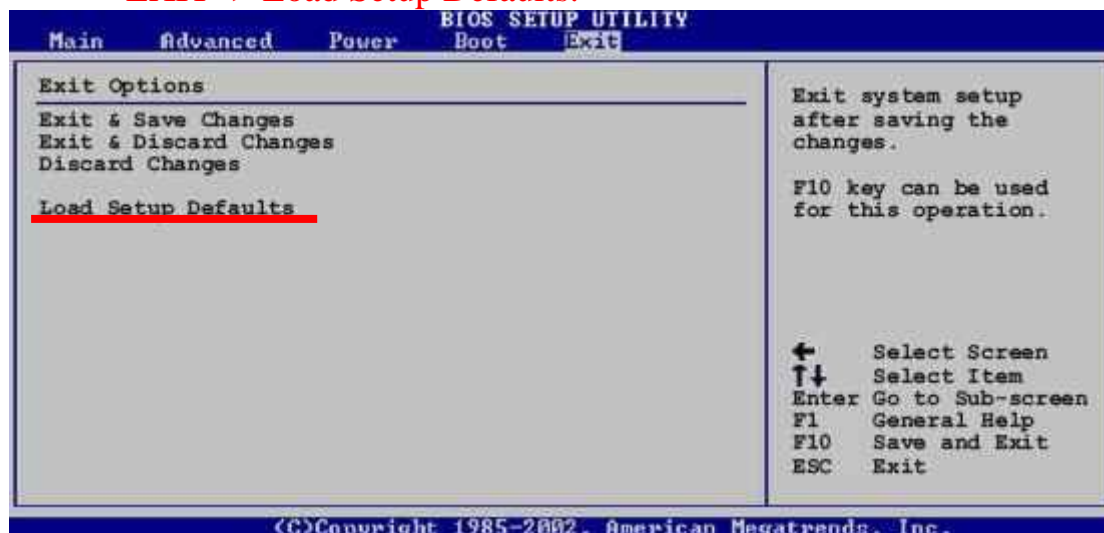

6.3.1.4 Run test program in linux.

Below P/N is tested in 64-bit linux system

Path:hd5450\yv00jga0.sh or yv00jga1.sh or yv00jga2.sh or yv00i2a0.sh or yv00i2a1.sh or yv00jha1.sh or yv00jha0.sh or yv00jha2.sh or yv00jha3.sh or yv00i2a2.sh or yv00i2a3.sh or yv00jgq1.sh or yv00jhq2.sh or yv00jga3.sh or yv00jga4.sh or yv00i2a4.sh or yv00i2b1.sh or yv00i4a0.sh or yv00i2a5.sh or yv00i2b2.sh or yv0600a0.sh or yv00i2b3.sh

Please enter into the file of hd5450, enter the following command :**cd ./hd5450**

Then, please

run **./yv00jga0.sh ./yv00jga1.sh ./yv00jga2.sh ./yv00i2a0.sh ./yv00i2a1.sh ./yv00jha1.sh ./yv00jha0.sh yv00jha2.sh ./yv00jha3.sh ./yv00i2a2.sh ./yv00i2a3.sh ./yv00jgq1.sh or ./yv00jhq2.sh or ./yv00jga3.sh or ./yv00jga4.sh**

Or enter the following command :**cd ./hd54501**

Run **./yv00jgq3.sh**

6.3.1.5 Memory test

If you want to test memory, please run **./tserver -test=memfa**

Path:hd5450\

Path:hd54501

6.3.1.6 BIOS Version

If you want to see the version of bios, please run **./atiflash -ai 0 or ./biosinfo.**

Path:hd5450\

Path:hd54501

6.3.1.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:hd5450\

Path:hd54501

Command: **./atiflash -p -f 0 xxx.rom**

Notice:

ASUSTeK COMPUTER INC	HD5450 Standard Operation Procedure	Doc. No:
		Date: Jun. 11, 2014
		Rev. : 1.22 Page: 5

If you can not flash bios because of the bios locked, please use `./atiflash -unlockrom 0` to unlock bios. And then, please use `./atiflash -lockrom 0` to lock bios after updating latest bios.

6.3.1.8 After finish Linux testing, please enter Windows environment to test 3DMark.

6.3.2 3DMark test(contain HDMI test)

6.3.2.1 Please install 3DMark program by yourself.

6.3.2.2 Please connect VGA card to LCD via HDMI cable.




HDMI CON


6.3.2.3 Please install VGA card driver in Windows(You must use latest individual driver of this card).

6.3.2.4 Please run 3DMark03 base on this card (please test 1 cycle).

6.3.2.5 Press “Select” to enter Select test menu. You can choose “GT1” for default setting.

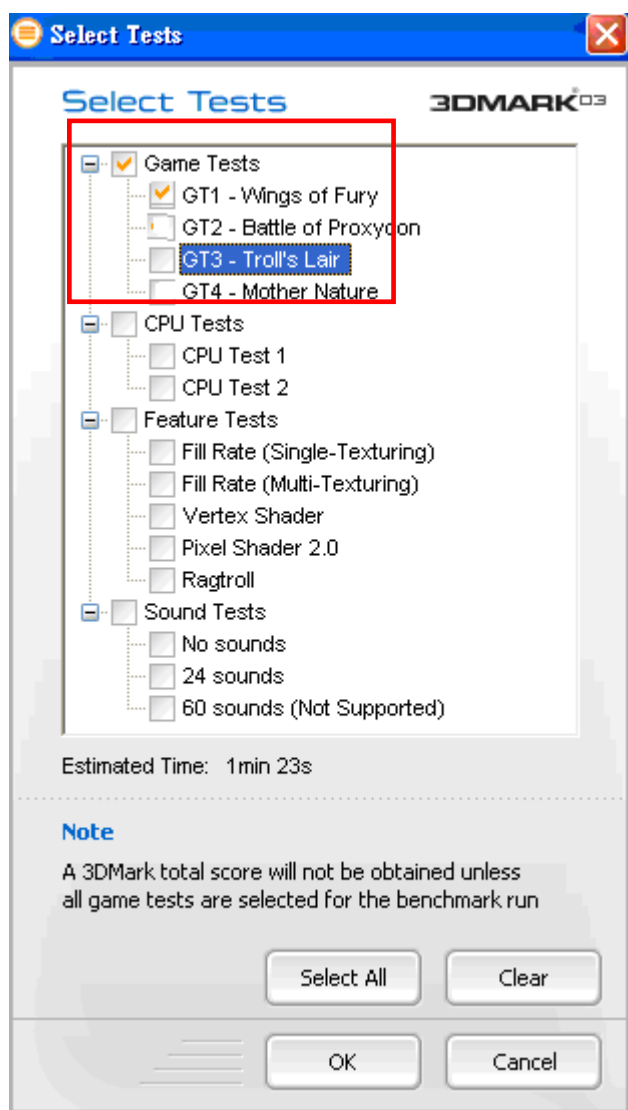

6.3.2.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting.

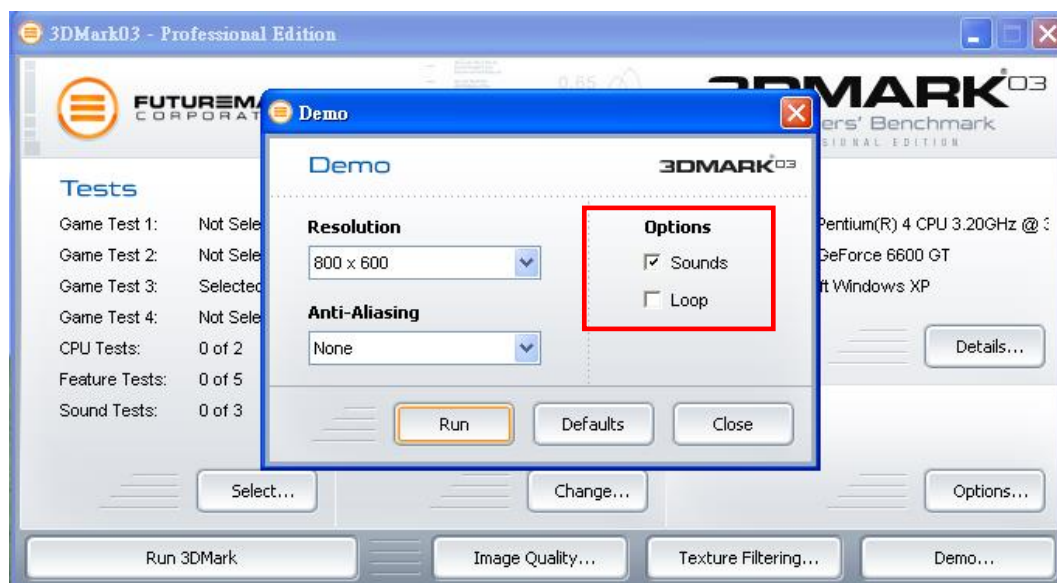

6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on.

ASUSTeK COMPUTER INC	HD5450 Standard Operation Procedure	Doc. No:
		Date: Jun. 11, 2014
		Rev. : 1.22 Page: 7

If there's no problem, it can be judged OK!

6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.




6.4 Temperature test

6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.


6.4.2 Please run ThermalTest.exe.



6.4.3 If test ok, show pass.

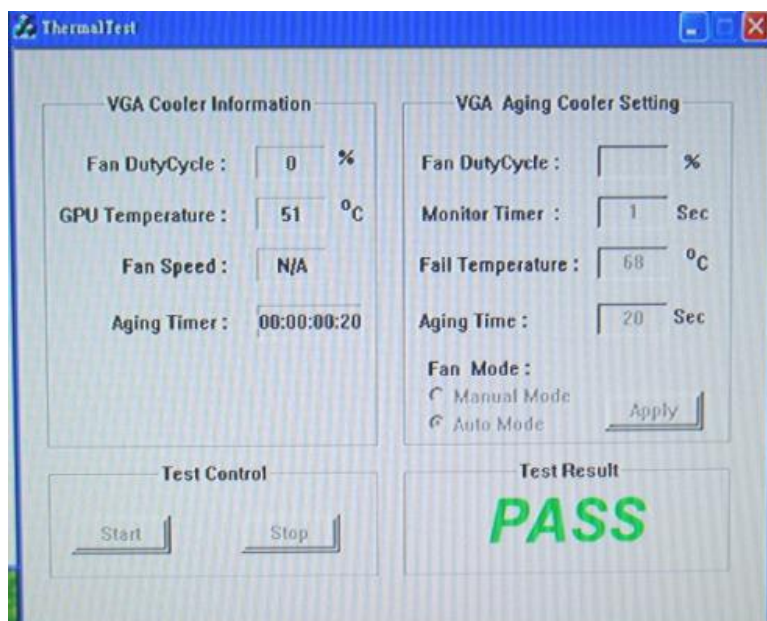

6.4.4 If test fail, show fail.

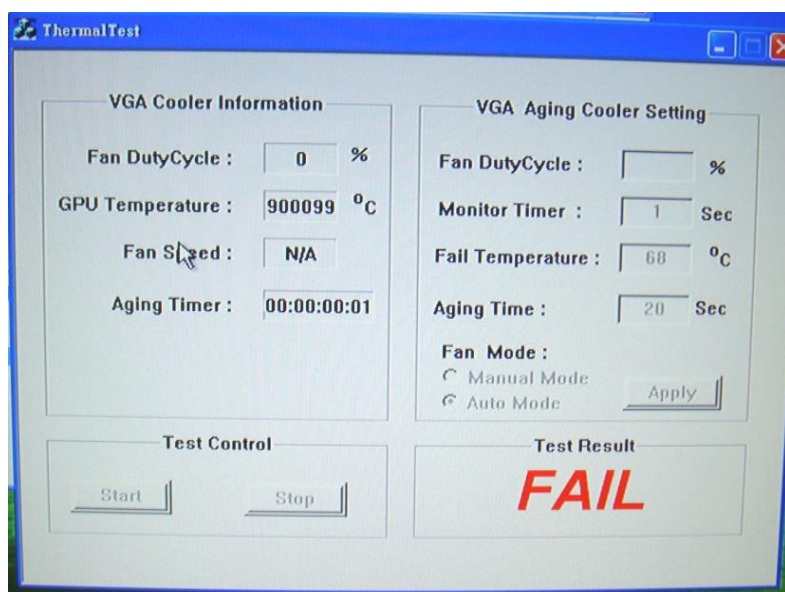

6.4.5 If test OK, please NTF test.

7. Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 1200W)			1	
5	INTEL Celeron E1200			1	
6	Intel CPU Intel(R) Core(TM)2 CPU		local	1	
7	Heat sink + FAN	22-240000160		1	
8	DDR2(667/800) 1G	04G0016169A9NE /22-T00642404		4	
9	DDR3 1333 2G	20-TT2605618	local	4	
10	TEST HDD			1	
11	SATA HDD Cable	14-000107070	ASUS	1	
12	PCIEX16 VGA CARD			1	
13	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
14	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
15	Display port cable (Buying a local HDMI cable by yourself)			1	
16	P7H55-M/USB3	80-MIBBKA-G0*	ASUS	1	