

ASUSTeK COMPUTER INC.	EAH4870X2 Management Procedure	Doc. No:	
		Date: JAN. 17, 2009	
		Revision:1.01	
		Page: 5	Grade:

Rev.	Modification	Modify description	Issue div.	Originator
1.00		First Release	T.C	Paul
1.01		Modify for new test structure	T.C	Janice

Authorize by		Review by		Originator By	Paul
-----------------	--	--------------	--	------------------	------

ASUSTeK COMPUTER INC	EAH4870X2 Management Procedure	Doc. No:
		Date: JAN. 17, 2009
		Rev. : 1.01 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: EAH4870X2

PN: C1CLT0

3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMar06(contain HDMI test)

4.Relevant Document

None.

5.Definition : 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

ASUSTeK COMPUTER INC	EAH4870X2 Management Procedure	Doc. No:
		Date: JAN. 17, 2009
		Rev. : 1.01 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ASUSTeK COMPUTER INC	EAH4870X2 Management Procedure	Doc. No: Date: JAN. 17, 2009 Rev. : 1.01 Page: 3
----------------------	--------------------------------	--

6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 **667/800M** 1GB Memory to DIMM1~2.


6.2.3 Plug PS/2 Mouse and PS/2 Keyboard into MB.

6.2.4 Plug VGA Card EAH4870X2 into PCIEX16.

6.2.5 Connect power con of VGA card & Power supply via bundled power cable.



C1CLT0

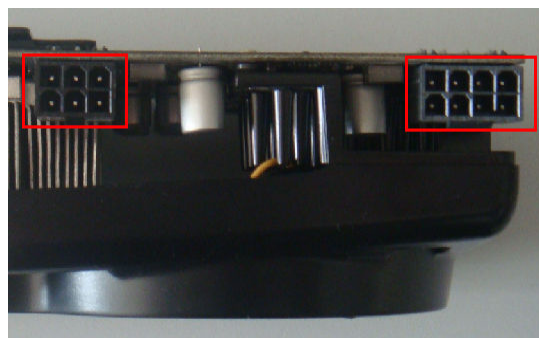


Connect 6Pin & 8Pin Power cable

6.2.6 Connect SATA HDD & SATA con via SATA cable



6.2.7 Plug 4PIN 12V power(**1200W**) cable into CON12V.

6.2.8 Plug ATX Power on Power(**1200W**) Connector.

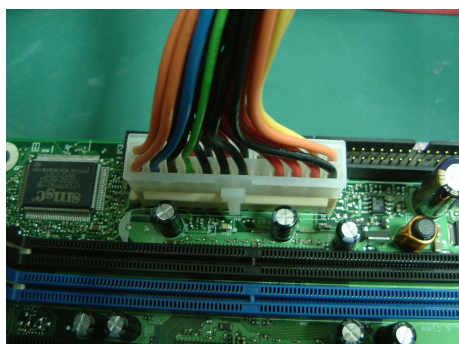

6.3 Certain test.

6.3.1 Diagnostic test in DOS

6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press “Del” to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.



6.3.1.4 System will reboot, select DOS to run test program.

Path: VBAT\EAH4870X\BATCH\

Run the test program refer to the prompt.

6.3.1.5 Memory test

If you want to test memory, please run memfa.bat.

Path: VBAT\EAH4870X\DIAG\MEMFA2

6.3.1.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\EAH4870X\BIOS

This model have two bioses. Firstly, please flash the master bios as following.

Command: **atiflash -p -f 0 xxx.rom**

Then flash the slave bios as following.


Command: **atiflash -p -f 1 sss.rom**

6.3.1.7 After finish DOS testing, please enter Windows environment to test 3DMark.

6.3.2 3DMark test(contain HDMI test)

6.3.2.1 Please install 3DMark program by yourself.


6.3.2.2 Please connect VGA card to LCD via HDMI cable.

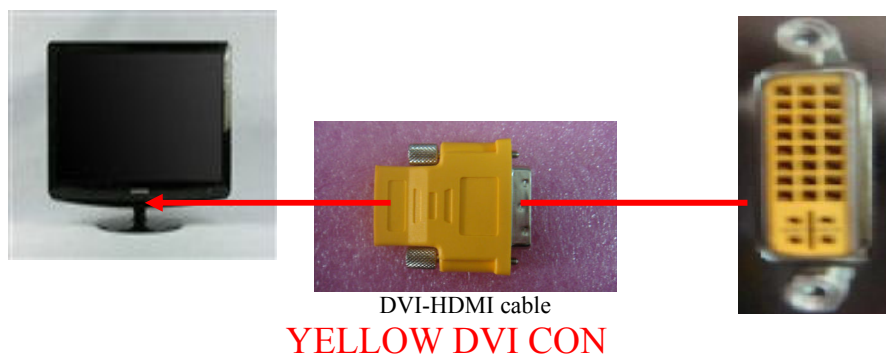


6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).

6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).

6.3.2.5 Press “Select” to enter Select test menu. You can choose “HDR1” for default setting.

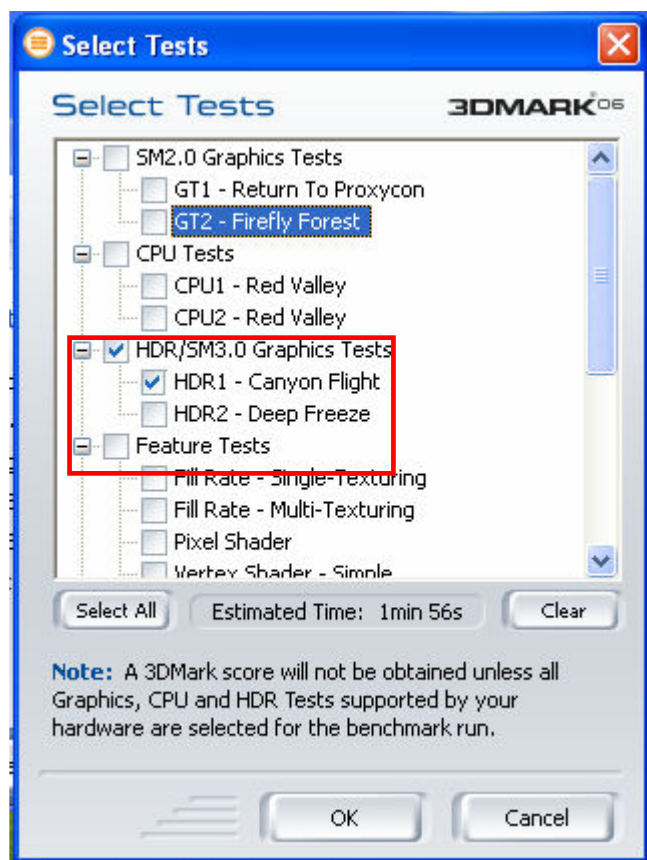

6.3.2.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting.

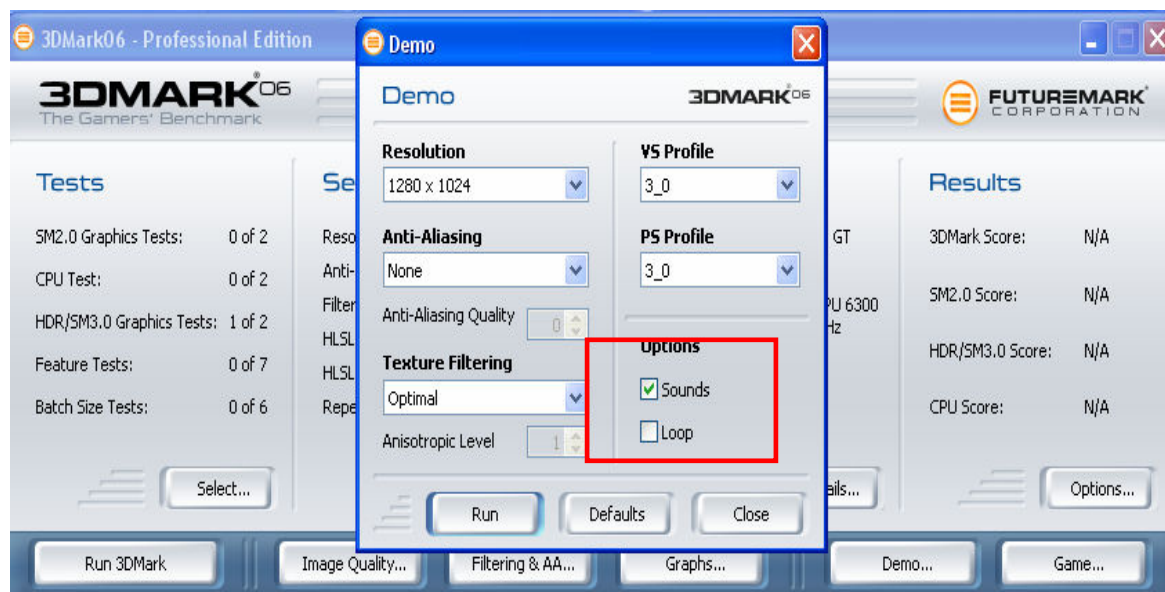

6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on.

If there's no problem, it can be judged OK!

6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.




6.3.2.9 If test OK, please NTF test.

ASUSTeK COMPUTER INC	EAH4870X2 Management Procedure	Doc. No:
		Date: JAN. 17, 2009
		Rev. : 1.01 Page: 7

7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW (Buying a local LCD by yourself)			1	
2	PS/2 MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(1200W) (Buying a local POWER by yourself)			1	
5	INTEL Celeron E1200(Buying a local CPU by yourself)			1	
6	Heat sink + FAN	22-240000160		1	
7	APACER 800MHz 512M or 800MHz 1G			512M 2 or 1G 1	
8	SATA HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable			1	
12	LCD “Y” Cable	14-010230000		1	
13	S CABLE(ATI)	14G001801801		1	
14	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
15	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
16	TV extend cable (Buying a local TV cable by yourself)			1	

ASUSTeK COMPUTER INC	EAH4870X2 Management Procedure	Doc. No:
		Date: JAN. 17, 2009
		Rev. : 1.01 Page: 8

17	DVI-HDMI	04G460002400 /04G460002450		1	
18	P5Q-E			1	