

ASUSTeK COMPUTER INC.	EAH4550 Standard Operation Procedure	Doc. No:	
		Date: Sep. 15, 2009 Revision:1.06	
		Page: 10	Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First Release	GTC	Ariel_wang	Sep.29,2008
1.01		Modify for new test structure	GTC	Janice_pang	
1.02		Add New P/N(C1CLX5-A01)	GTC	Ariel_wang	Mar.27,2009
1.03		Add New PCBA(C1CLX5-A11)	GTC	Ariel_wang	Apr.22,2009
1.04		Add New PCBA(C1CLX5-A21)	GTC	Ariel_wang	Jun.6,2009
1.05		Add New PCBA(C1CLX5-A31)	GTC	Ariel_wang	Jul.29,2009
1.06		Add New PCBA(C1CLX5-A41)	GTC	Ariel_wang	Sep.15,2009

Authorize by		Review by		Originator By	Ariel
-----------------	--	--------------	--	------------------	-------

ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No:
		Date: Sep. 15, 2009 Rev. : 1.06 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: EAH4550

P/N: C1CLX0(A01) C1CLX5(A01&A11&A21&A31&A41)

3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark06(contain HDMI test)

4.Relevant Document

None.

5.Definition : 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

3. If 9540.11.17.0.18.AS03(C1CLX5-A21) test fail, please flash the bios of 9540.11.17.0.18.AS03A(C1CLX5-A21) to test again.

If 9540.11.17.0.18.AS03A (C1CLX5-A21) test fail, please flash the bios of 9540.11.17.0.18.AS03 (C1CLX5-A21) to test again.

4 If 9540.11.17.0.18.AS03A (C1CLX5-A41)test fail, please flash the bios of 9540.11.17.0.18.AS03 (C1CLX5-A41) to test again.

If 9540.11.17.0.18.AS03 (C1CLX5-A41)test fail, please flash the bios of 9540.11.17.0.18.AS03A (C1CLX5-A41) to test again.

ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No:
		Date: Sep. 15, 2009 Rev. : 1.06 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 **667/800M** 1GB Memory to DIMM1~2.


6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.

6.2.4 Plug VGA Card EAH4550 into PCIEX16.




C1CLX0

6.2.5 Connect IDE HDD with IDE CON.

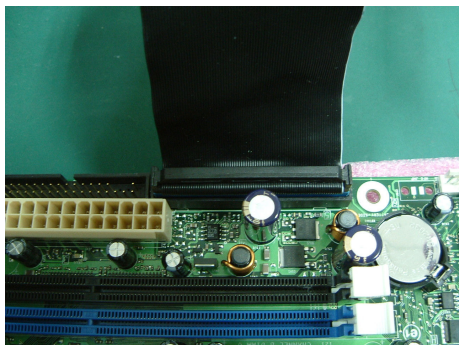

6.2.6 Plug 4PIN 12V power(**600W**) cable into CON12V.

6.2.7 Plug ATX Power on Power(**600W**) Connector.

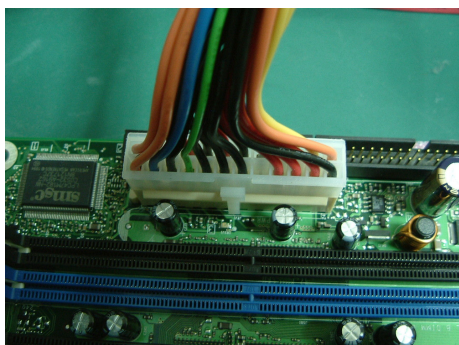


ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No: Date: Sep. 15, 2009 Rev. : 1.06 Page: 4
----------------------	---	--

6.3 Certain test.

6.3.1 Diagnostic test in DOS

6.3.1.1 Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

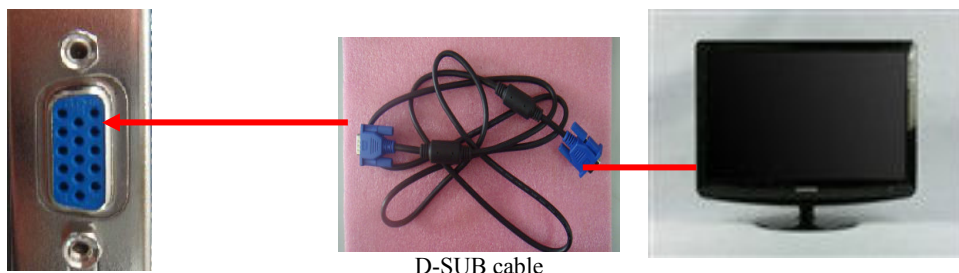

6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.



6.3.1.4 System will reboot, select DOS to run test program.

Path: VBAT\EAH4550\BATCH\

Run the test program refer to the prompt.

6.3.1.5 Memory test

If you want to test memory, please run memfa.bat.

Path: VBAT\EAH4550\V710\MEMFA

6.3.1.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\EAH4550\BIOS

Command: **atiflash -p -f 0 xxx.rom**


6.3.1.7 After finish DOS testing, please enter Windows environment to test 3DMark.

ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No:
		Date: Sep. 15, 2009 Rev. : 1.06 Page: 5

6.3.2 3DMark test(contain HDMI test)

6.3.2.1 Please install 3DMark program by yourself.

6.3.2.2 Please connect VGA card to LCD via HDMI cable.

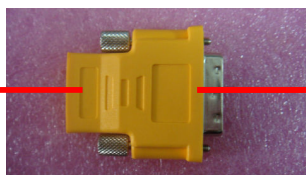

DVI-HDMI cable

WHITE DVI CON




HDMI cable

HDMI CON


6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).

6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).

6.3.2.5 Press “Select” to enter Select test menu. You can choose “HDR1” for default setting.

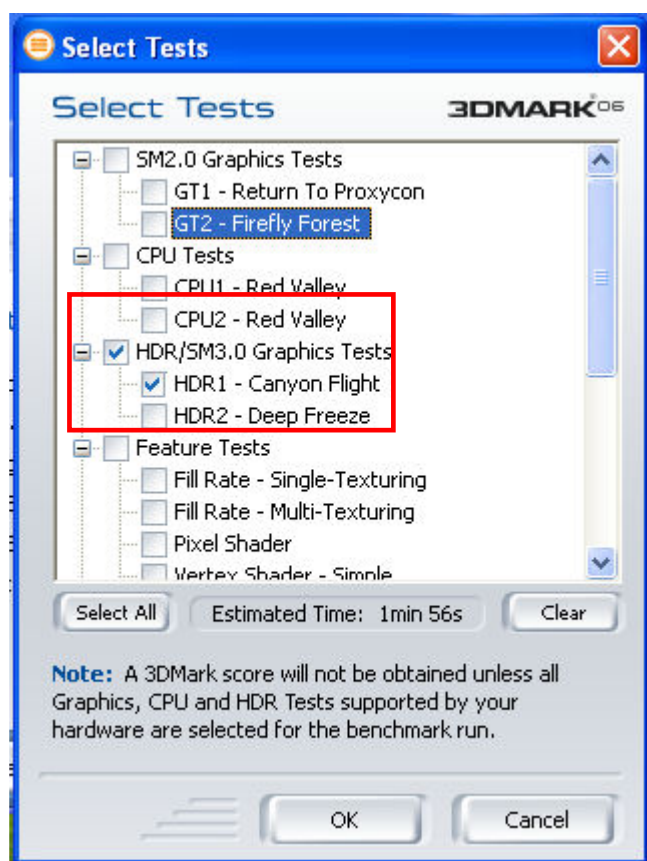

6.3.2.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting.

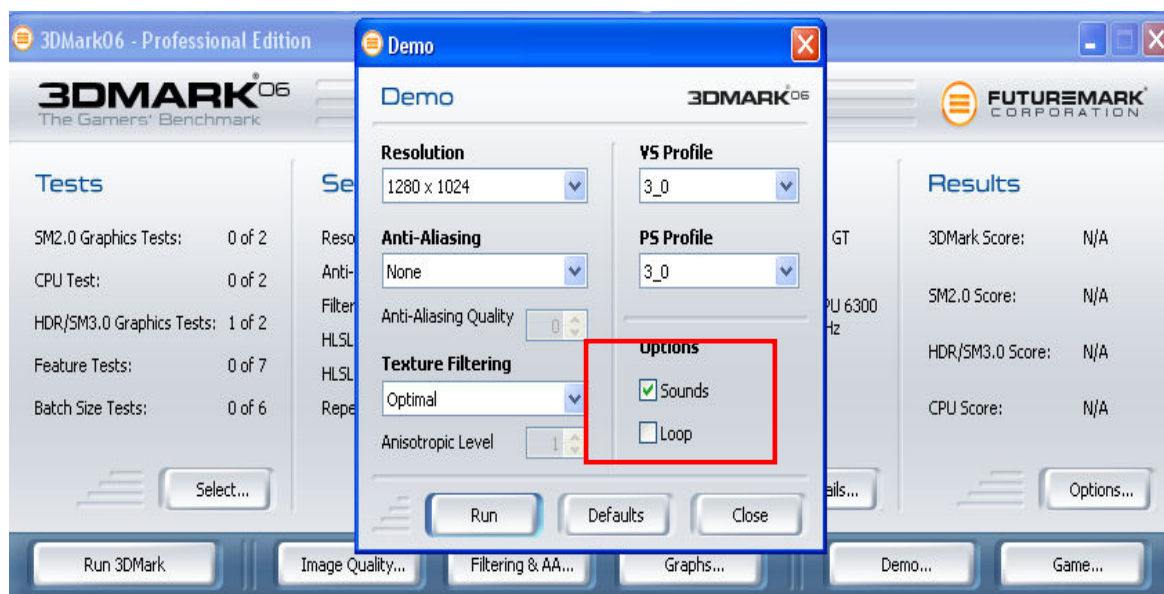

ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No:
		Date: Sep. 15, 2009
		Rev. : 1.06 Page: 7

6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on.




If there's no problem, it can be judged OK!

6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.





6.3.2.9 If test OK, please NTF test.

7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(550W)			1	
5	INTEL Celeron E1200			1	
6	Heat sink + FAN	22-240000160		1	
7	DDR2(667/800)	04G0016169A9NE /22-T00642404		2	
8	TEST HDD			1	
9	40Pins IDE Cable ATA66		ASUS	1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
12	S CABLE(ATI)	14G001801801		1	
13	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
14	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
15	LCD "Y" Cable	14-010230000		1	

ASUSTeK COMPUTER INC	EAH4550 Standard Operation Procedure	Doc. No:
		Date: Sep. 15, 2009 Rev. : 1.06 Page: 9

16	TV extend cable (Buying a local TV cable by yourself)			1	
17	DVI-HDMI	04G460002400 /04G460002450		1	
18	P5E MB	80- MBB7X0-*		1	