

# ENGTS250 Repair Guide

Mar/24/2008

Aray\_Chen  
CSC-GRMA

<b>Vendor Kit</b>	<b>C393GP</b>
<b>ASUS model name</b>	<b>ENGTS250/HTDI/512MD3/A(C393GP)</b>
<b>PCB rev.</b>	<b>ATX R1.02</b>
<b>p/n</b>	<b>80-C1CMR5-J0A01</b>
<b>Chip</b>	<b>G92-421-B1</b>
<b>GPU p/n</b>	<b>02G190015013</b>
<b>Memory</b>	<b>16M*32 -0.8 GDDR3*8pcs (512MB---256 bit)GPU(256bit)</b>
<b>Memory p/n</b>	<b>03G15134J013\HYNIX</b>
<b>CoreClock</b>	<b>740MHZ</b>
<b>ShaderClock</b>	<b>1836MHZ</b>
<b>MemoryClock</b>	<b>2200MHZ</b>





Page1. Basic Information about the Model

Page2. Power Sequence and Power Flow

Page3. Power Point Map (Top Side)

Page4. Power Point Map (Bottom Side)

## Power sequence

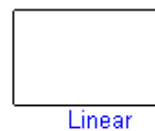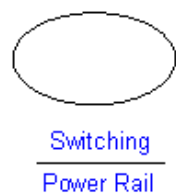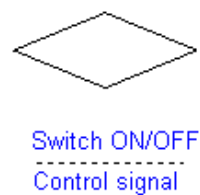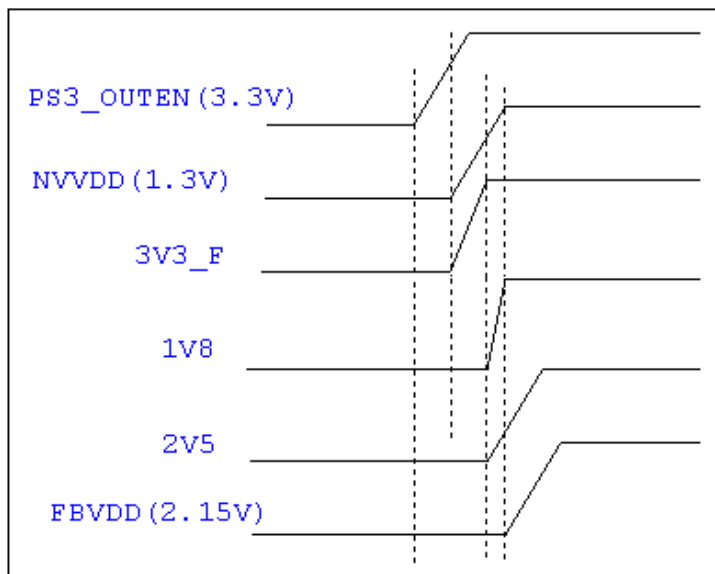

## Power flow

