

ASUSTeK COMPUTER INC.	ENGT240 Standard Operation Procedure	Doc. No:	
		Date: Apr. 2. 2011 Revision:1.33	
		Page: 12	Grade:

0Rev	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First release	GTC	Robin_Jiang	Nov.09.2009
1.01		Add new P/N(C1CNR5-A11)	GTC	Ariel_wang	Dec.01.2009
1.02		Add new P/N(C1CNR5-A01)	GTC	Ariel_wang	Dec.09.2009
1.03		Add new P/N(C1CNR5-A01)	GTC	Ariel_wang	Dec.15.2009
1.04		Add new PCBA(C1CNR0-A11)	GTC	Ariel_wang	Jan.05.2010
1.05		Add new PCBA(C1CNR5 -A12)	GTC	Ariel_wang	Jan.15.2010
1.06		Add new PCBA(C1CNR0-A23)	GTC	Ariel_wang	Jan.21.2010
1.07		Add new P/N (C1CNRK-A01)	GTC	Ariel_wang	Jan.29.2010
1.08		Add new PCBA(C1CNR5-A01)	GTC	Ariel_wang	Feb.1.2010
1.09		Add new PCBA(C1CNR5-A13)	GTC	Ariel_wang	Feb.08.2010
1.10		Add new P/N (C1CNRU-A01)	GTC	Ariel_wang	Feb.08.2010
1.11		Add new PCBA(C1CNR5-B01)	GTC	Ariel_wang	Feb.09.2010
1.12		Add new PCBA(C1CNR5-B11)	GTC	Ariel_wang	Feb.09.2010
1.13		Add new PCBA(C1CNR5-B01)	GTC	Ariel_wang	Feb.09.2010
1.14		Add new PCBA(C1CNR5-B11)	GTC	Ariel_wang	Feb.09.2010
1.15		Add new PCBA(C1CNR0-B21)	GTC	Ariel_wang	Feb.23.2010
1.16		Add new P/N (C1CP05-A11)	GTC	Ariel_wang	Feb.23.2010
1.17		Add new P/N (C1CNRZ-A01)	GTC	Ariel_wang	Mar.5.2010
1.18		Add new PCBA(C1CNR0-B11)	GTC	Ariel_wang	Mar.29.2010
1.19		Add new P/N (C1CPF0-A01)	GTC	Ariel_wang	Apr.2.2010
1.20		Add new PCBA(C1CP05-A21)	GTC	Ariel_wang	Apr.2.2010
1.21		Add new PCBA(C1CNR5-B21)	GTC	Ariel_wang	Apr.6.2010
1.22		Add new PCBA(C1CNR5-B01)	GTC	Ariel_wang	Apr.6.2010
1.23		Add new PCBA(C1CNR5-B11)	GTC	Ariel_wang	Apr.6.2010
1.24		Add new PCBA(C1CNRK-B01)	GTC	Ariel_wang	Apr.14.2010
1.25		Add new PCBA(C1CNRZ-B02)	GTC	Ariel_wang	Apr.20.2010
1.26		Add new P/N (C1CPFA-A01)	GTC	Ariel_wang	Apr.20.2010
1.27		Add new PCBA(C1CNRU-B03)	GTC	Ariel_wang	Jun.22.2010
1.28		Add new P/N(C1CPFK-A01)	GTC	Chongling	Sep.17.2010
1.29		Add new PCBA(C1CNR0-B33)	GTC	Chongling	Nov.30.2010
1.30		Add new P/N(C1CPY0-A01)	GRMA	Ariel_wang	Dec.23.2010
1.31		Add new P/N(C1CPY5-A01)	GRMA	Ariel_wang	Dec.24.2010
1.32		Add new P/N(C1CPF5-A02)	GRMA	Ariel_wang	Mar.8.2011
1.33		Add new P/N(C1CPFU-A01)	GRMA	Ariel_wang	Apr.2.2011

Authorize by		Review by		Originator By	Robin
--------------	--	-----------	--	---------------	-------

ASUSTeK COMPUTER INC	ENGT240 Standard Operation Procedure	Doc. No:
		Date: Apr. 2. 2011
		Rev. : 1.33 Page: 1

## 1.Objectives

Create test procedure.

## 2.Scope

Model: ENGT240

PN: C1CNR0(A01&A11&A23&B21&B11&B33)

C1CNR5(A01&A11&B21&B01&B11) C1CNRF(A01&A12&B01&B11) C1CNRA(A01&A13&B01&B11) C1CNRK(A01&B01) C1CNRU(A01&B03) C1CP05(A11&A21)  
C1CNRZ(A01&B02) C1CPF0(A01) C1CPFA(A01)C1CPFK(A01) C1CPY0(A01)  
C1CPY5(A01) C1CPF5(A02) C1CPFU(A01)

## 3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark06(**contain HDMI test**)

3.3 Temperature test

3.4 Suspend Test

## 4.Relevant Document

None.

**5.Definition :** 1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

3. Please use Nvidia platform (**M4N78 SE**) to test in DOS.

ASUSTeK COMPUTER INC	ENGT240 Standard Operation Procedure	Doc. No:
		Date: Apr. 2. 2011 Rev. : 1.33 Page: 2

## 6. Operation Procedures:

### 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

## 6.2 Fixture connect


6.2.1 Install AMD M3 CPU & CPU Fan.

6.2.2 Install DDR2 **667/800** 2GB Memory to DIMM1~2.

6.2.3 Plug USB Mouse and PS/2 Keyboard into **M4N78 SE** Motherboard.


6.2.4 Plug VGA Card ENGT240 into PCIEX16.

6.2.5 Connect IDE HDD with IDE CON.

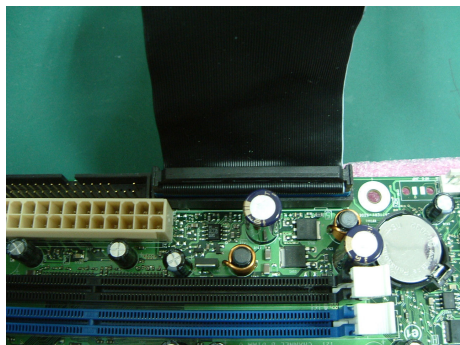


6.2.6 Plug 4PIN 12V (**600W**) power cable into CON12V.

6.2.7 Plug ATX Power (**600W**) on Power Connector.

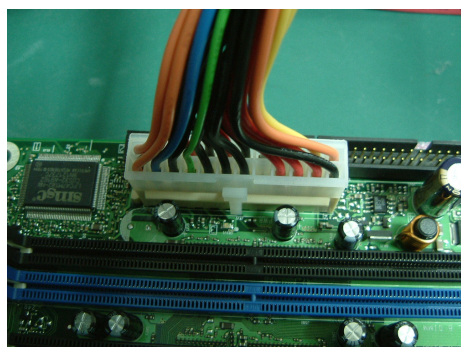

## 6.3 Diagnostic test in DOS

6.3.1 Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

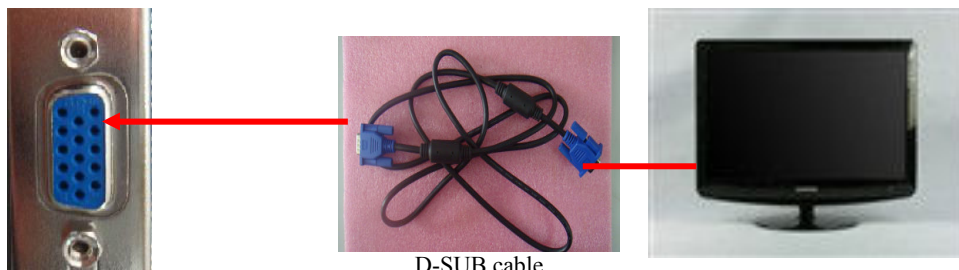

D-SUB cable

6.3.2 Press Power Switch then turn on power button.

6.3.3 Press “Del” to enter CMOS setup menu while boot screen is displaying.

**EXIT -> Load Setup Defaults.**



6.3.4 System will reboot, select DOS to run test program.

Path: VBAT\ENGT240\BATC\

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run mats.exe.

Path: VBAT\ENGT240\

Path: VBAT\ENGT240\

6.3.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\ENGT240\BIOS

Command: **nvflash xxx.rom -4 -5 -6 -A -y**

ASUSTeK COMPUTER INC	ENGT240 Standard Operation Procedure	Doc. No:
		Date: Apr. 2. 2011
		Rev. : 1.33 Page: 5

**Notice:**

If you can not flash bios because of the bios locked, please use `nvflash.exe /r` to unlock bios. And then, please use `nvflash.exe /w` to lock bios after updating latest bios.


6.3.7 After finish DOS testing, please enter Windows environment to test 3DMark.

ASUSTeK COMPUTER INC	ENGT240 Standard Operation Procedure	Doc. No:
		Date: Apr. 2. 2011 Rev. : 1.33 Page: 6

## 6.4 3DMark test(contain HDMI test)

6.4.1 Please install 3DMark program by yourself.

6.4.2 Please connect VGA card to LCD via HDMI cable.

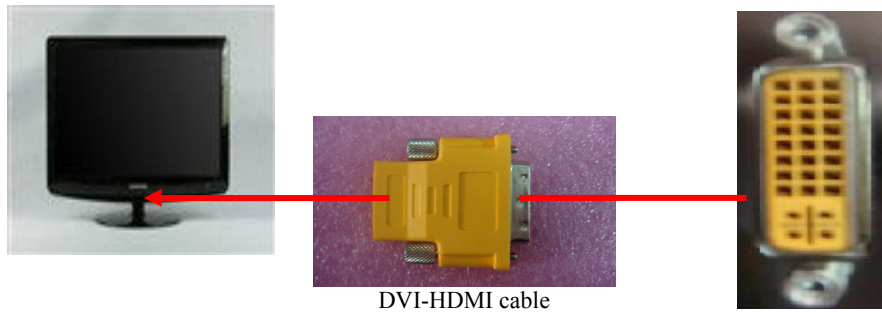


6.4.3 Please install VGA card driver in Windows(You must use individual driver of this card).


6.4.4 Please run 3DMark06 base on this card (please test 1 cycle).

6.4.5 Press “Select” to enter Select test menu. You can choose “HDR1” for default setting.



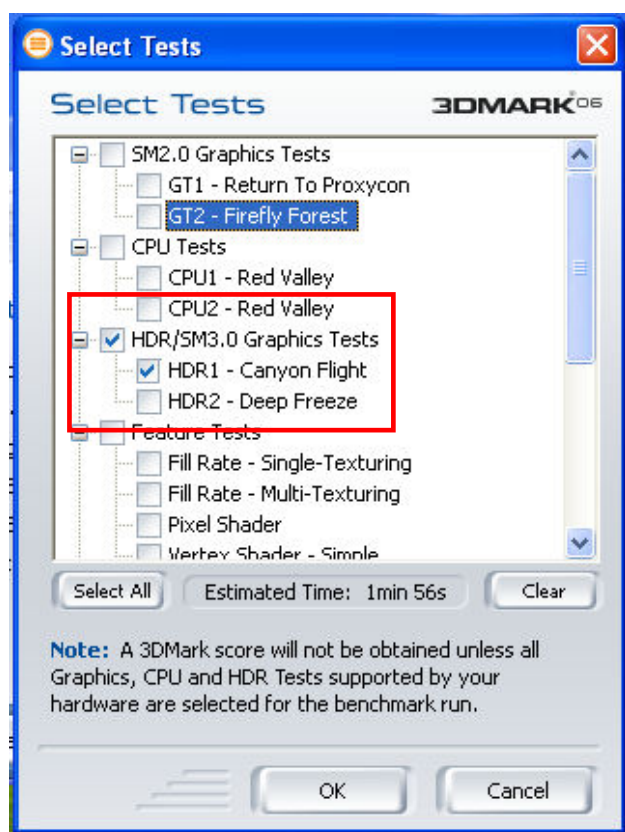

6.4.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting.

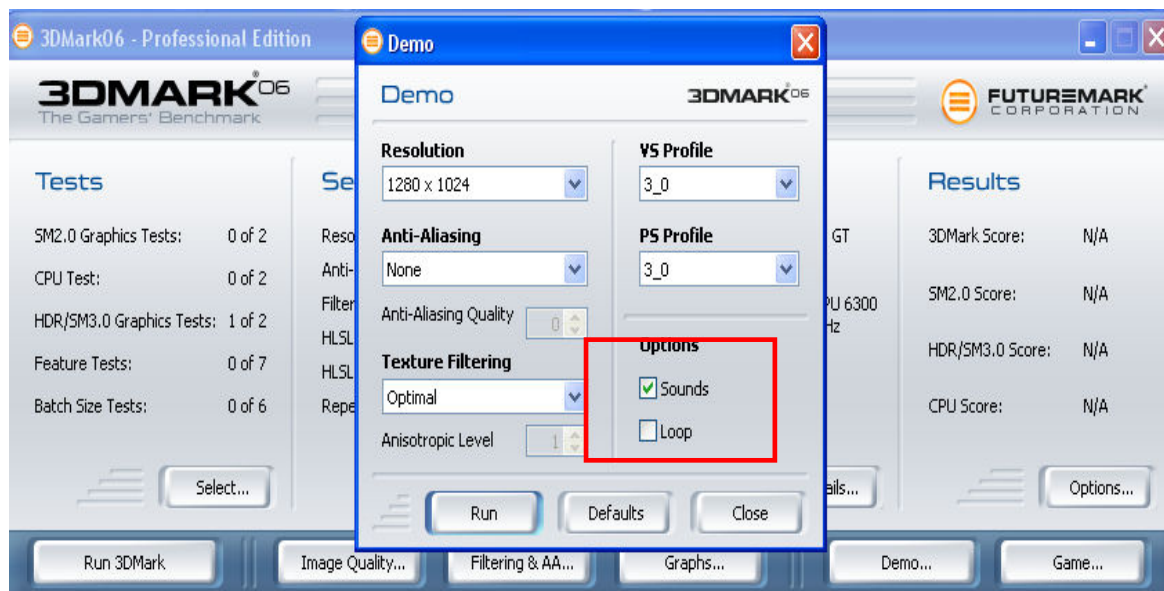

6.4.7 Please pay attention to check if there is flickering, discolor, crash and so on.

If there's no problem, it can be judged OK!

6.4.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



ASUSTeK COMPUTER INC	ENGT240 Standard Operation Procedure	Doc. No:
		Date: Apr. 2. 2011 Rev. : 1.33 Page: 8




6.4.9 If test OK, please NTF test.


## 6.5 Temperature test

6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.


6.5.2 Please run ThermalTest.exe.

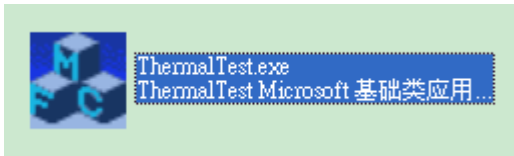

6.5.3 If test ok, show pass.

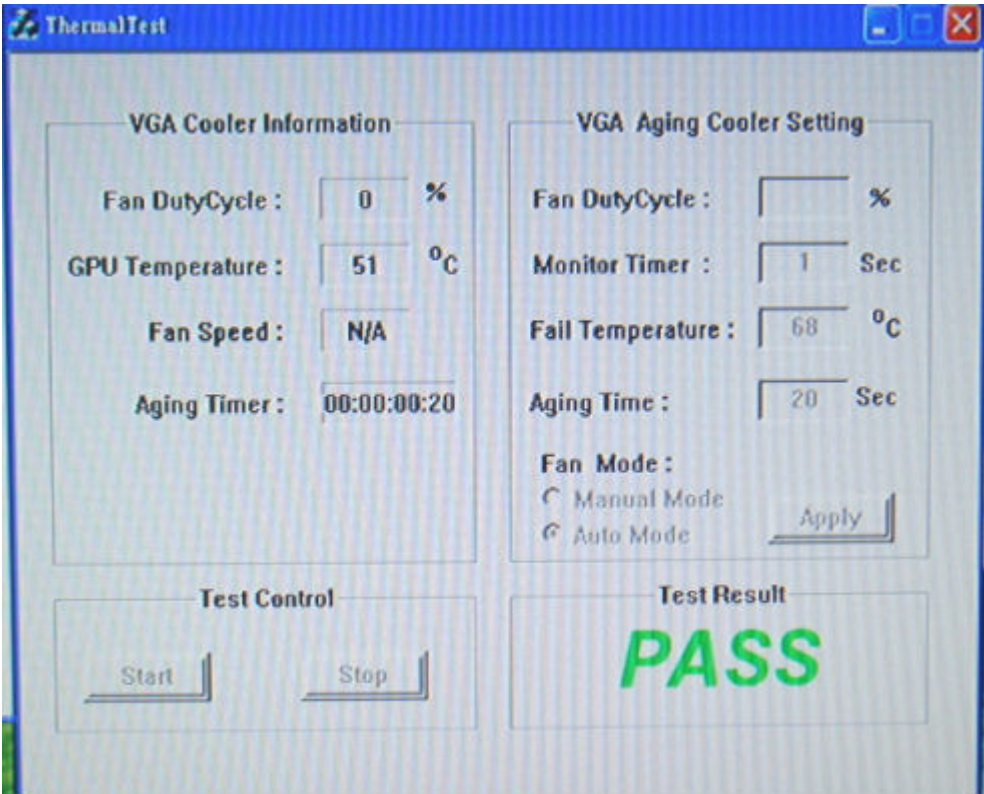

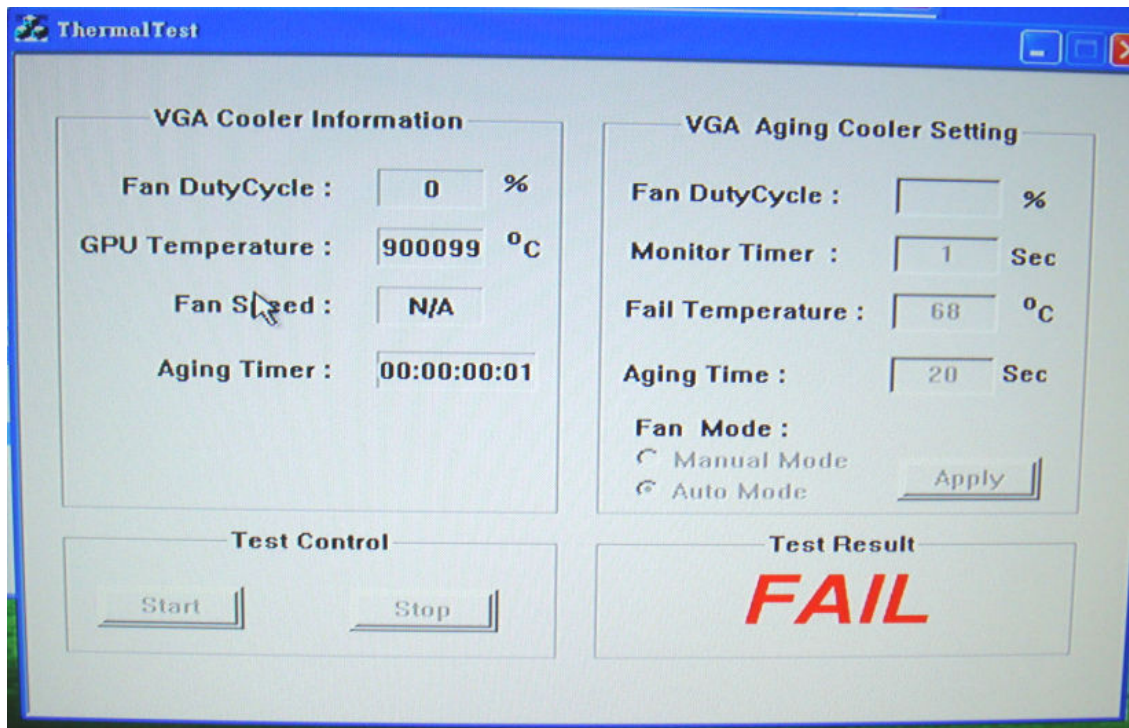


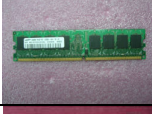










6.5.4 If test fail, show fail.



6.5.5 If test OK, NTF test.

## 7 Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(600W)			1	
5	AMD M3 CPU			1	
6	Heat sink + FAN	22-240000160		1	
7	APACER 800MHz 1G			2	
8	TEST HDD			1	
9	40Pins IDE Cable ATA66		ASUS	1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
12	Dual link DVI cable (Buying a local DVI cable by yourself)			1	
13	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
14	TV extend cable (Buying a local TV cable by yourself)			1	
15	DVI-HDMI	04G460002400 /04G460002450		1	
16	LCD "Y" Cable	14-010230000		1	
17	M4N78 SE	80-MIB7R0-G0A01		1	