

ASUSTeK COMPUTER INC.	AH3450 Management Procedure	Doc. No:	
		Date: Nov. 01, 2009 Revision:1.03	
		Page: 9	Grade:

Rev.	Modification	Modify description	Issue div.	Originator
1.00		First Release	T.C	Ariel
1.01		Modify for new test structure	T.C	Janice
1.02		Add New P/N(C1CLA5-A01)	T.C	Ariel
1.03		Add New P/N(C1CLA5-A13)	T.C	Chongling

Authorize by		Review by		Originator By	Ariel
-----------------	--	--------------	--	------------------	-------

ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No:
		Date: Nov. 01, 2009
		Rev. : 1.03 Page: 1

## 1.Objectives

Create test procedure.

## 2.Scope

Model: AH3450

PN: C1CLA0(A01) C1CLA5(A01&A13)

## 3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark03(contain HDMI test)

## 4.Relevant Document

None.

**5.Definition :** 1.If the model name contains P, please test HDCP function.

eg: EAH\*\*\*/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No:
		Date: Nov. 01, 2009
		Rev. : 1.03 Page: 2

## 6. Operation Procedures:

### 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No: Date: Nov. 01, 2009 Rev. : 1.03 Page: 3
----------------------	-----------------------------	--

## 6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.


6.2.2 Install DDR2 **667/800M** 1GB Memory to DIMM1~2.

6.2.3 Plug PS/2 Mouse and PS/2 Keyboard into MB.(for **P5P800-VM**)


Plug USB Mouse and PS/2 Keyboard into MB.(For **P5E**)

6.2.4 Plug VGA Card AH3450 into AGP(**C1CLA5**)/PCIE(**C1CLA0**).


6.2.5 Connector VGA Card and Power use Power Cable including 4 pin power cable(**Red**).

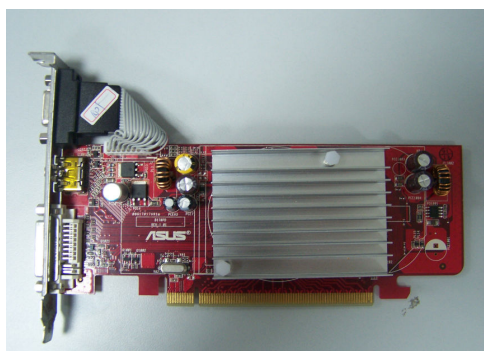

C1CLA0

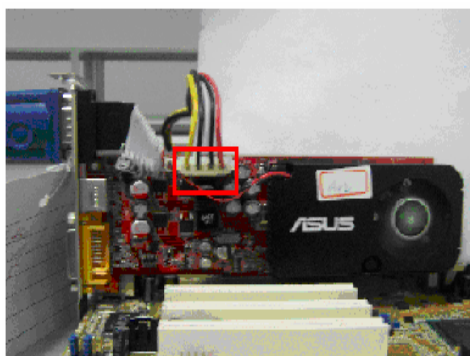


6.2.6 Connect IDE HDD with IDE CON.

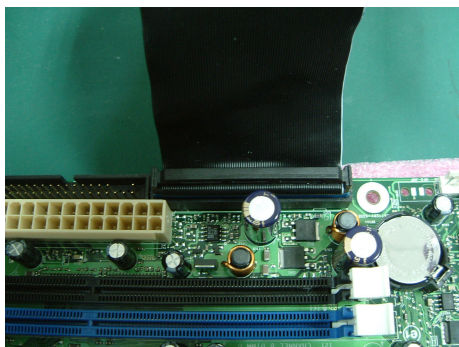

6.2.7 Plug 4PIN 12V power(**600W**) cable into CON12V.

6.2.8 Plug ATX Power on Power(**600W**) Connector.

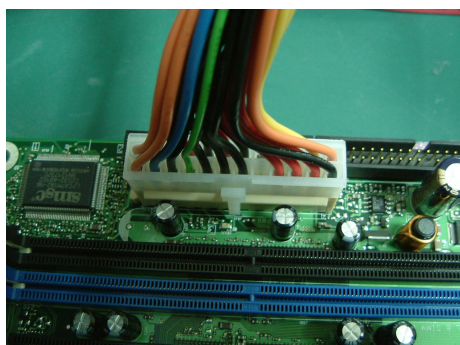


ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No: Date: Nov. 01, 2009 Rev. : 1.03 Page: 4
----------------------	-----------------------------	--

## 6.3 Certain test.

### 6.3.1 Diagnostic test in DOS

6.3.1.1 Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

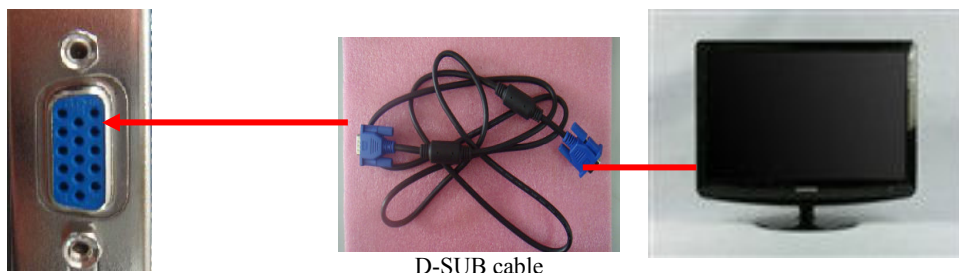

6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

**EXIT -> Load Setup Defaults.**



6.3.1.4 System will reboot, select DOS to run test program.

Path: VBAT\AH3450\BATCH\

Run the test program refer to the prompt.

6.3.1.5 Memory test

If you want to test memory, please run memfa.bat.

Path: VBAT\AH3450\RV620

6.3.1.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\AH3450\BIOS

Command: **atiflash -p -f 1 xxx.rom**

6.3.1.7 After finish DOS testing, please enter Windows environment to test 3DMark.

### 6.3.2 3DMark test

6.3.2.1 Please install 3DMark program by yourself.


6.3.2.2 Please connect VGA card to LCD via HDMI cable.



6.3.2.3 Please install VGA card driver in Windows (You must use individual driver of this card).


6.3.2.4 Please run 3DMark03 base on this card (please test 1 cycle).

6.3.2.5 Press “Select” to enter Select test menu. You can choose “GT4” for default setting.

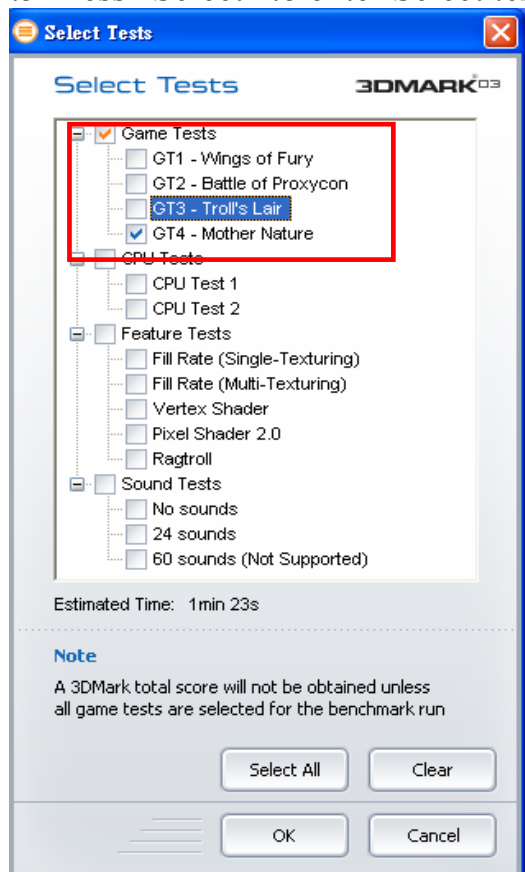



6.3.2.6 Press “Demo” to enter Demo menu. You can choose “Sounds” for default setting

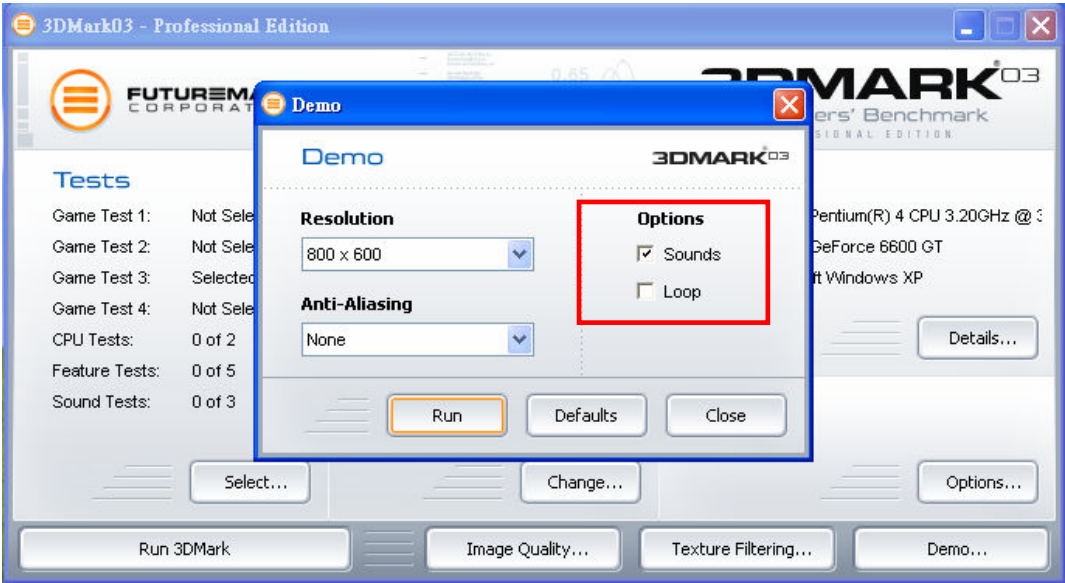

6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on.

If there’s no problem, it can be judged OK!

6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



6.3.2.9 If test OK, please NTF test.



ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No:
		Date: Nov. 01, 2009
		Rev. : 1.03 Page: 7

## 7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	PS/2 MOUSE			1	
3	PS/2 KEYBOARD			1	
4	USB MOUSE			1	
5	ATX POWER SUPPLY( <b>1200W</b> )			1	
6	INTEL Celeron E1200			1	
7	Heat sink + FAN	22-240000160		1	
8	APACER 800MHz 512M or 800MHz 1G			512M 2 or 1G 1	
9	SATA HDD			1	
10	SATA HDD Cable	14-000107070	ASUS	1	
11	AGP VGA CARD			1	
12	D-SUB extend cable ( <b>Buying a local D-SUB cable by yourself</b> )			1	
13	S CABLE( <b>ATI</b> )	14G001801801		1	
14	Dual link DVI cable ( <b>Buying a local DVI cable by yourself</b> )			1	
15	TV extend cable ( <b>Buying a local TV cable by yourself</b> )			1	
16	P5E( <b>for C1CLA0</b> )	80-MBB7X0-G0A01		1	
17	P5P800-VM( <b>for C1CLA5</b> )	80-MBB495-*		1	



ASUSTeK COMPUTER INC	AH3450 Management Procedure	Doc. No:
		Date: Nov. 01, 2009
		Rev. : 1.03 Page: 8

18	DVI-HDMI	04G460002400 /04G460002450		1			
19	LCD “Y” Cable	14-010230000		1			
20	HDMI extend cable (Buying a local HDMI cable by yourself)			1		