


## 8. Level 3 Repair

### 8-4-1. Power On

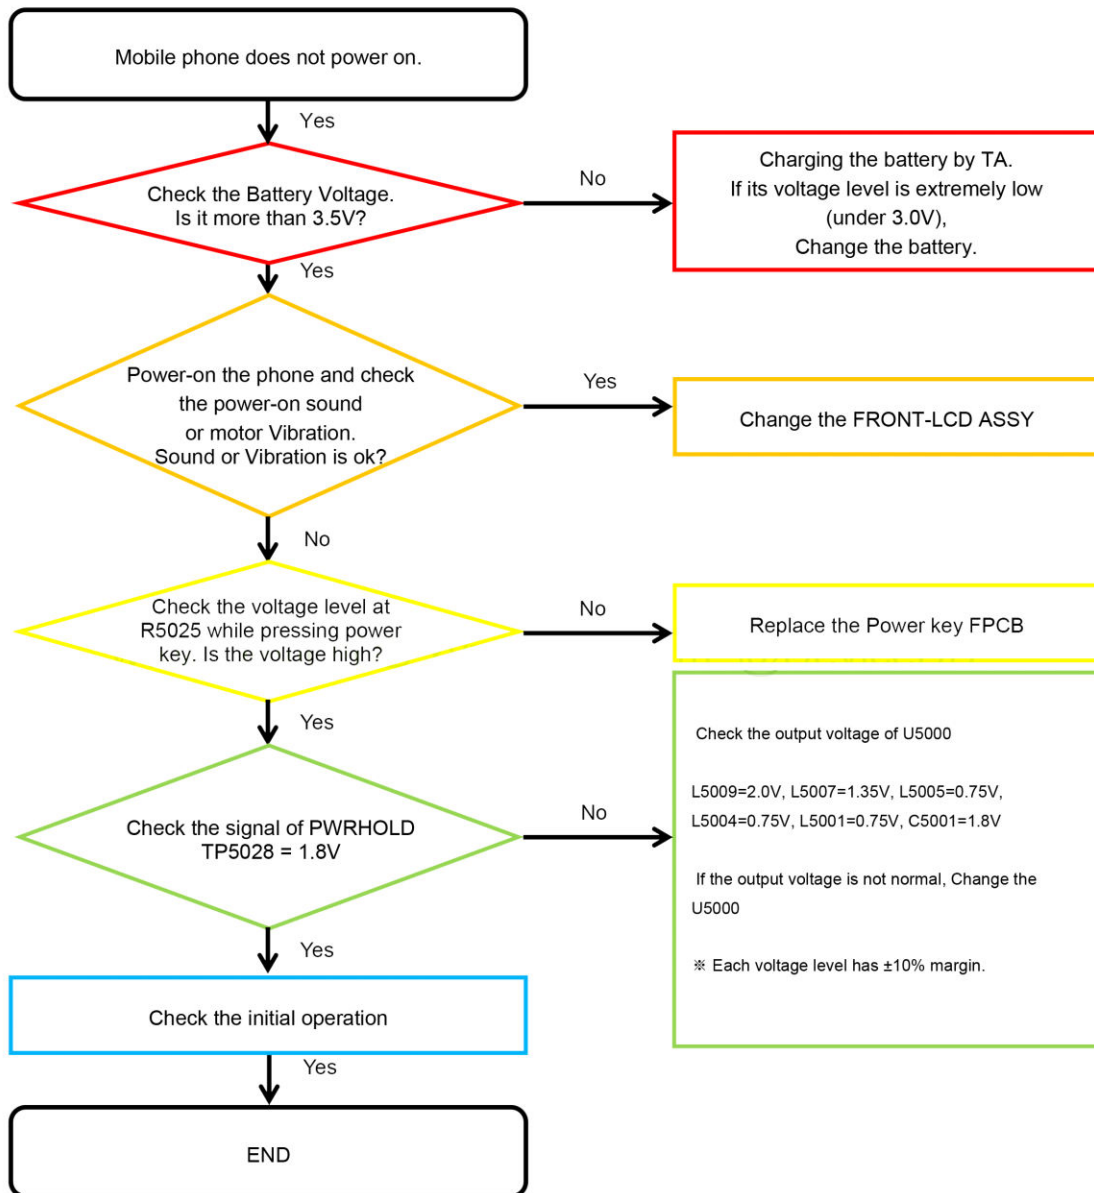


---

## 8. Level 3 Repair

---

### 8-4-2. Initial

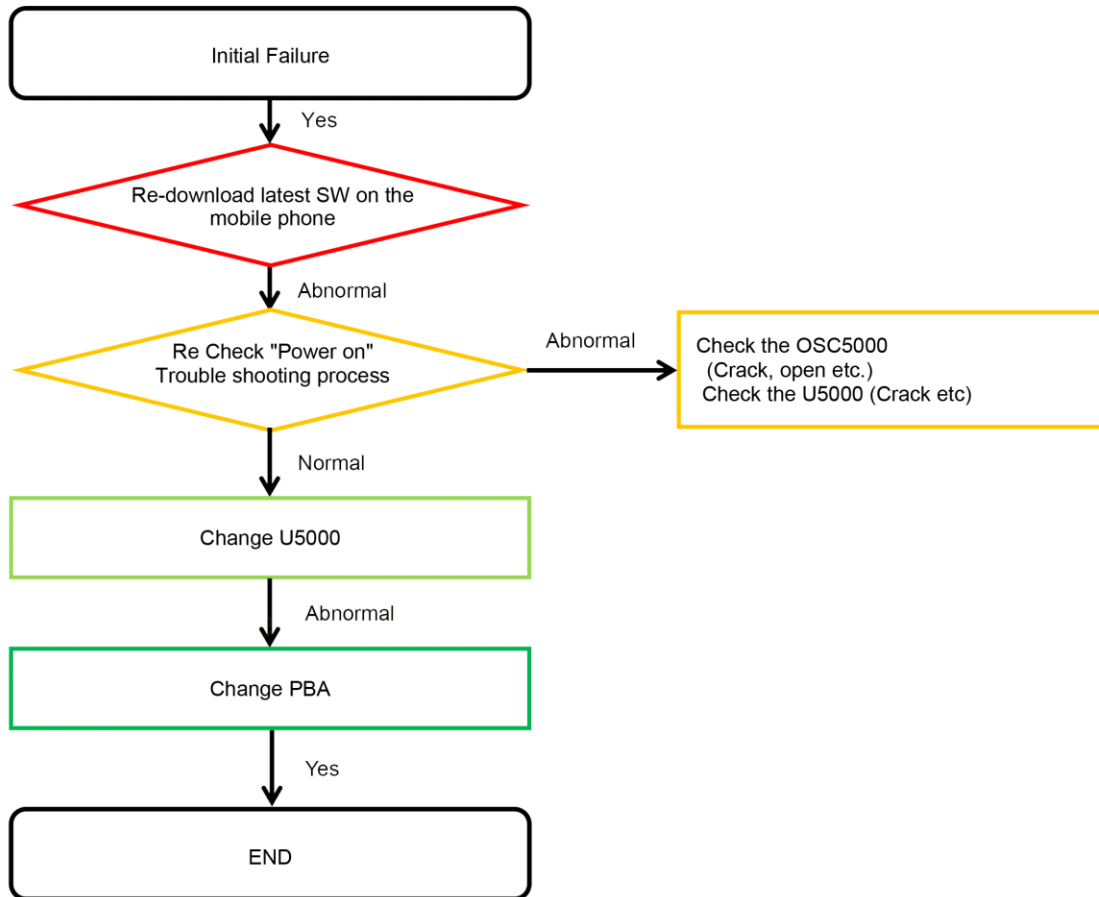


---

## 8. Level 3 Repair

---

### 8-4-3. SIM Part

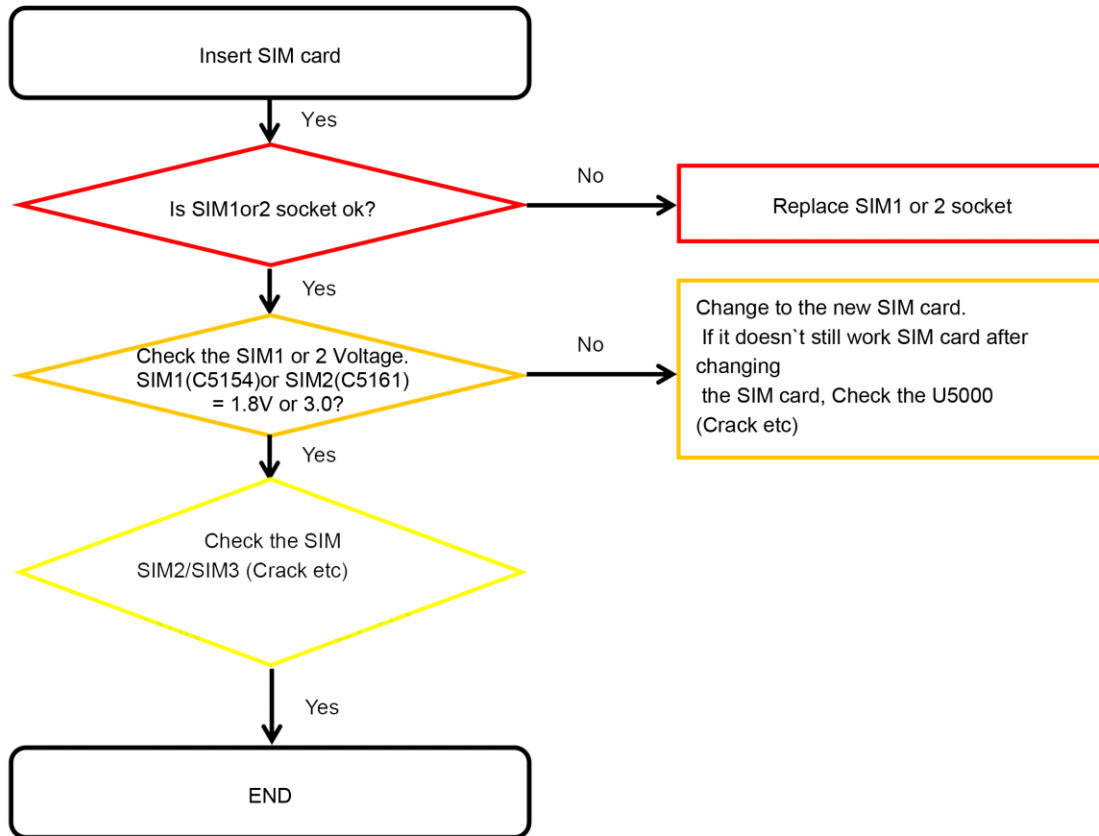


---

## 8. Level 3 Repair

---

### 8-4-4. T-Flash Part

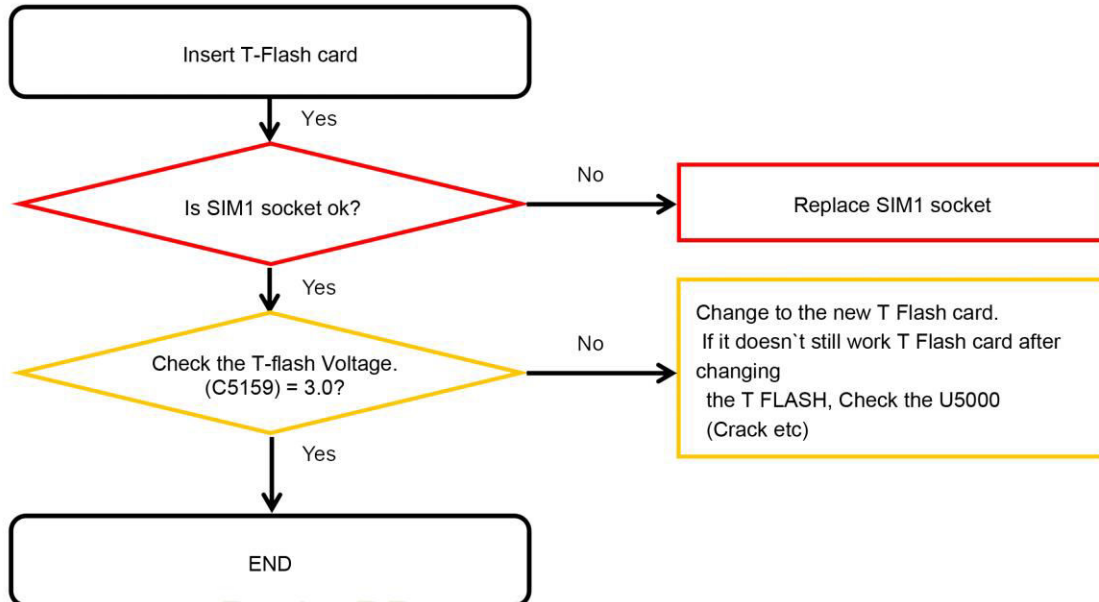


---

## 8. Level 3 Repair

---

### 8-4-5. Charging Part

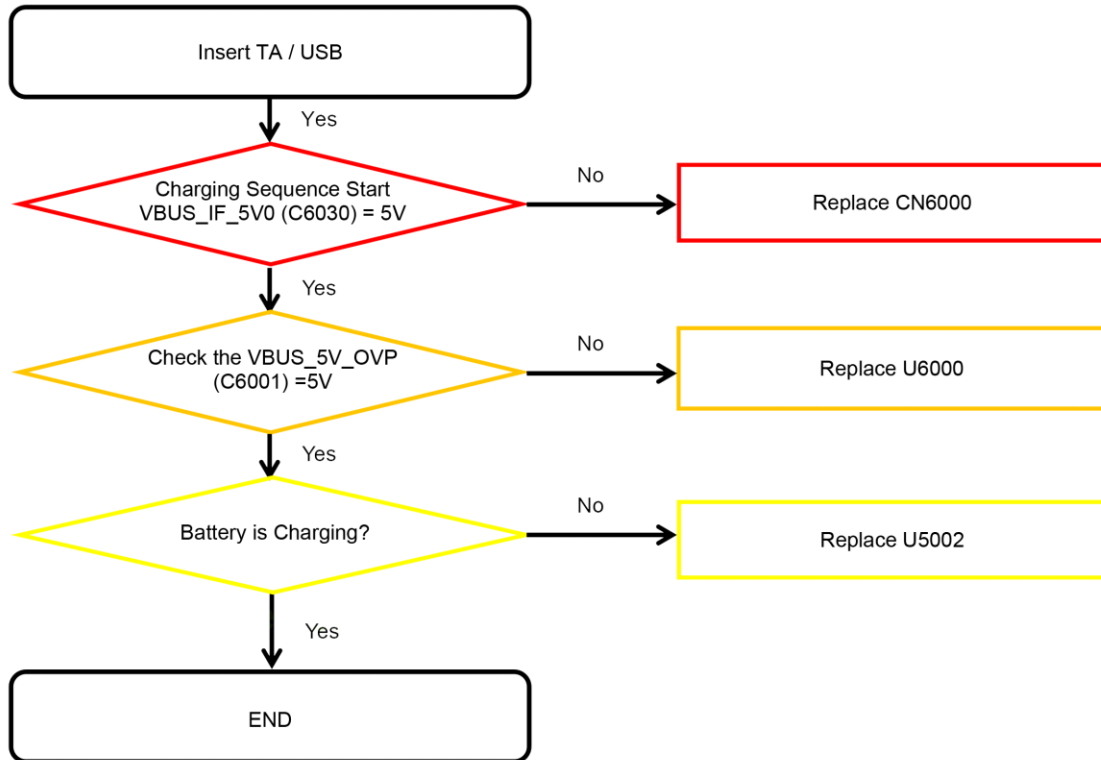


---

## 8. Level 3 Repair

---

### 8-4-6. Cable Charging Part

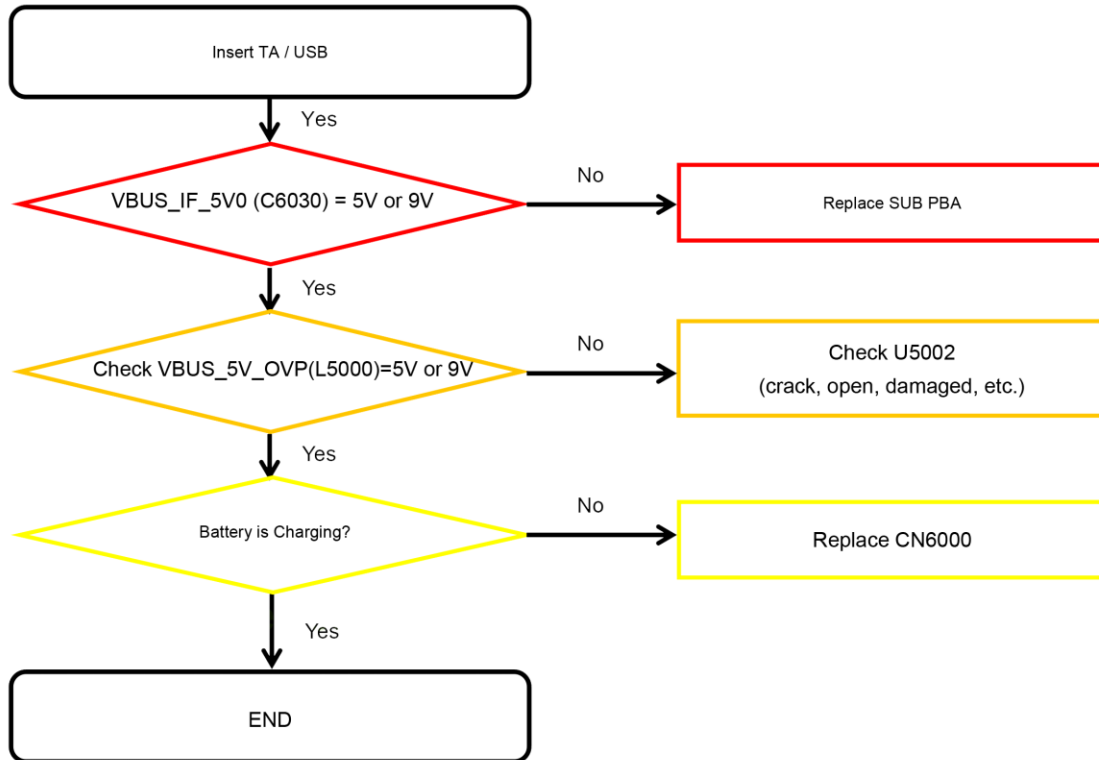




---

## 8. Level 3 Repair

---

### 8-4-7. Accel Sensor

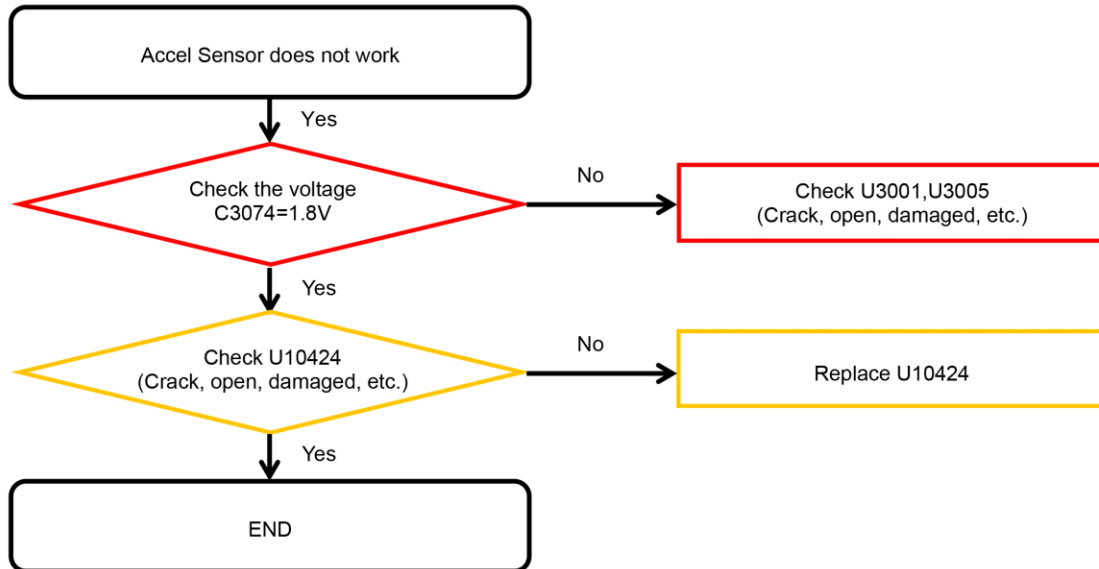


---

## 8. Level 3 Repair

---

### 8-4-8. Microphone Part - Main MIC

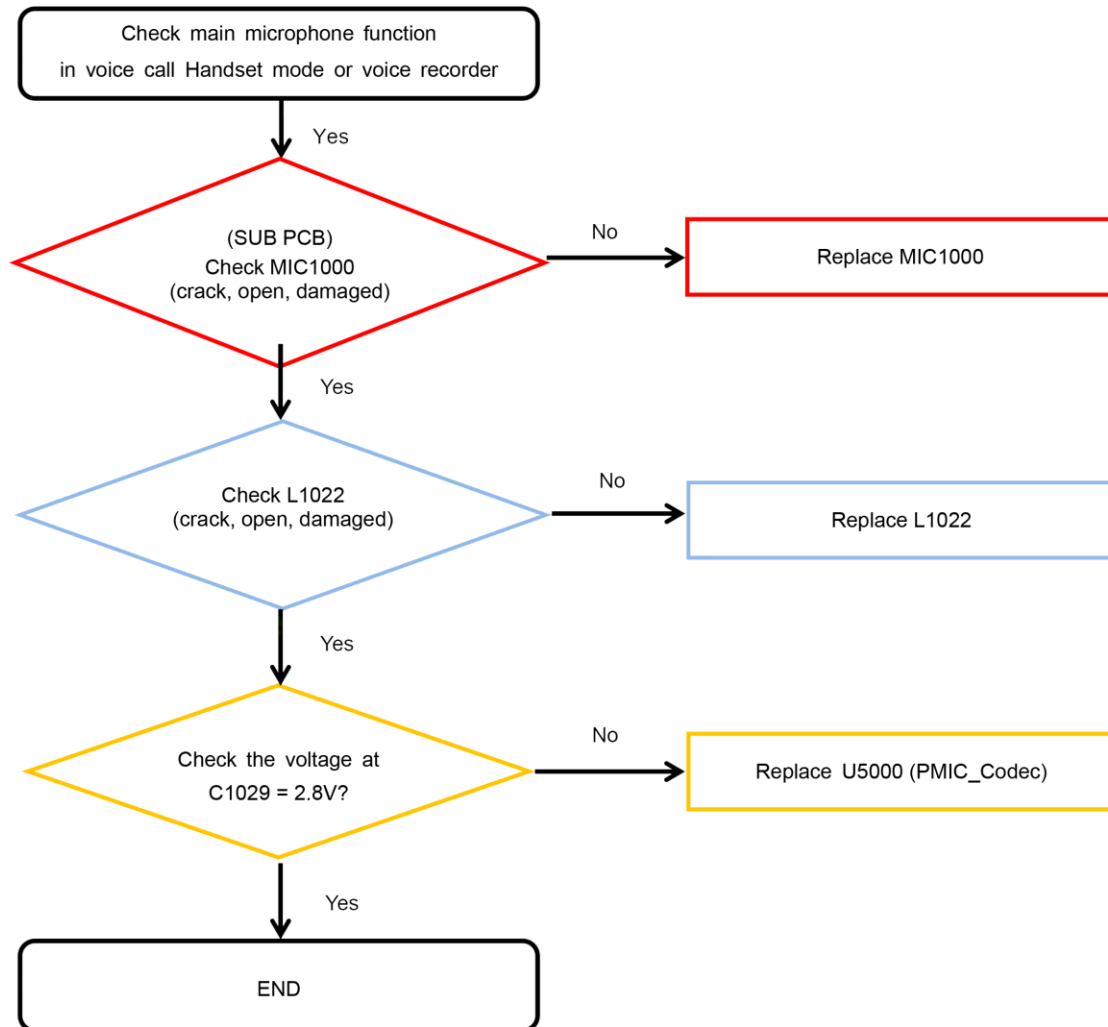


---

## 8. Level 3 Repair

---

### 8-4-9. Speaker Part

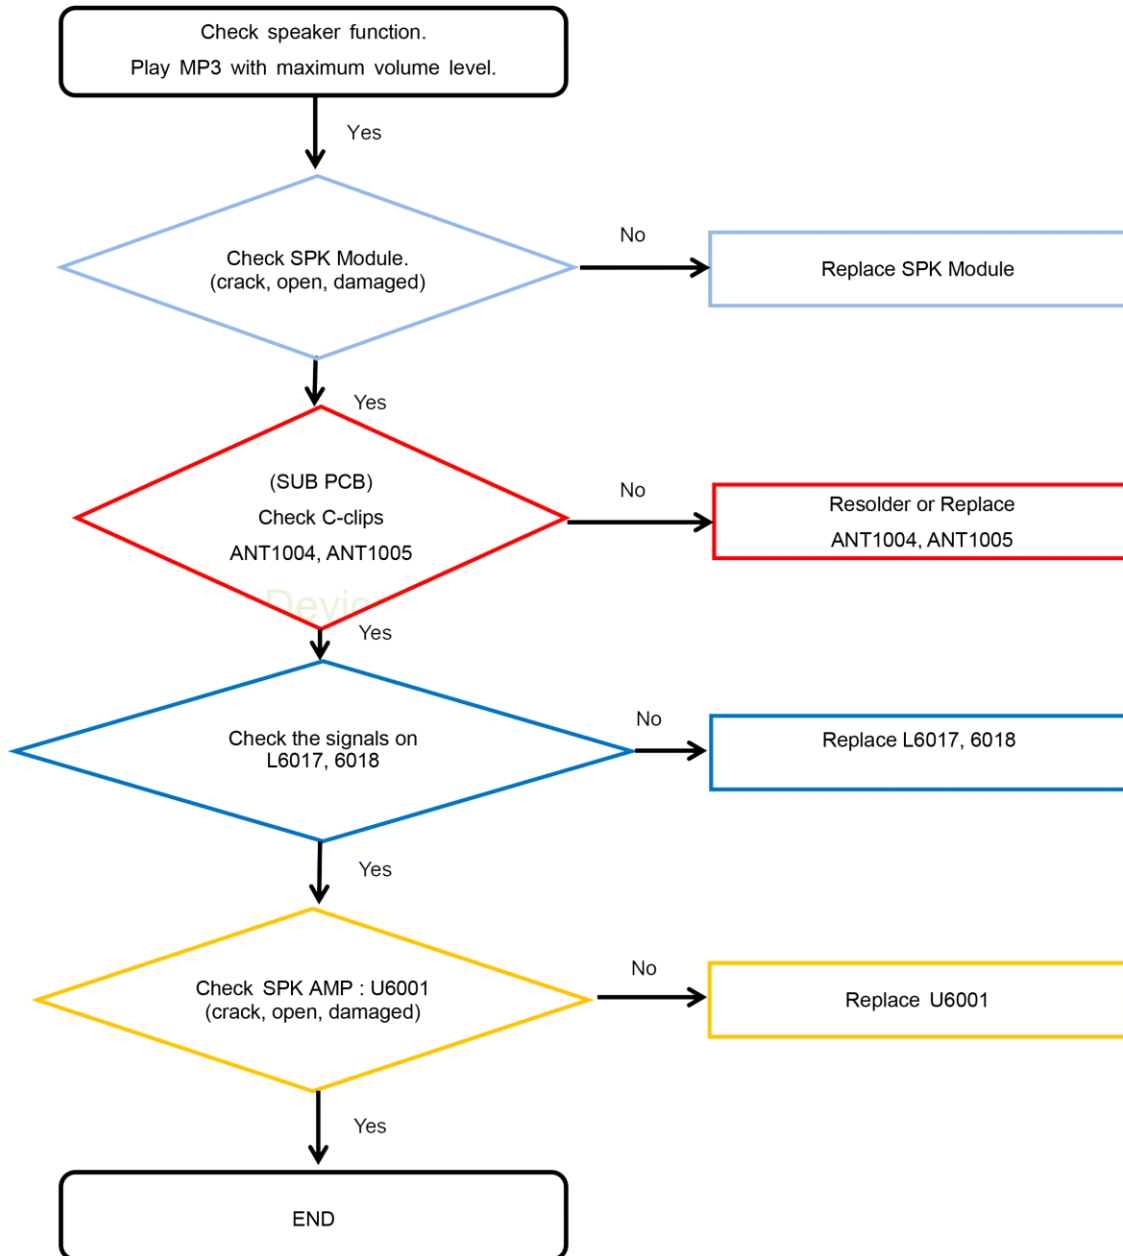


---

## 8. Level 3 Repair

---

### 8-4-10. Receiver Part

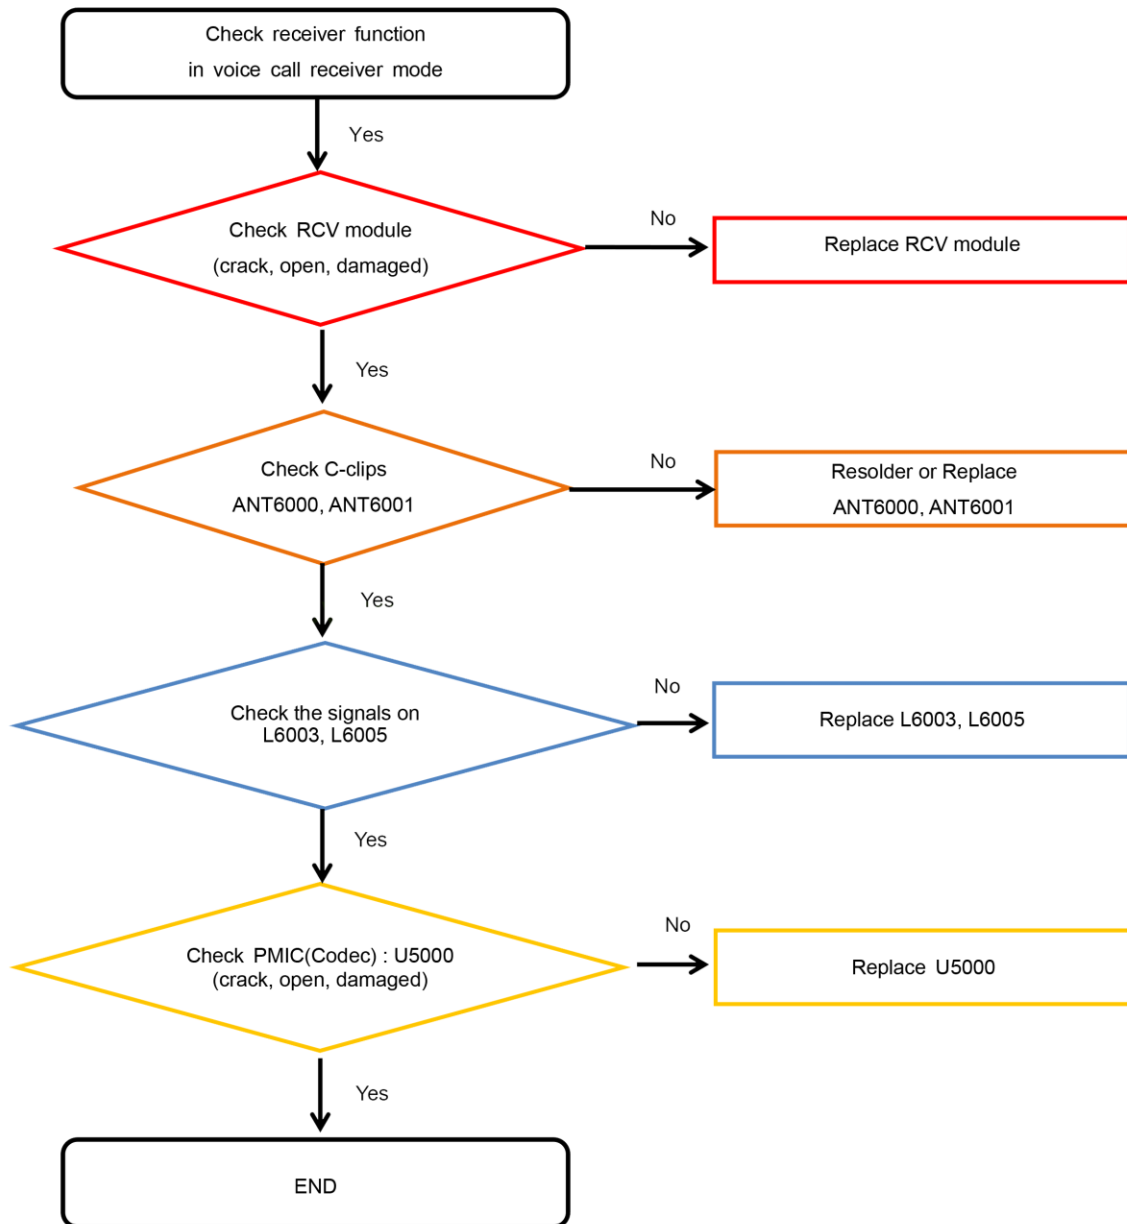


---

## 8. Level 3 Repair


---

### 8-4-11. BT/WIFI

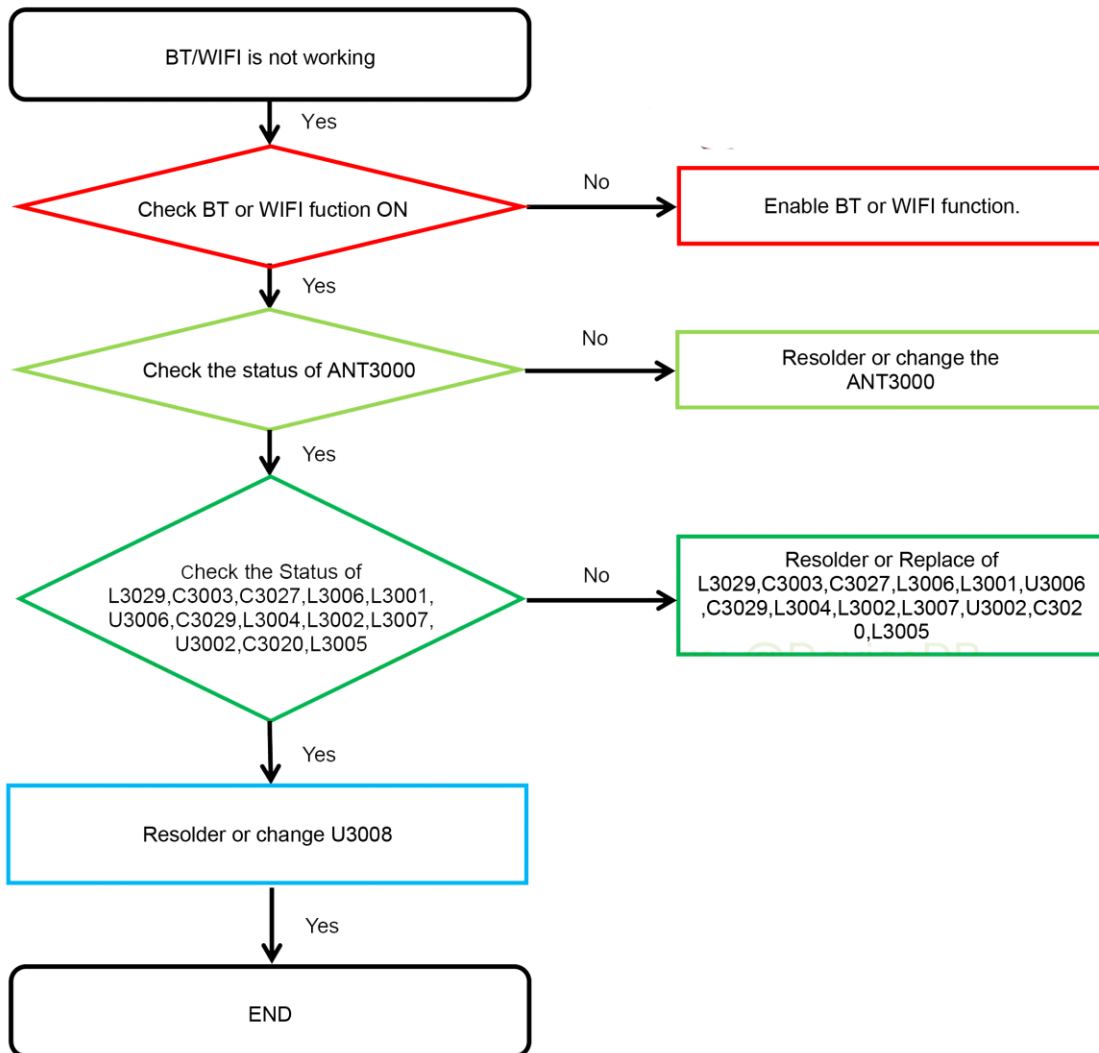

## 8. Level 3 Repair

### 8-4-12. GPS

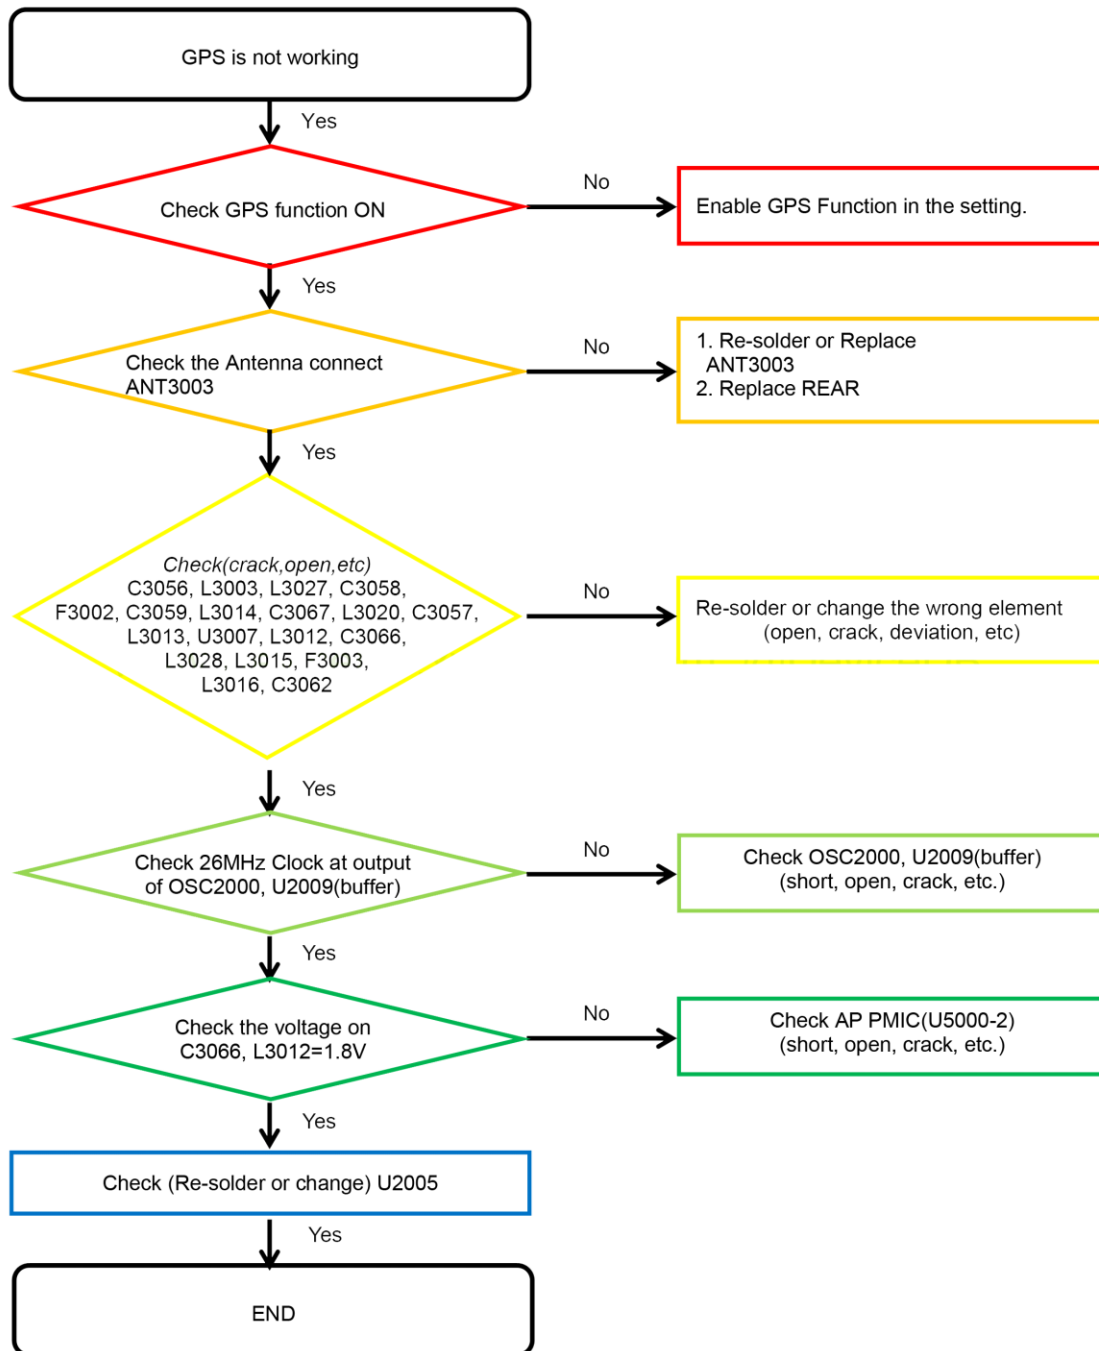


---

## 8. Level 3 Repair

---

### 8-4-13. FM radio part

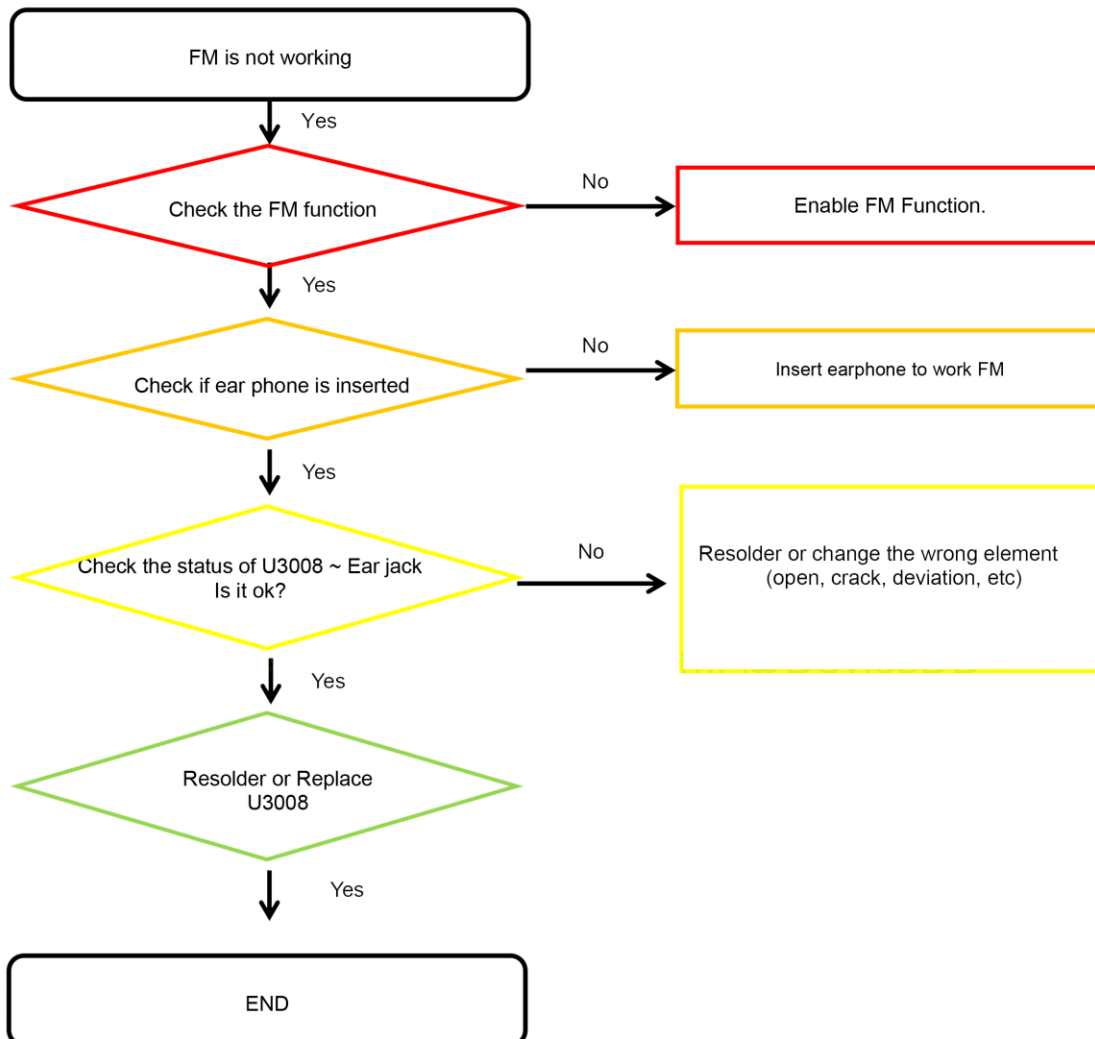


---

## 8. Level 3 Repair

---

### 8-4-14. NFC

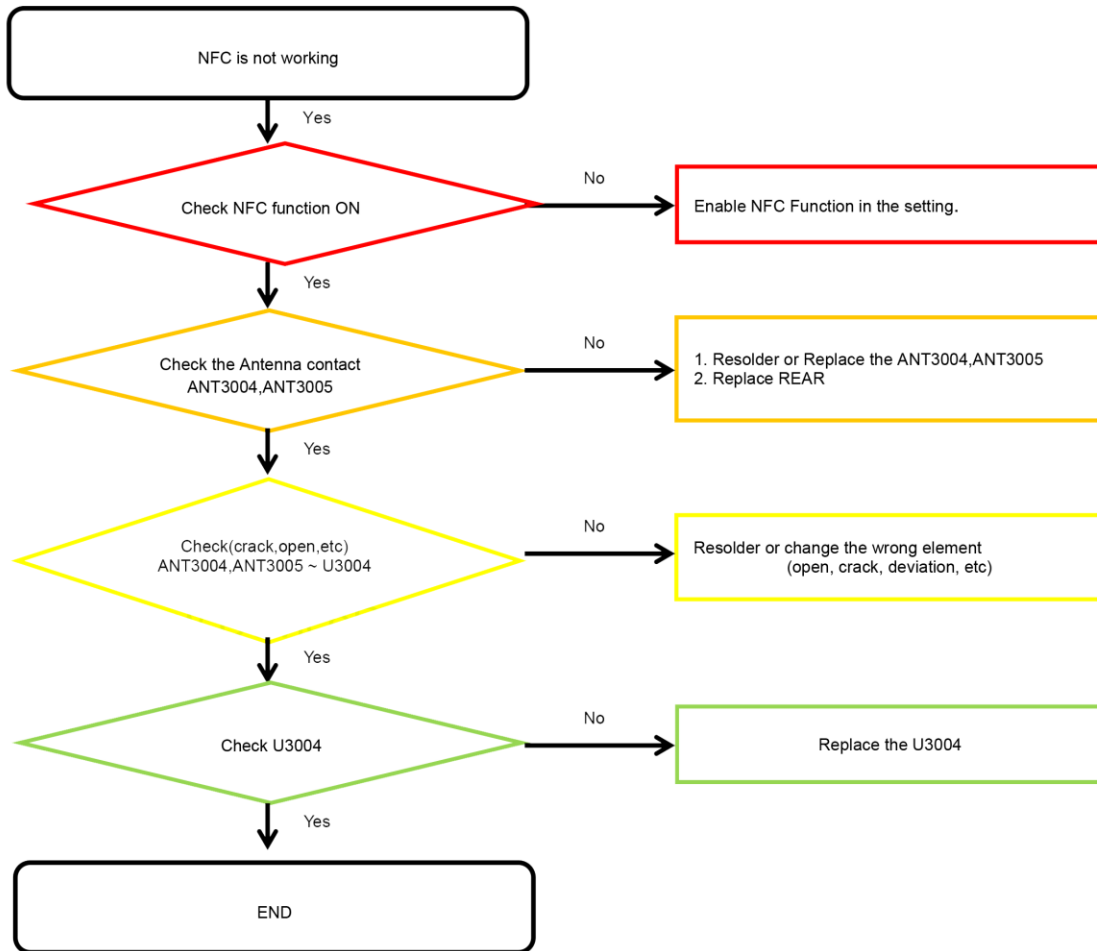




---

## 8. Level 3 Repair

---

### 8-4-15. Display

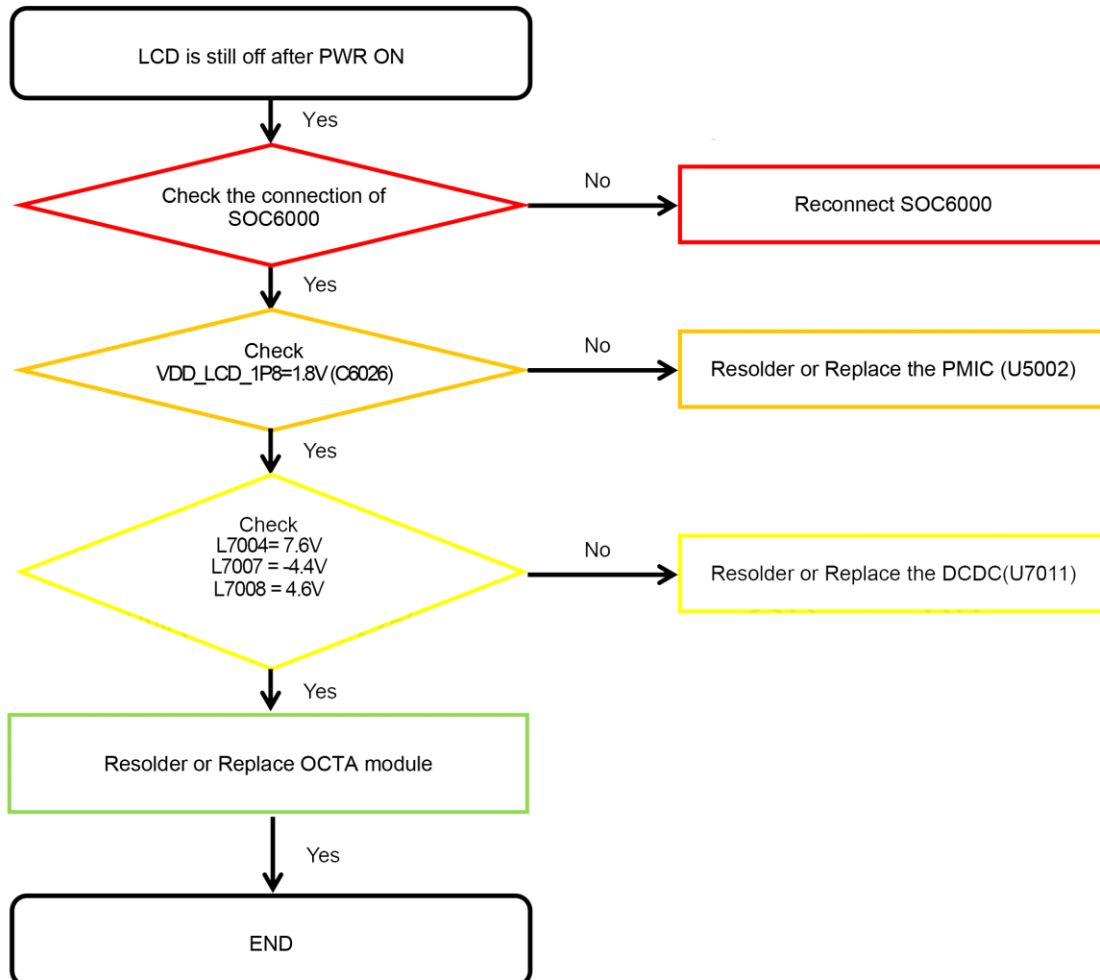


---

## 8. Level 3 Repair

---

### 8-4-16. Rear CAMERA

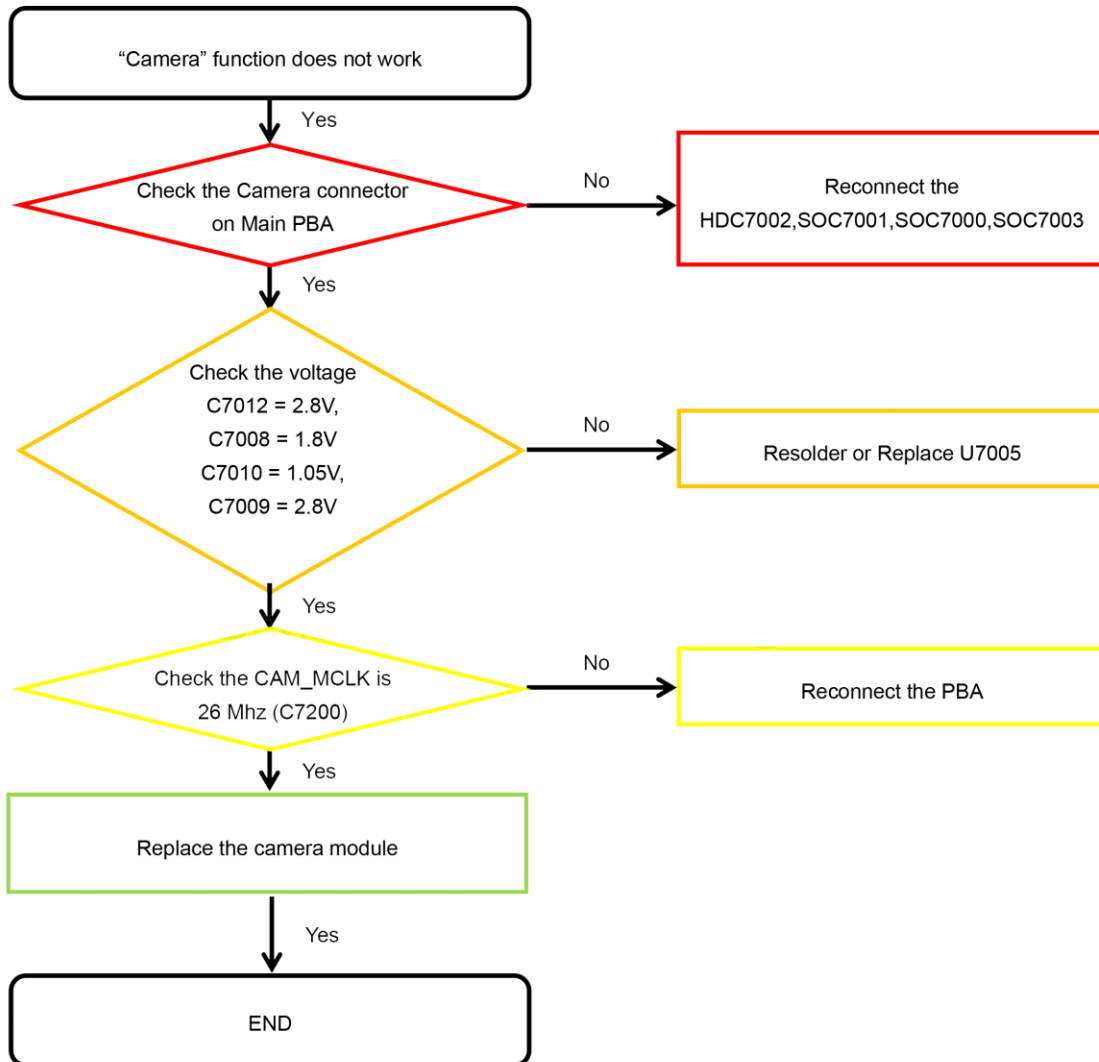


---

## 8. Level 3 Repair

---

### 8-4-17. Front CAMERA

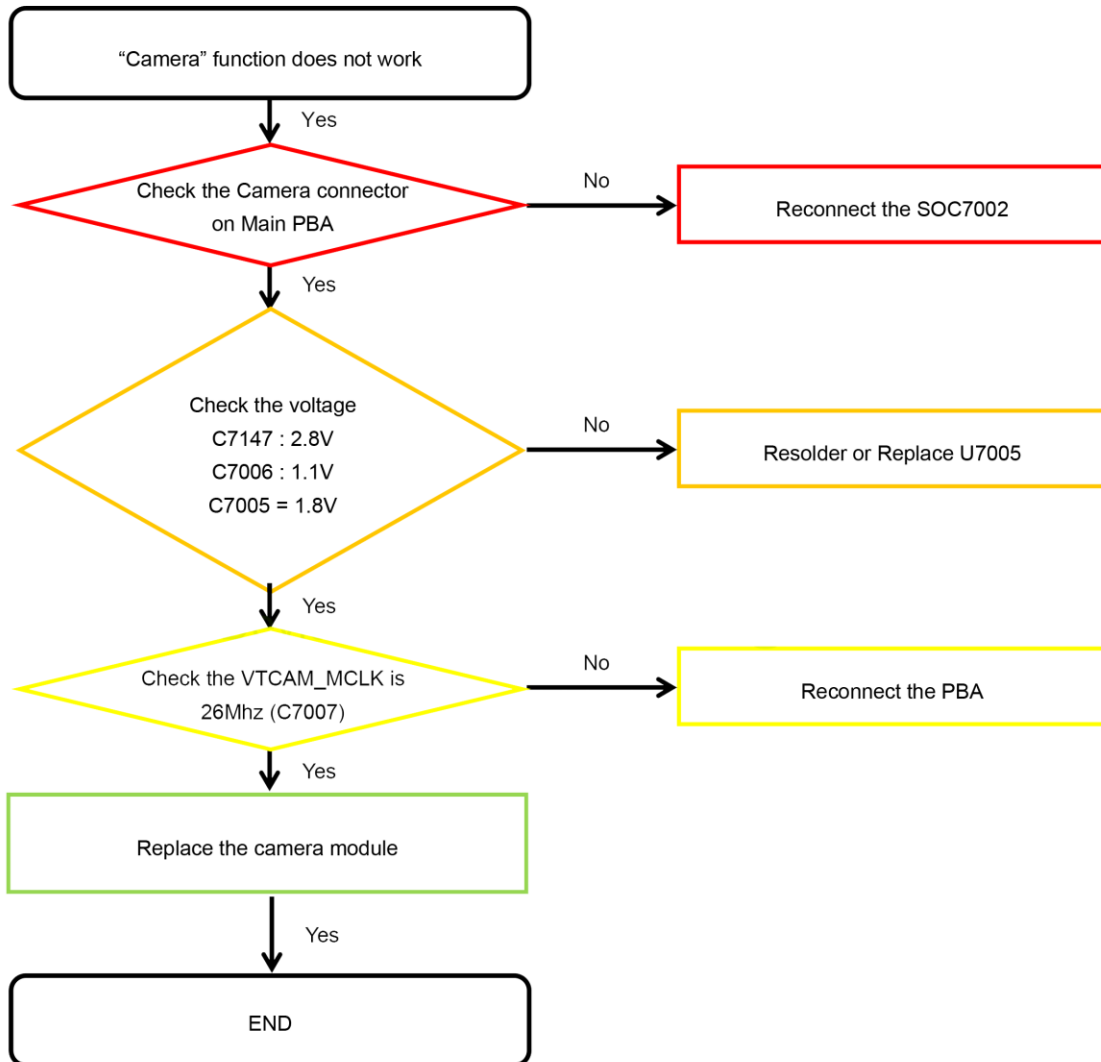


---

## 8. Level 3 Repair

---

### 8-4-18. Motor

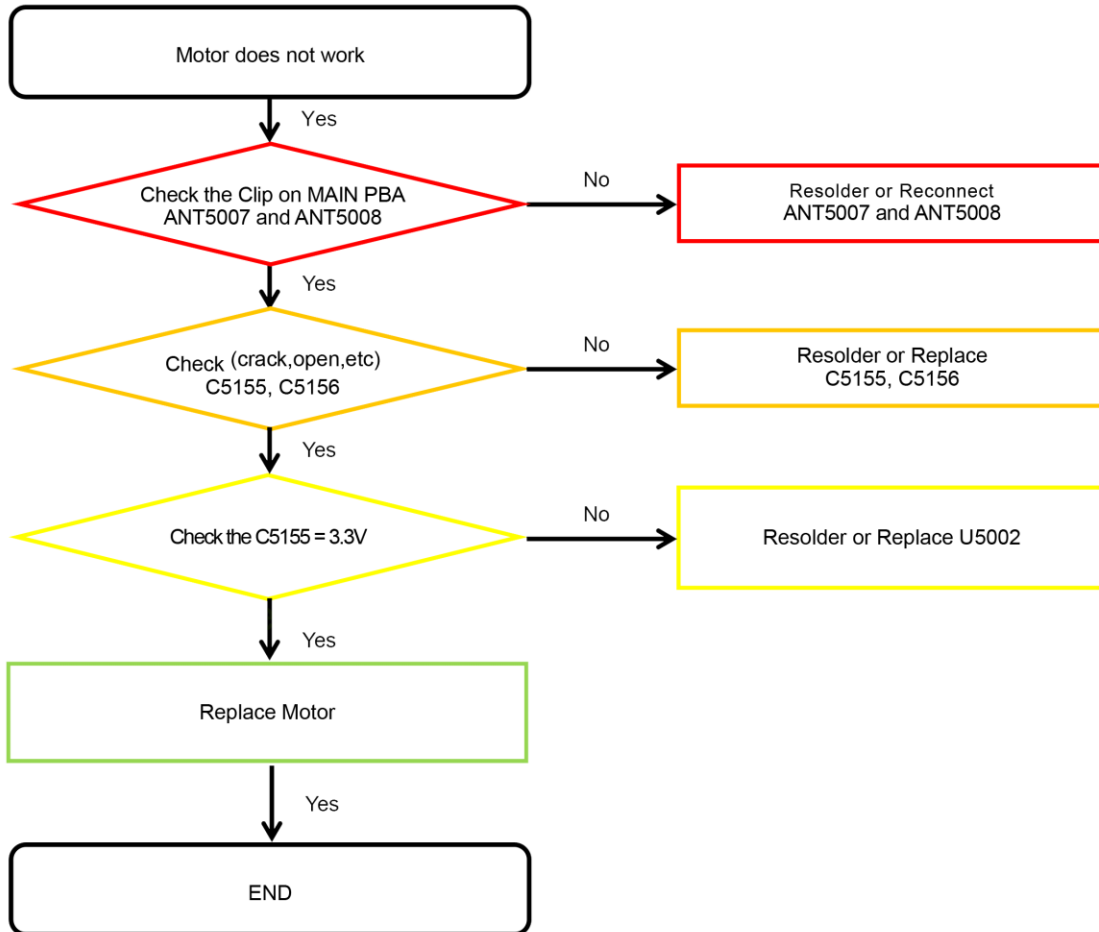


---

## 8. Level 3 Repair

---

### 8-4-19. GSM/WCDMA/LTE1,2,3,5,8,20,28

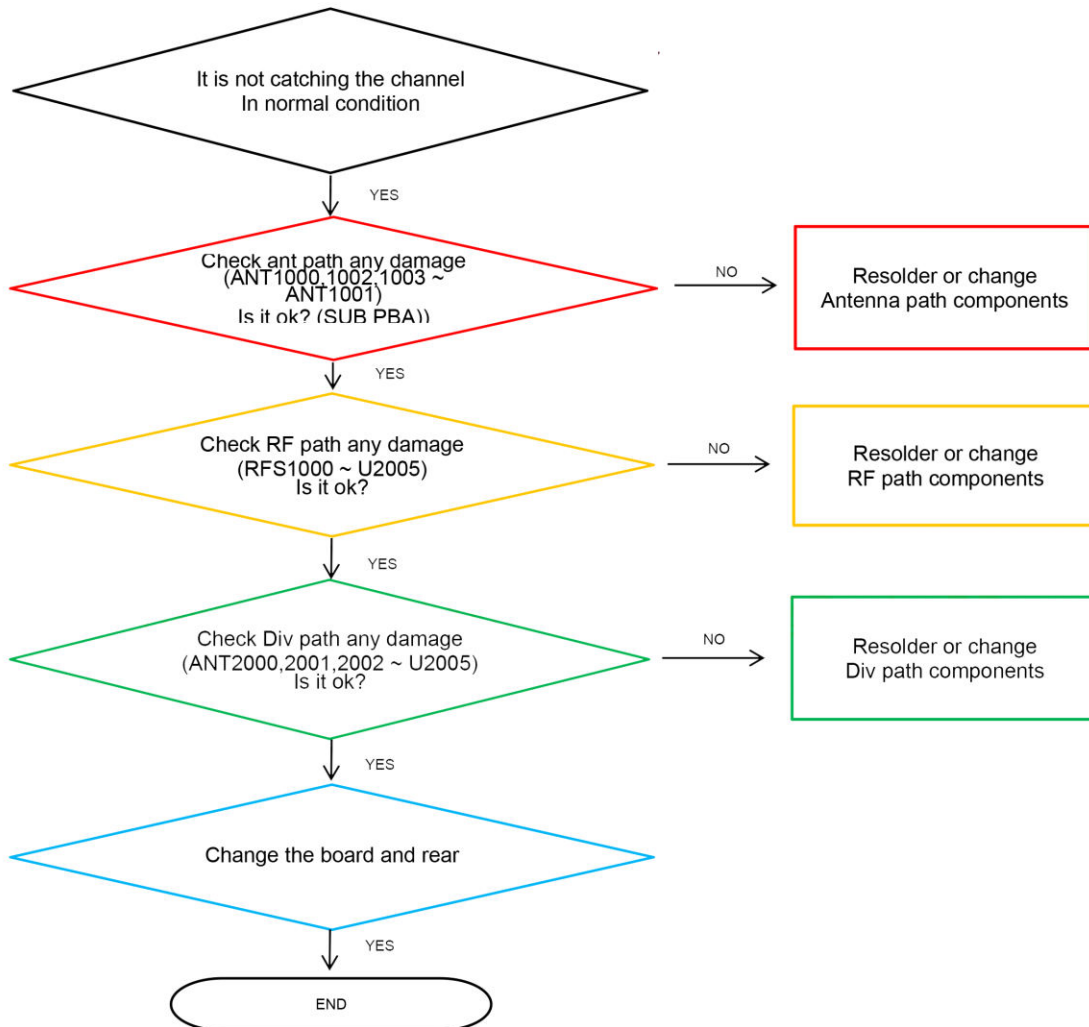

---

## 8. Level 3 Repair

---

8-4-20. LTE 7, 38, 40, 41

