


8. Level 3 Repair

8-3. Fluxograma de solução de problemas.

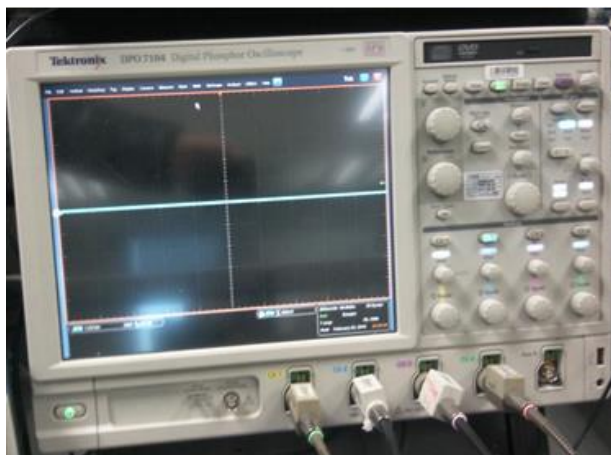

OSCILOSCOPIO




MULTIMETRO



FONTE DE BANCADA



CHAVES E PINÇAS

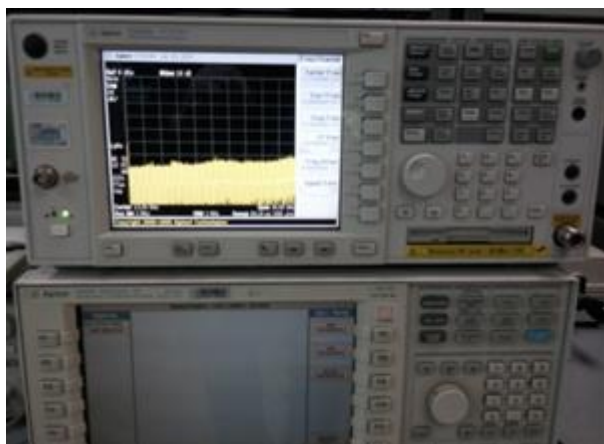

8960 & Analisador de Espectro




ESTAÇÃO DE SOLDA

8. Level 3 Repair


8-4-1. POWER ON / LIGANDO O CELULAR

DIGITAL BOARD

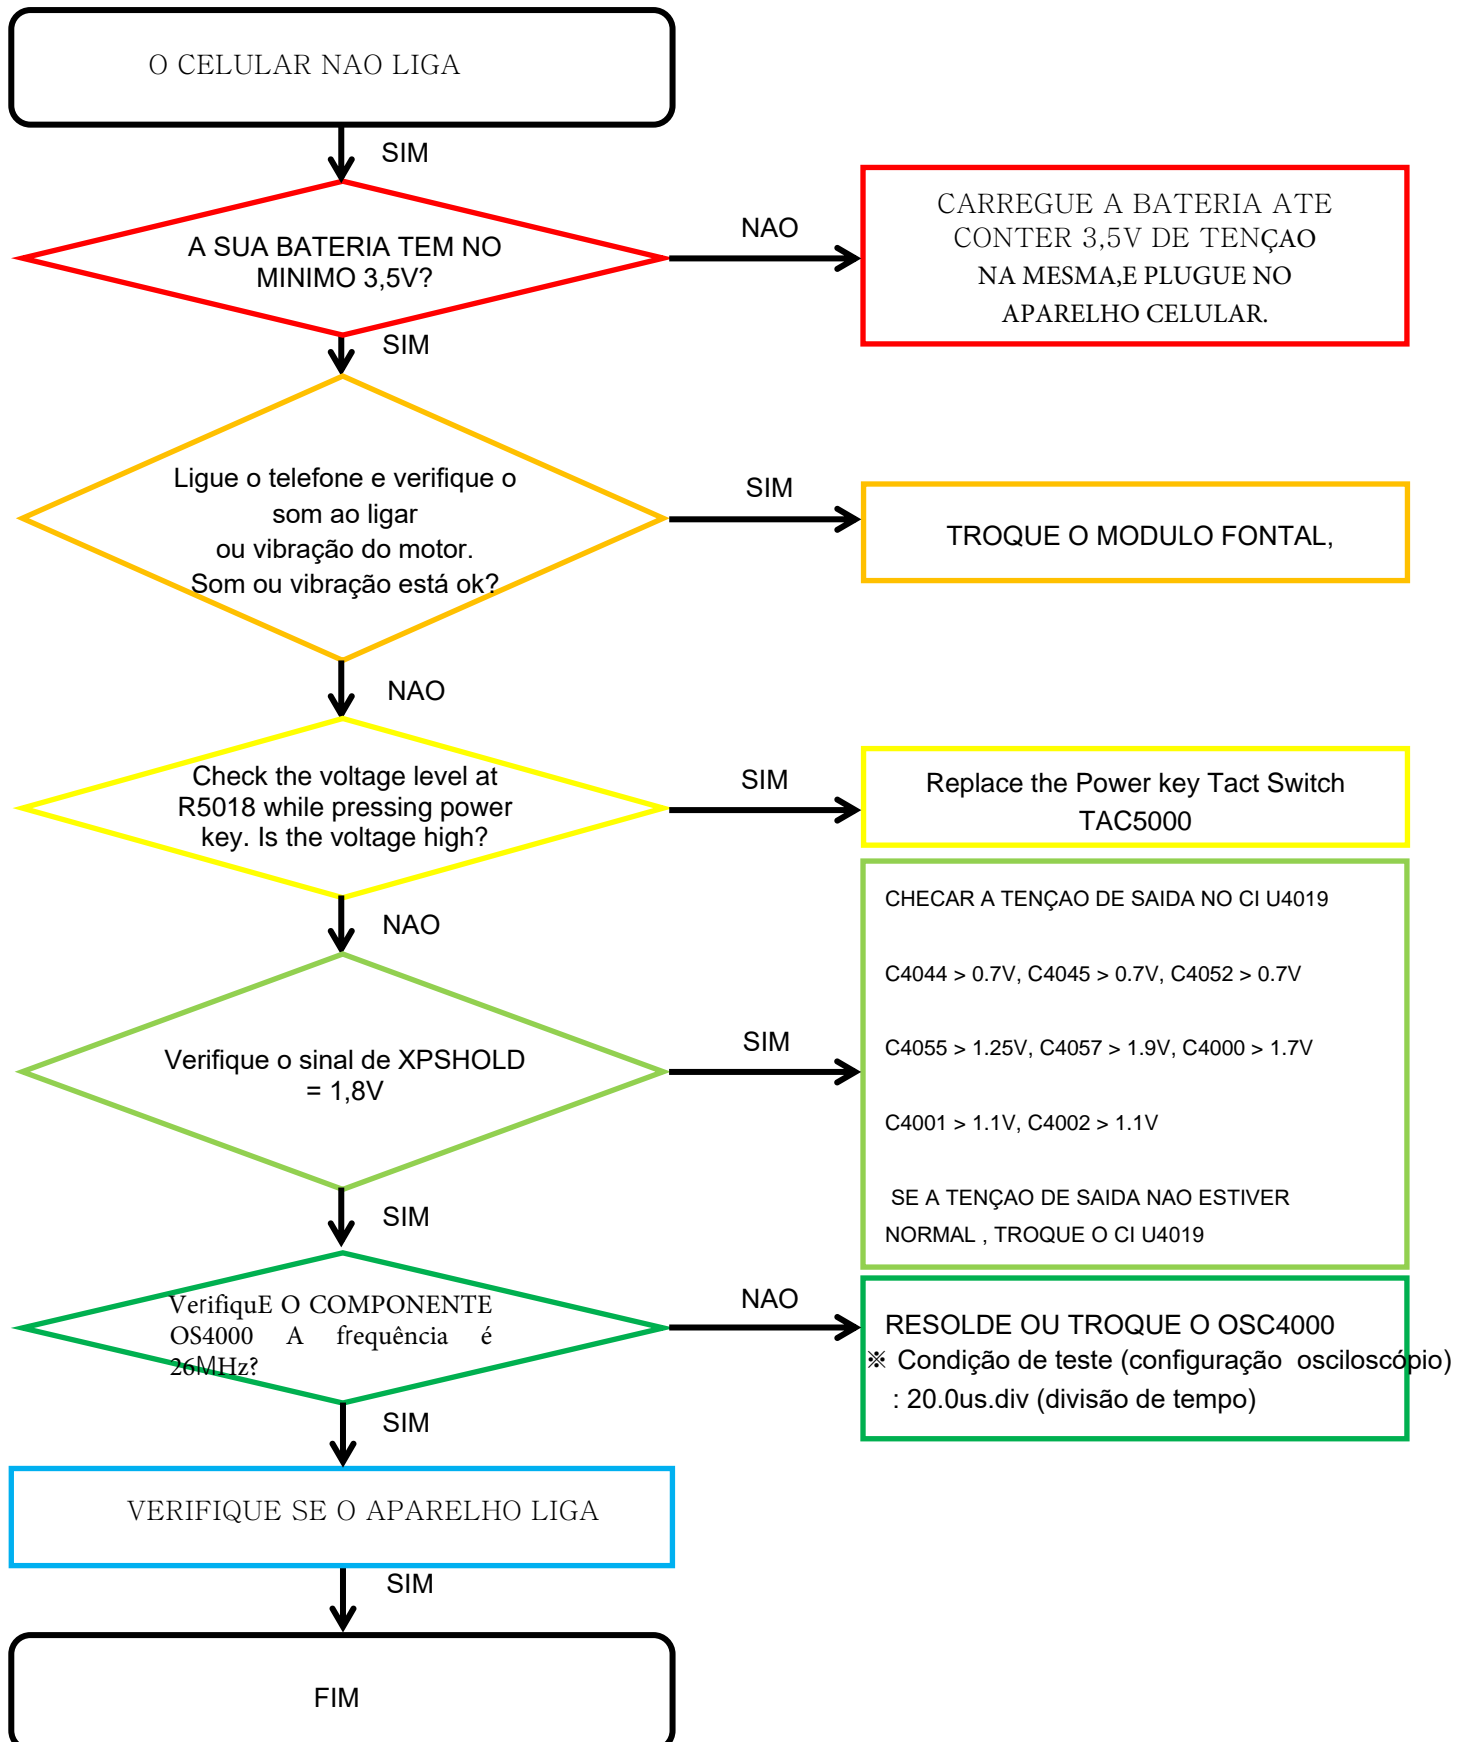


8. Level 3 Repair

8-4-2. INICIALIZAÇÃO

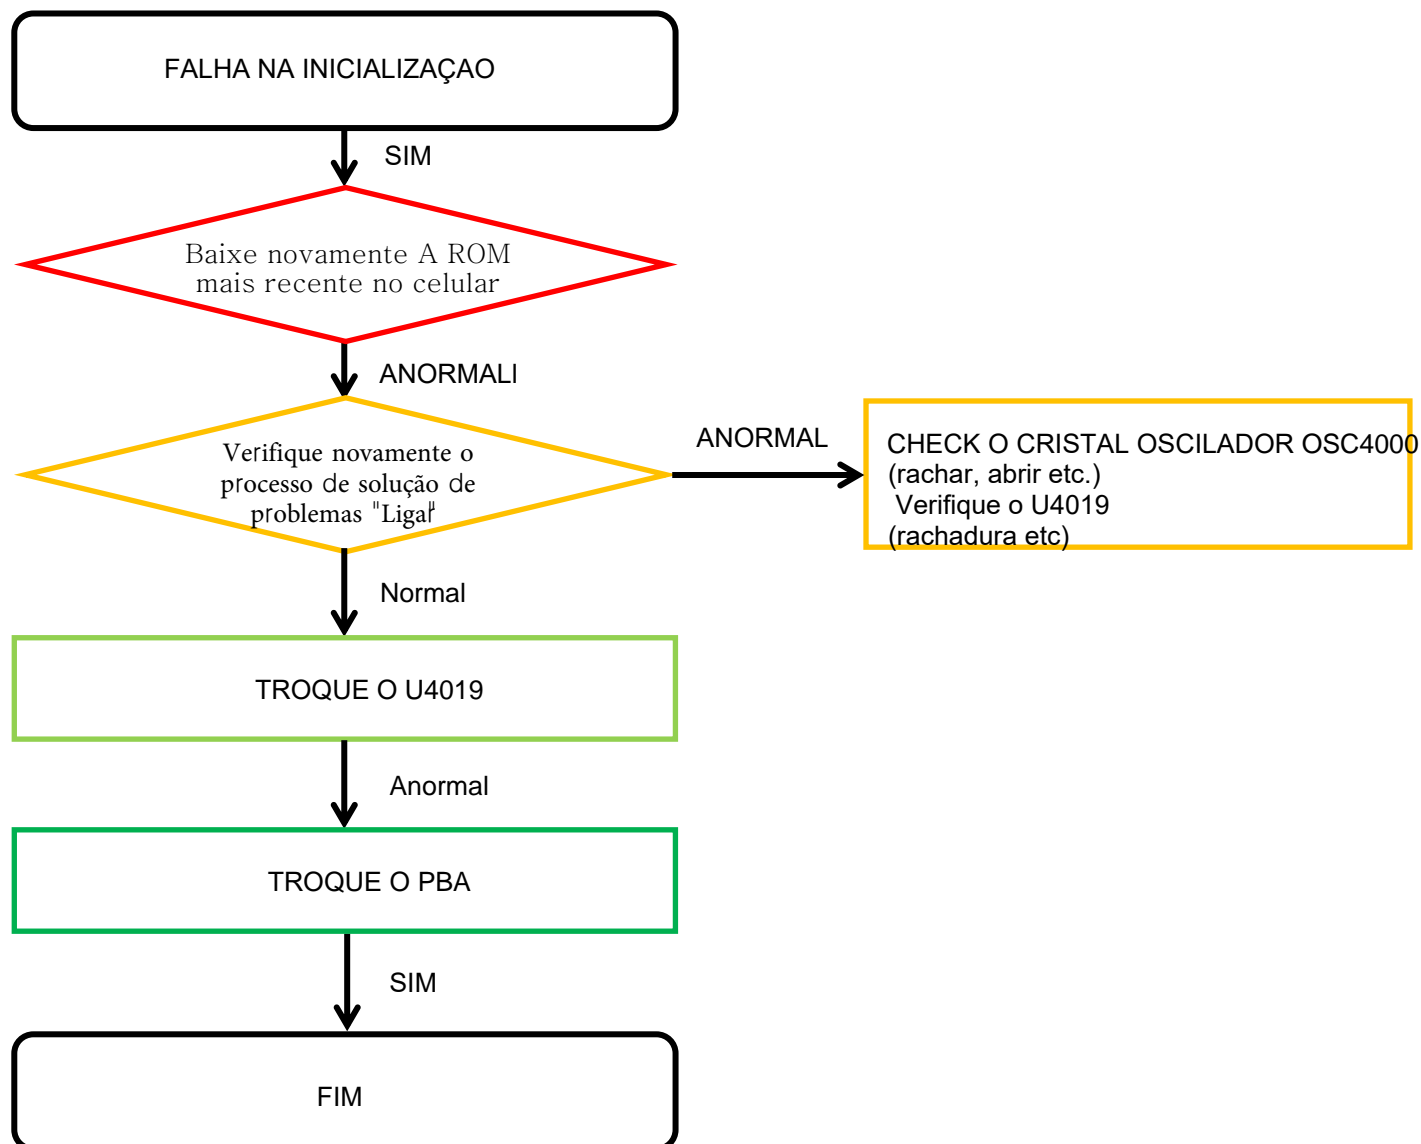


8. Level 3 Repair

8-4-3. SIM Part/ CHIP

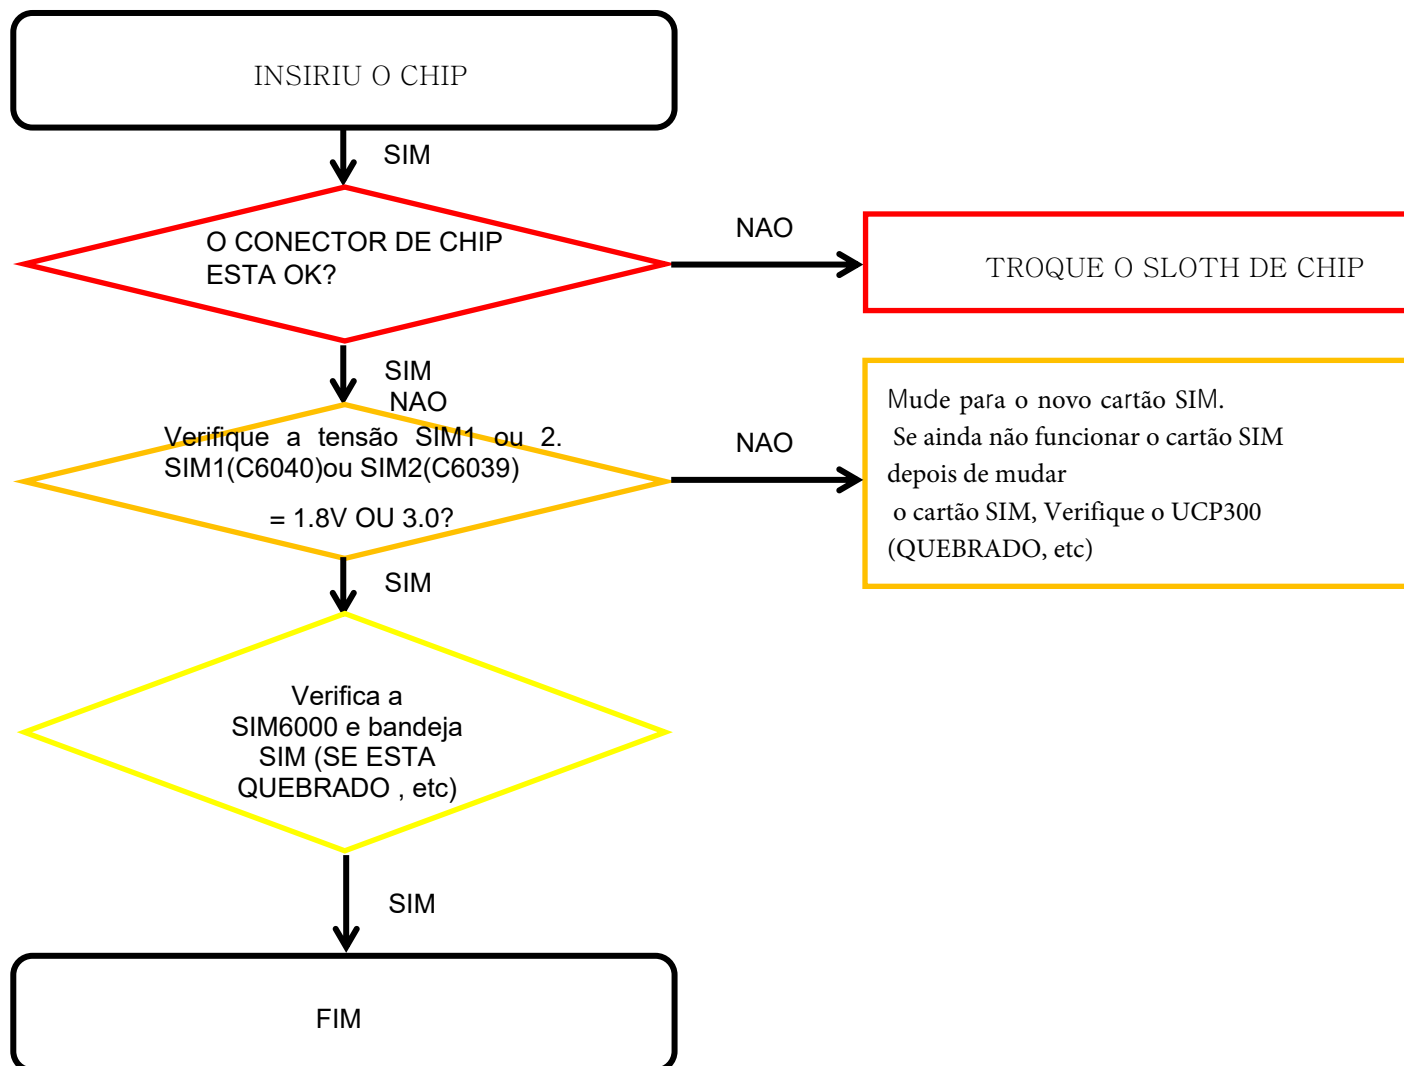


8. Level 3 Repair

8-4-4. T-Flash Part/ CARTAO DE MEMORIA

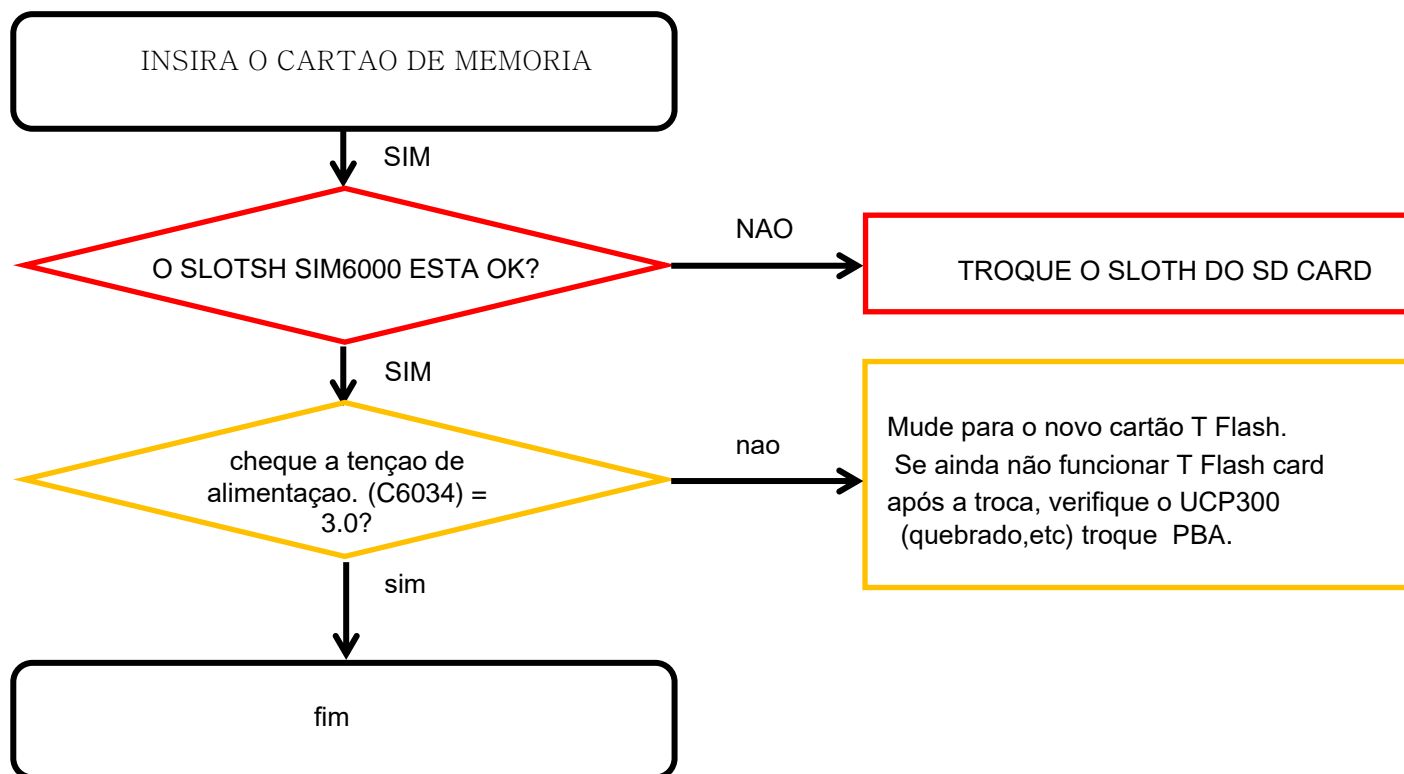


8. Level 3 Repair

8-4-5. Charging Part/ carregamento

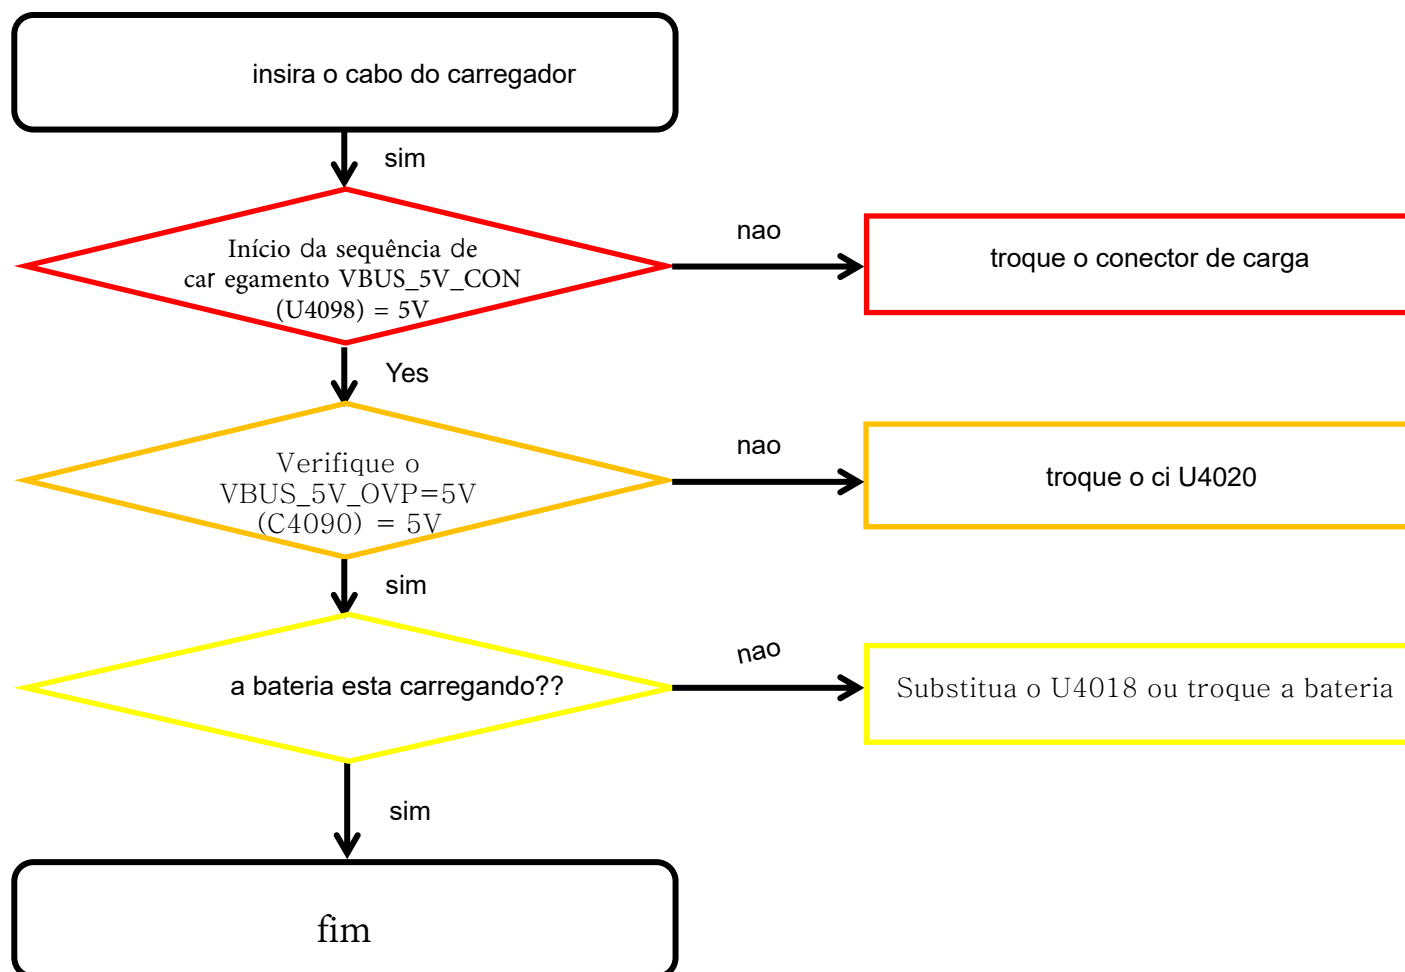


8. Level 3 Repair

8-4-6. OTG

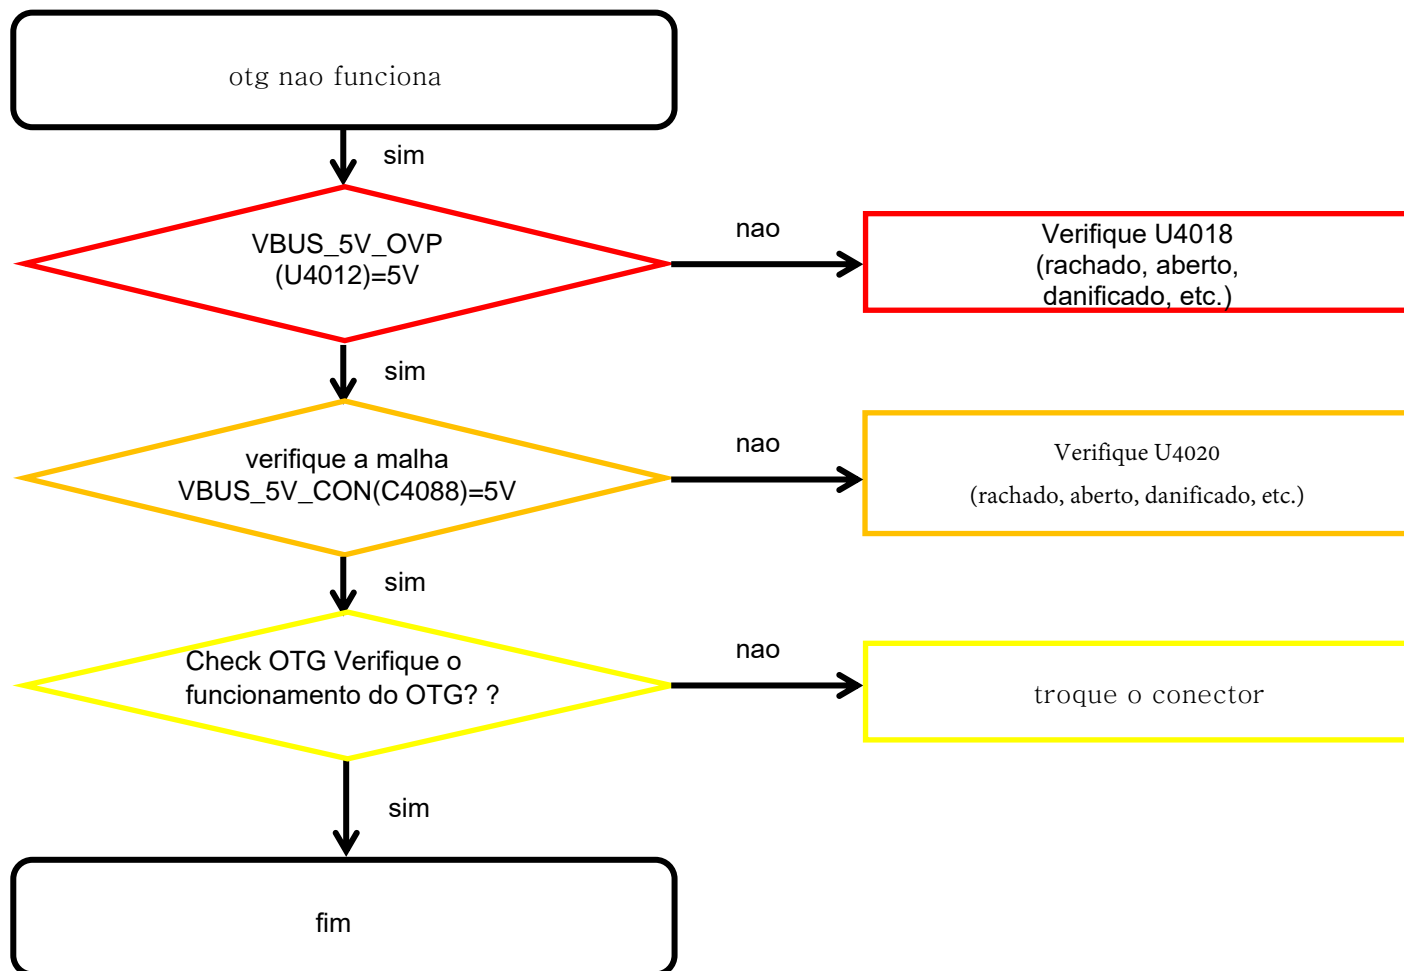


8. Level 3 Repair

8-4-7-1. Accel Sensor/ 8-4-7-1. Sensor de aceleração

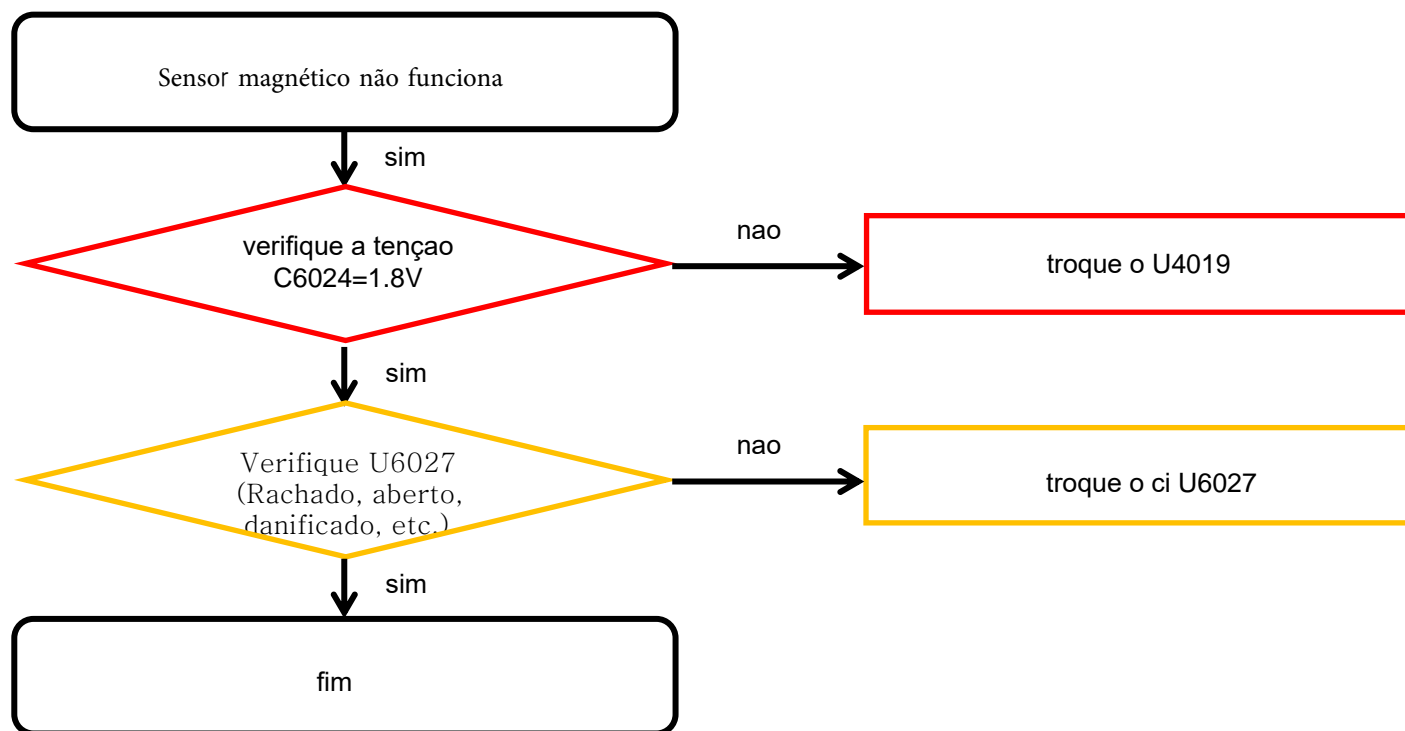


8. Level 3 Repair

8-4-7-2. Proximity sensor/ sensor de aproximação

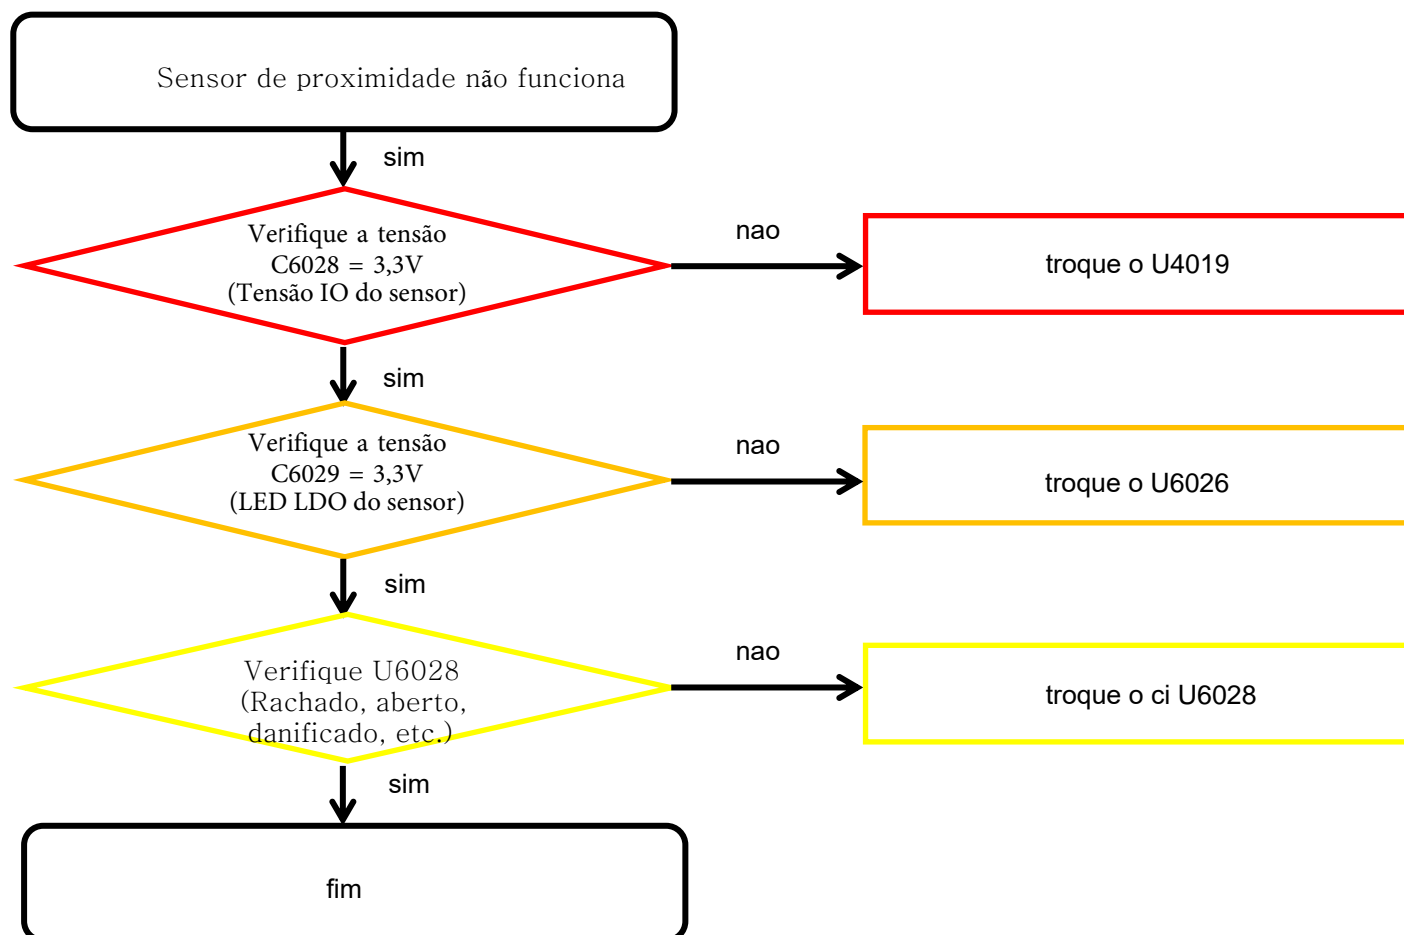


8. Level 3 Repair

8-4-8. Microphone Part - Main MIC/ microfone principal

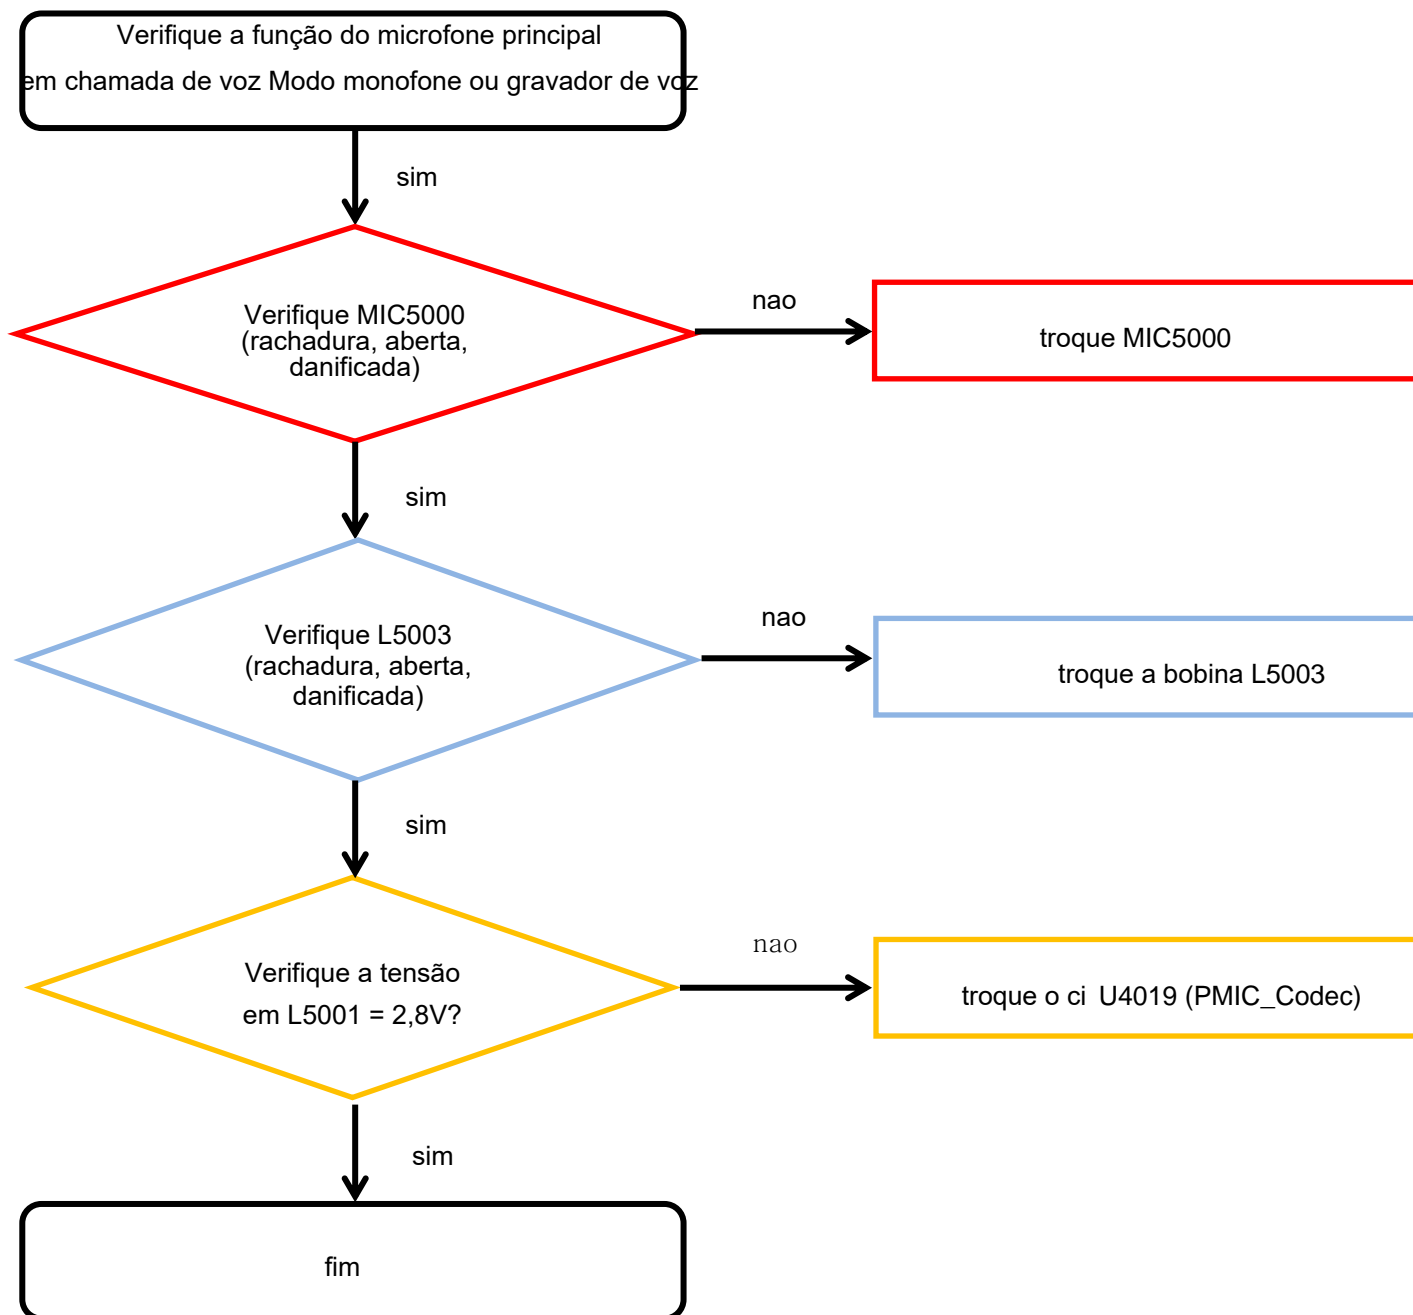


8. Level 3 Repair

8-4-9. Speaker Part/ auto falante

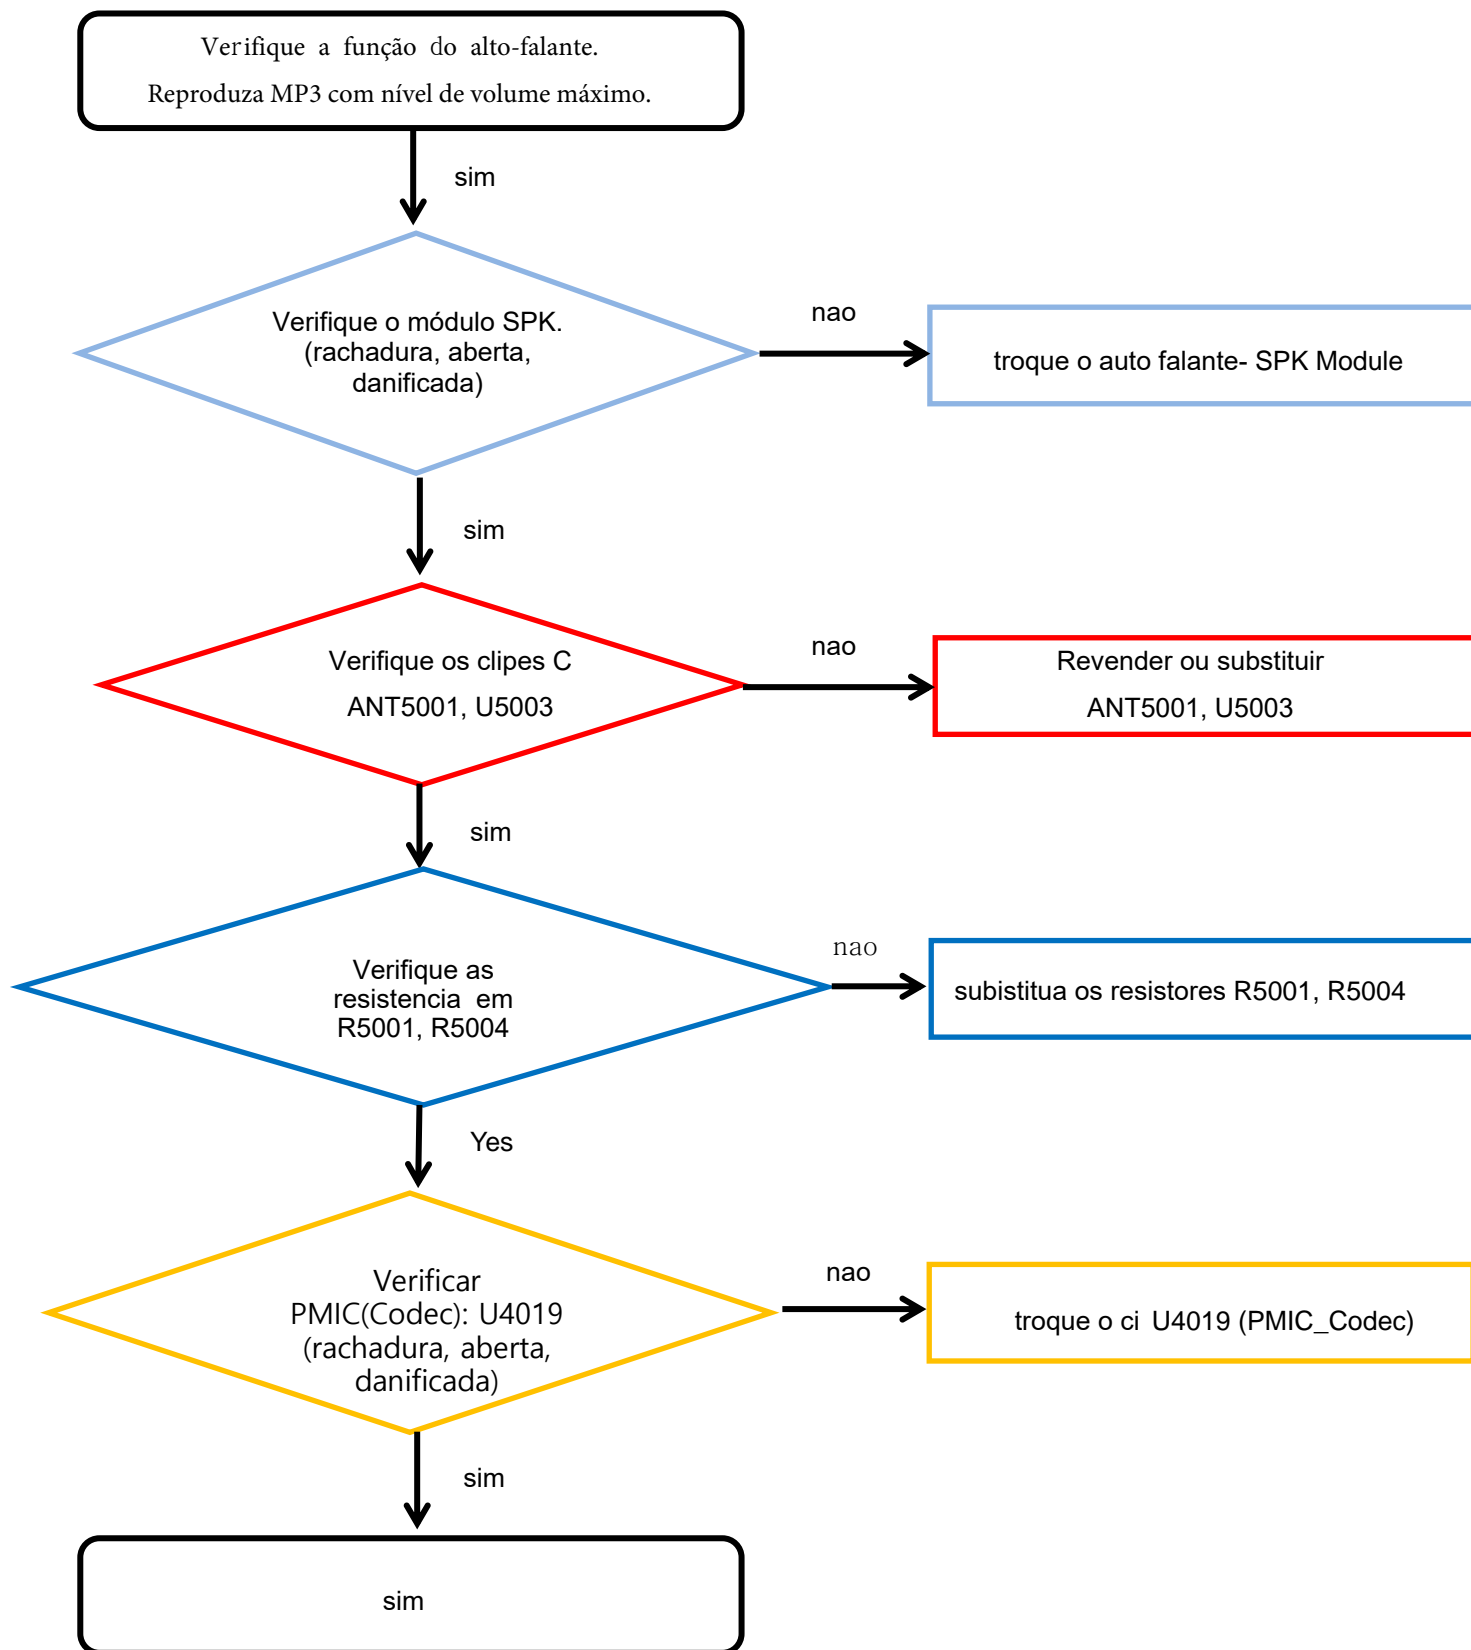


8. Level 3 Repair

8-4-10. Receiver Part/ 8-4-10. Parte Receptora

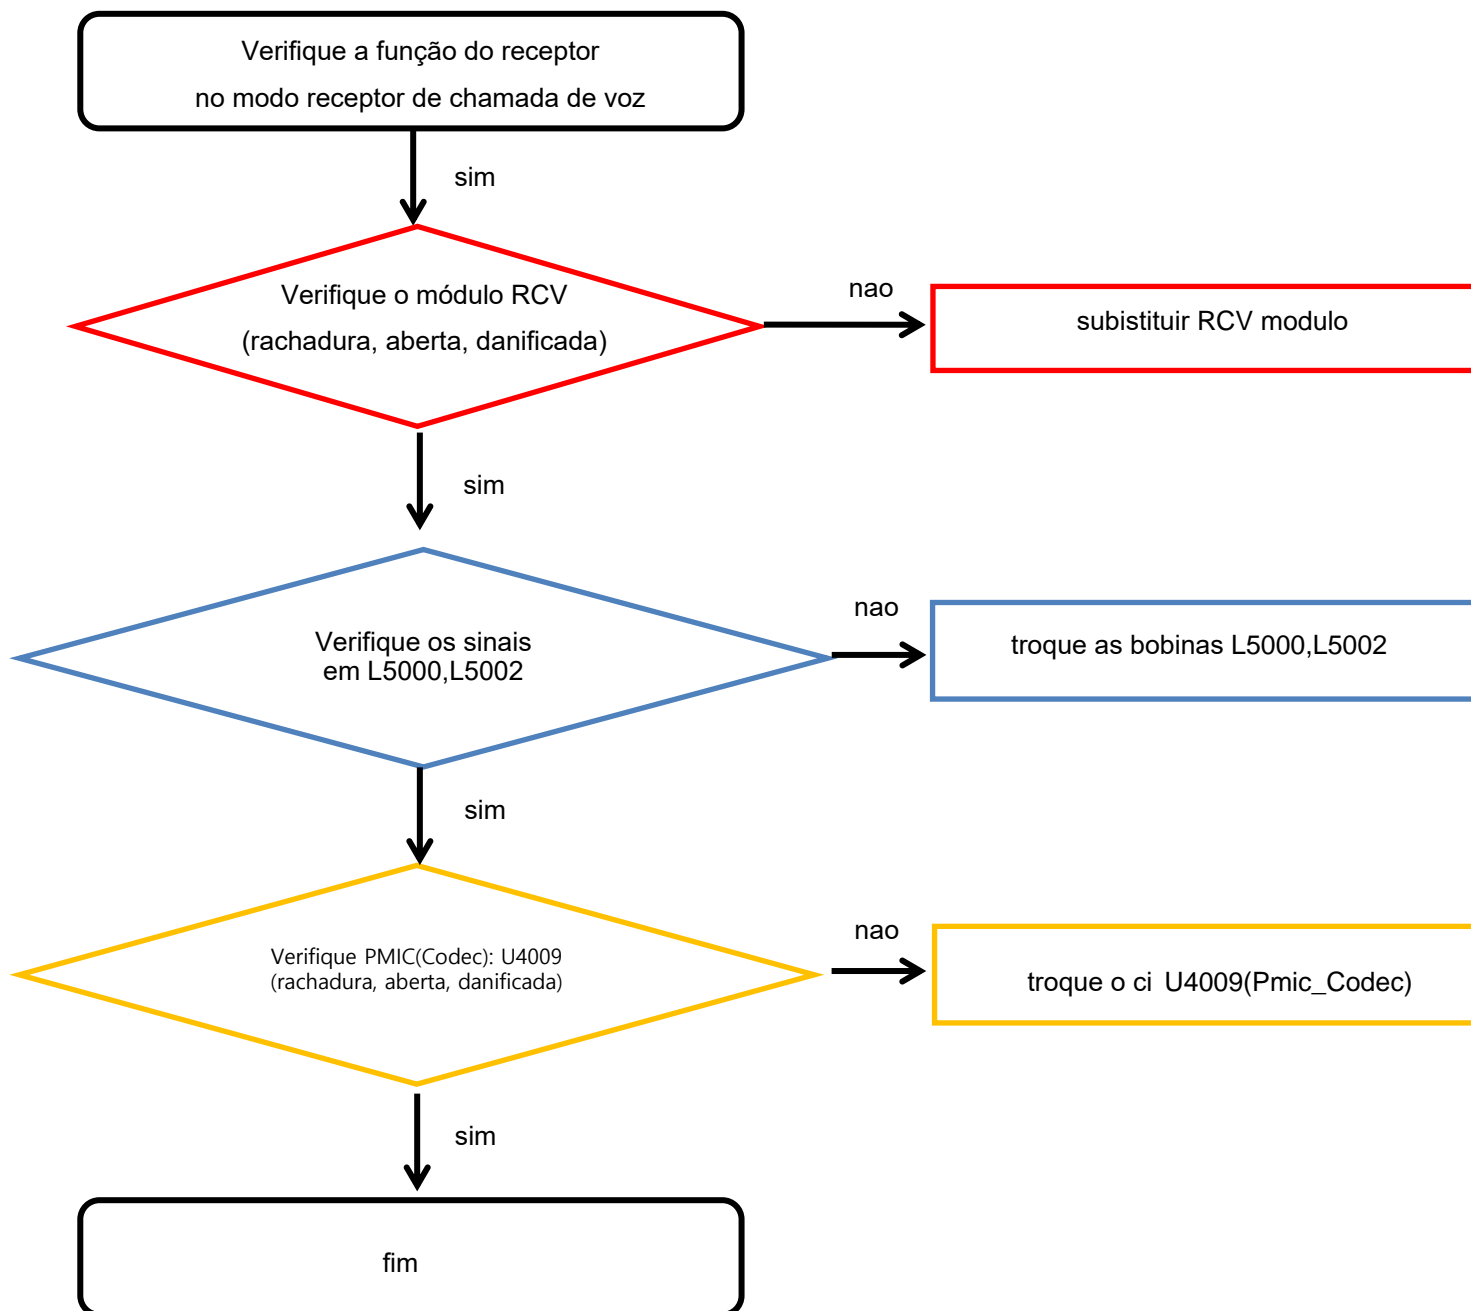


8. Level 3 Repair

8-4-11. BT/WIFI/ wifi e bluetooth

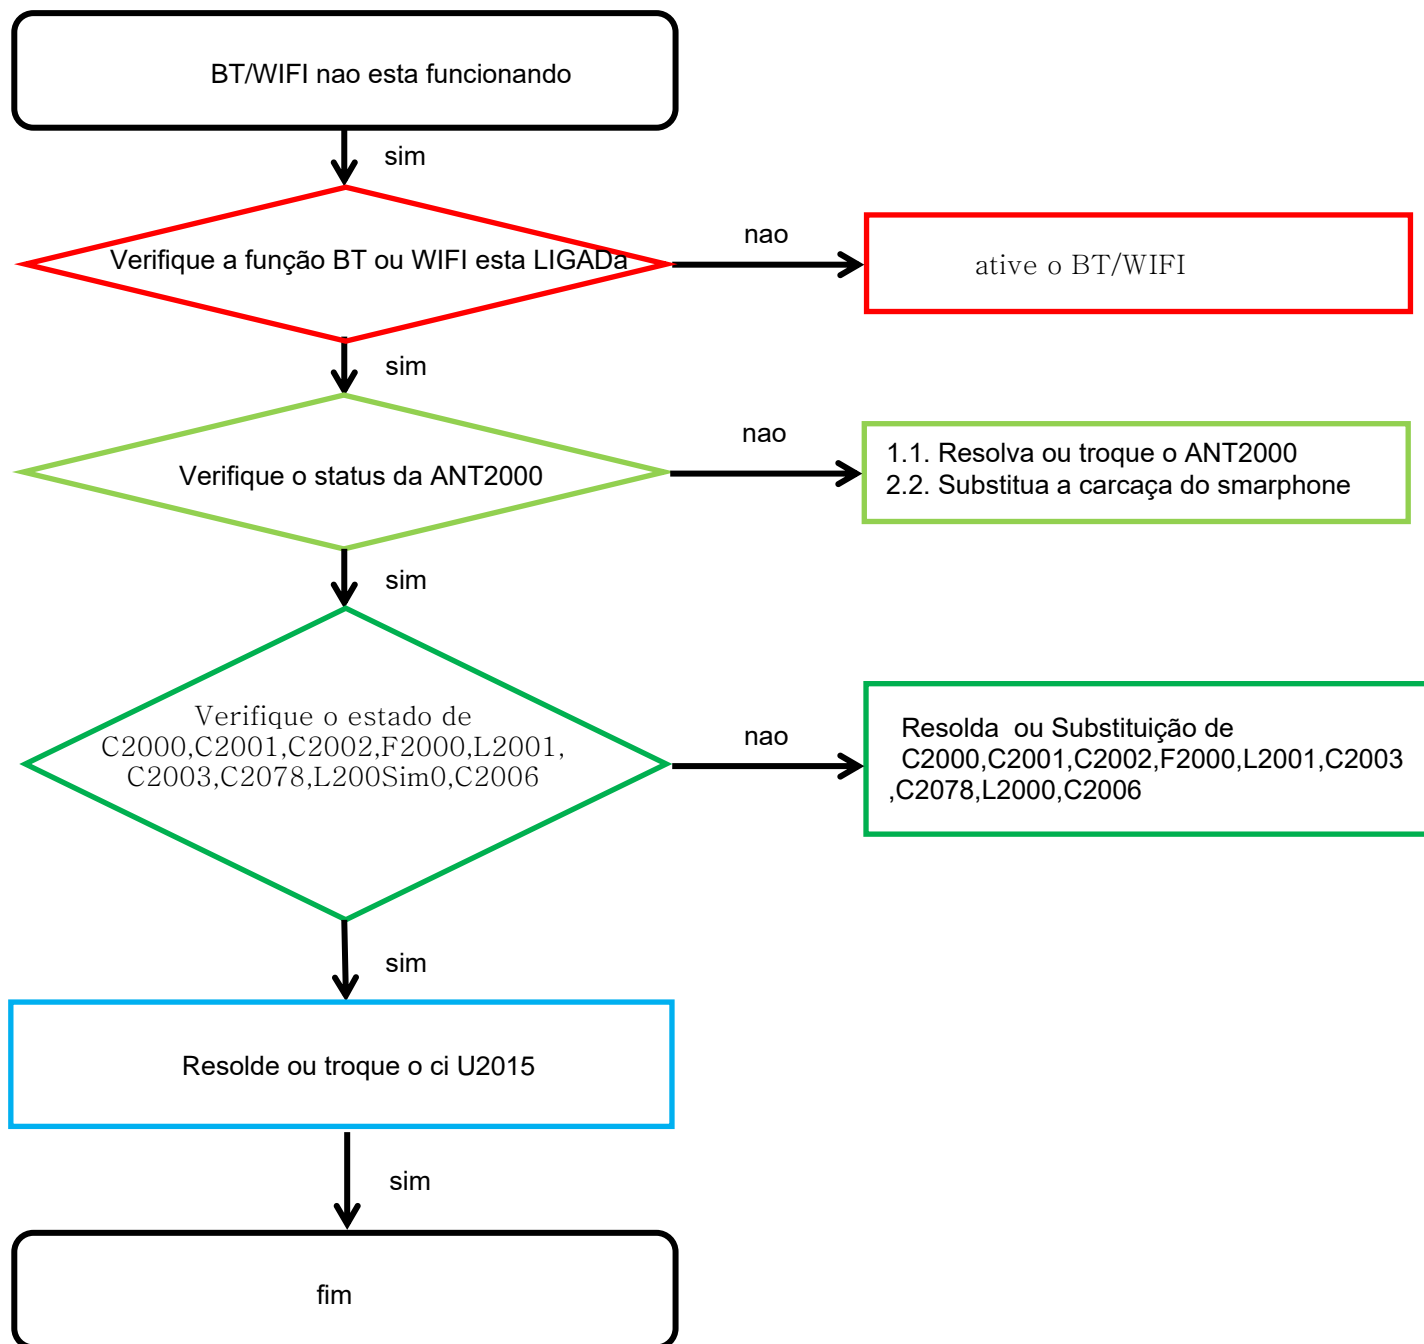


8. Level 3 Repair

8-4-12. GPS

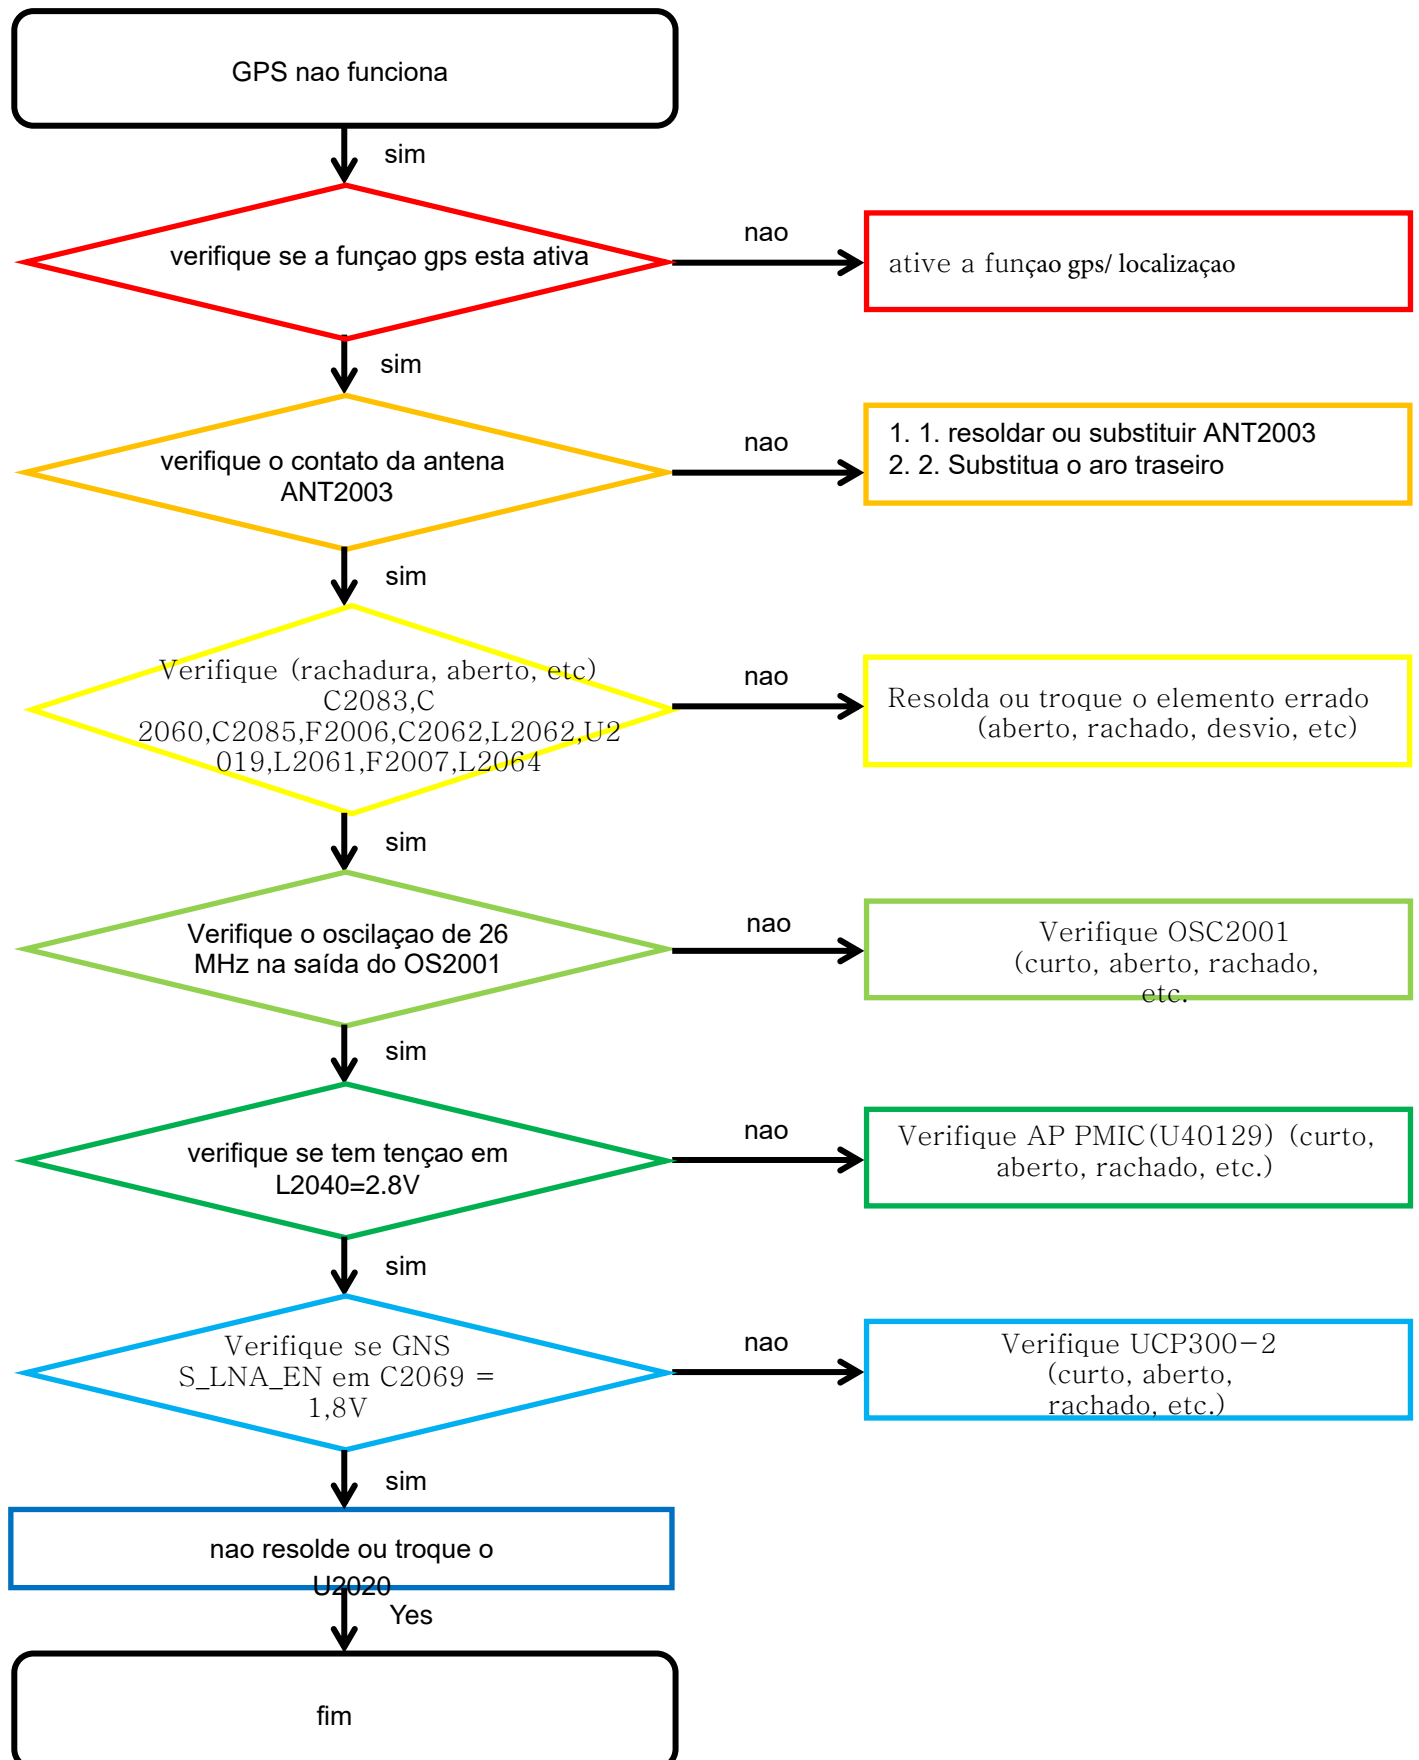


8. Level 3 Repair

8-4-13. Display/ tela / frontal

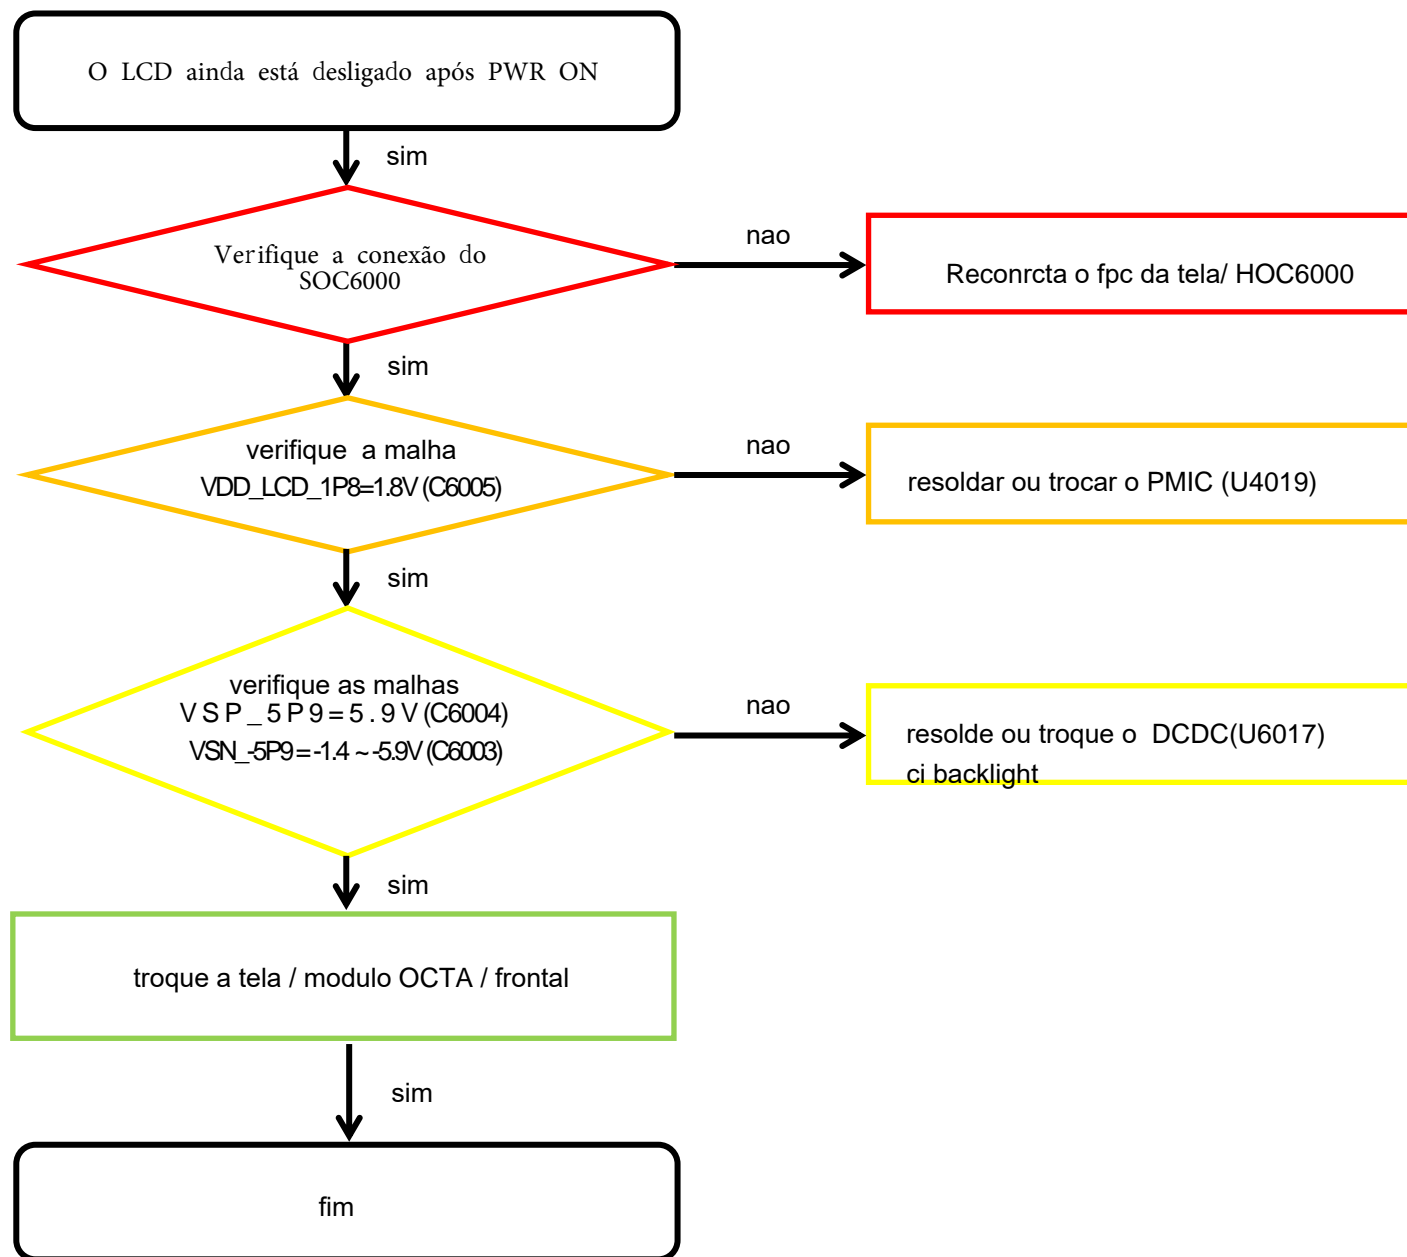


8. Level 3 Repair

8-4-14. Rear CAMERA

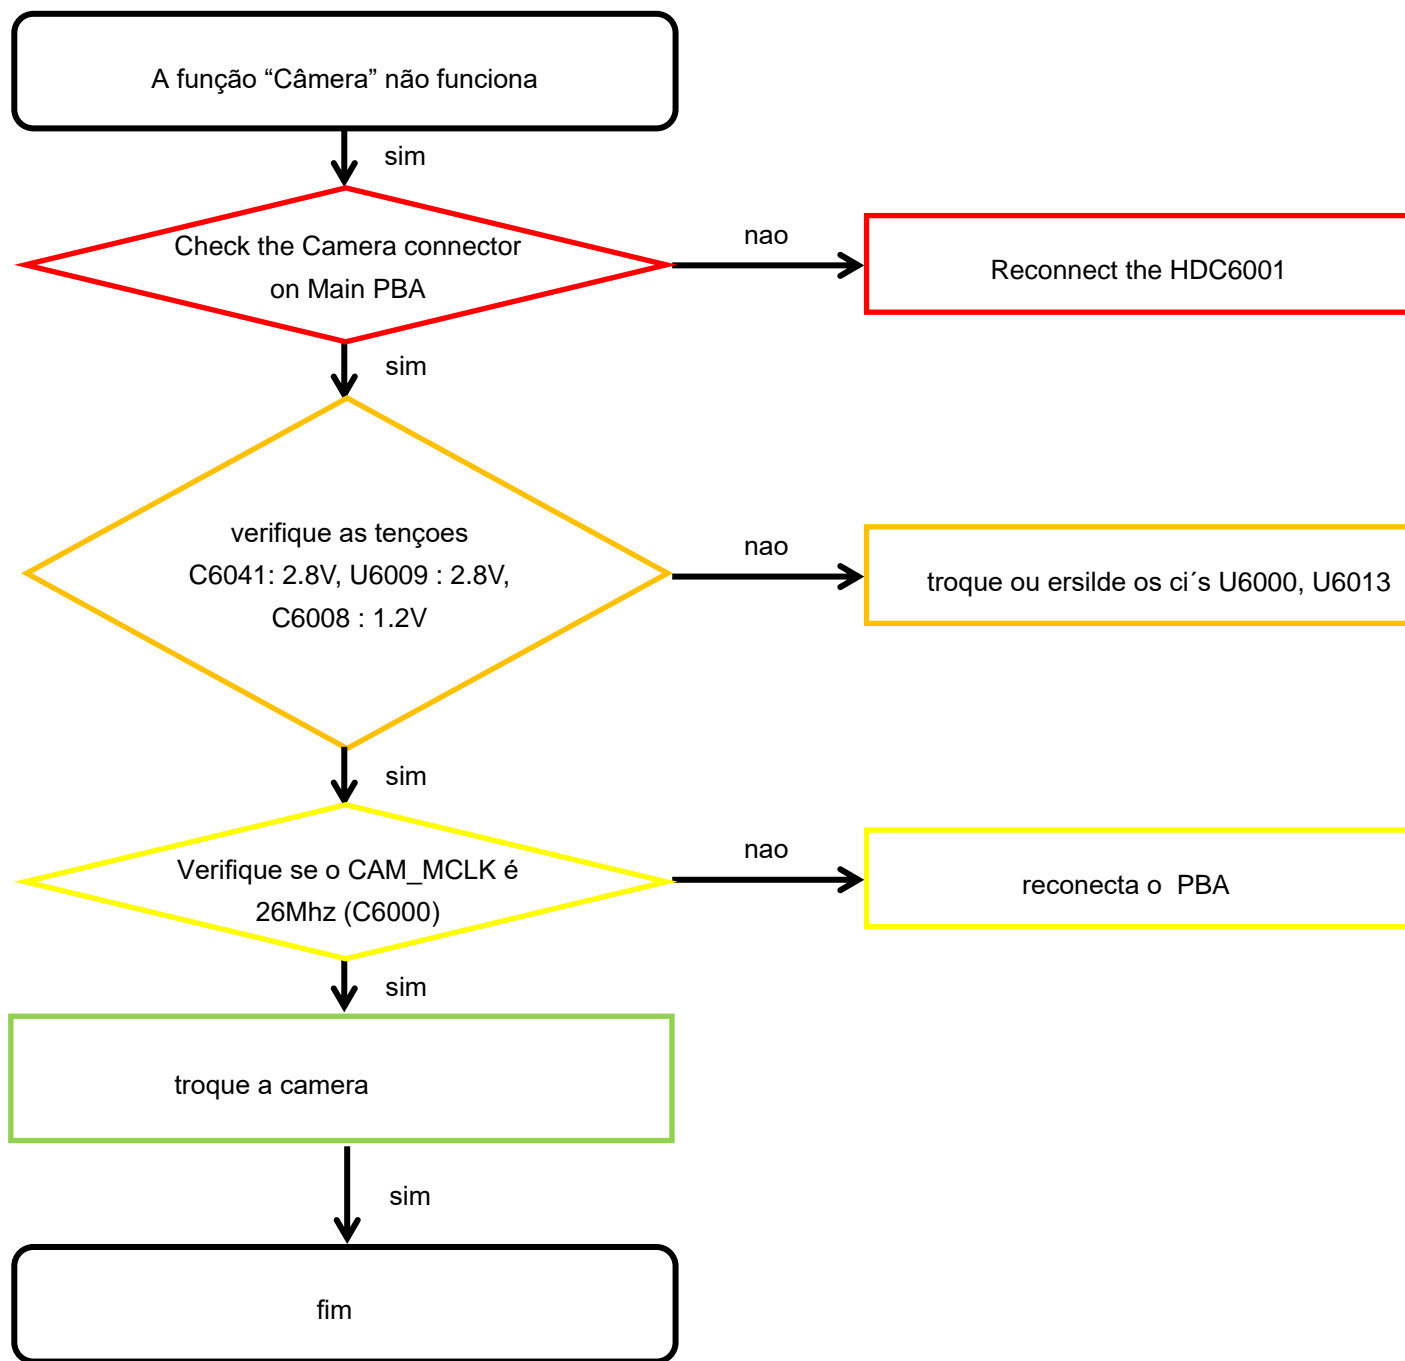

8. Level 3 Repair

8-4-15. Front CAMERA / camera frontal

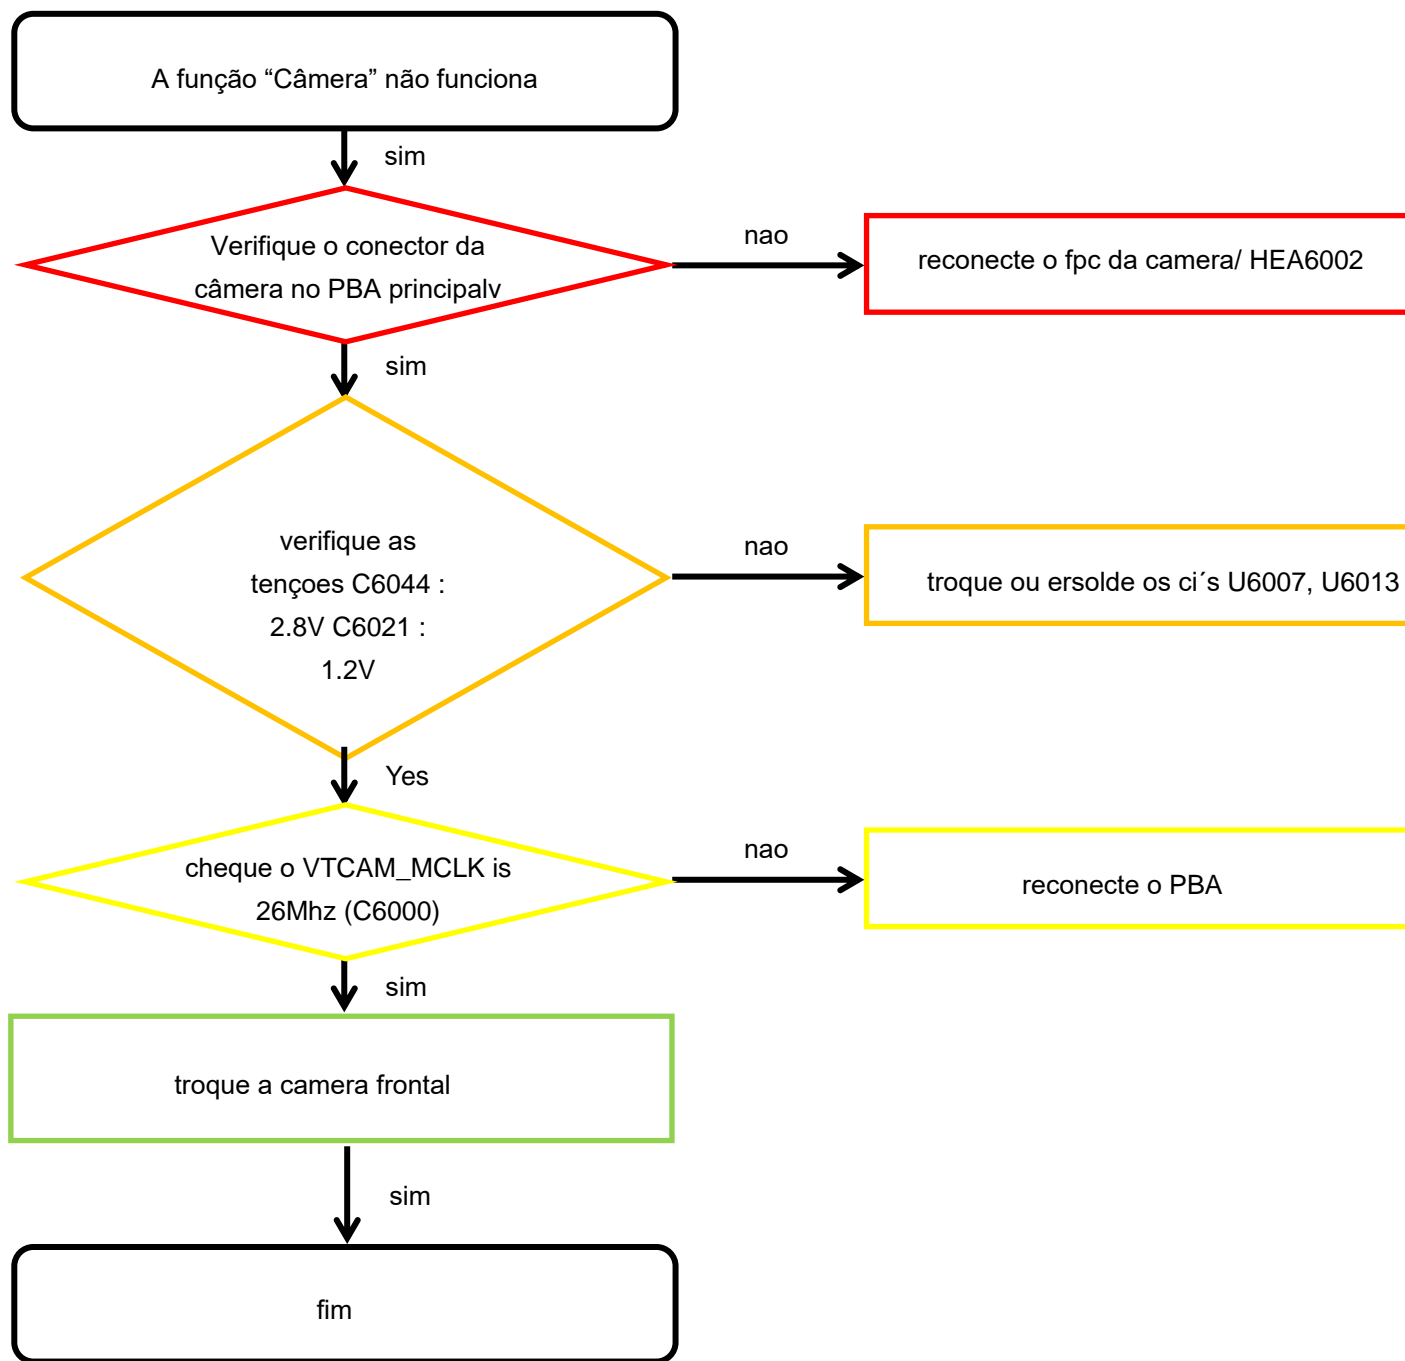

8. Level 3 Repair

8-4-16. Motor/ vibracal

