

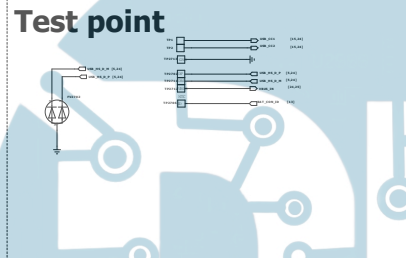
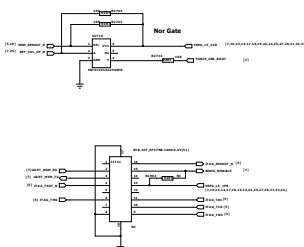


SUB_FPC

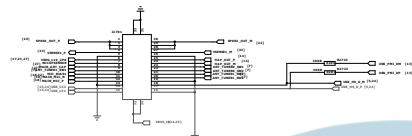

Power Key

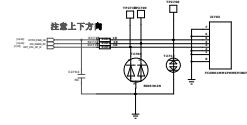


Schematic design notice of "05_PWR1-Dual_STW_ICUBS_EXTFAP" page.



Notice ES-1: DO NOT pull pull-up resistor on PWRKEY

Notice ES-2: Volume Up : NCPS key / GND
Volume Down : (DIFFERENTIAL) or RPSCLK / GND


BAT

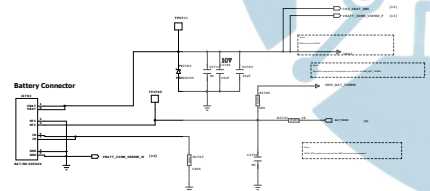


Note:
Battery ID resistor value require 20K-100K.
Add 100K to ground if battery package ID not meet requirement

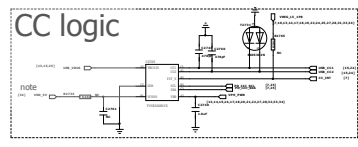


DIV Antenna

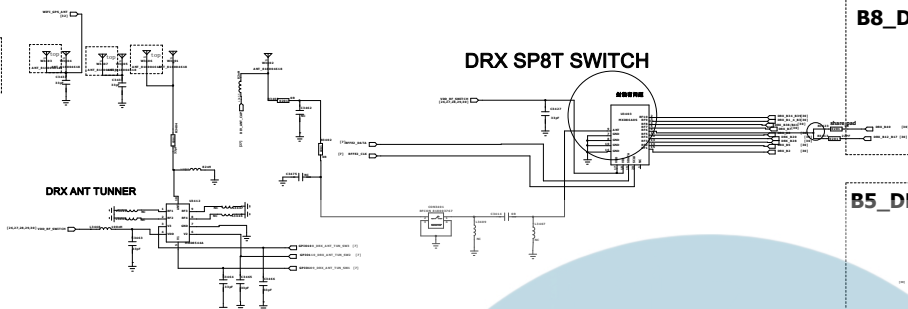


B8_DRX




B5_DRX



B1/B4_B3 DRX

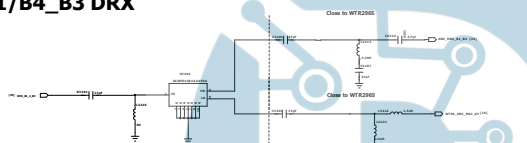


B34_39 DRX

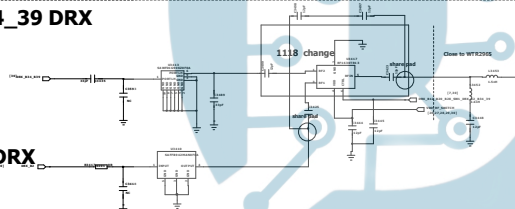


B2 DRX




B38/B41_DRX




B7_DRX



B12_B17_B20_B28_DRX

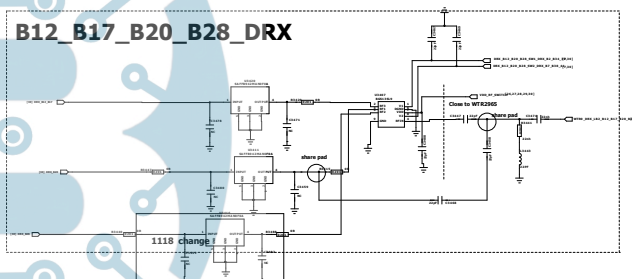

B40_DRX



B7/B38/B41_DRX_SWITCH

