



RF Band Information


GSM: 850/ 900/ 1800/ 1900
WCDMA: B1/ B2/ B5/ B8
LTE FDD: B1/ B3/ B5/ B7/ B8/ B20
LTE TDD: B38/ B40/ B41

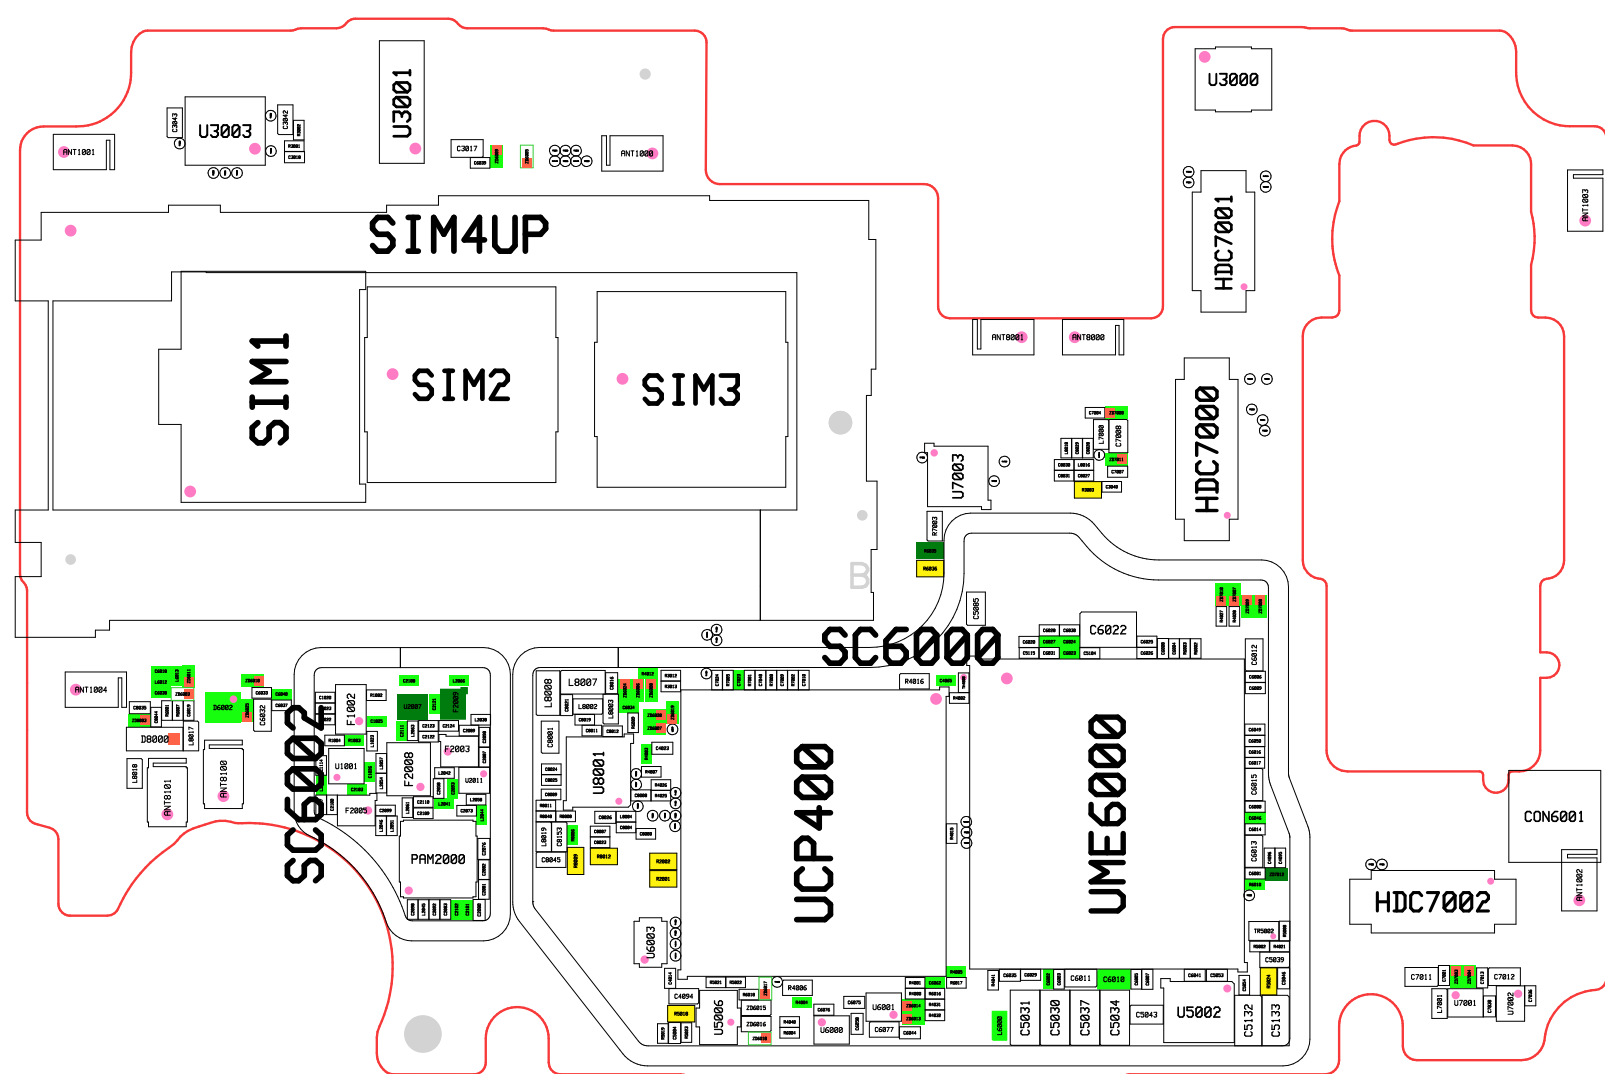

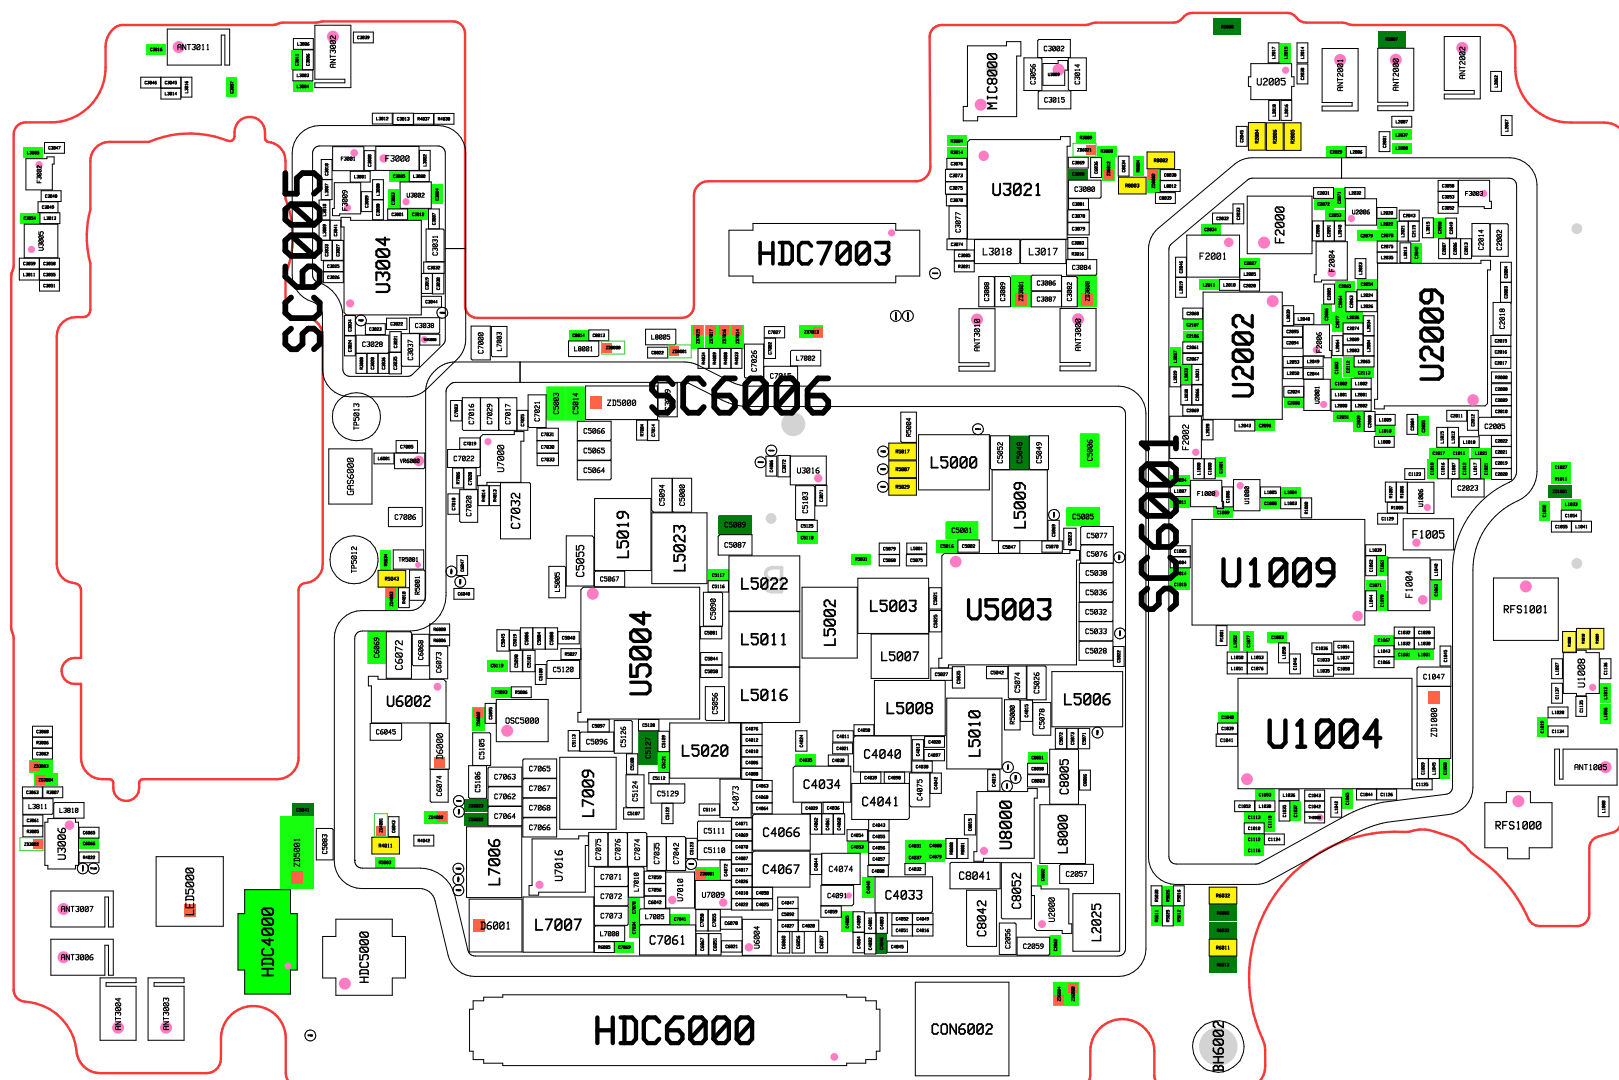

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

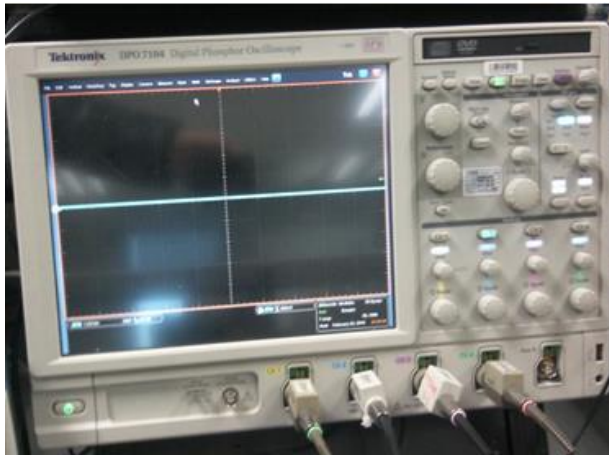

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

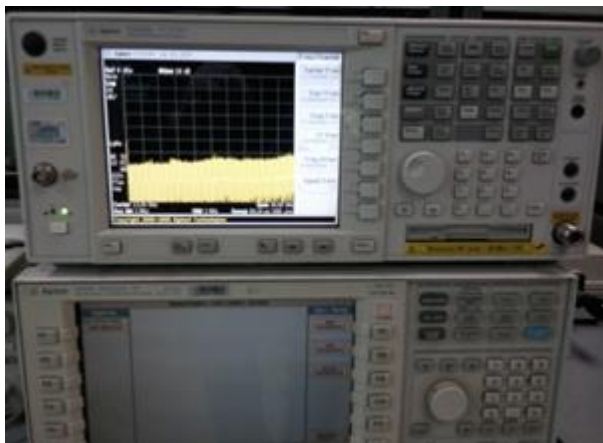


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Ligar

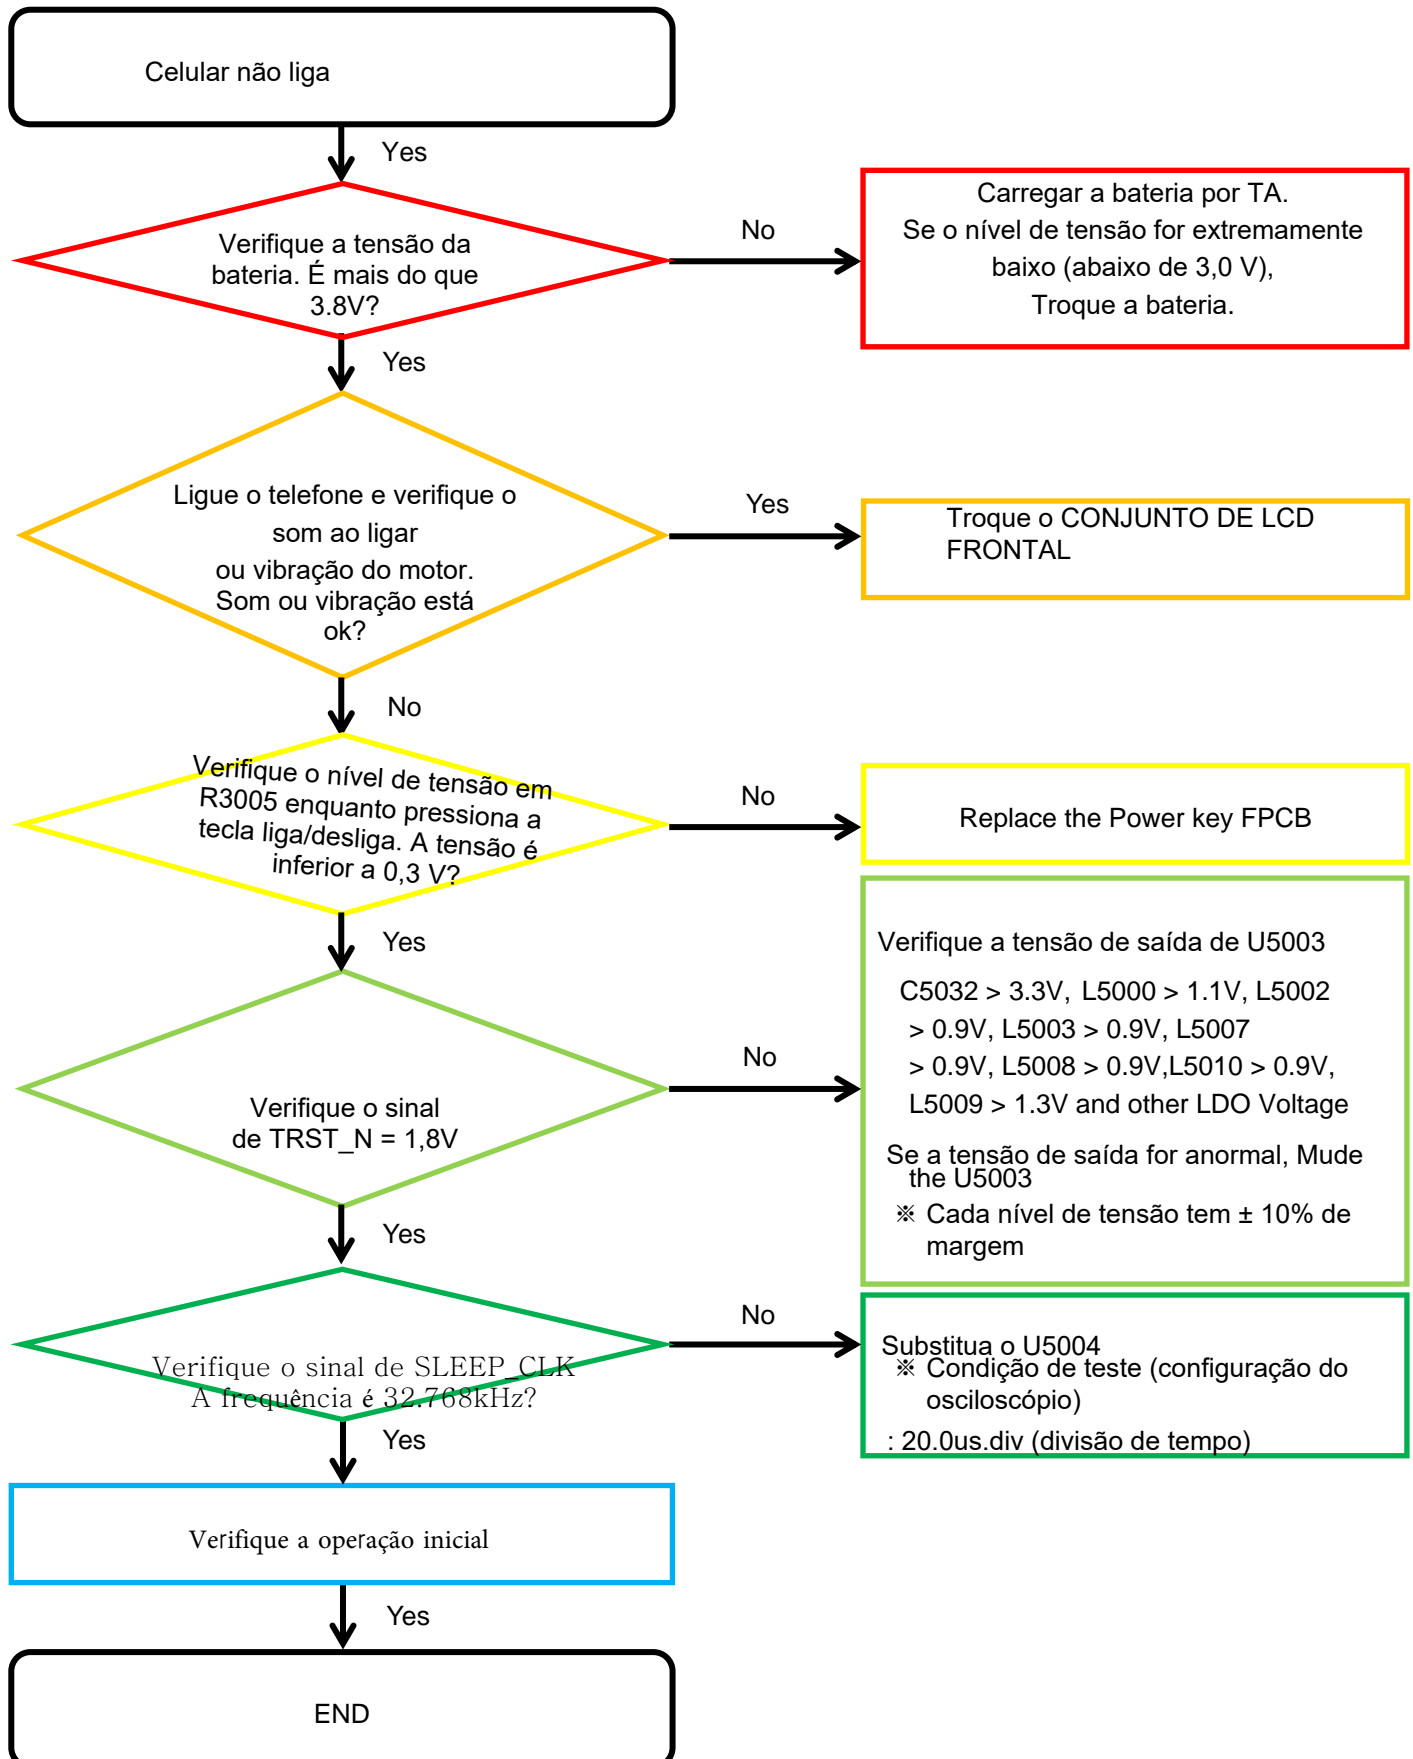


8. Level 3 Repair

8-4-2. Initial

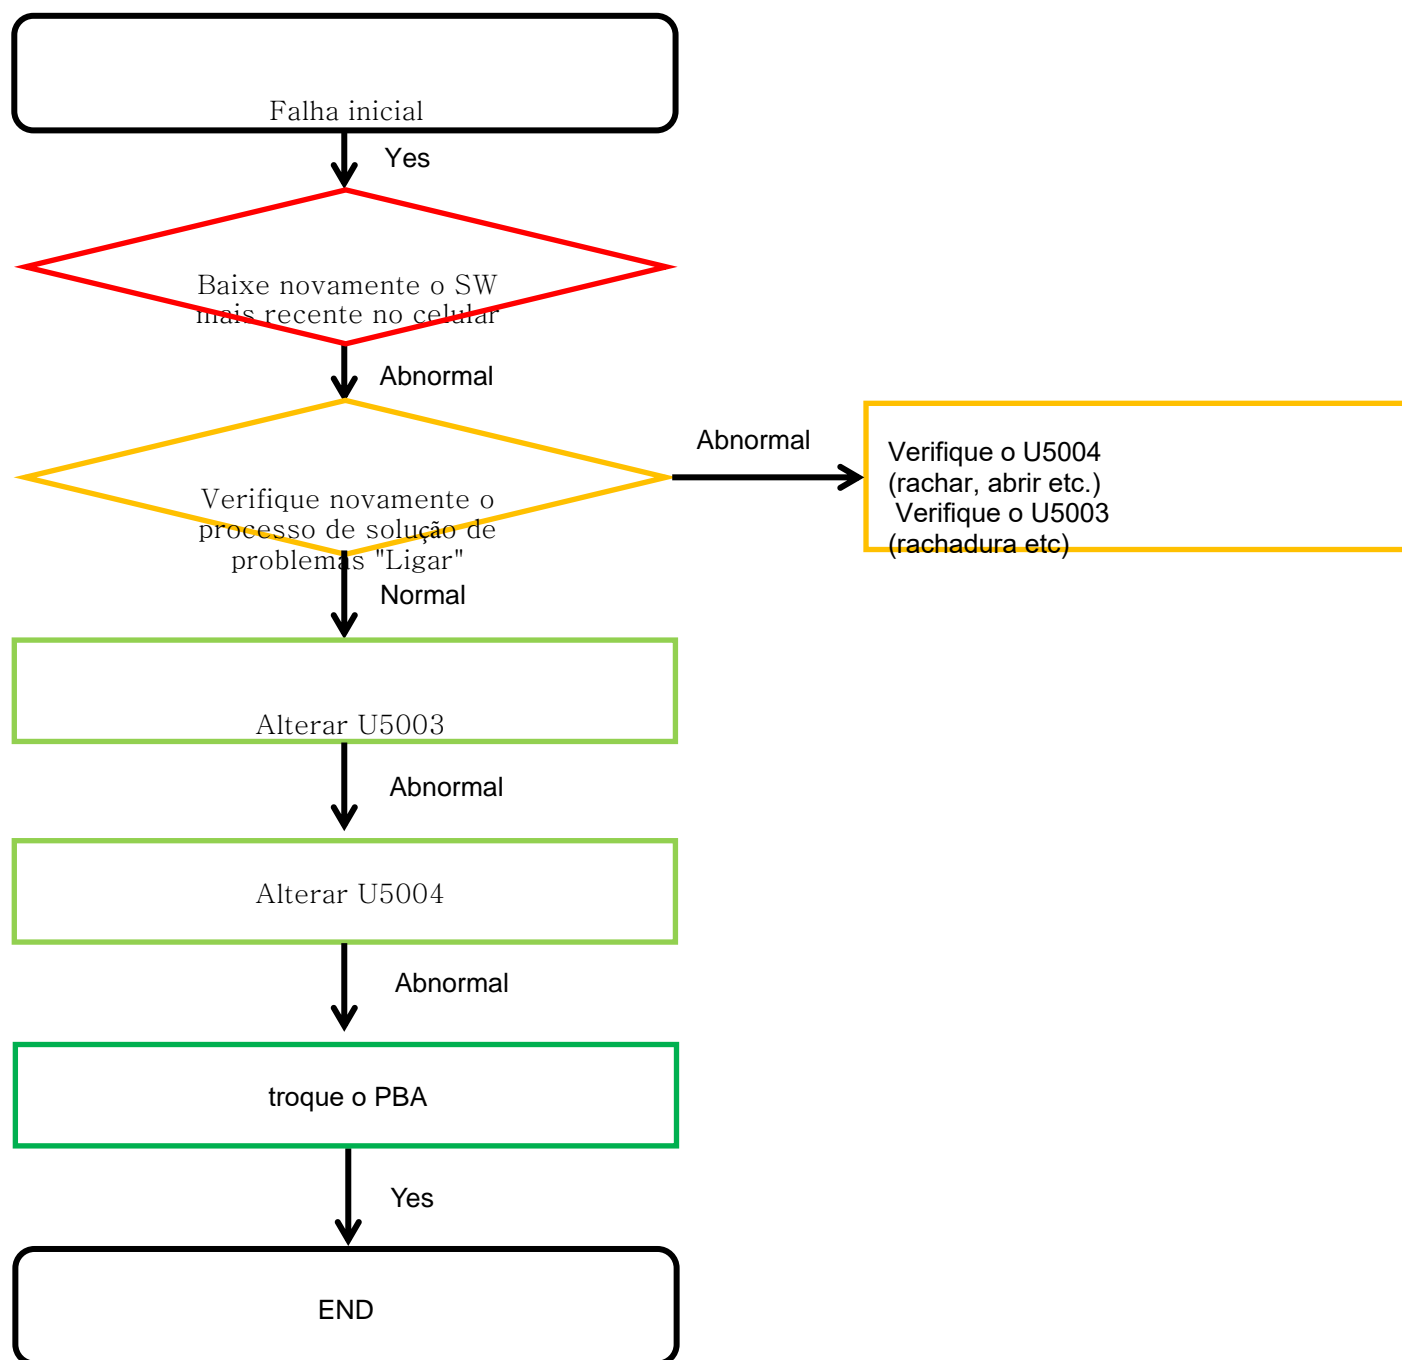


8. Level 3 Repair

8-4-3. No Service

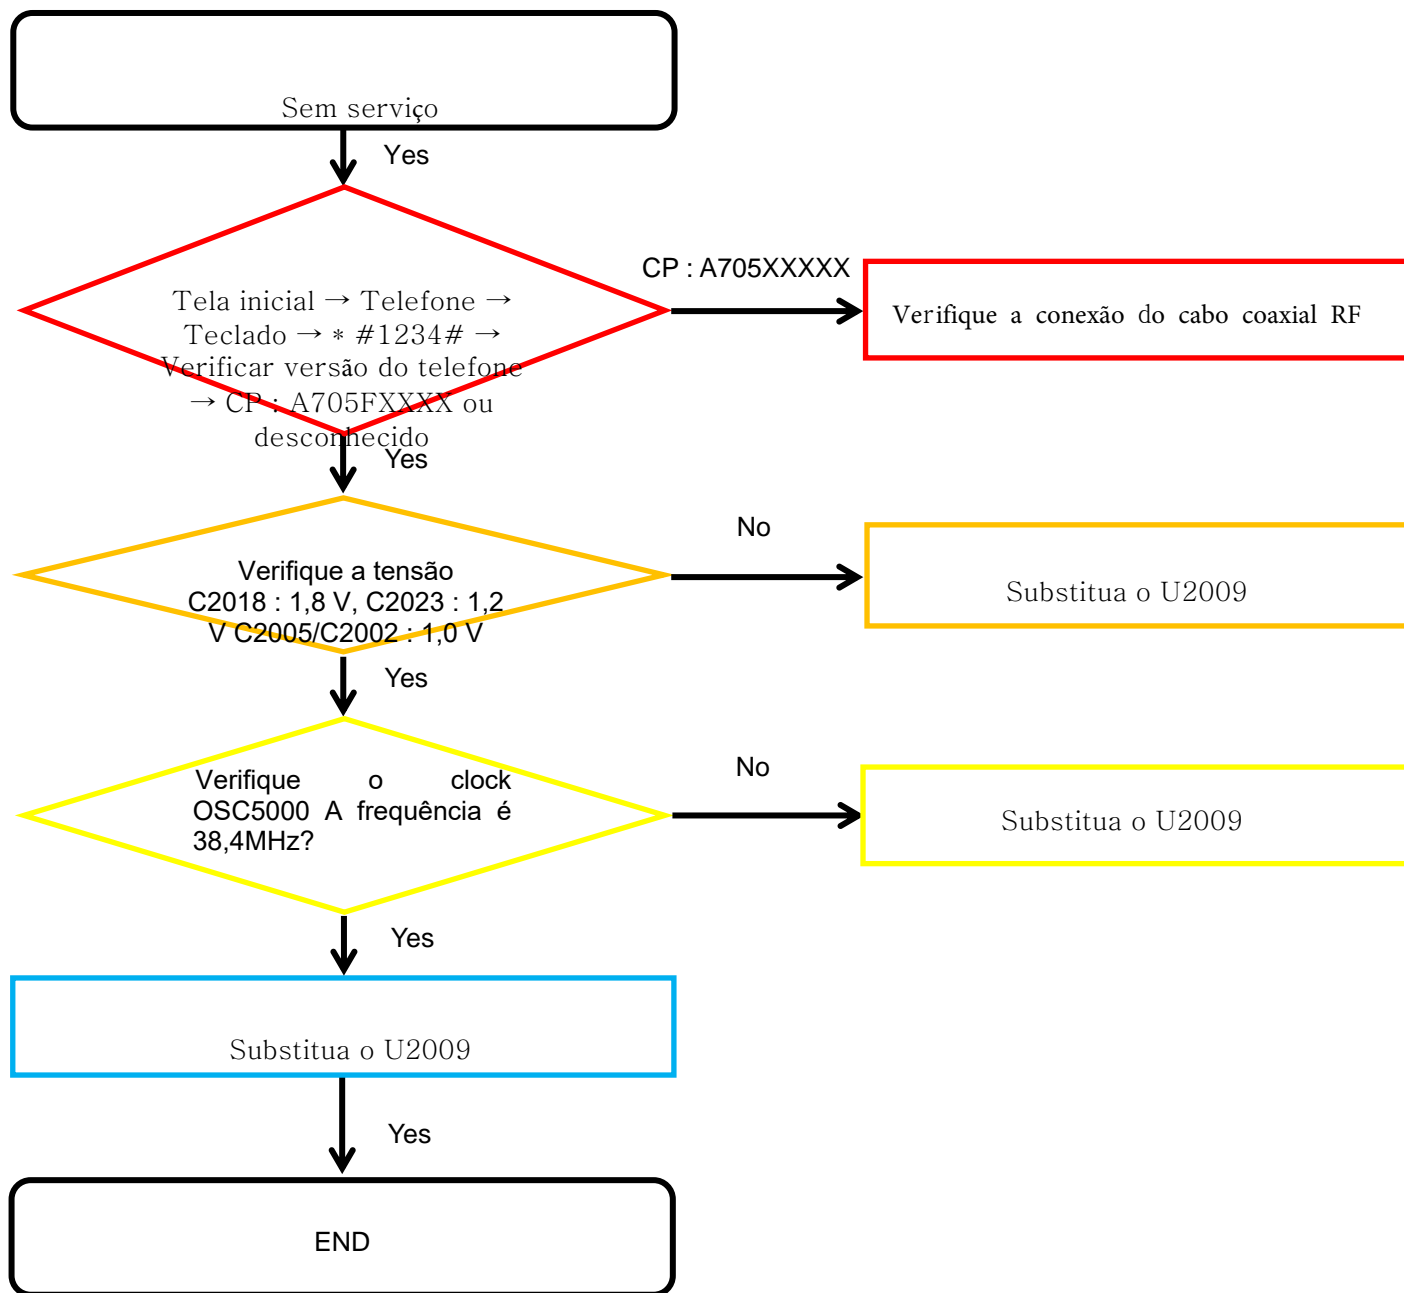


8. Level 3 Repair

8-4-4. SIM Part

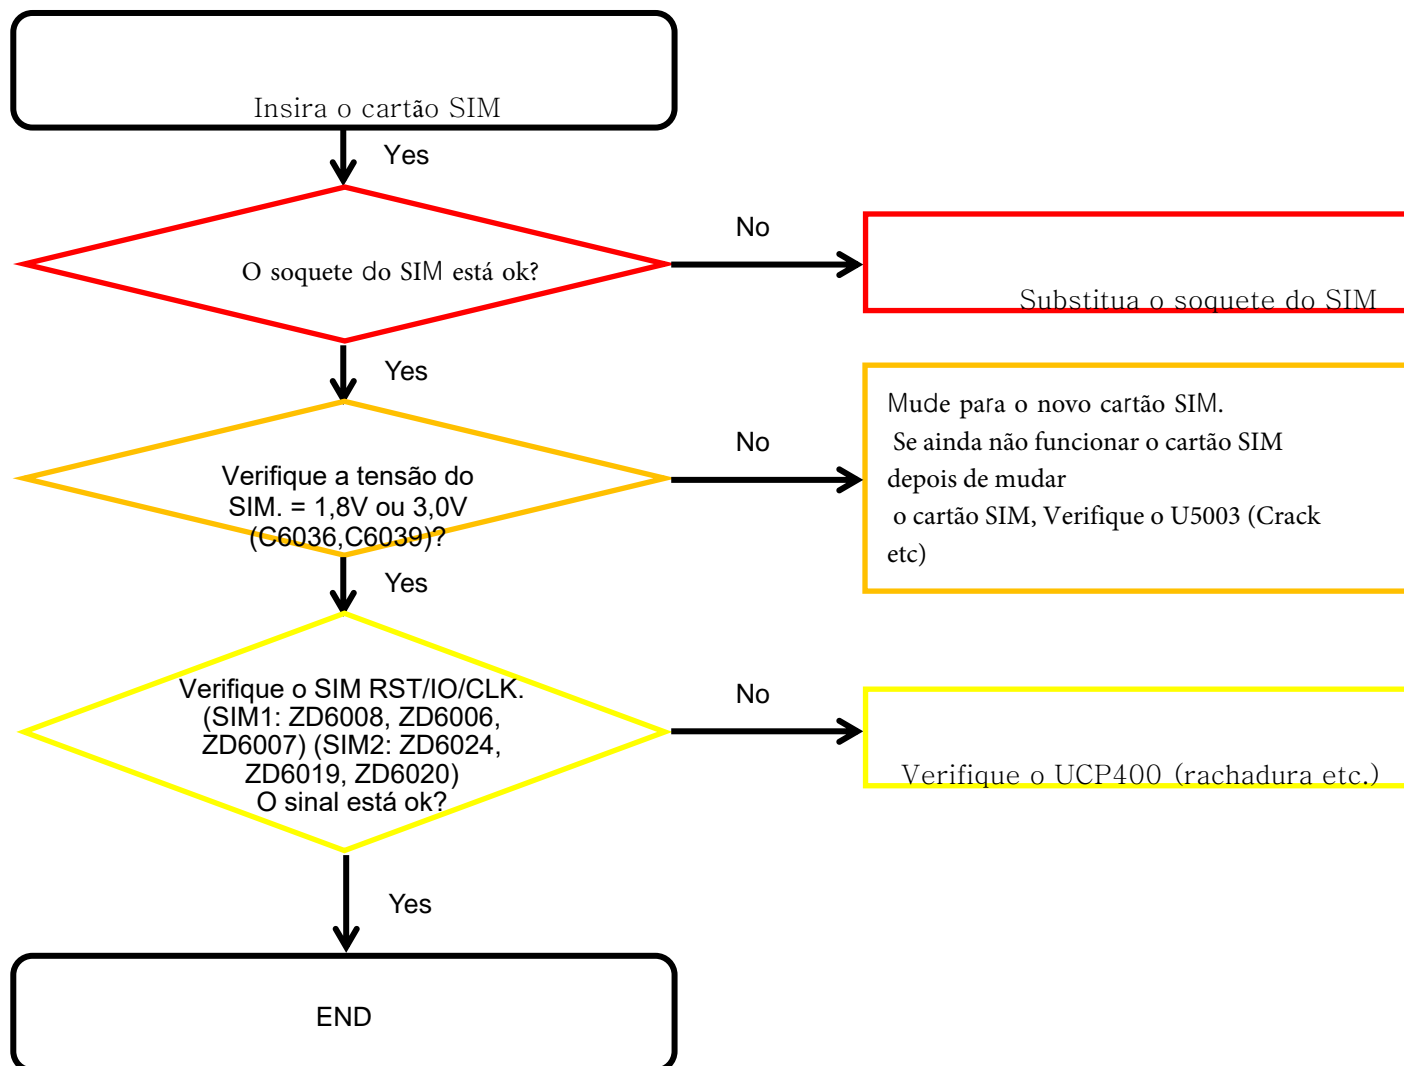


8. Level 3 Repair

8-4-5. T-Flash Part

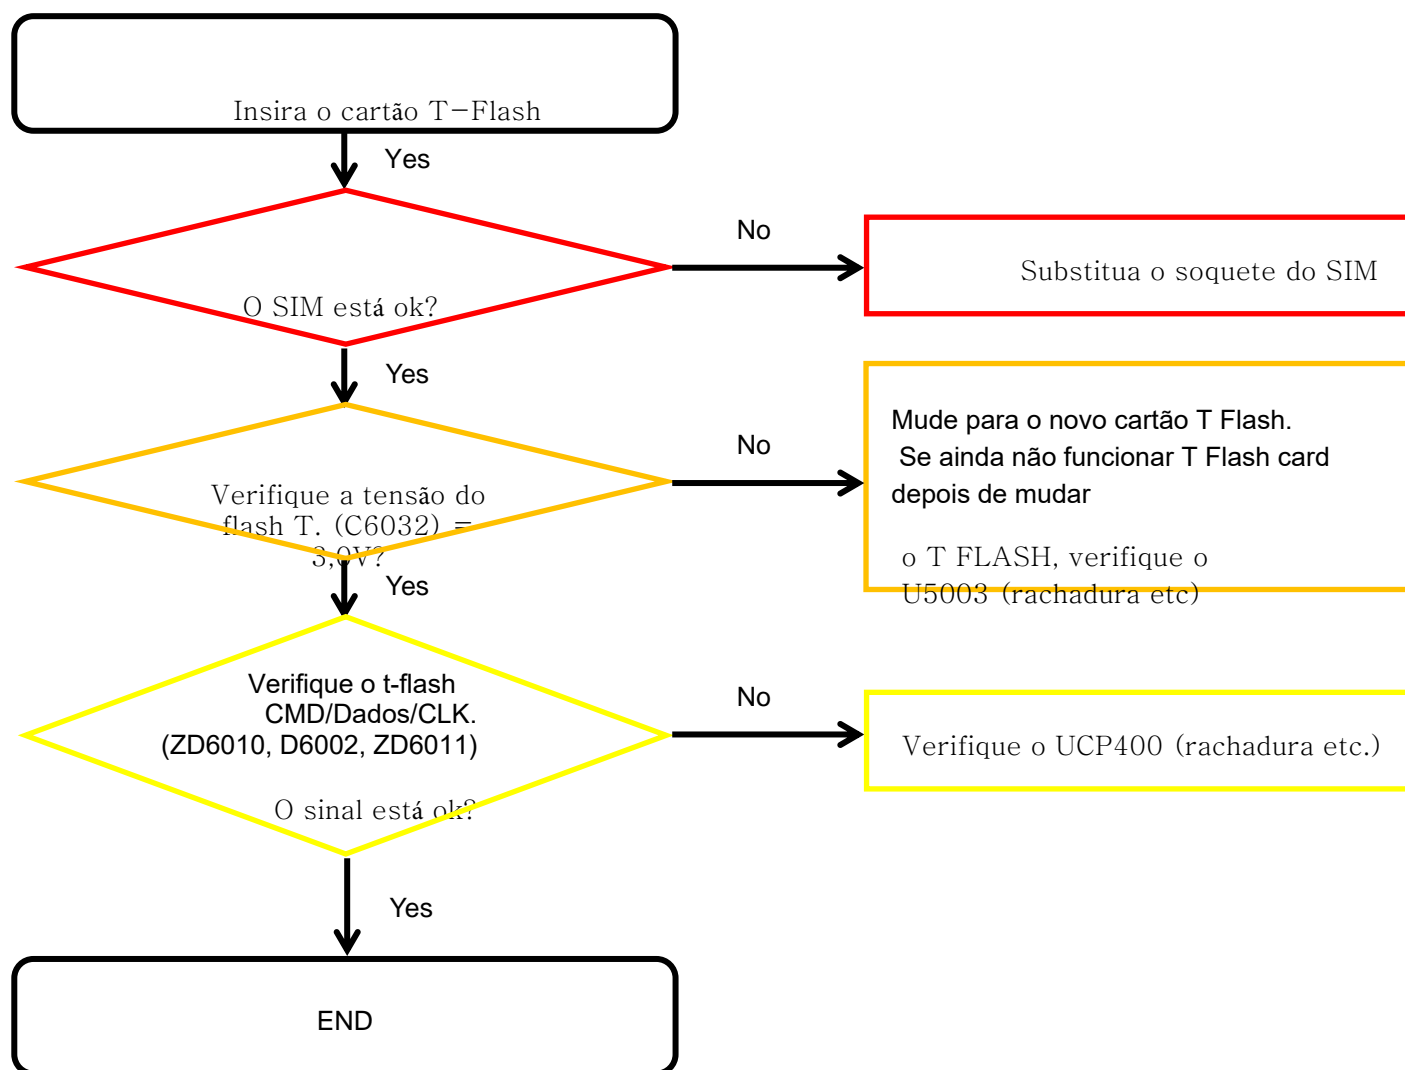


8. Level 3 Repair

8-4-6. Cable Charging Part

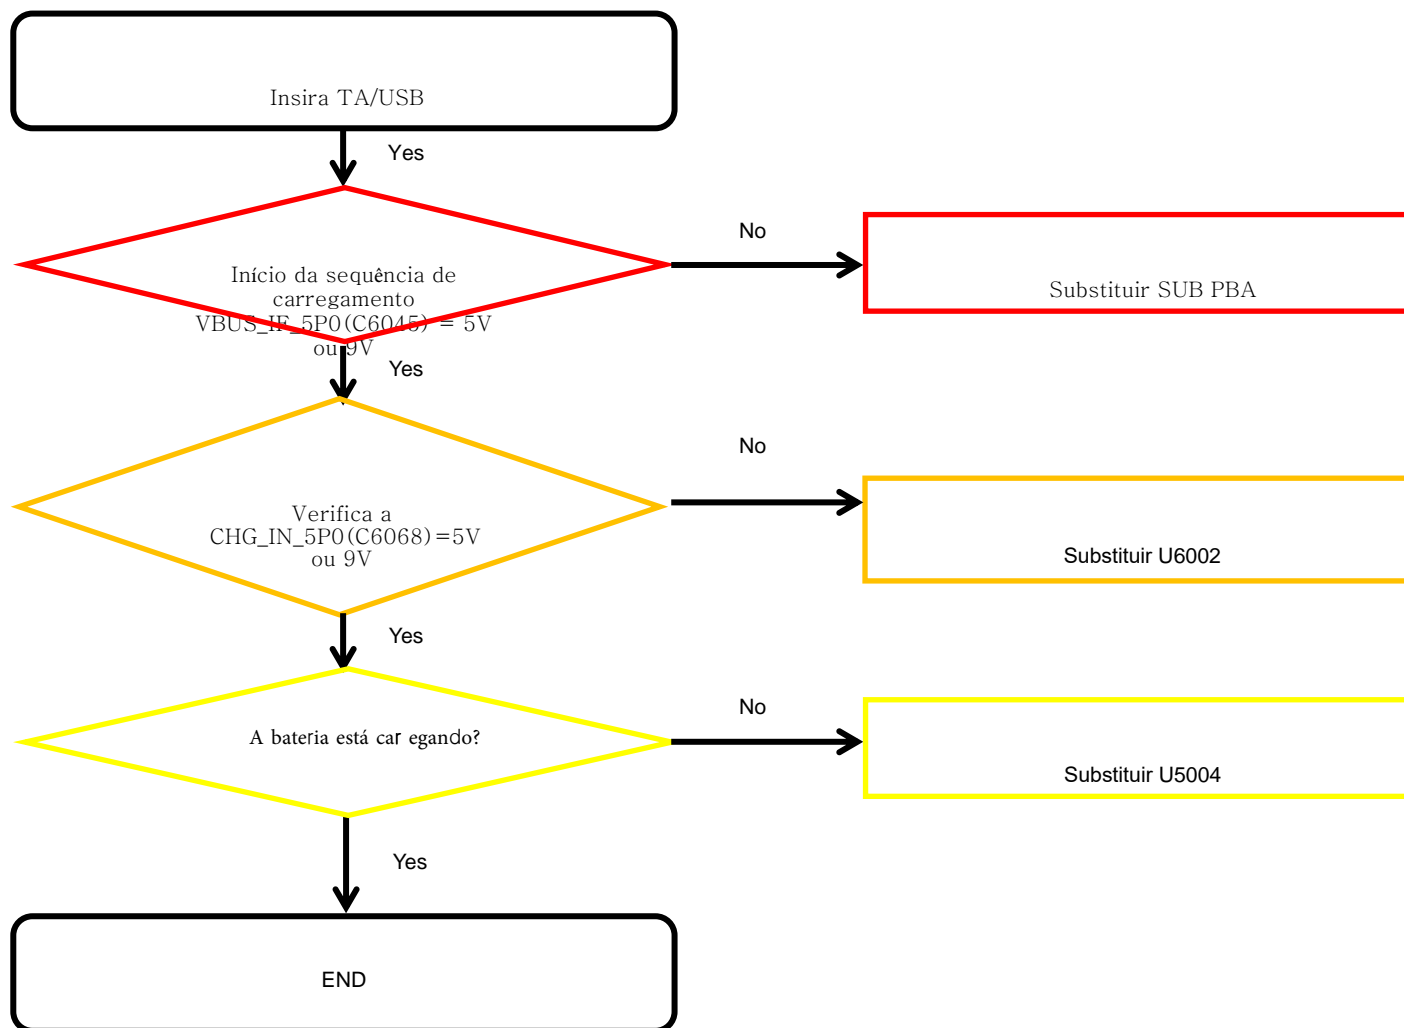


8. Level 3 Repair

8-4-7. OTG

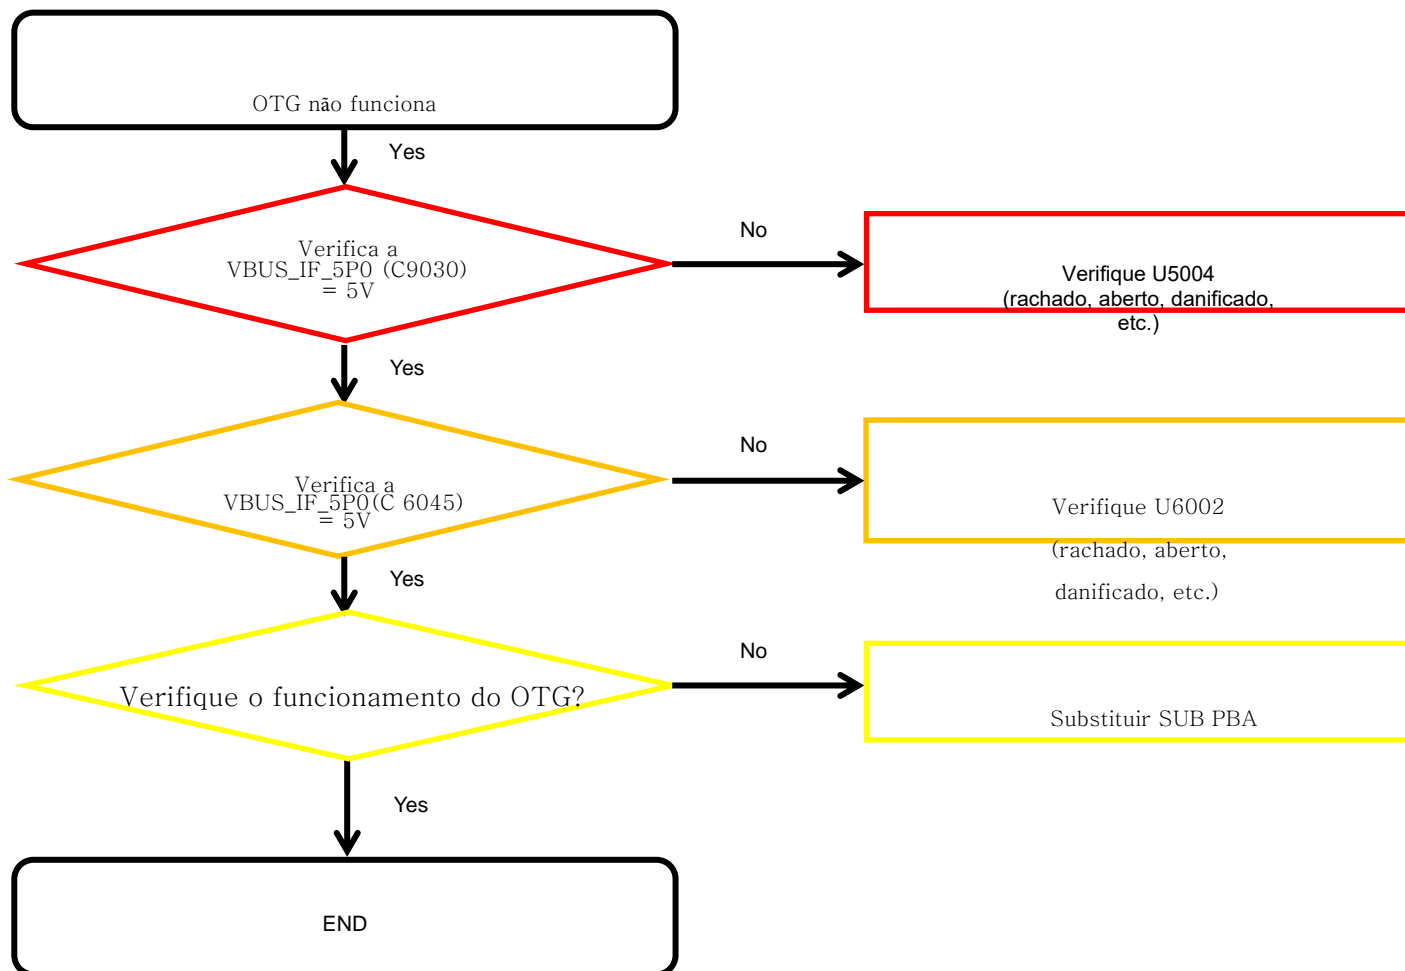


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

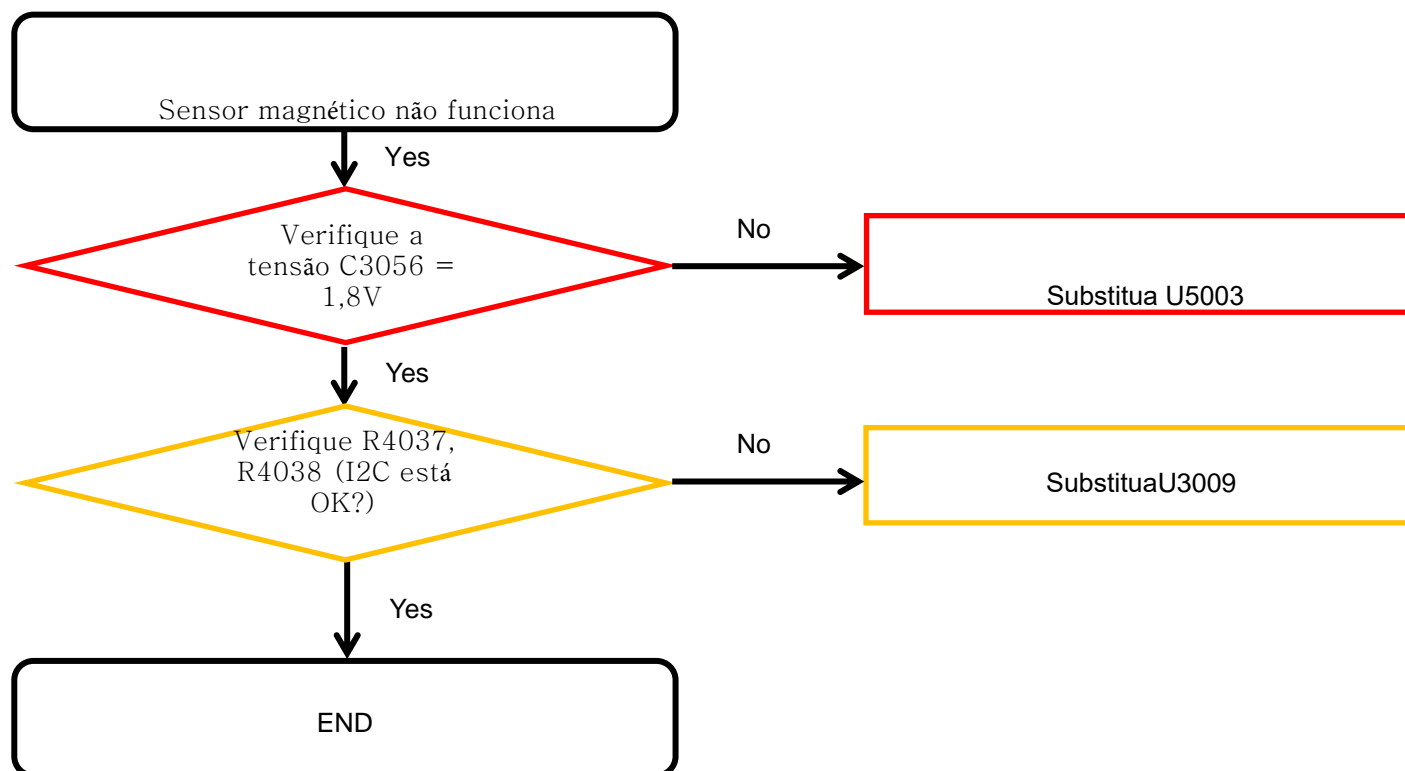


8. Level 3 Repair

8-4-8-3. Proximity

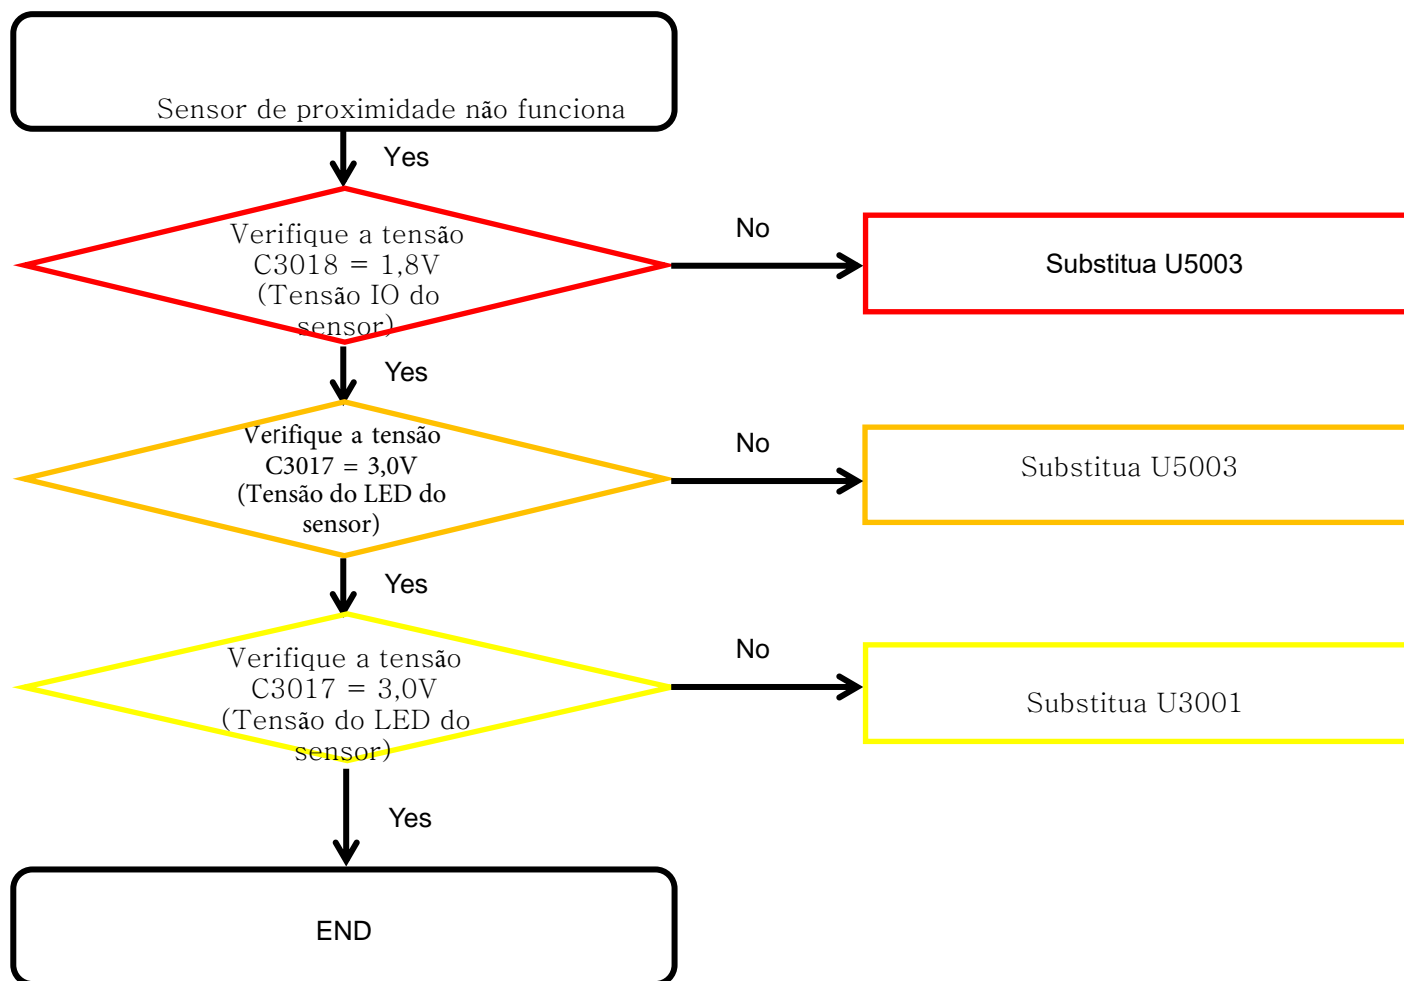


8. Level 3 Repair

8-4-8-4. Hall Sensor

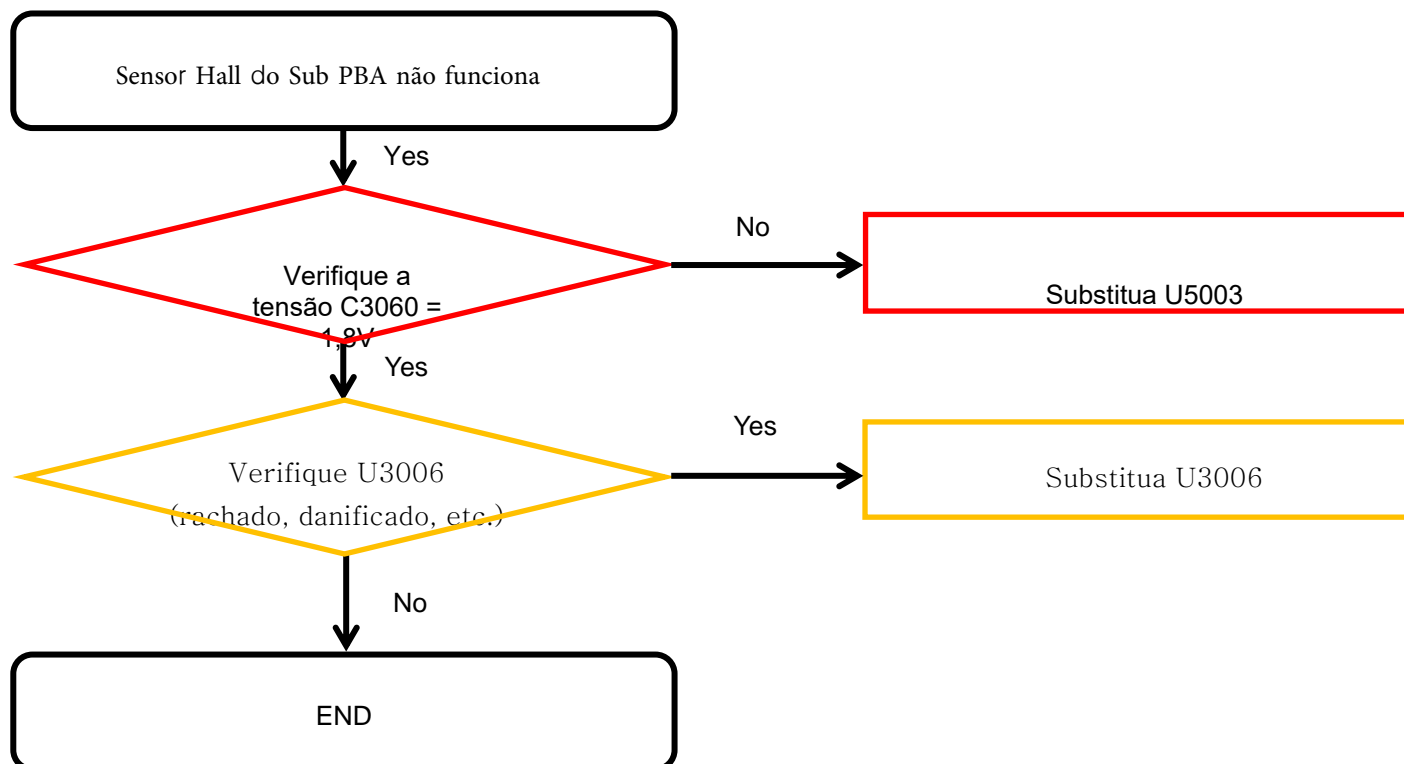


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

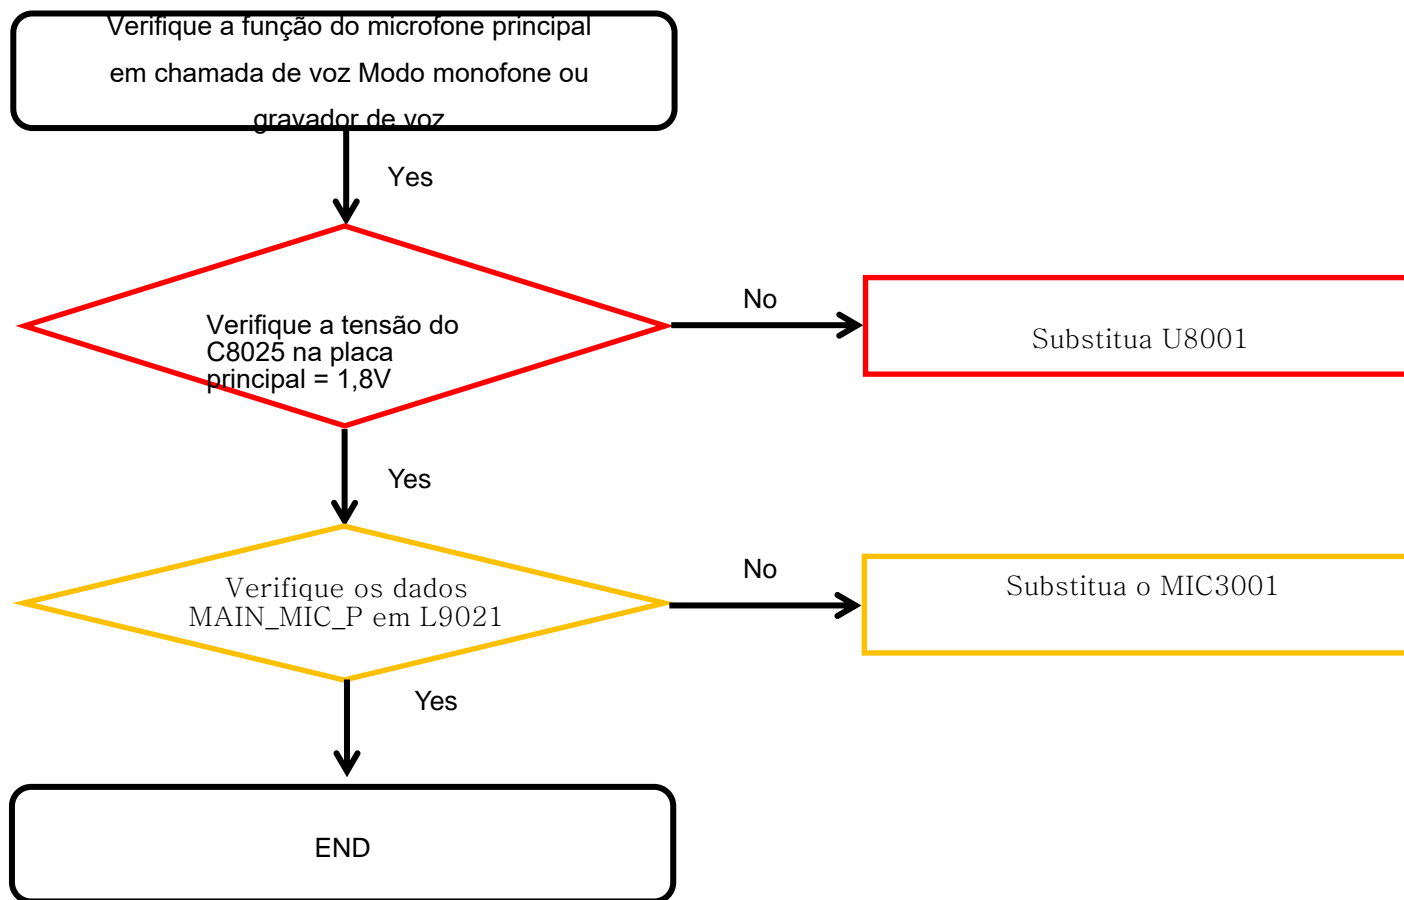


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

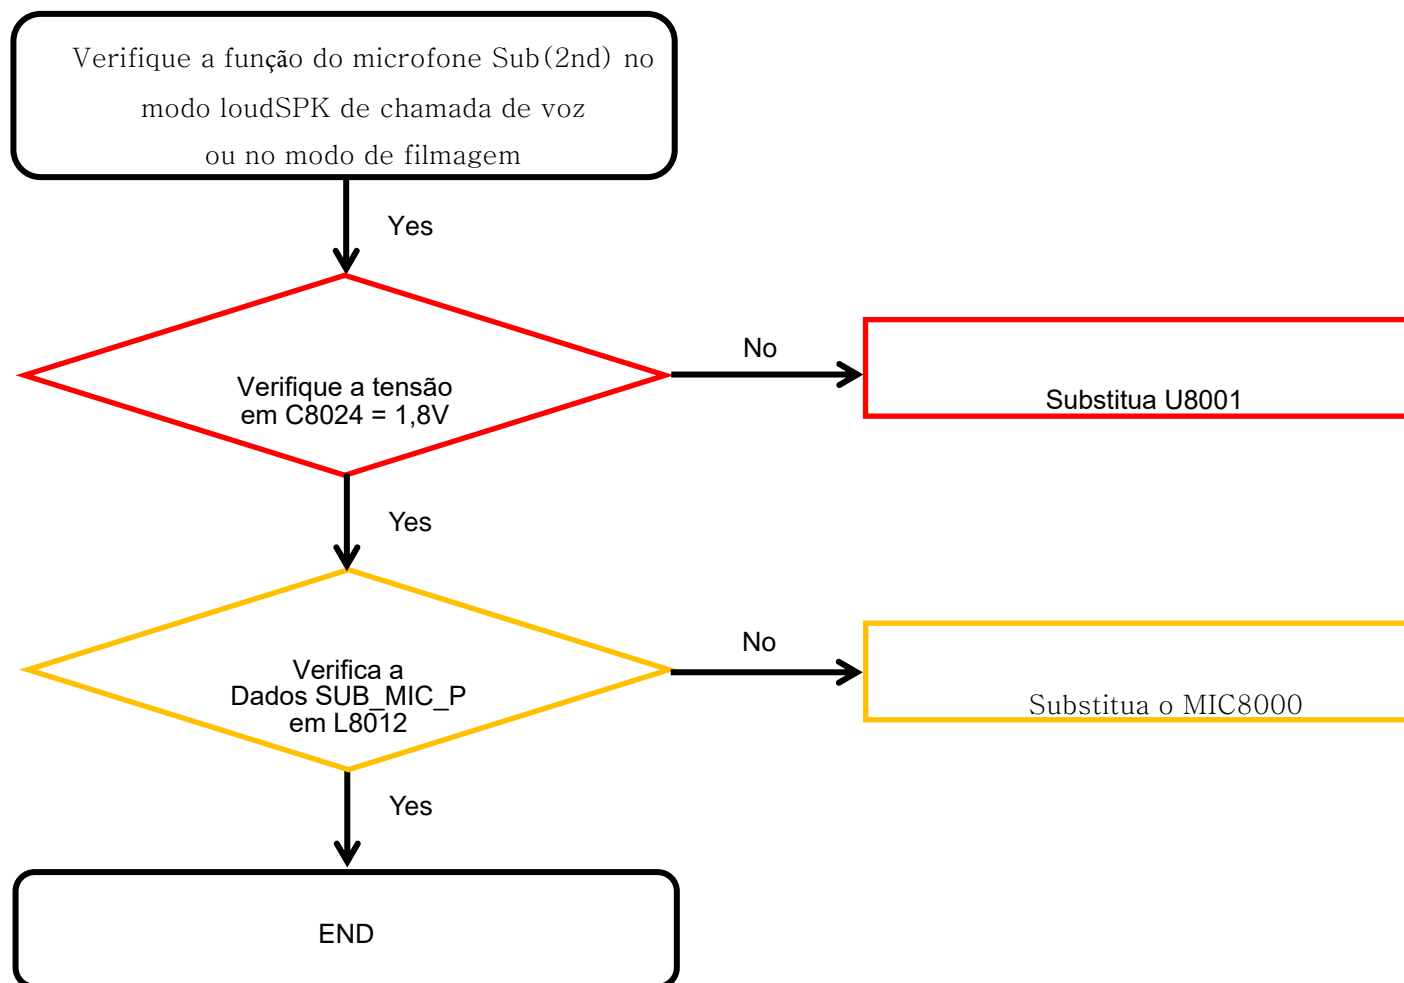


8. Level 3 Repair

8-4-10. Speaker Part

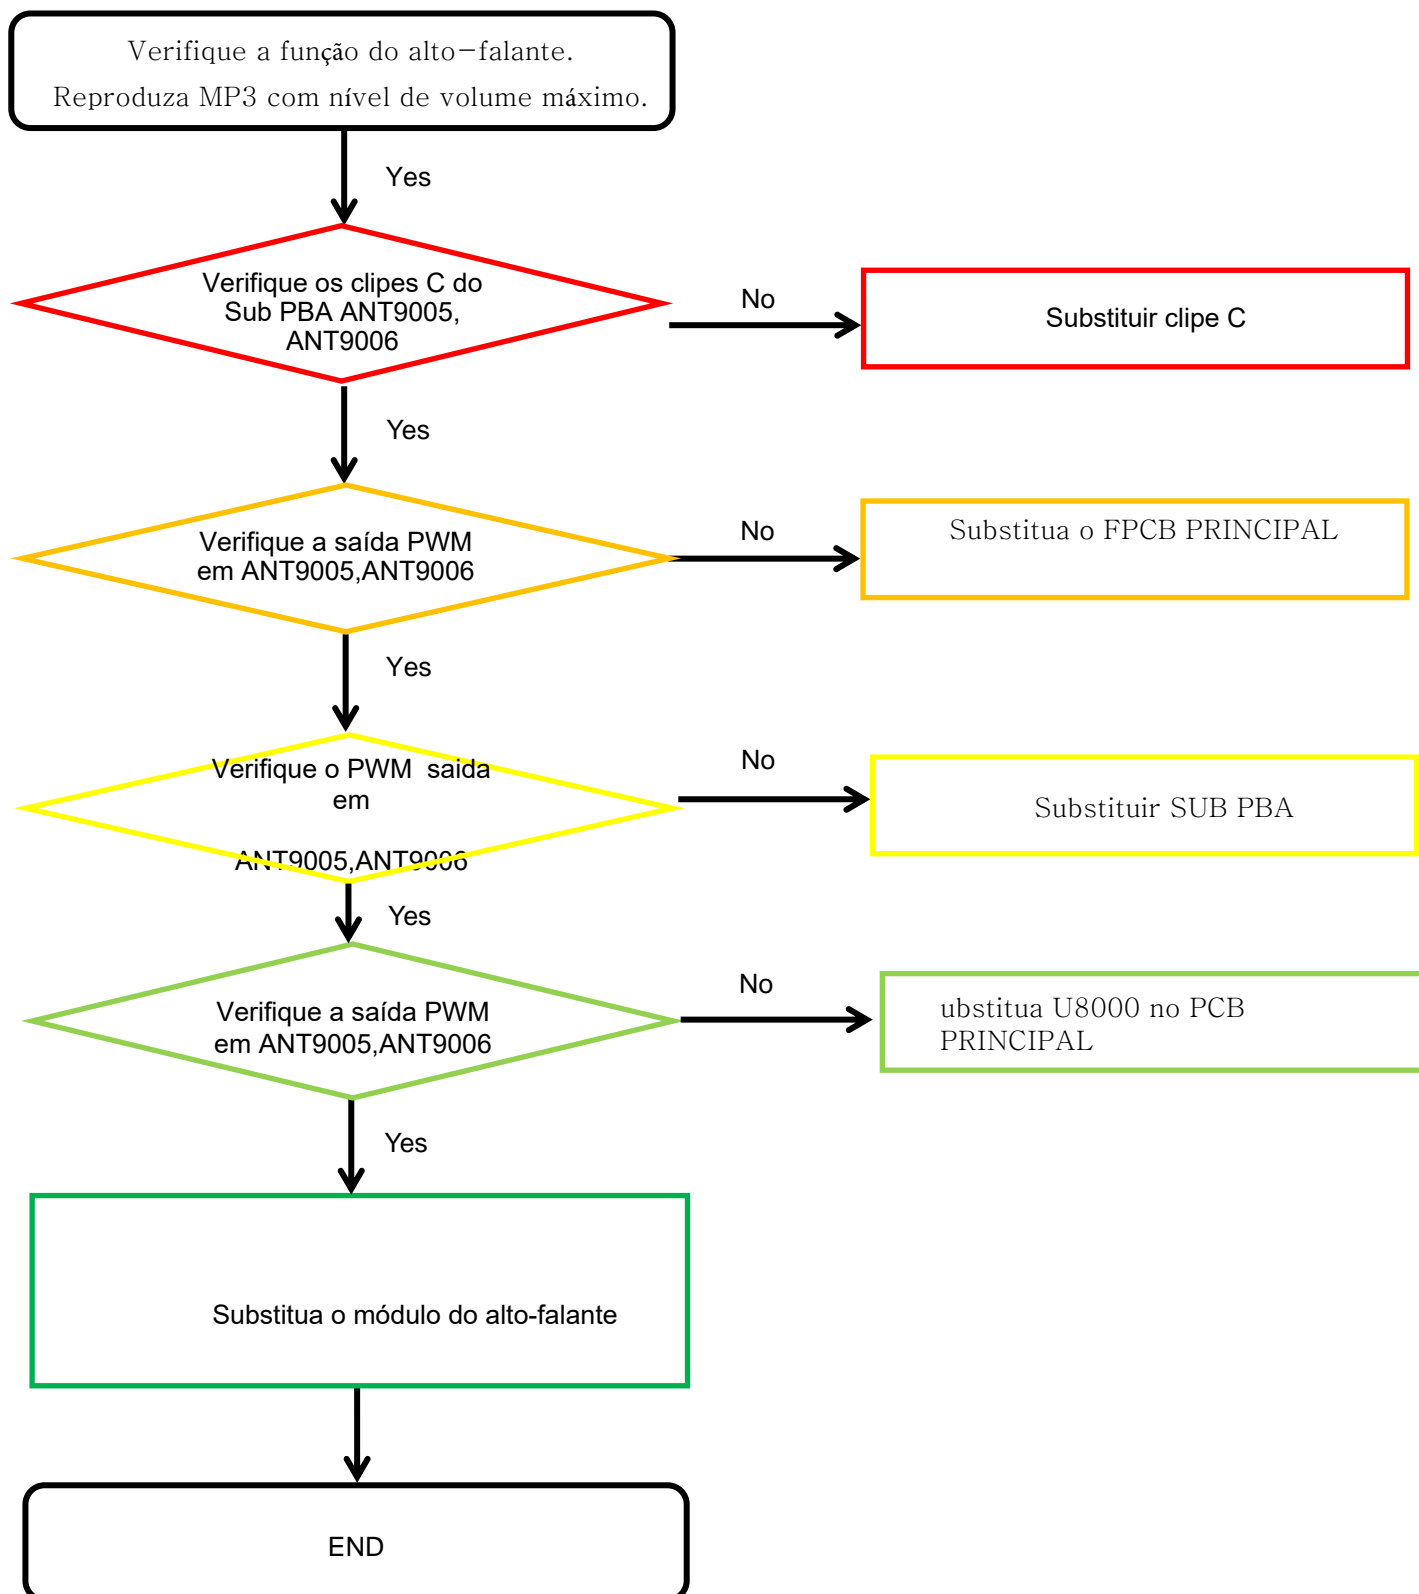


8. Level 3 Repair

8-4-12. BT/WIFI

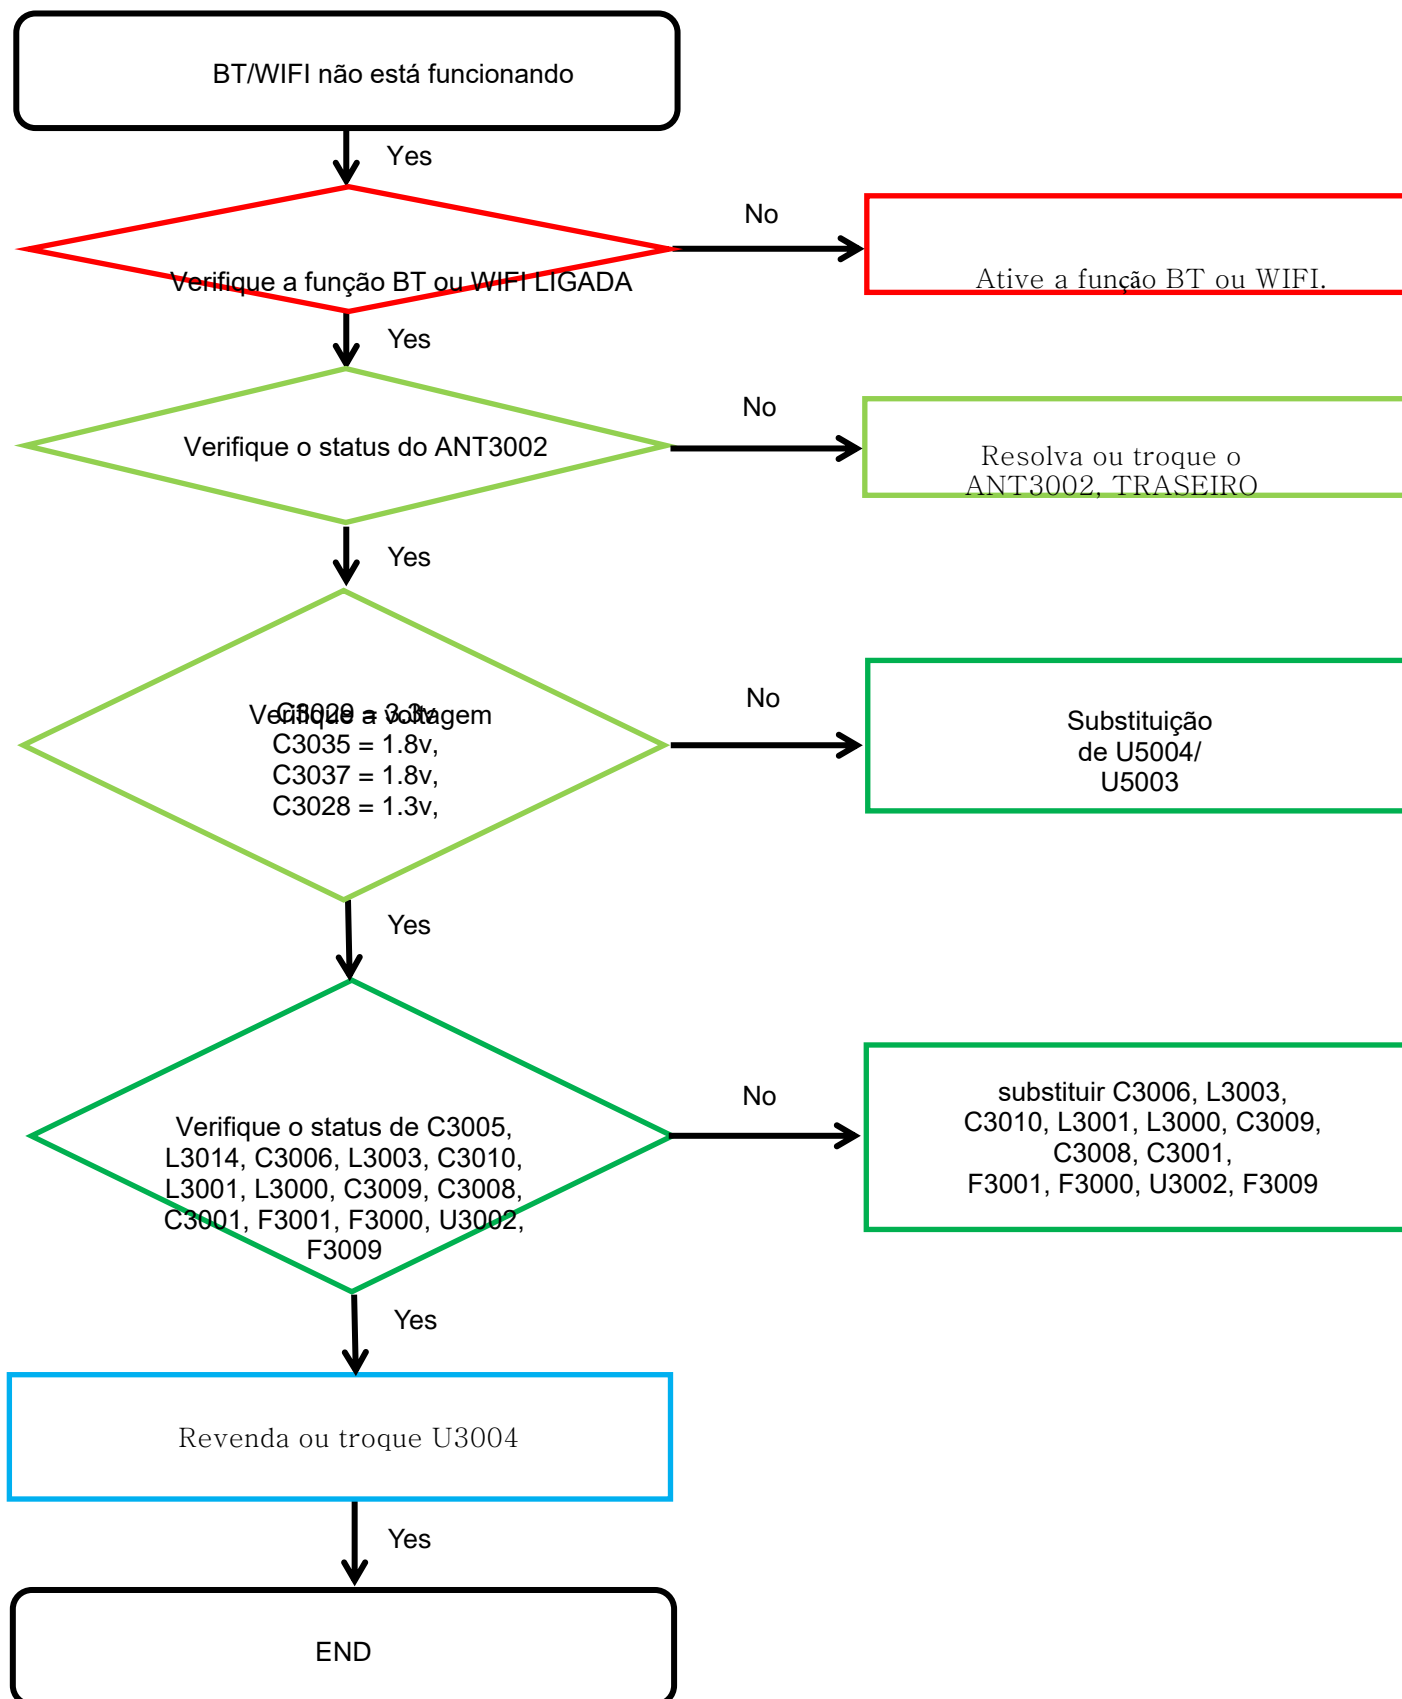


8. Level 3 Repair

8-4-13. GPS

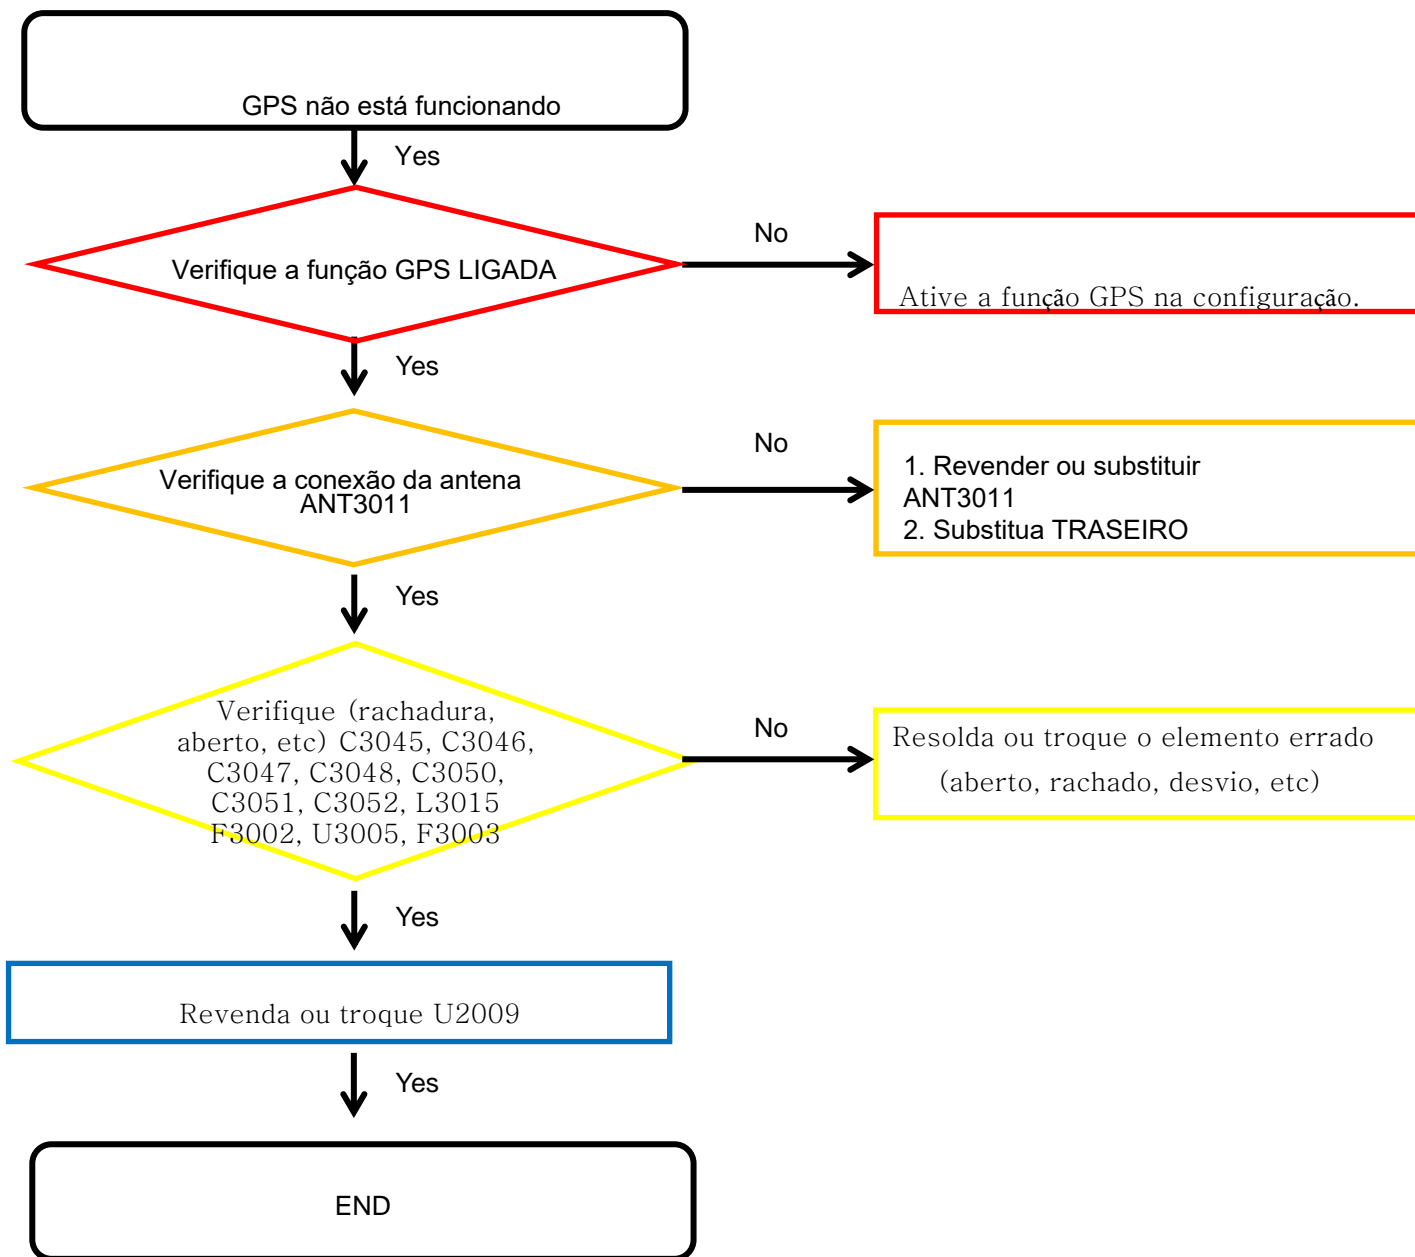


8. Level 3 Repair

8-4-16. Display

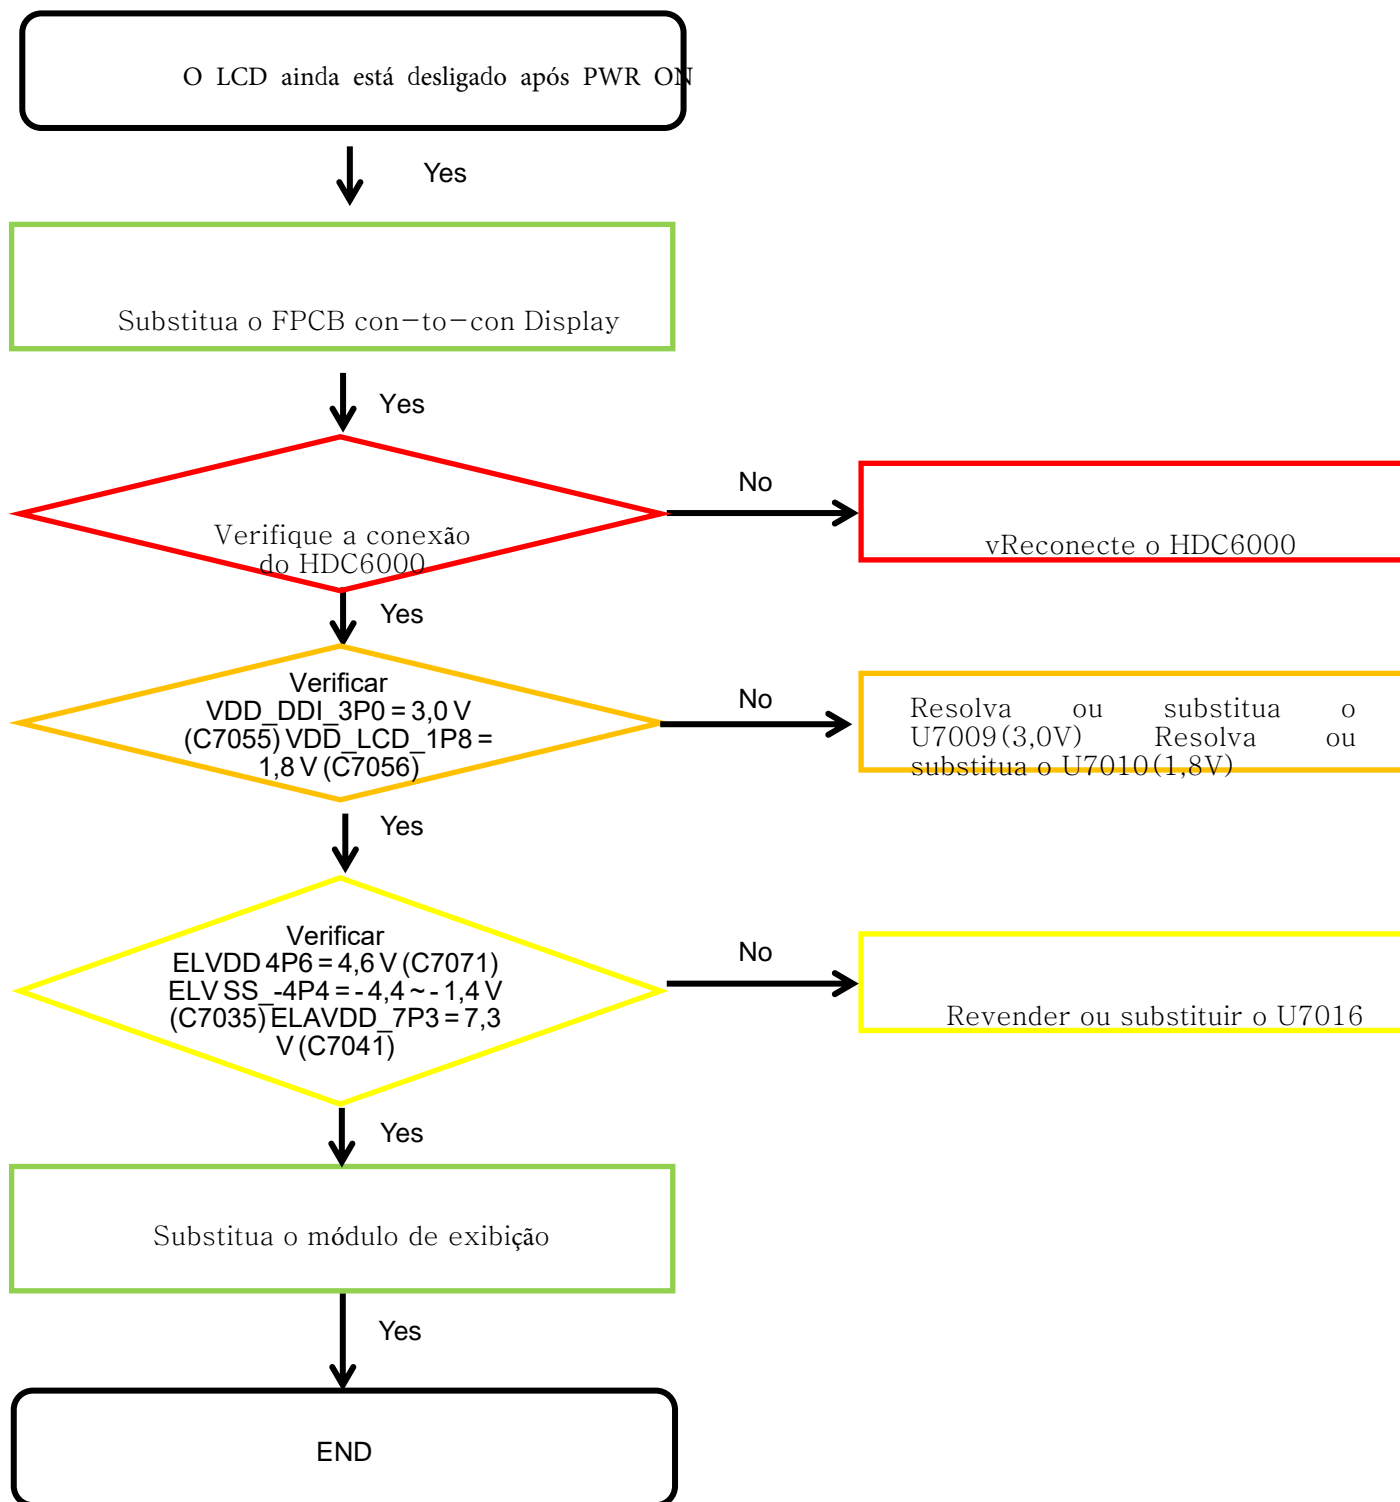


8. Level 3 Repair

8-4-17. Triple Camera

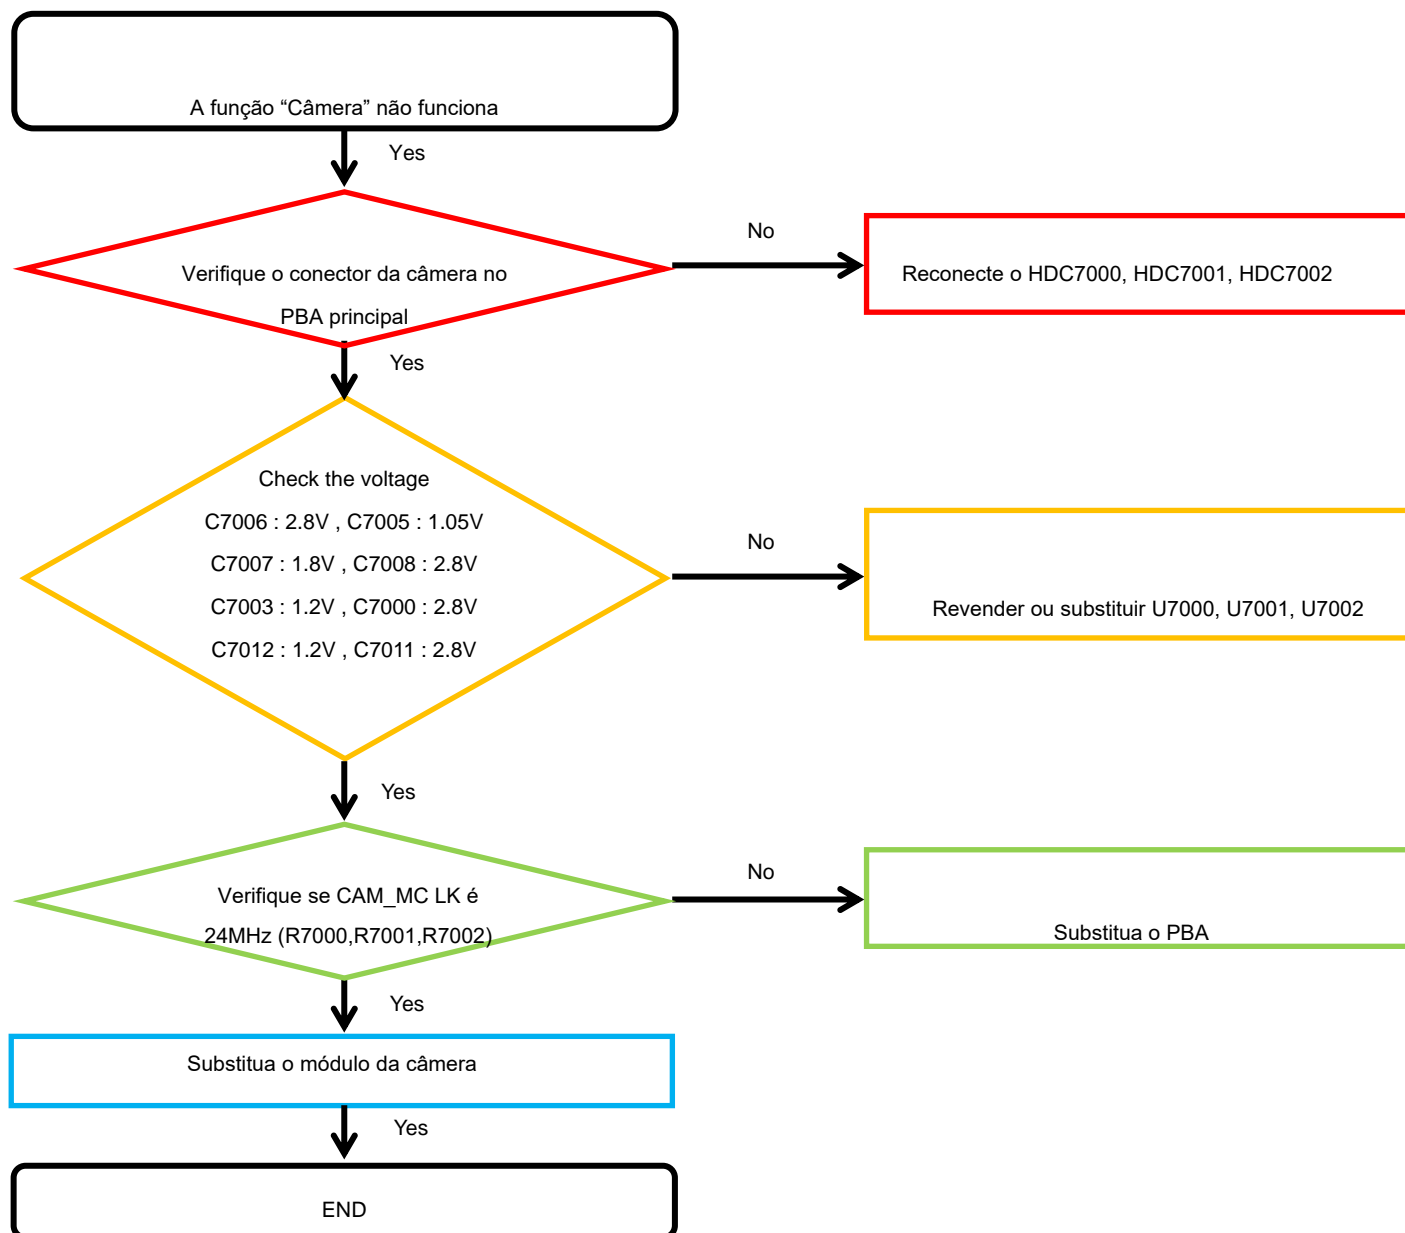


8. Level 3 Repair

8-4-18. VT CAMERA

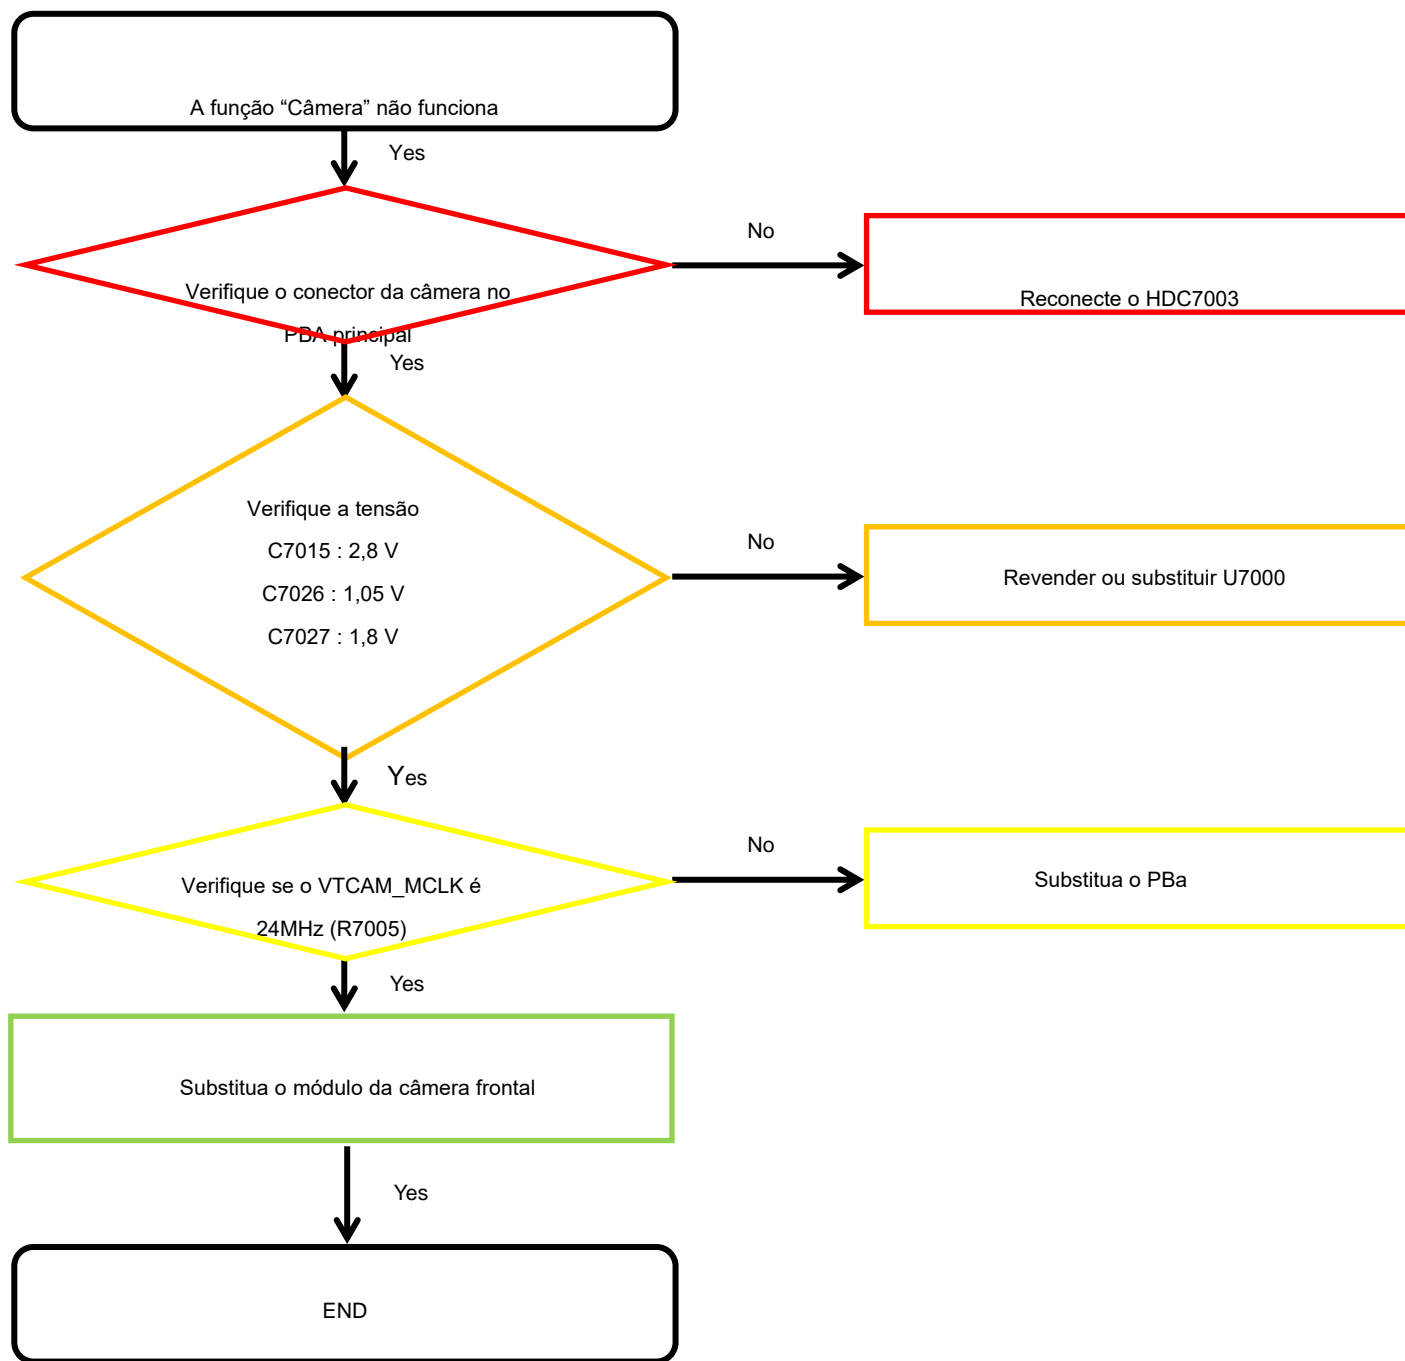

8. Level 3 Repair

8-4-19. TSP

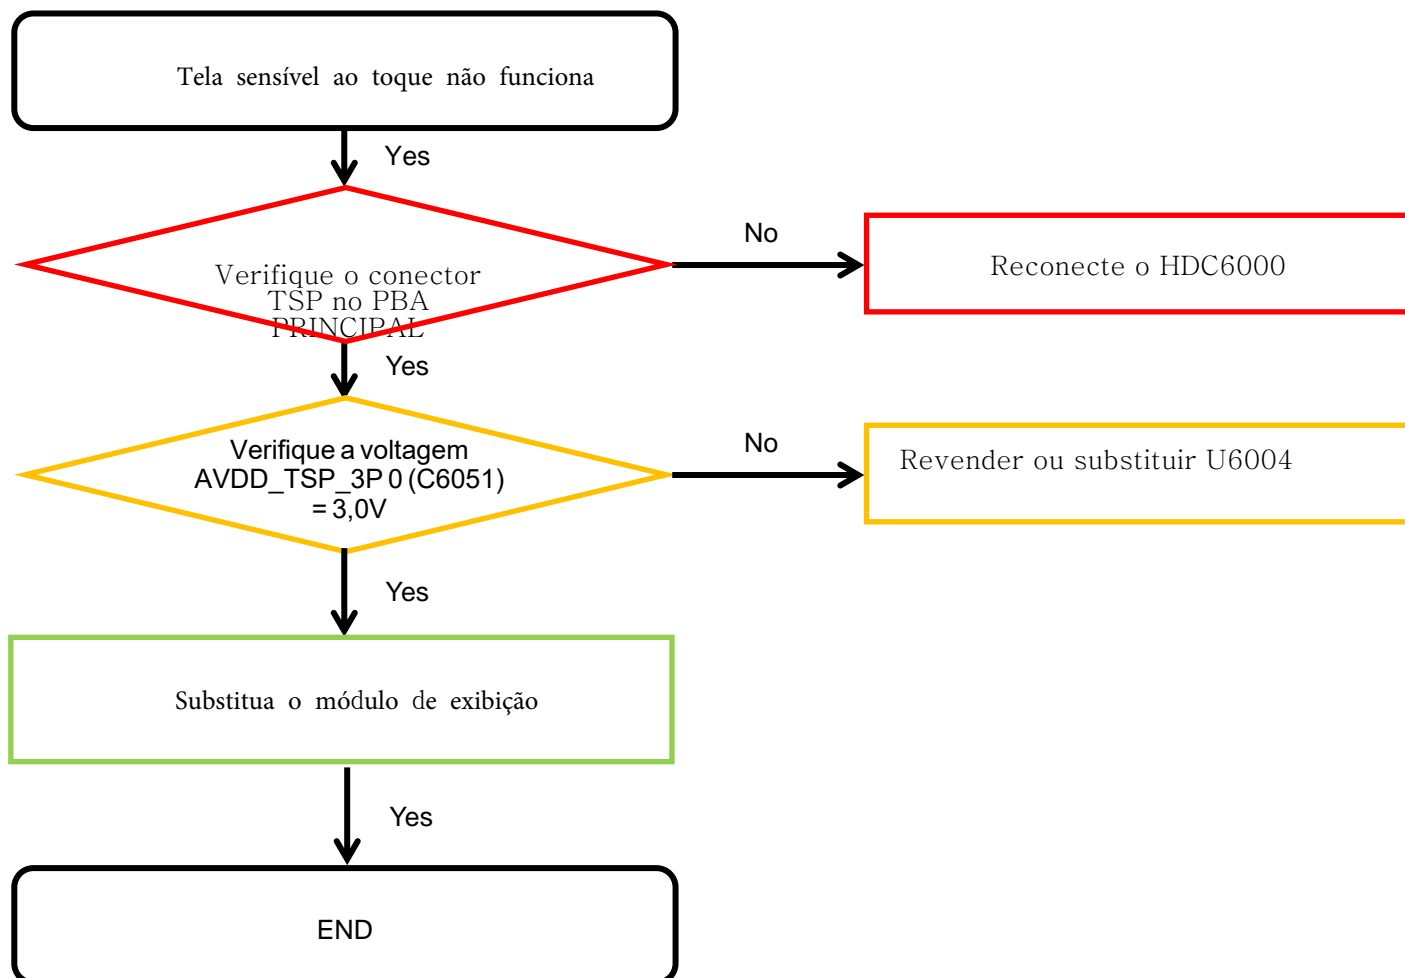

8. Level 3 Repair

8-4-20. Motor

