




A30 Block Diagram

Date : 2018.11.22
H/W REV : 0.0

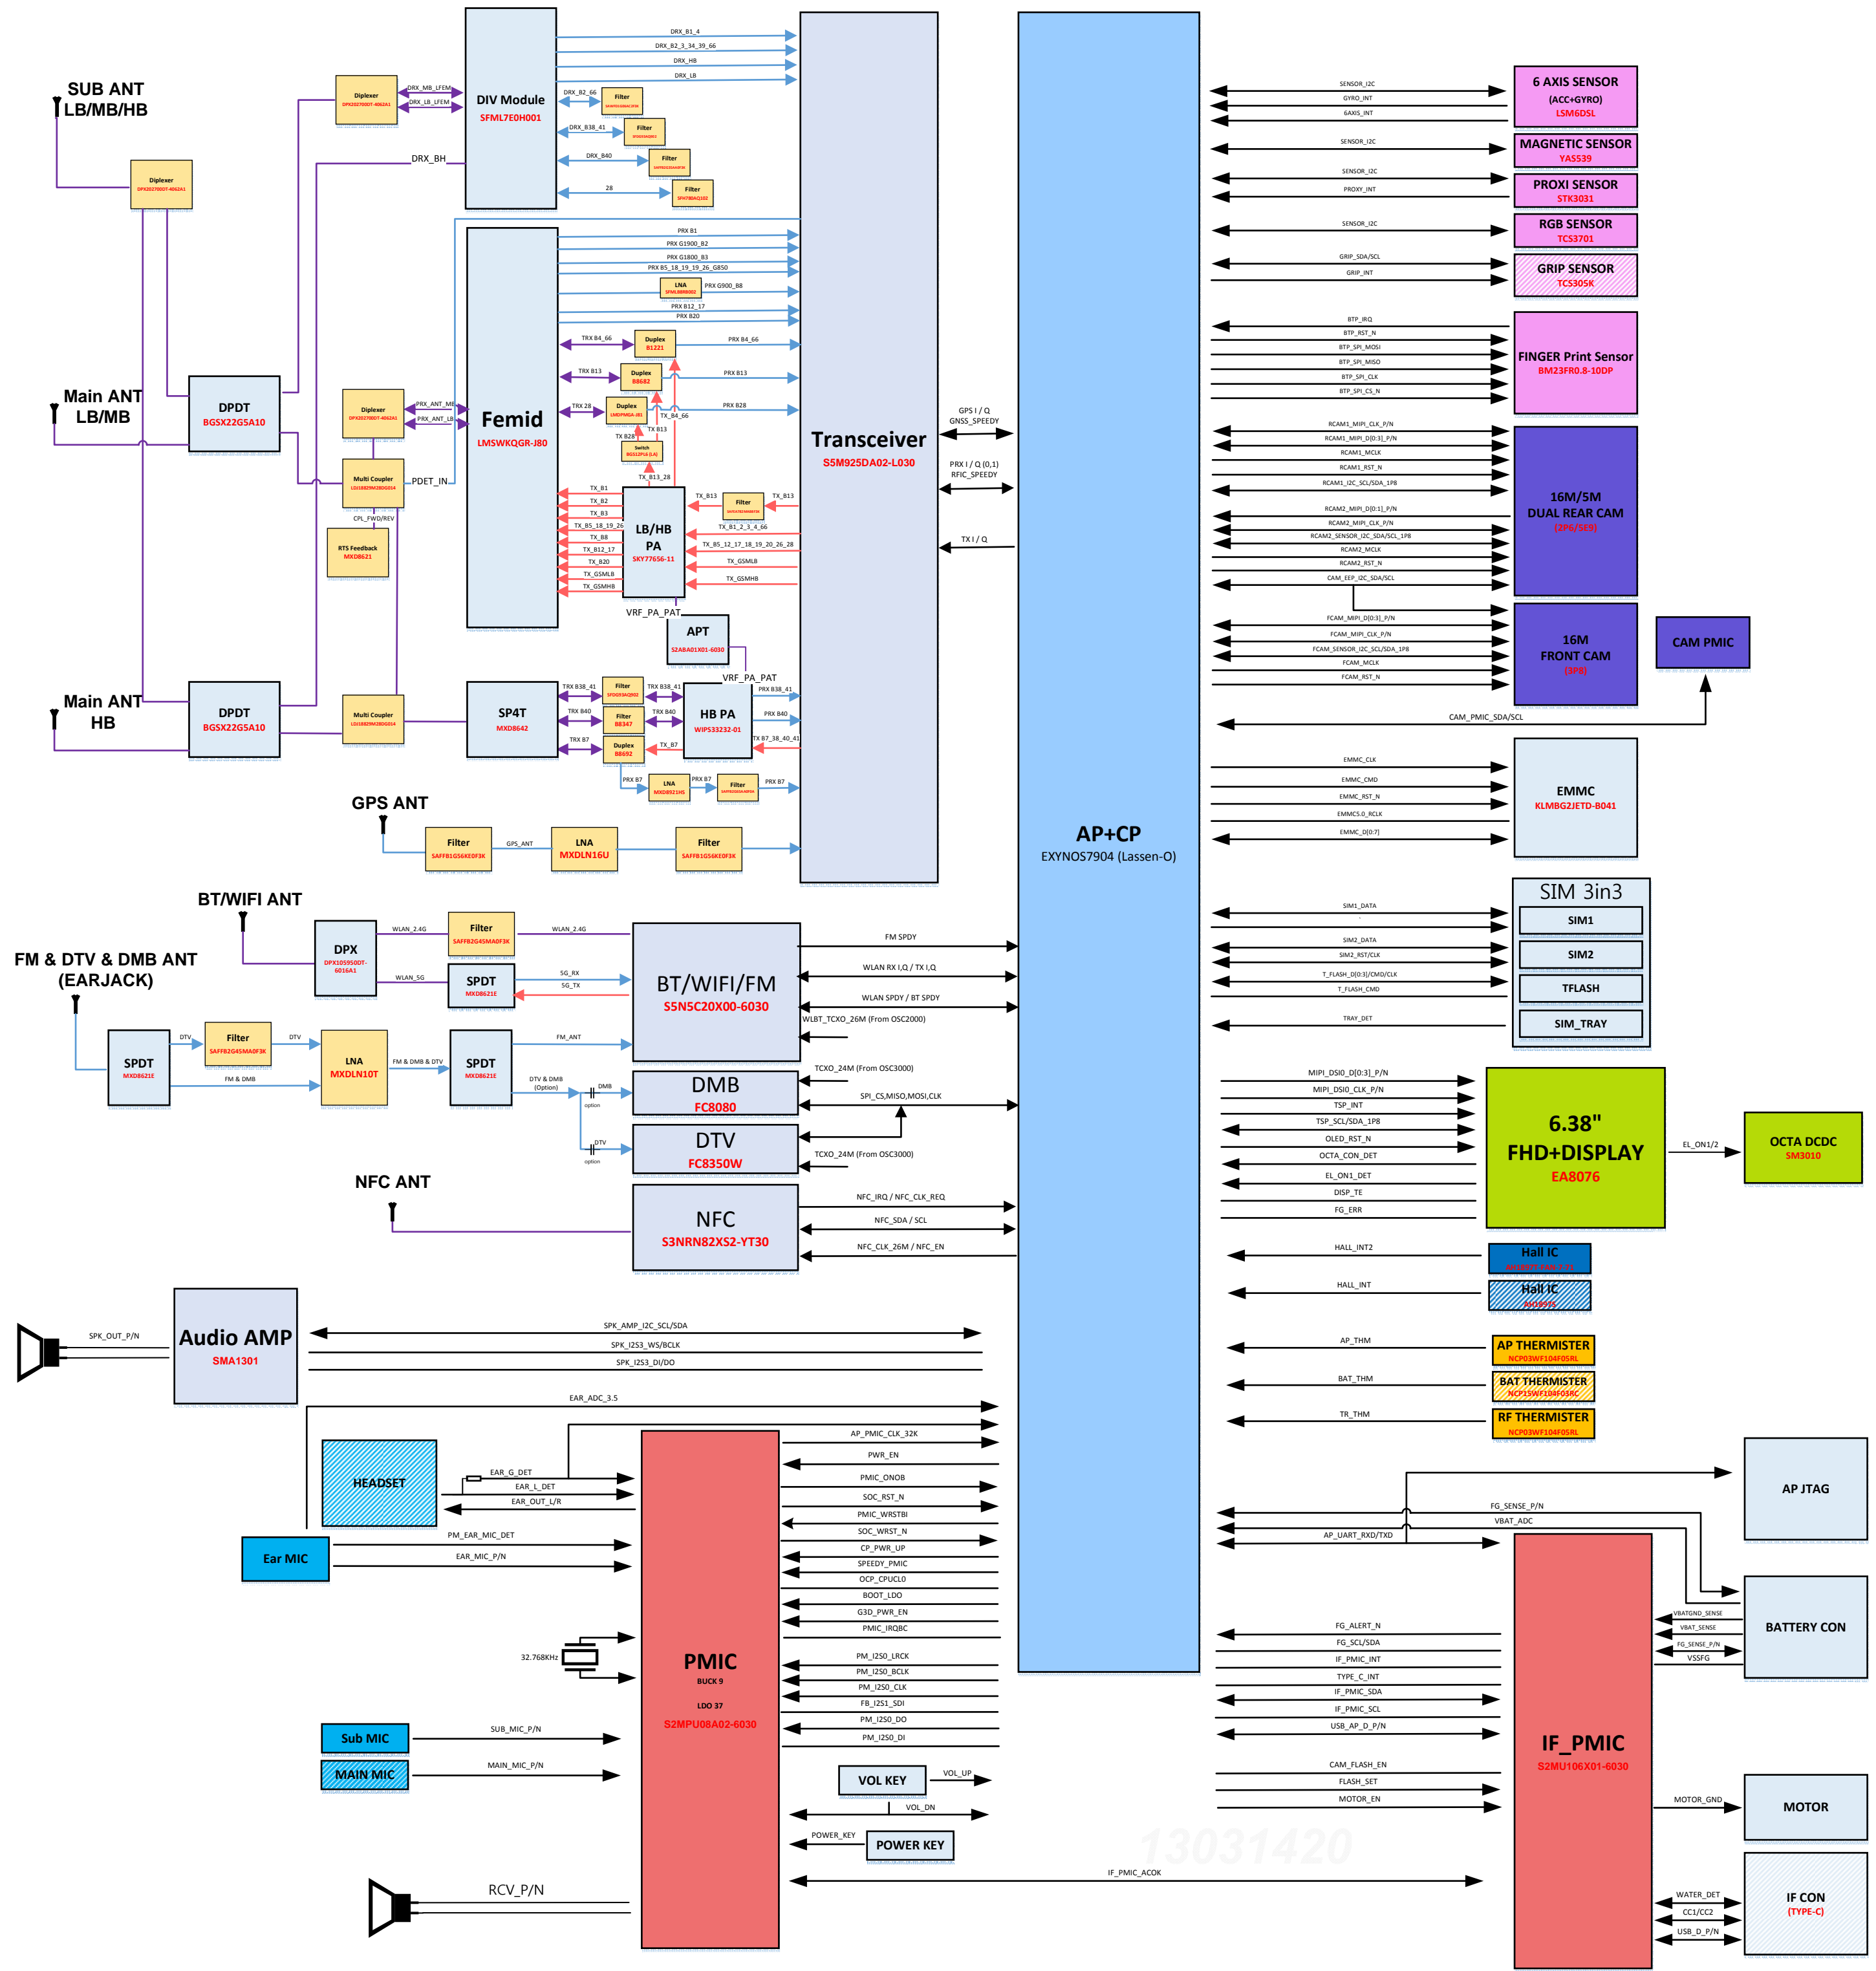


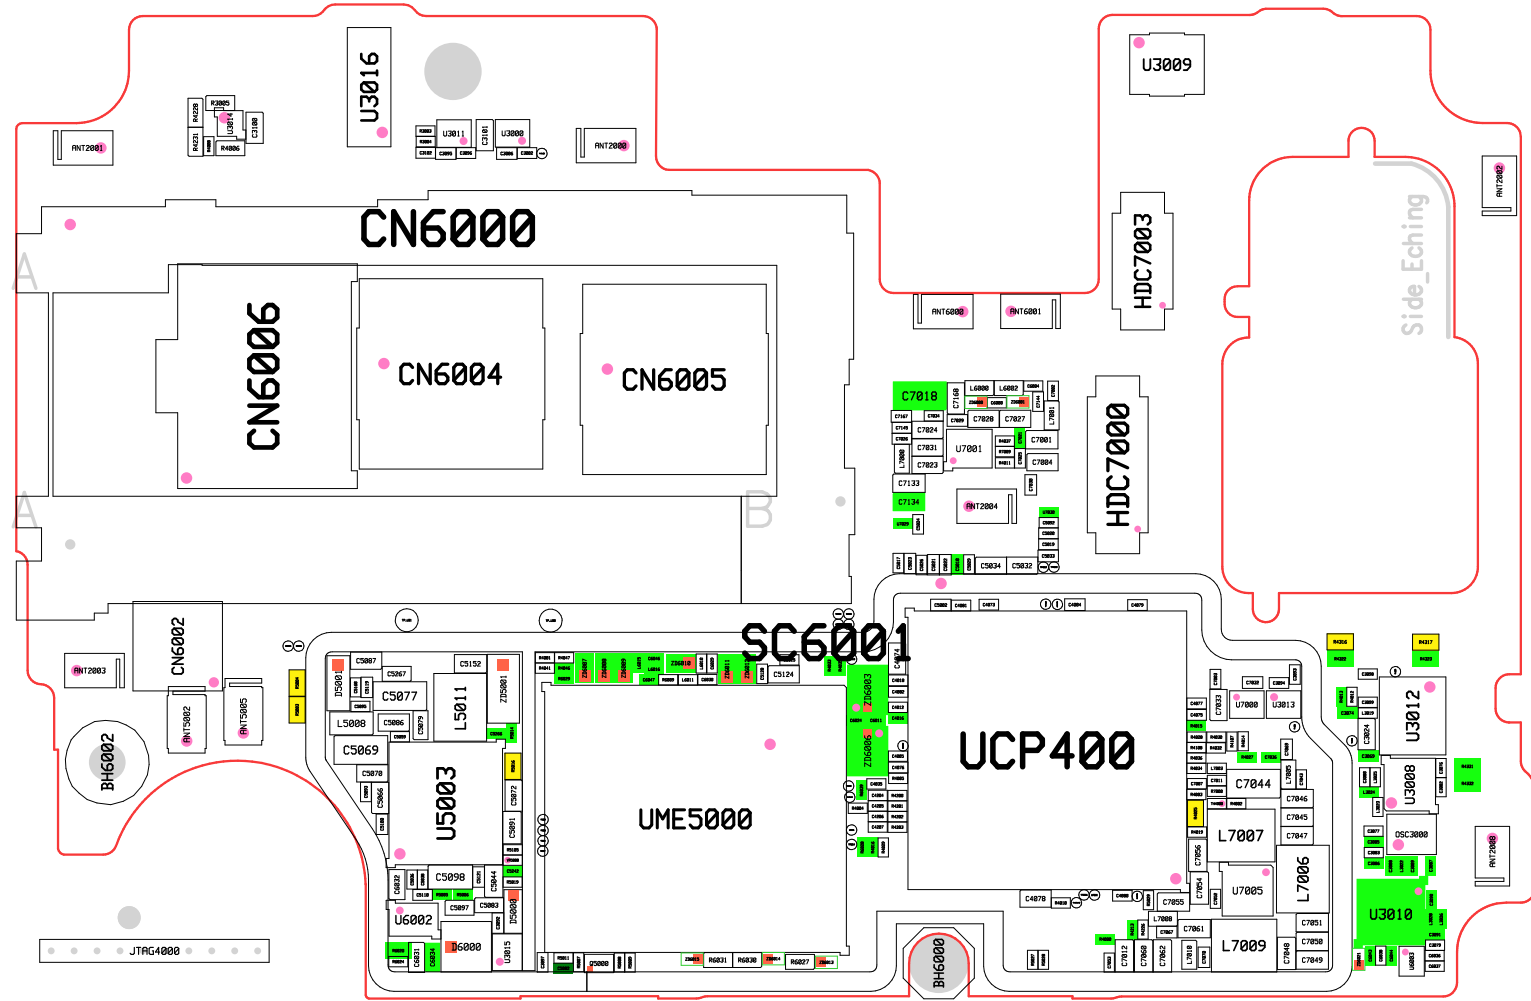

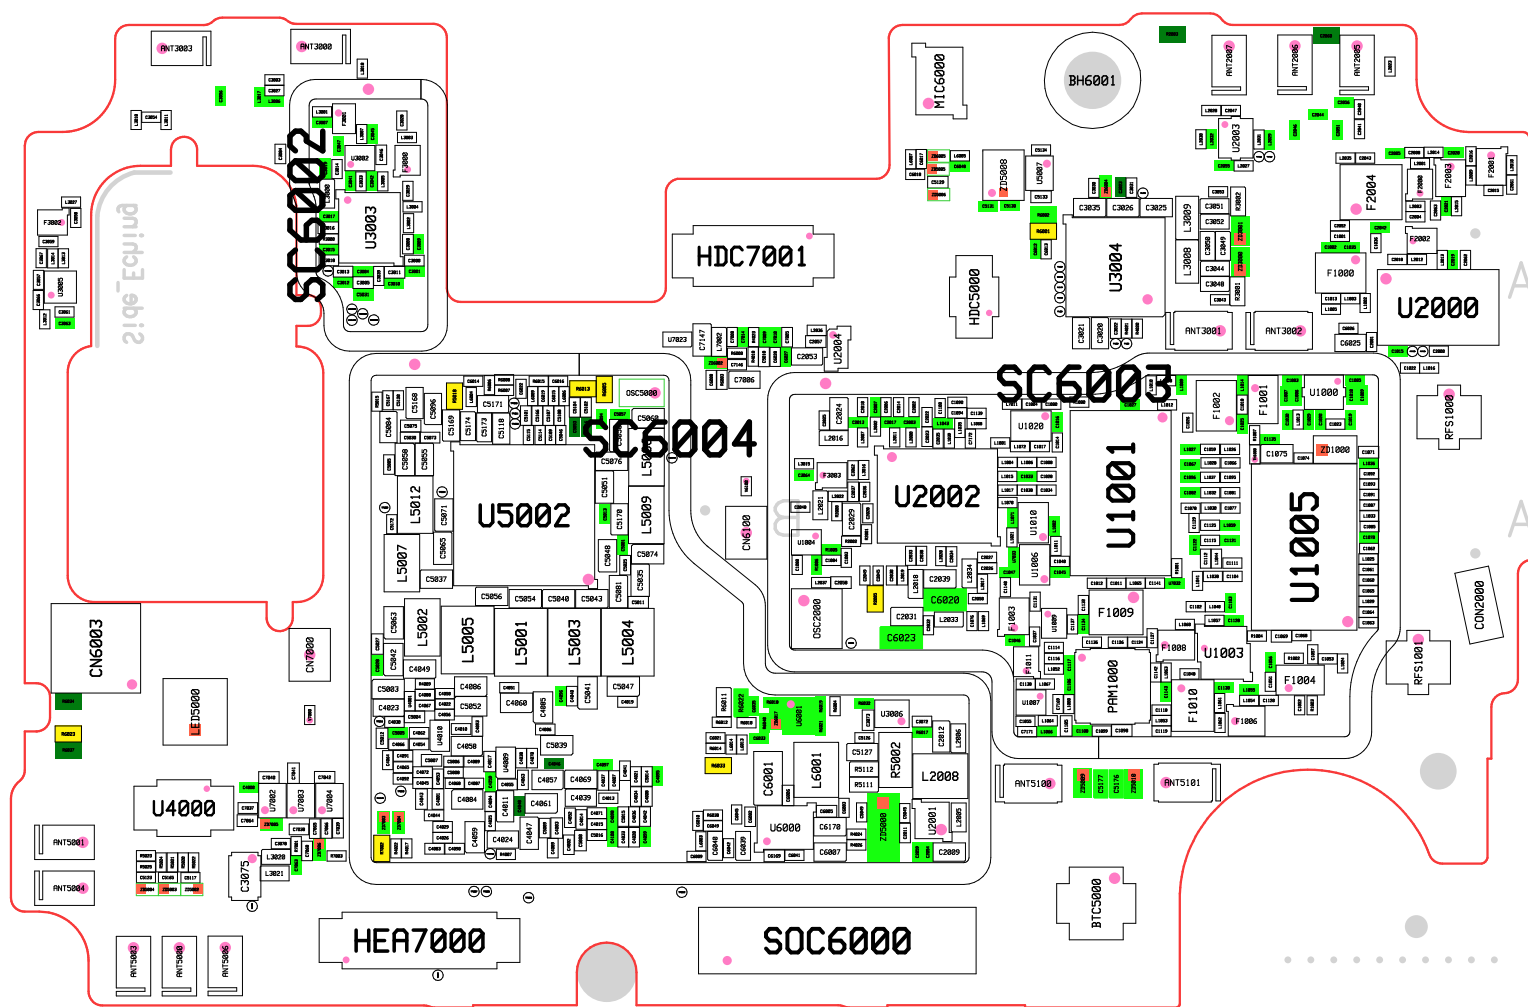

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

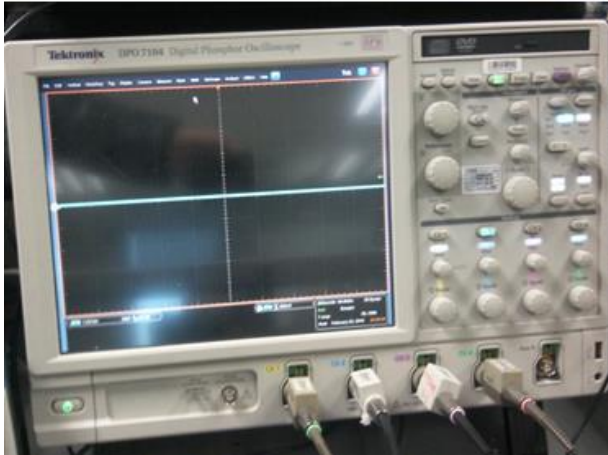


Oscilloscope




Digital Multimeter



Power Supply

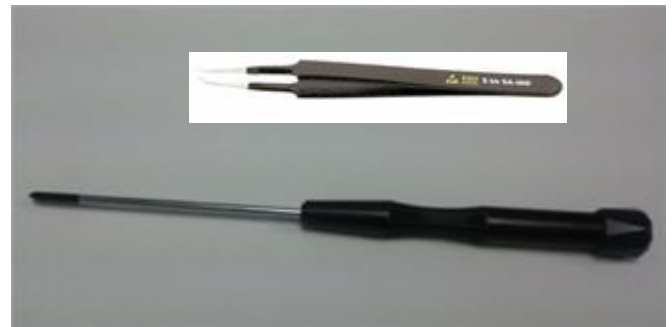

+ driver, ESD Safe Tweezer

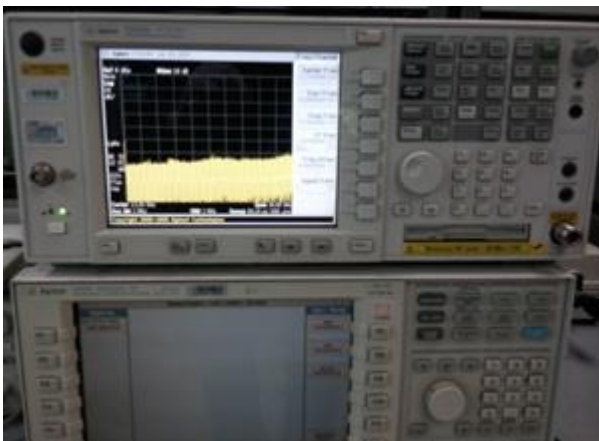


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power on

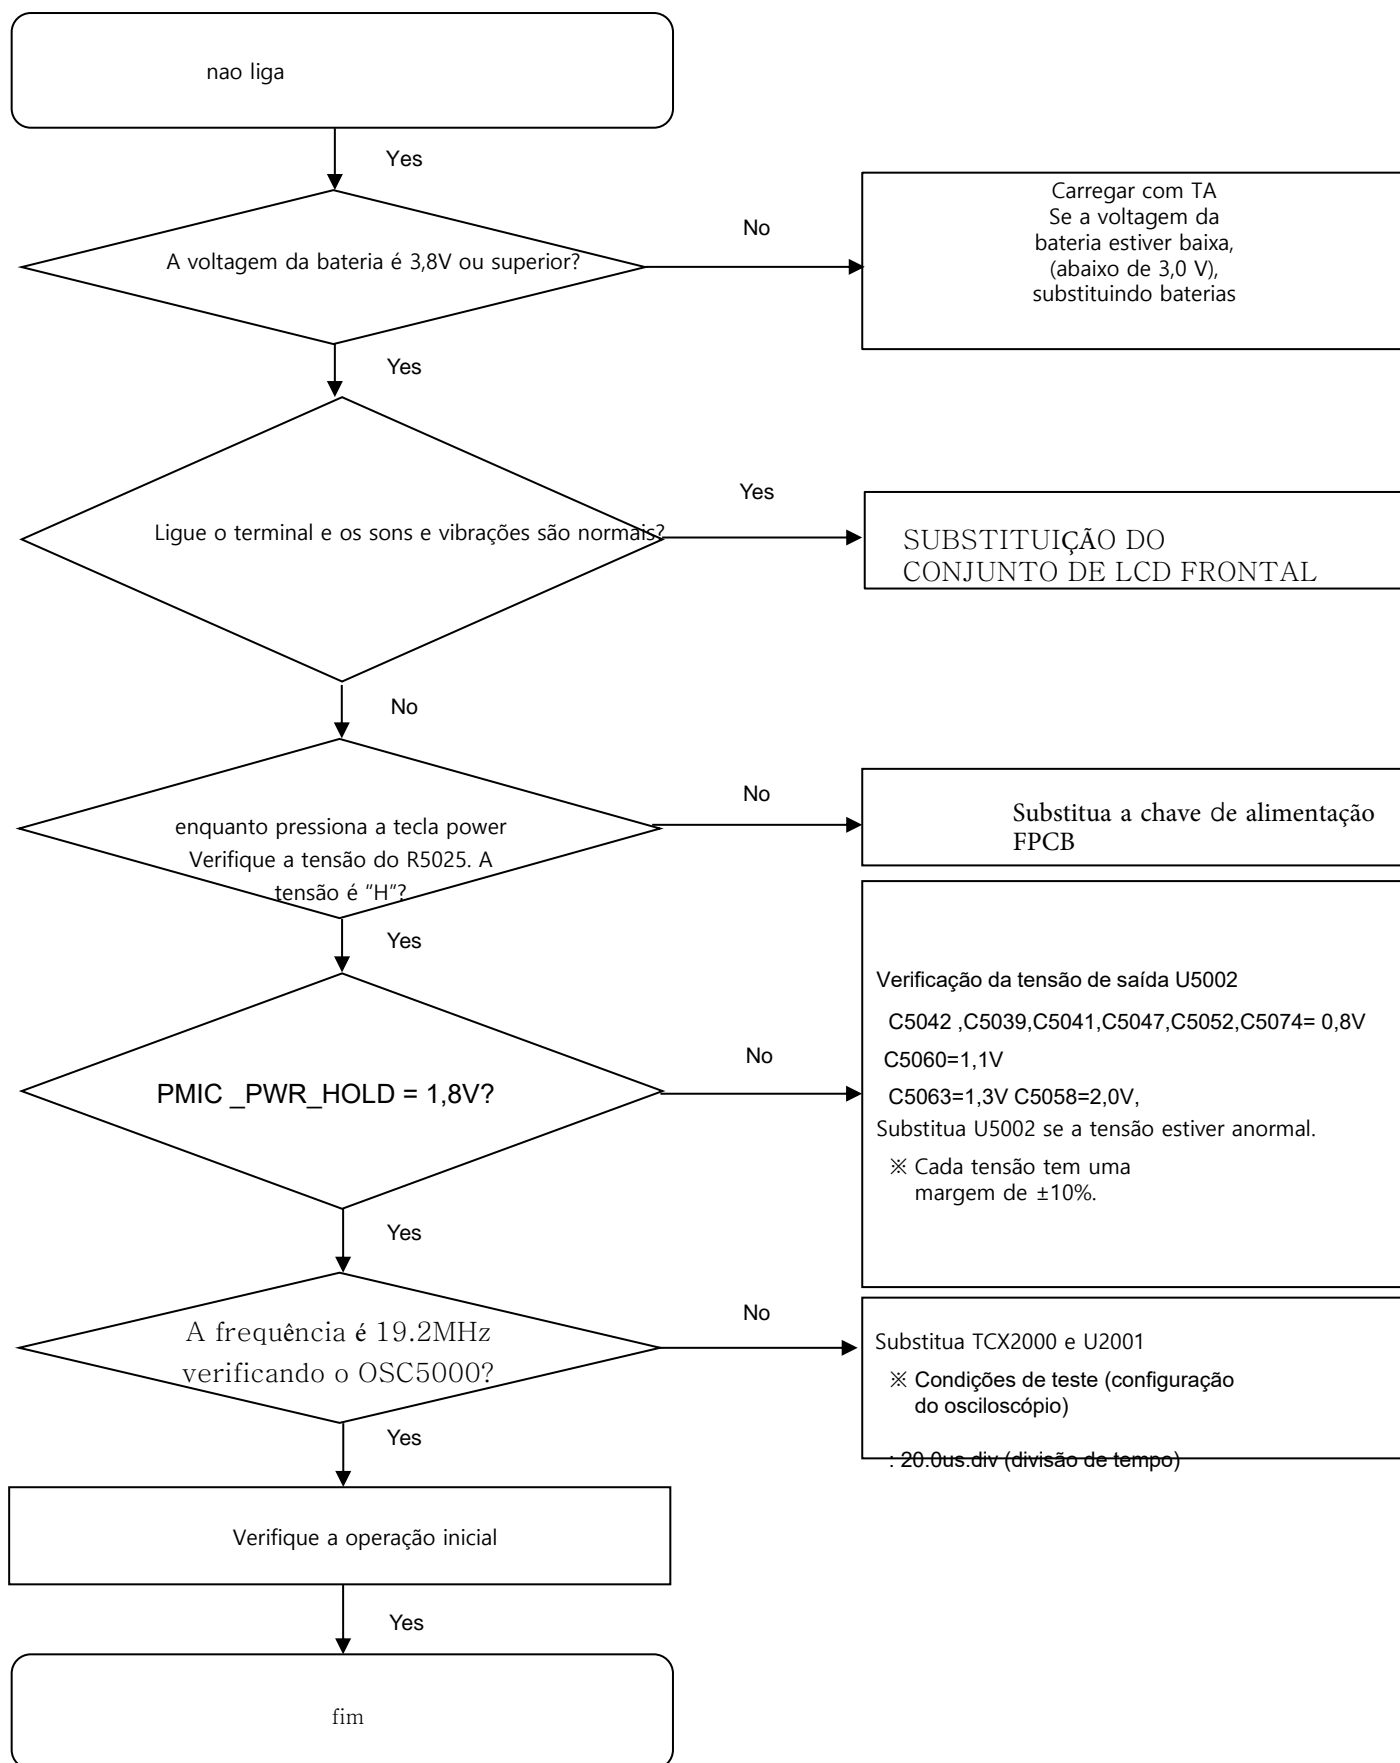


8. Level 3 Repair

parte de carregamento

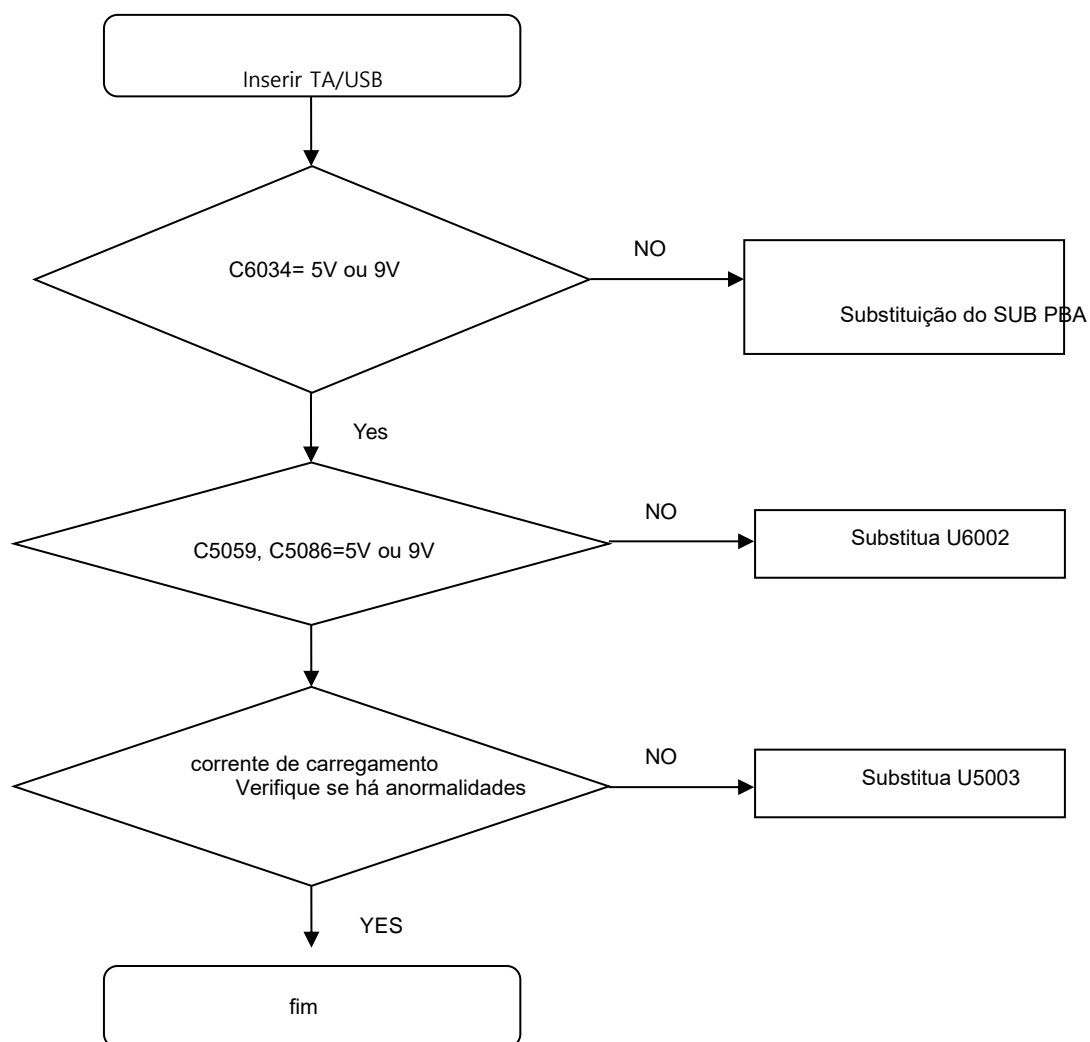


8. Level 3 Repair

inicialização

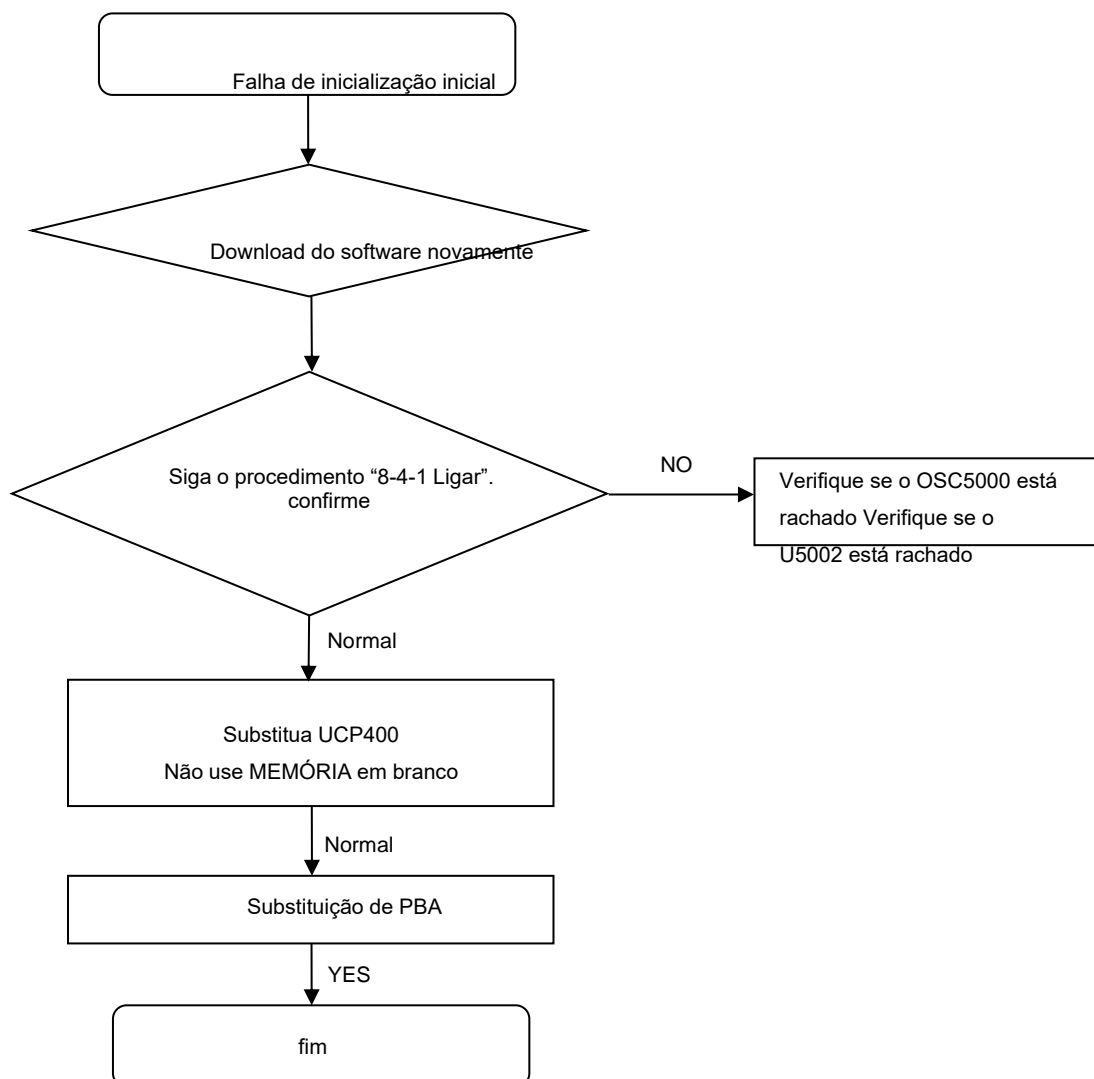


8. Level 3 Repair

8-4-4. T-Flash Part

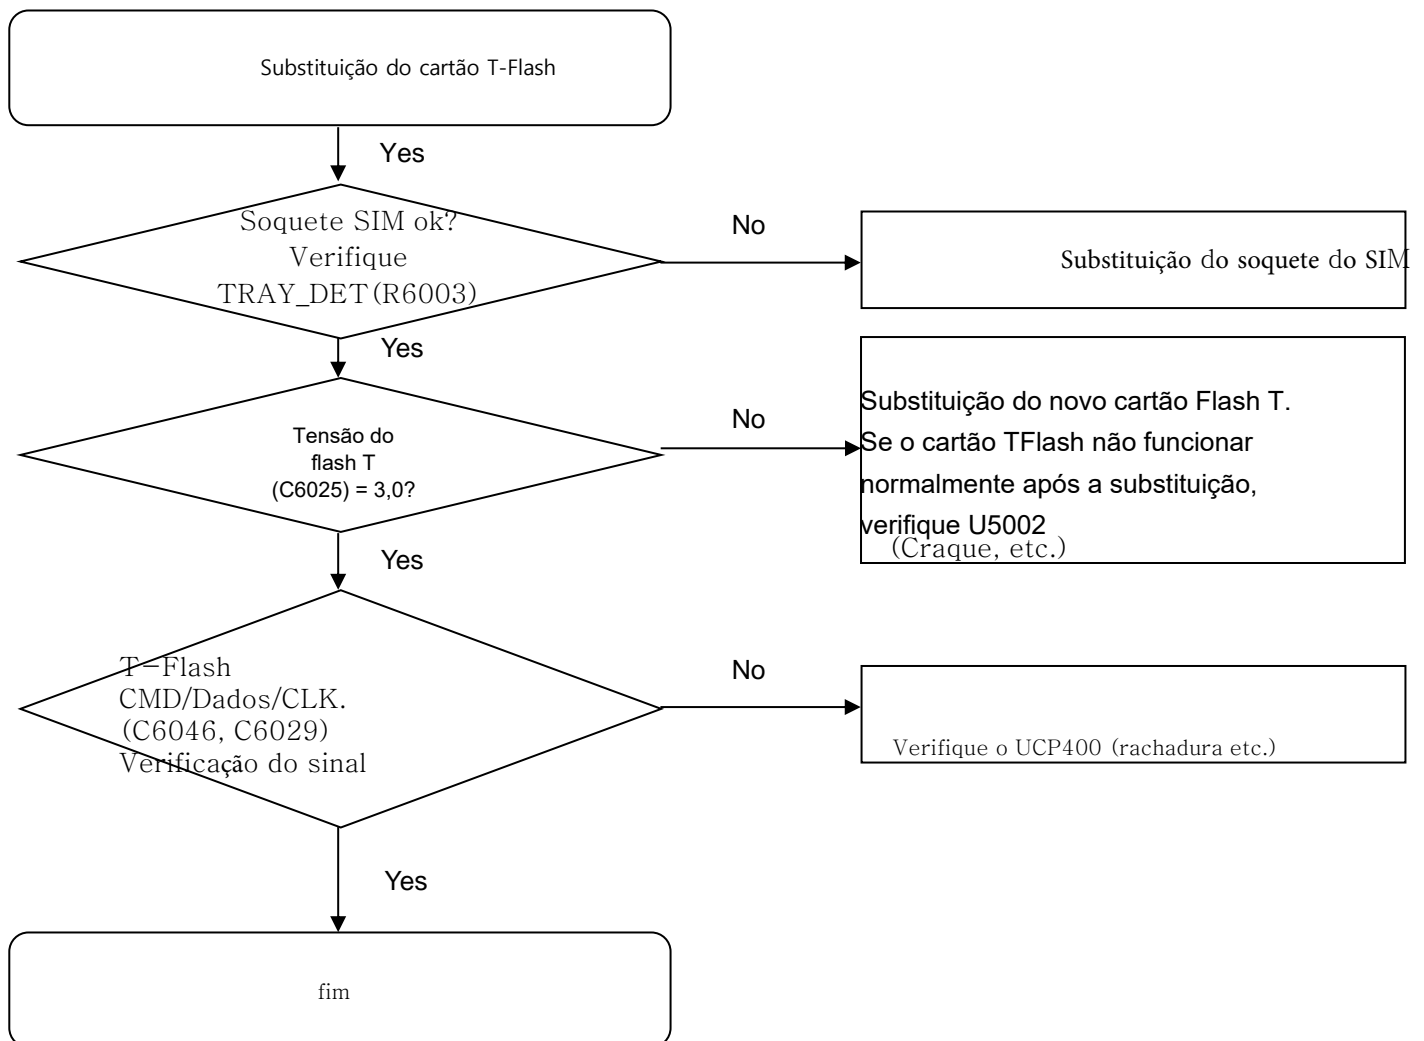


8. Level 3 Repair

8-4-5. SIM PART

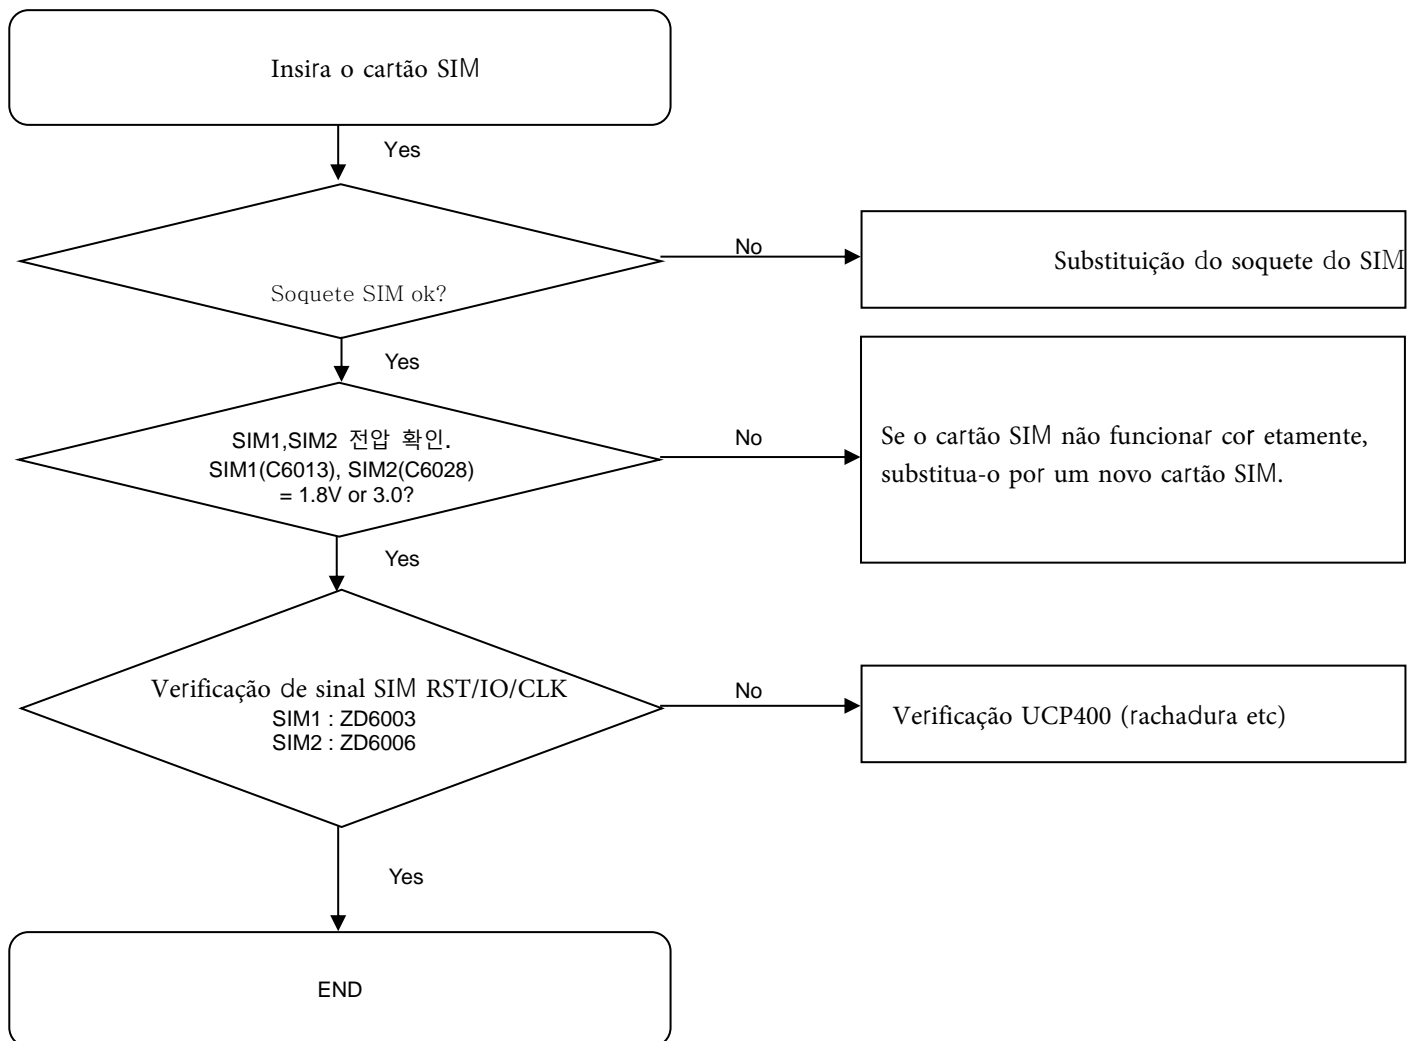


8. Level 3 Repair

8-4-6-1. sensor geomagnético

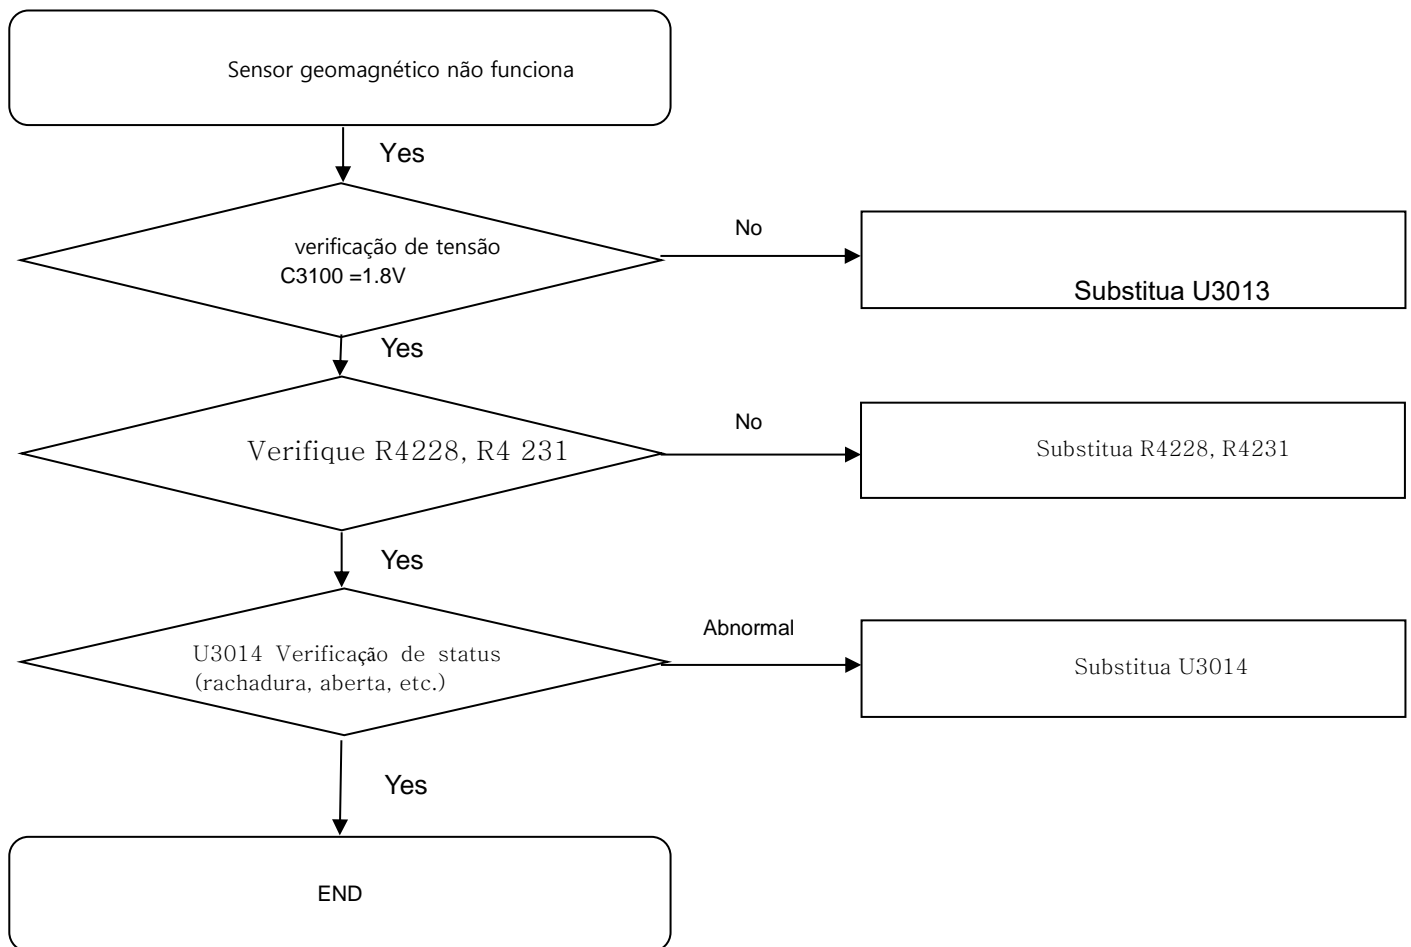


8. Level 3 Repair

8-4-6-2. sensor de 6 eixos

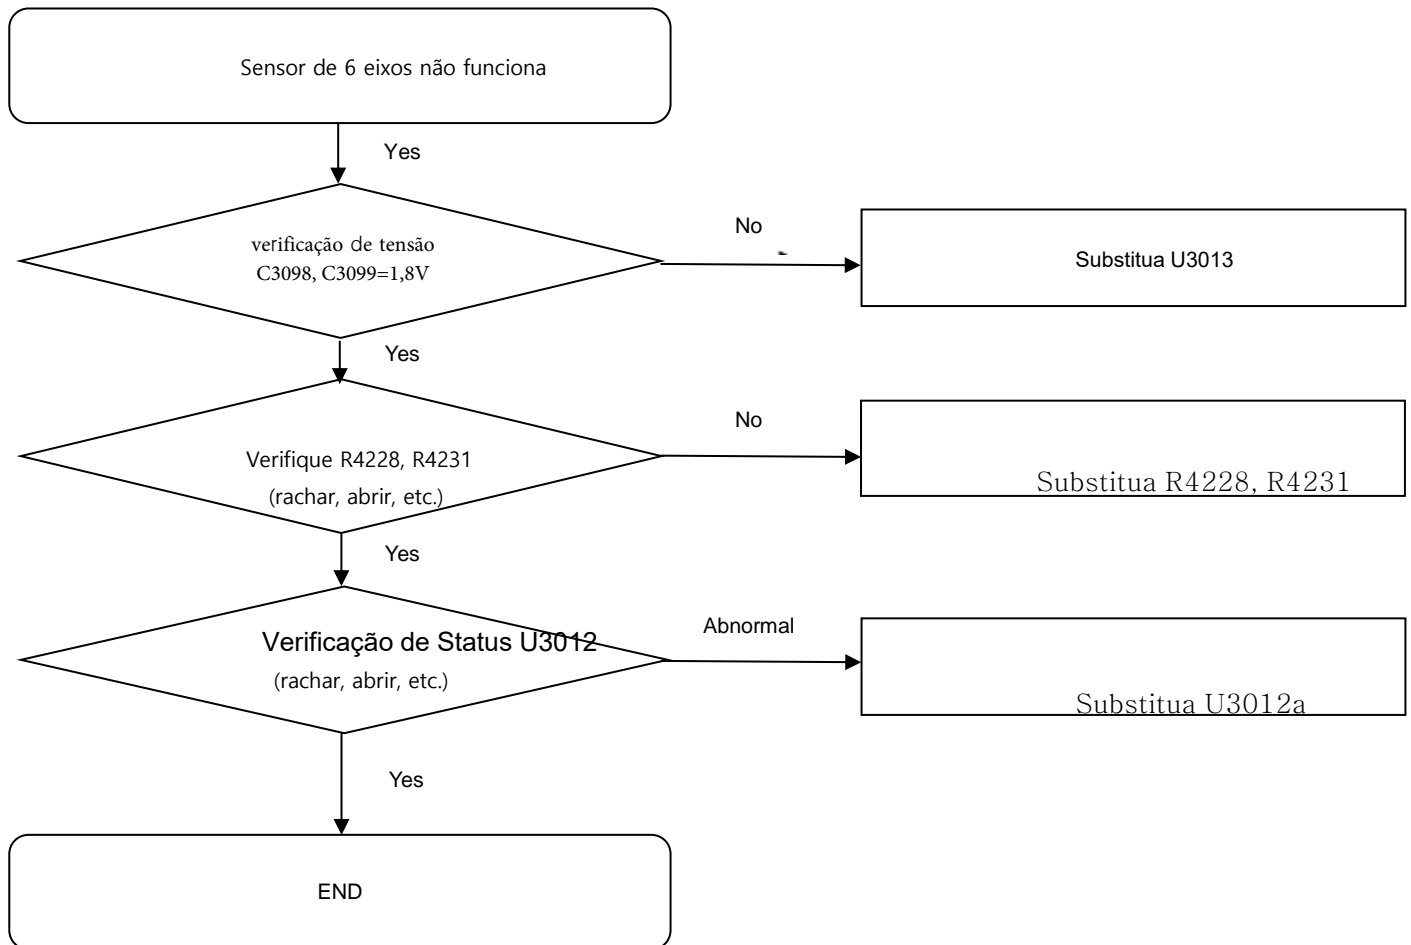


8. Level 3 Repair

8-4-6-3. sensor de proximidade

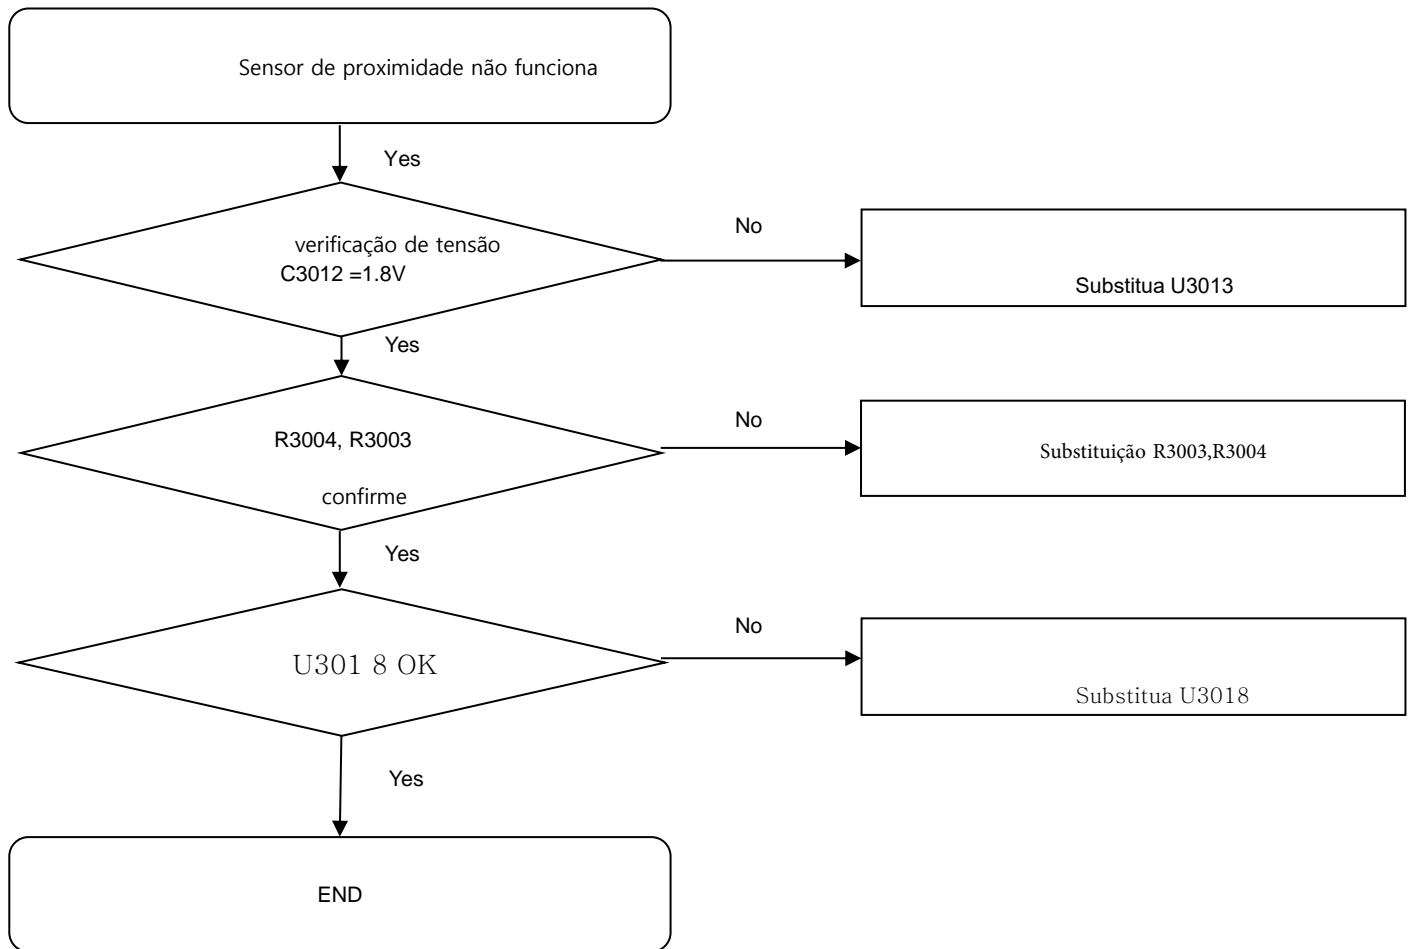


8. Level 3 Repair

8-4-8. CÂMERA traseira de 16M AF

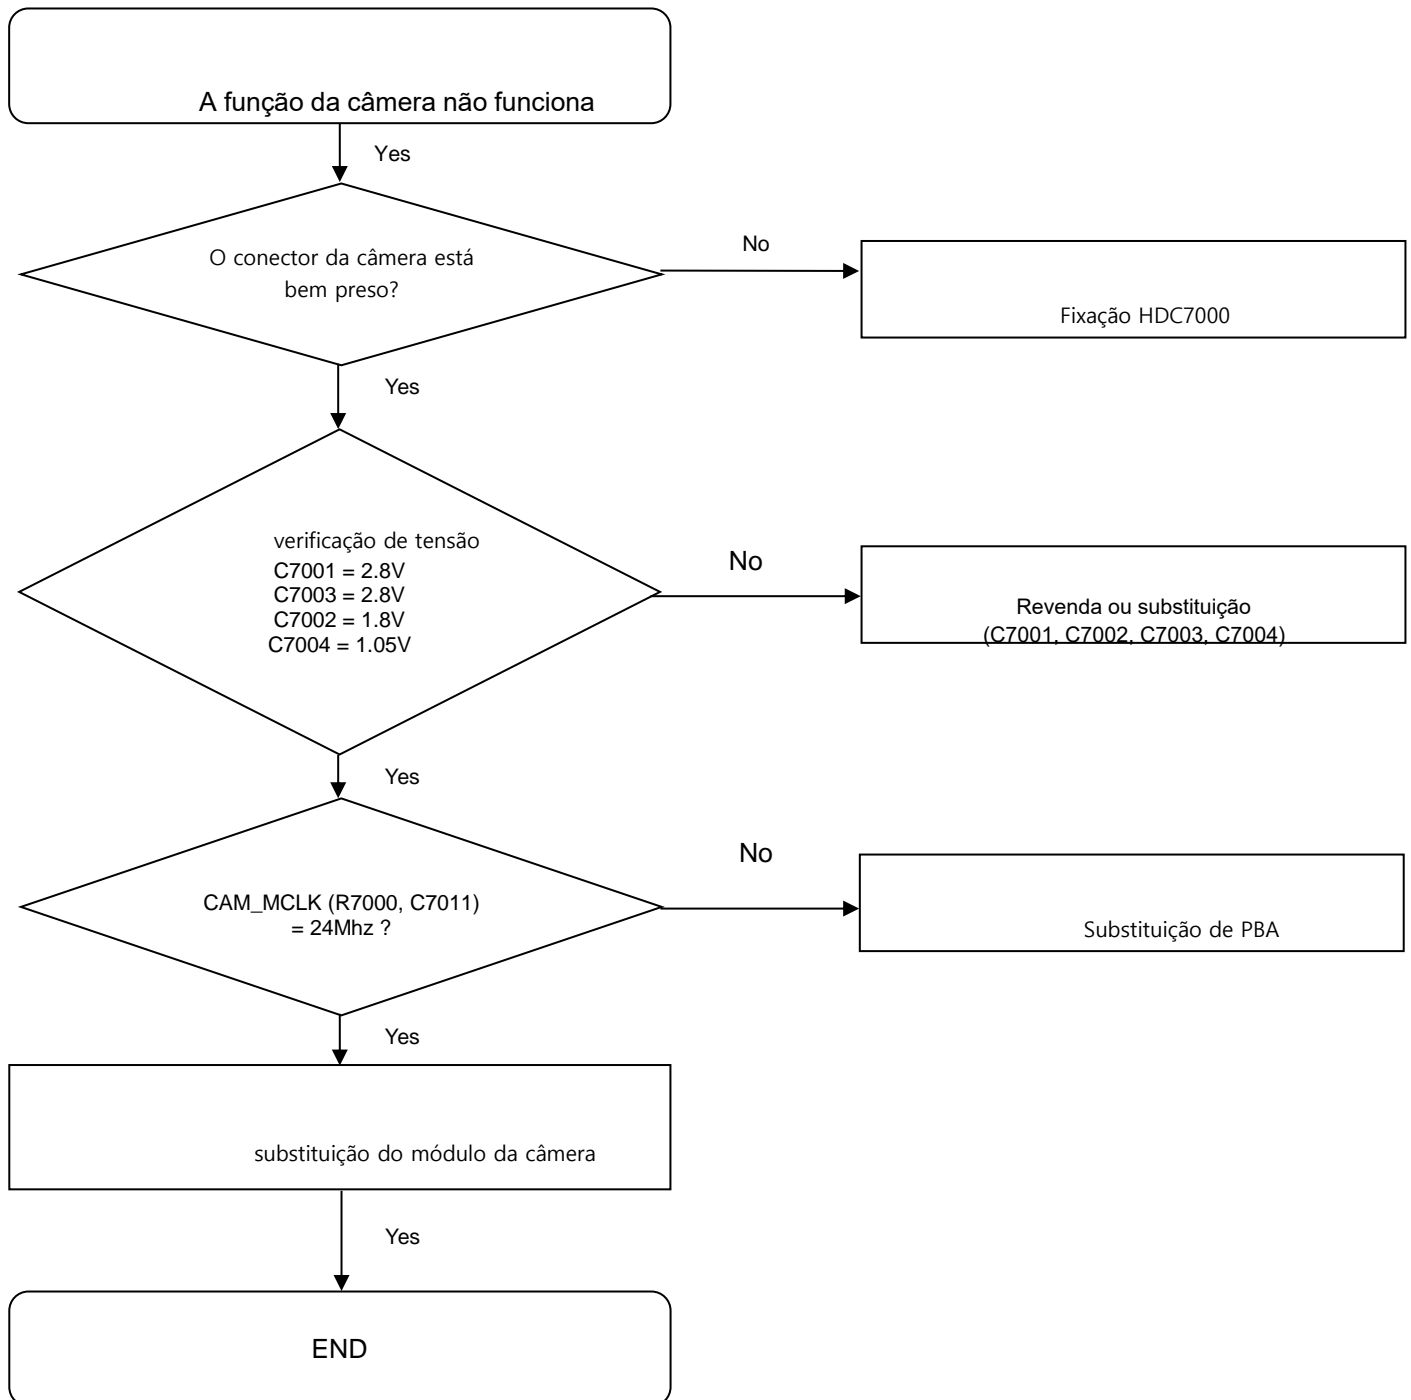


8. Level 3 Repair

8-4-9. CÂMERA FRONTAL 16M FF

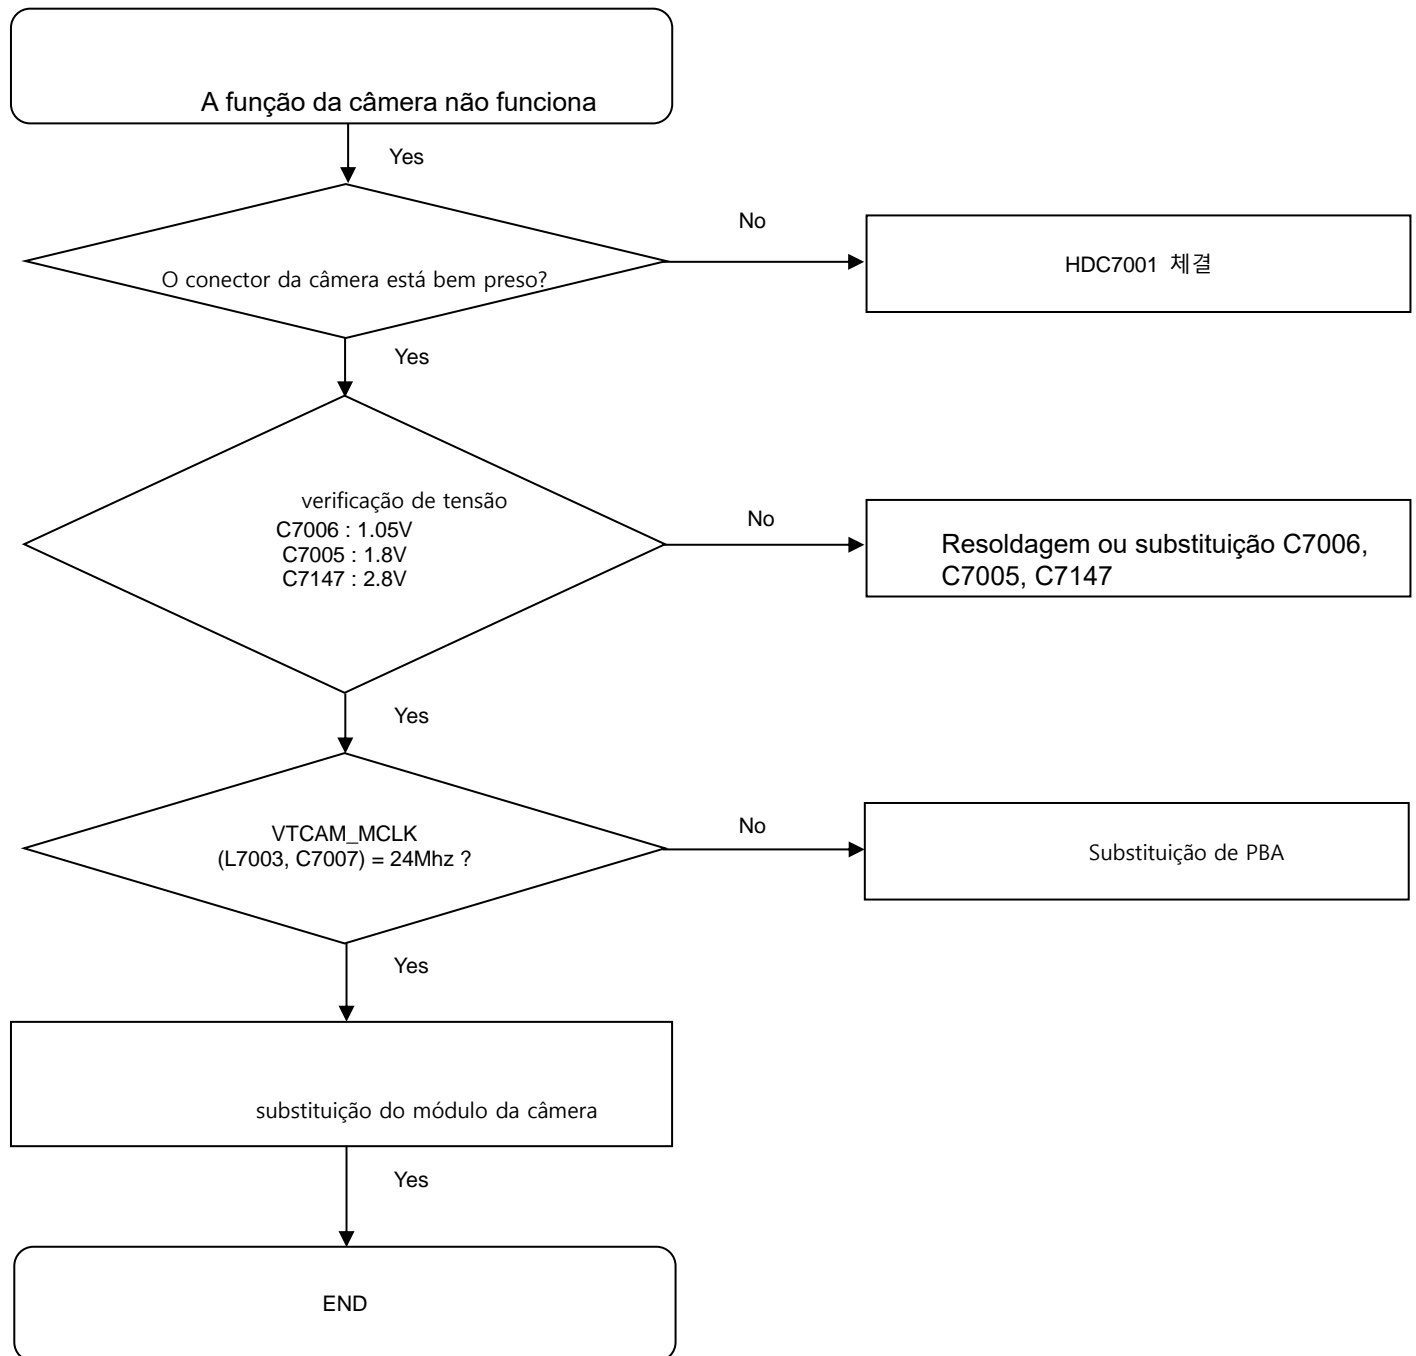


8. Level 3 Repair

8-4-10. Peça do microfone - Main MIC

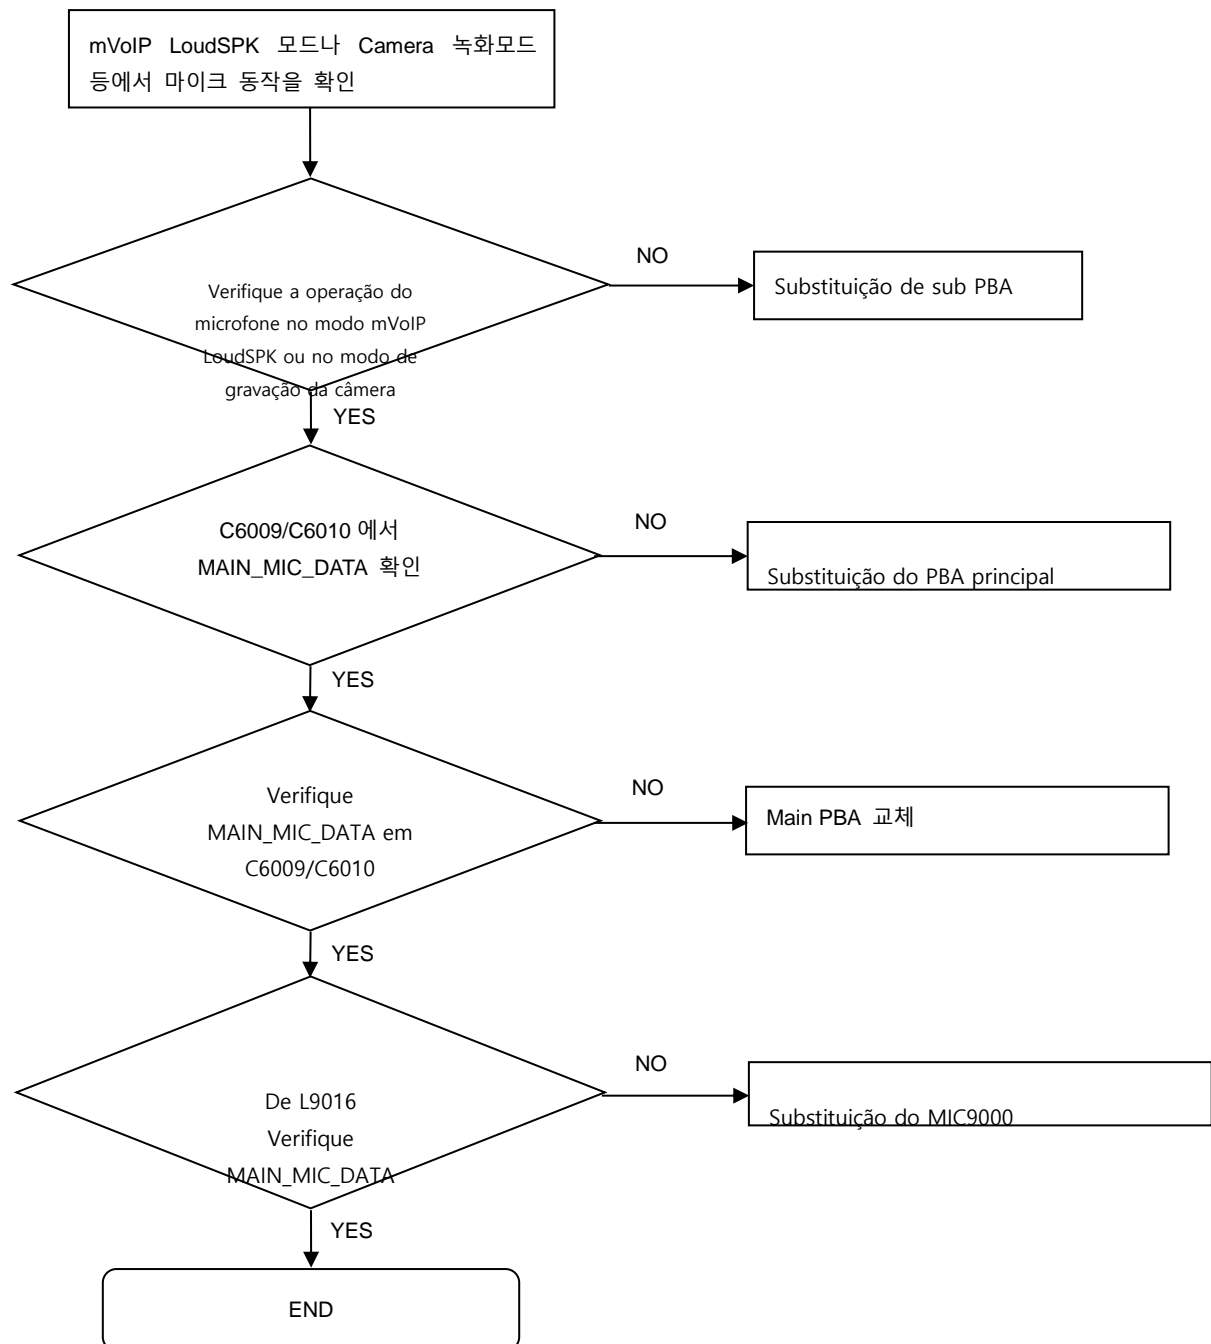


8. Level 3 Repair

8-4-11. Parte do microfone - SUB MIC

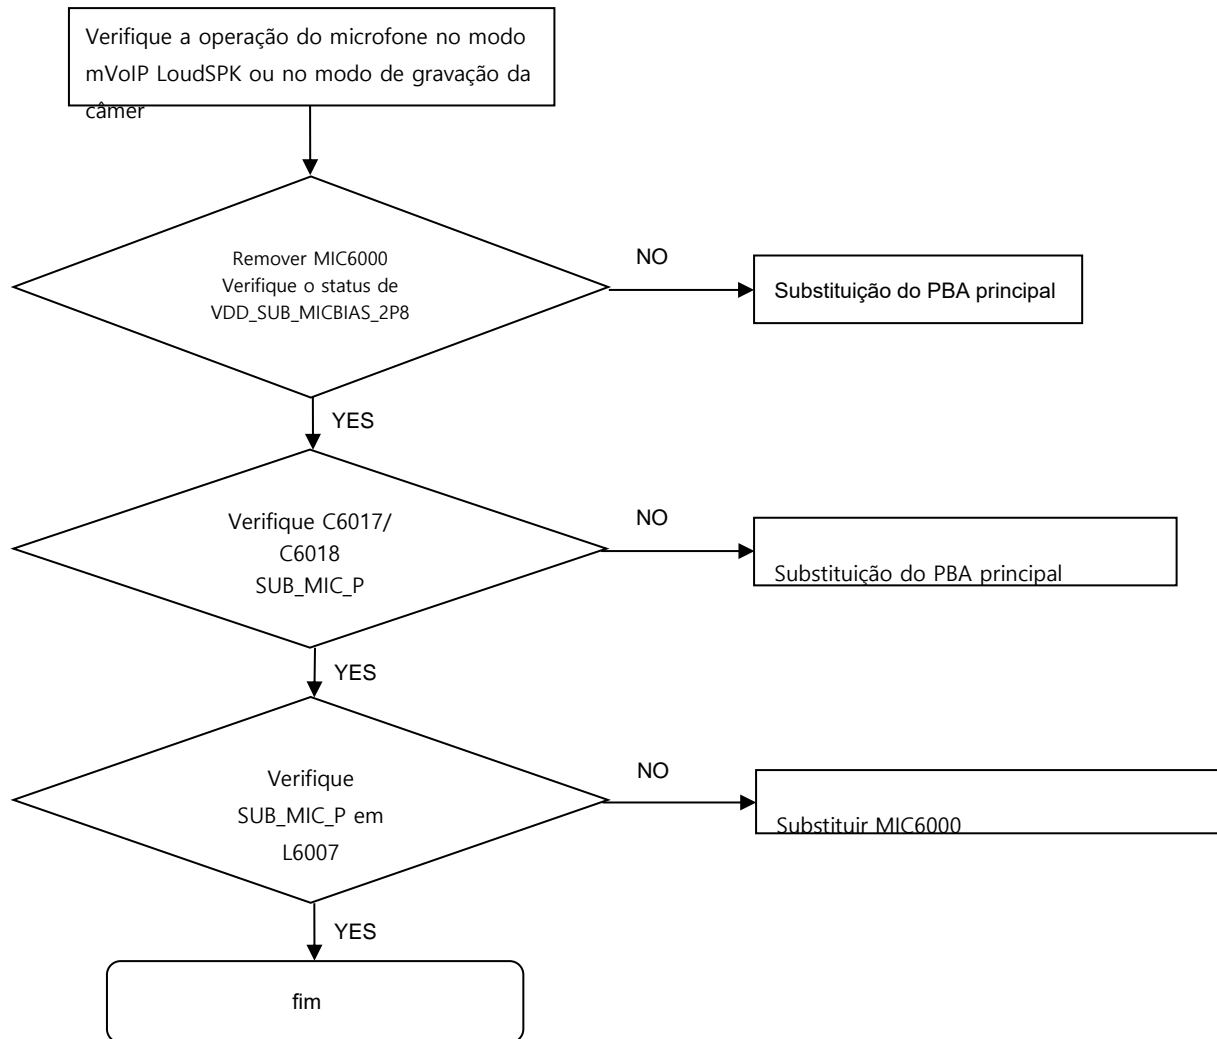


8. Level 3 Repair

8-4-12. parte do alto-falante

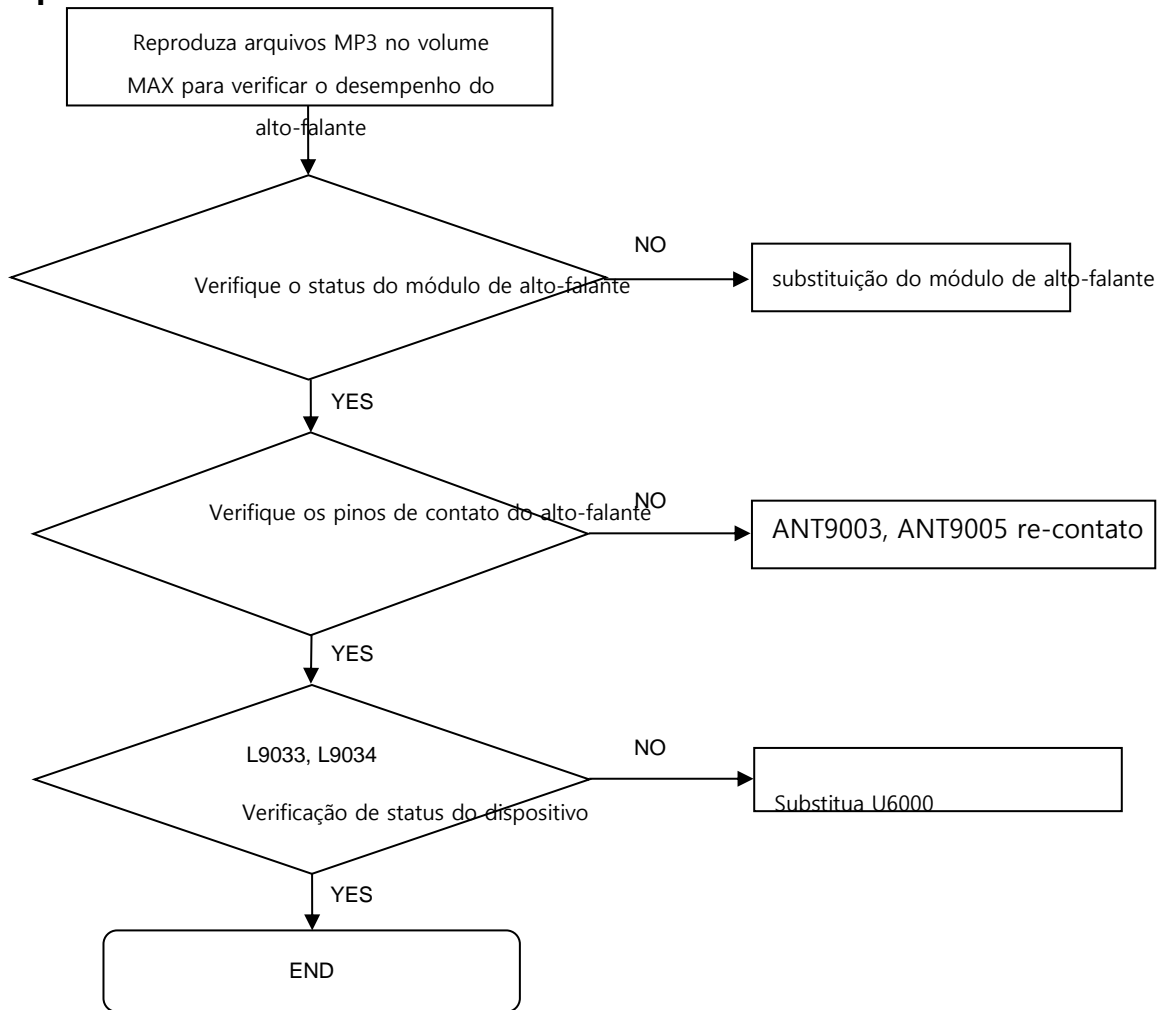

8. Level 3 Repair

8-4-15. BT/WIFI part

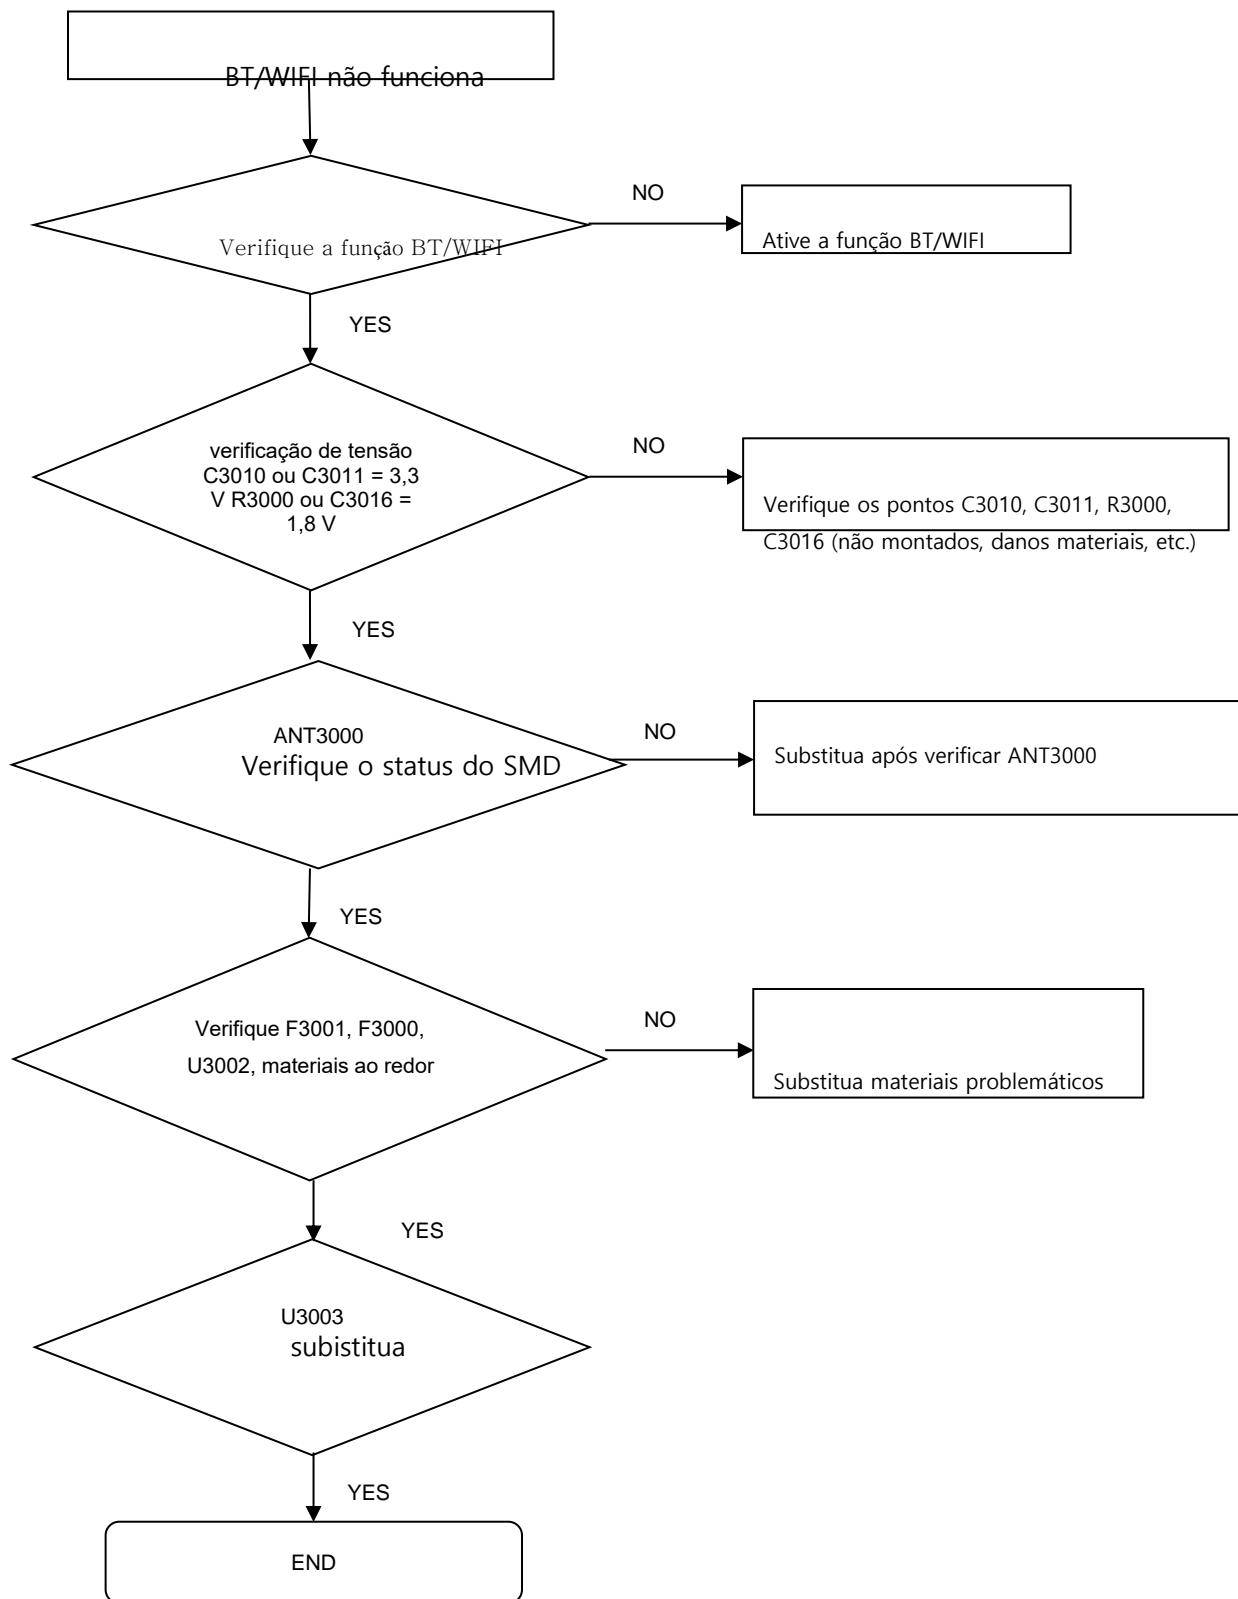

8. Level 3 Repair

8-4-16. GPS part

