

ADF pickup roller

- 1 Open the ADF cover (callout 1).
- 2 Pull the plastic tab (callout 2) to release the lower edge of the roller shield.

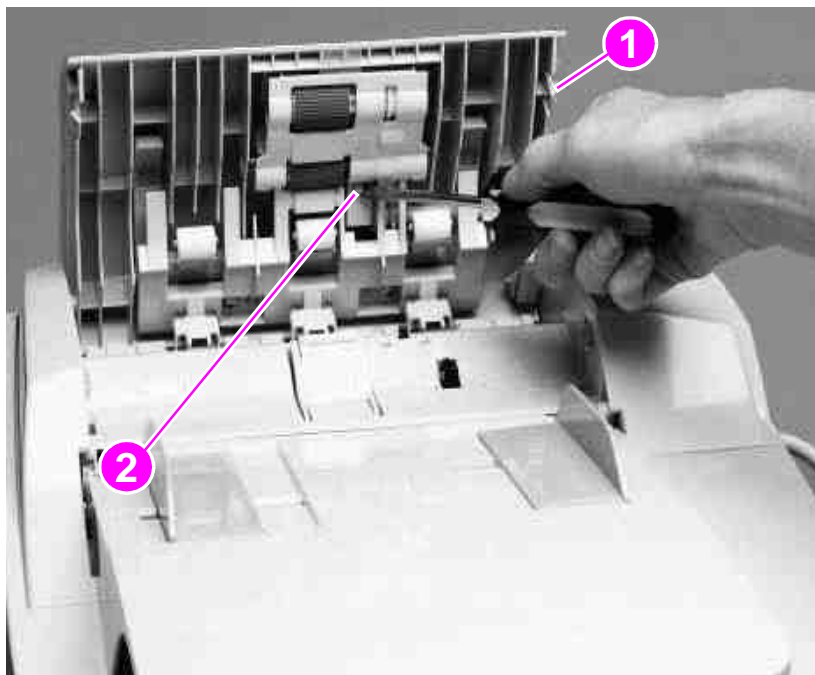


Figure 31.

Release the roller shield

- 3 Release the roller shield from the two small pins (callout 3), and remove it from the product.

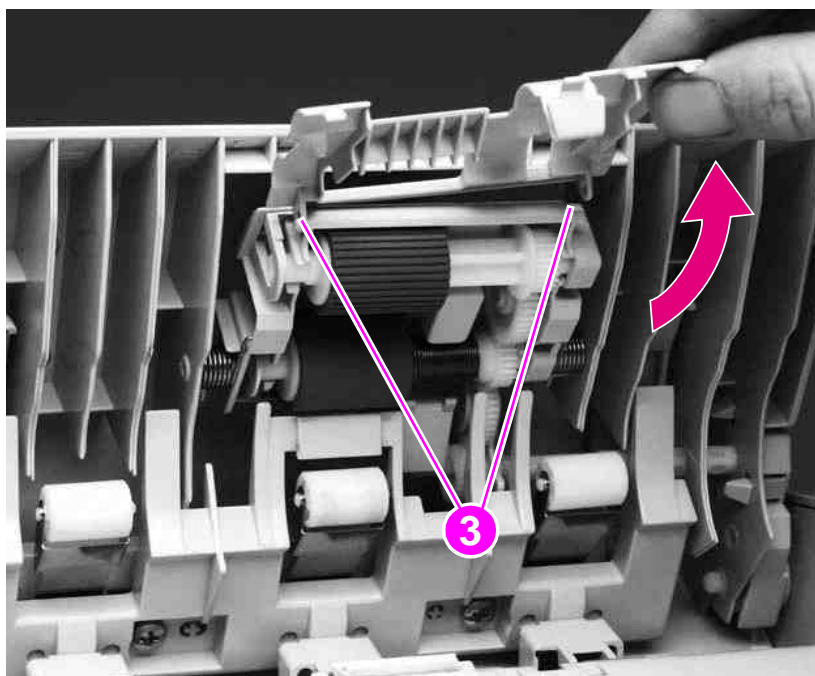


Figure 32.

Remove the roller shield

- 4 Slide the roller toward the gear end. Gently pry the roller-shaft locking tab (callout 4) away from the roller. Remove the ADF pickup roller.

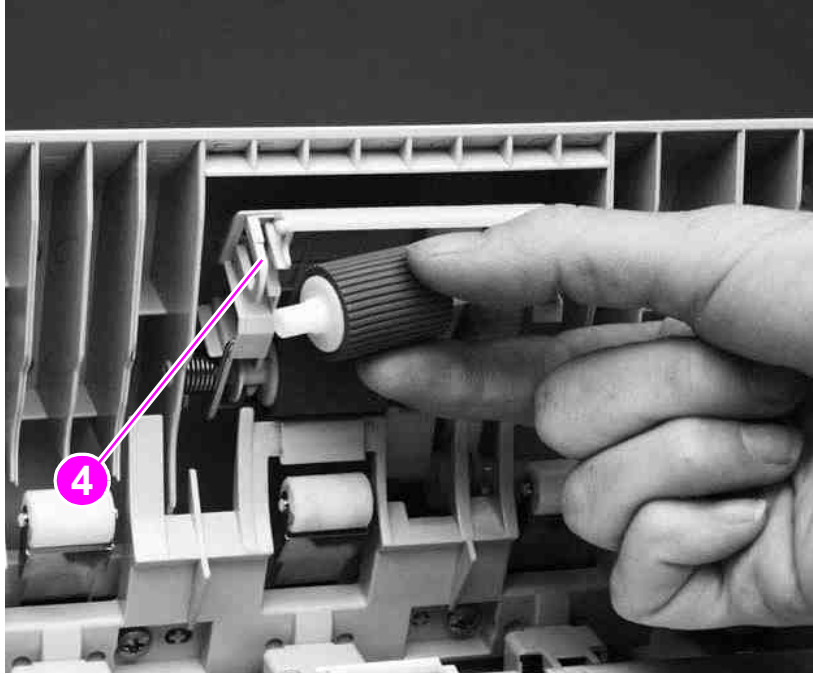


Figure 33.

Remove the ADF pickup roller

Hint

When replacing the roller, verify that the roller gear and drive gear are properly meshed.

ADF separation pad

- 1 Open the ADF cover.
- 2 Press and release two separation locking tabs (callout 1; shown already released).
- 3 Rotate the separation pad until it is perpendicular to the product.
- 4 Release the separation-pad arms (callout 2) by gently pressing them toward the ADF cover.

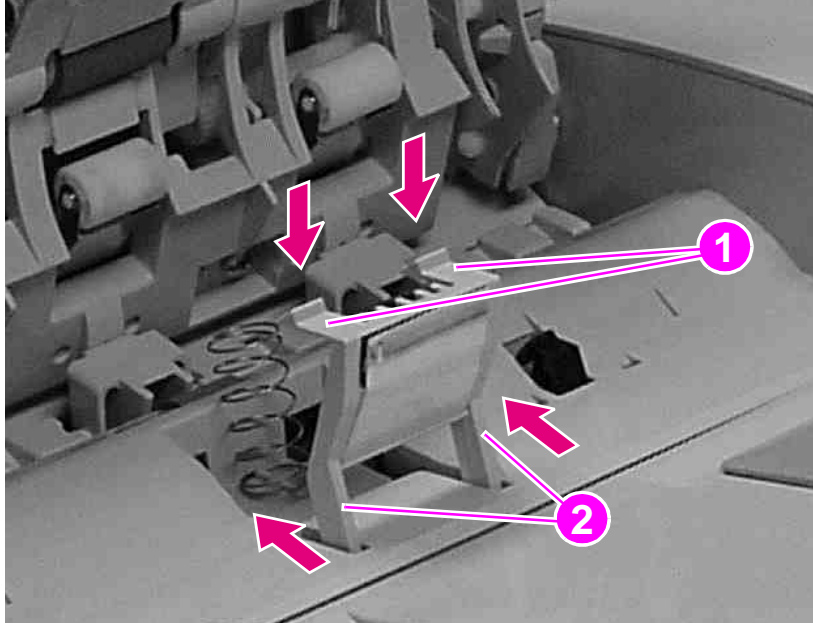


Figure 35. Remove the ADF separation pad

Note When replacing the separation pad, verify that the spring is firmly seated on its pedestal (callout 3).

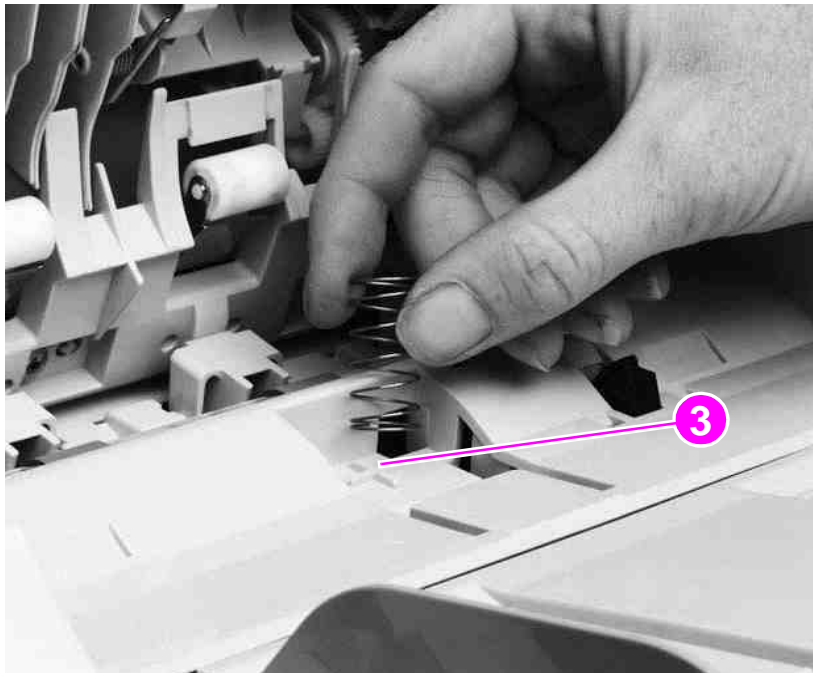


Figure 36. Replace the ADF separation pad spring

ADF separation roller

- 1 Open the ADF cover, and remove the roller shield. See [“ADF pickup roller” on page 74](#).
- 2 Slide the roller toward the gear end. Gently pry the roller-shaft locking tab (callout 1) away from the roller. Remove the ADF separation roller.

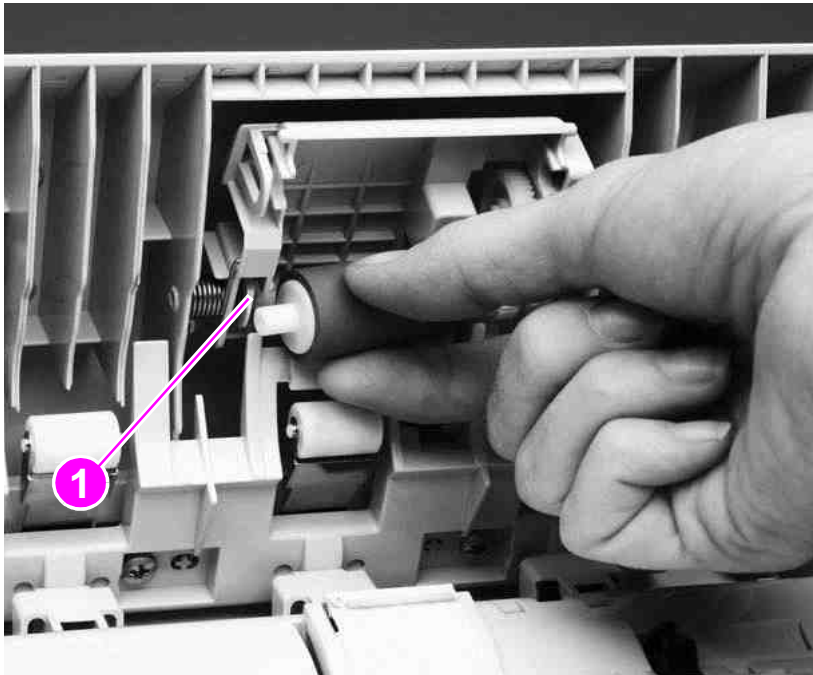


Figure 34.

Remove the ADF separation roller

Hint

When replacing the roller, verify that the roller gear and drive gear are properly meshed.