

Document-feeder roller (M830 only)

Remove the document-feeder roller (M830 only)

CAUTION: If you are replacing the rollers, do not touch the surface of the replacement rollers. Skin oils deposited on the rollers might cause paper pickup problems.

1. Open the document-feeder door.


Figure 1-84 Remove the document-feeder roller (M830; 1 of 3)



2. Release one tab, and then open the access door.


Reinstallation tip When the roller is reinstalled, the access door must be fully closed. When you close the door, you should hear two audible clicks. If, after replacing the roller document feeder, a document feeder jam message appears on the control panel display, make sure that the access door is fully closed.

Figure 1-85 Remove the document-feeder roller (M830; 2 of 3)

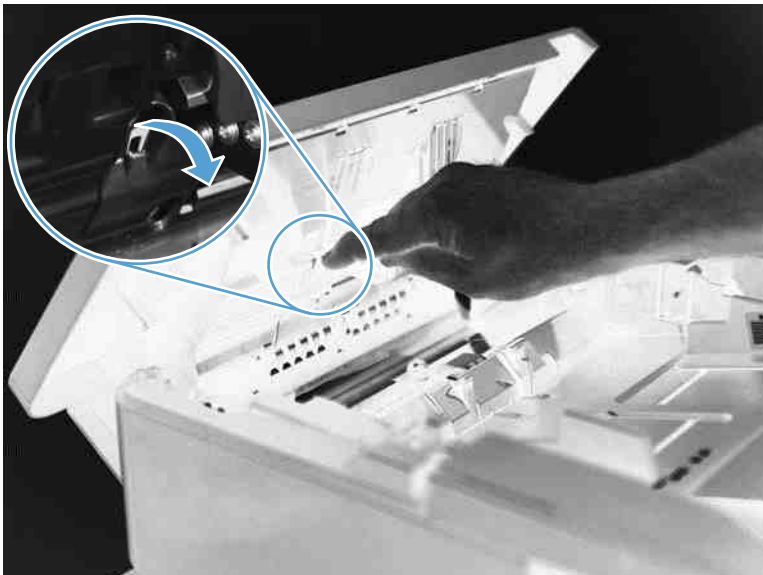

3. Slide the roller left, and then lift it up and out of the product.


Figure 1-86 Remove the document-feeder roller (M830; 3 of 3)

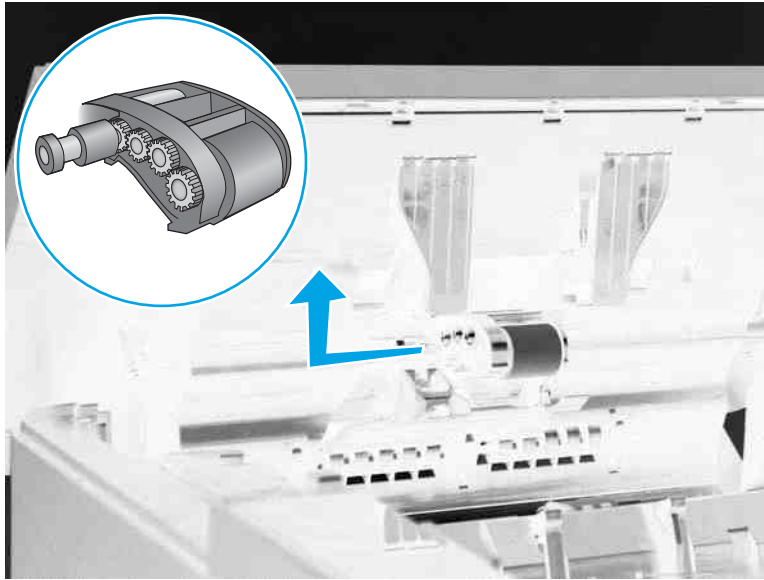

Reinstall the document-feeder roller (M830 only)

The roller assembly is keyed. When reinstalling the roller assembly, position the hex-shaped fitting on the shaft toward the rear of the product.

Figure 1-87 Remove the document-feeder roller (M830)

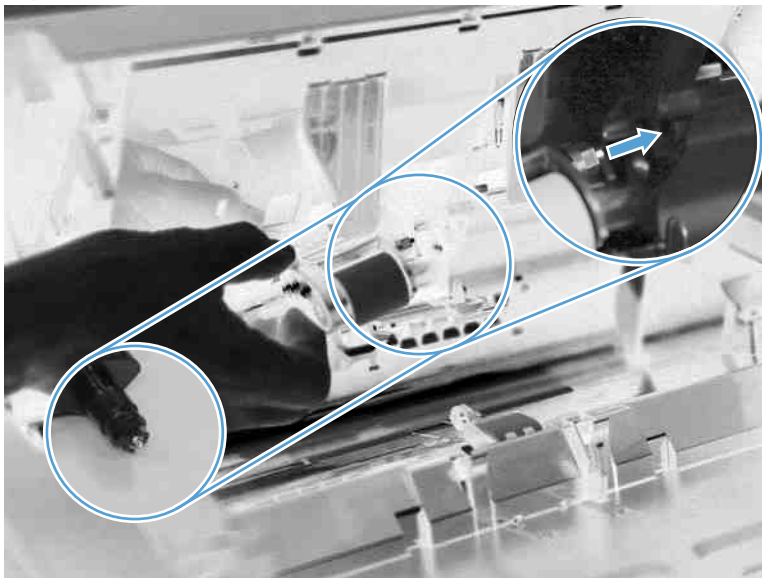

Document-feeder separation pad (M830 only)

Remove the document-feeder separation pad (M830 only)

CAUTION: If you are replacing the pad, do not touch the surface of the replacement pad. Skin oils deposited on the pad might cause paper pickup problems.

1. Open the document-feeder door.

Figure 1-88 Remove the document-feeder separation pad (M830; 1 of 4)



2. Release one tab.

Figure 1-89 Remove the document-feeder separation pad (M830; 2 of 4)



3. Hold the access door open to allow the separation pad to partially release and pop up.


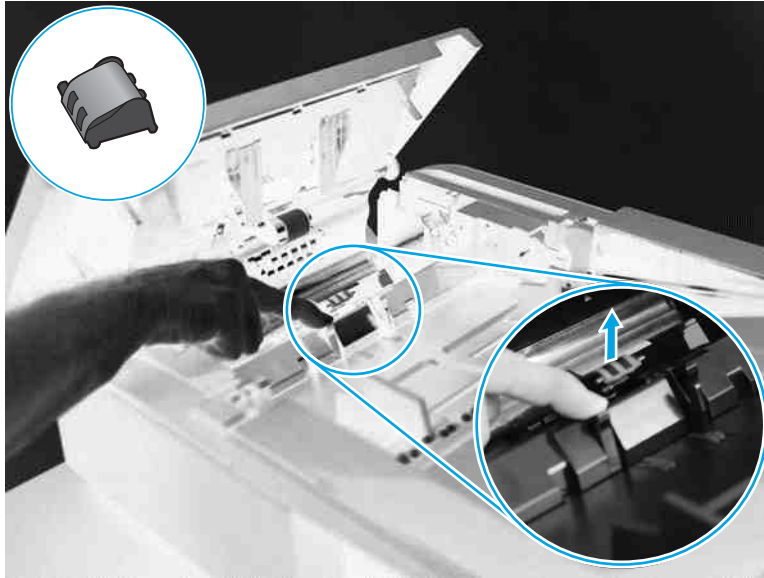
 **NOTE:** The separation pad is spring-loaded and partially releases when the access door is opened.


Figure 1-90 Remove the document-feeder separation pad (M830; 3 of 4)



4. Lift the separation pad up and away from the product.

 **CAUTION:** If the spring becomes dislodged, securely reinstall it as shown below.


Figure 1-91 Remove the document-feeder separation pad (M830; 4 of 4)

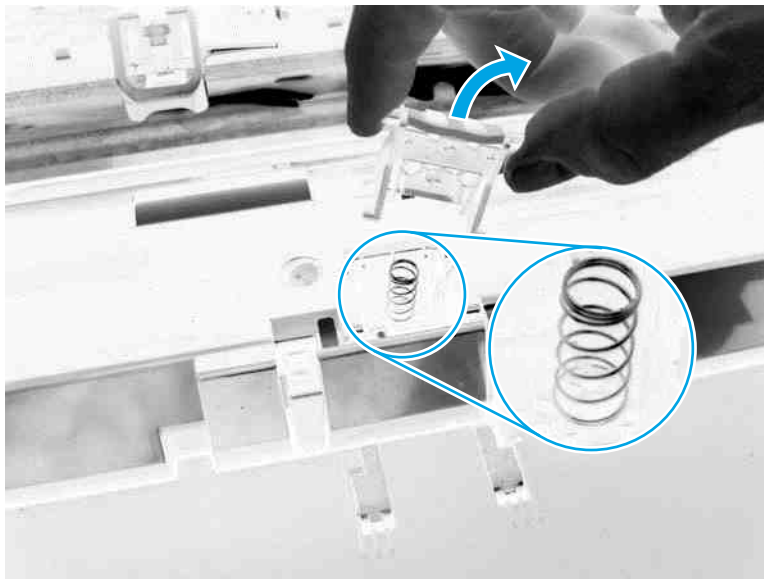

Reinstall the document-feeder separation pad (M830 only)


1. Release and hold the separation pad access door open.

Figure 1-92 Reinstall the document-feeder separation pad (M830; 1 of 5)

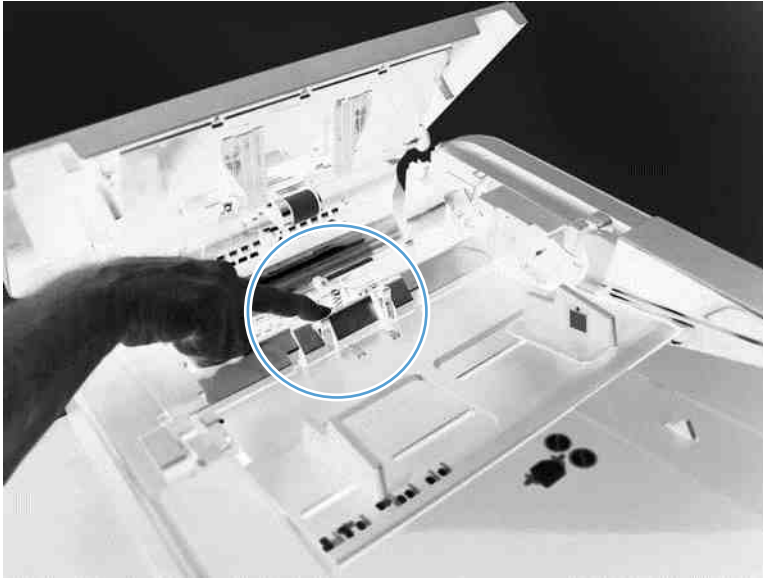


2. Align the pins on the separation pad with the mounting slots.

Figure 1-93 Reinstall the document-feeder separation pad (M830; 2 of 5)

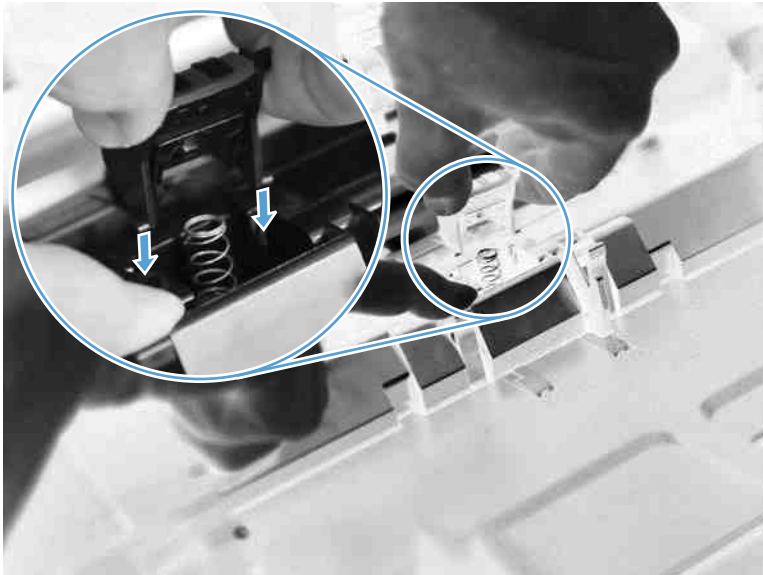


3. Carefully press down on the separation pad to compress the spring.

Figure 1-94 Reinstall the document-feeder separation pad (M830; 3 of 5)

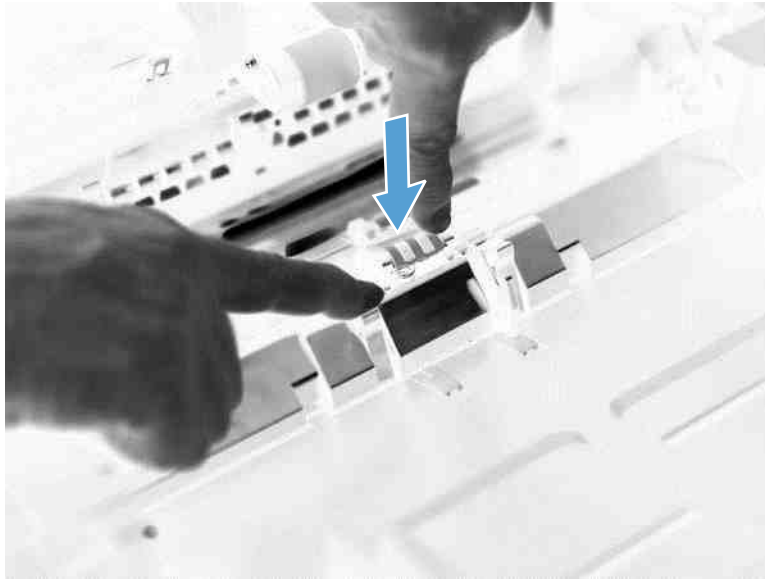


4. Continue to press down on the separation pad, and then release the access door.

Figure 1-95 Reinstall the document-feeder separation pad (M830; 4 of 5)

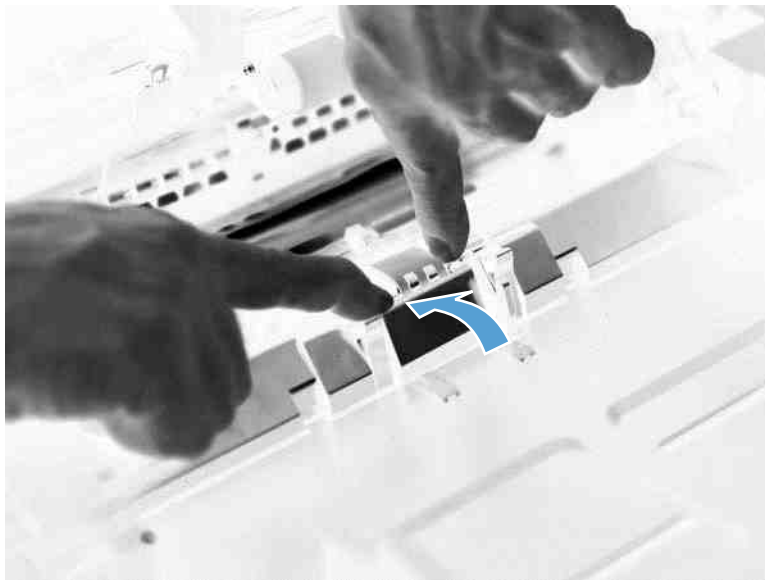

5. Verify that the separation pad is correctly installed and that the access door is fully closed as shown below.

Figure 1-96 Reinstall the document-feeder separation pad (M830; 5 of 5)

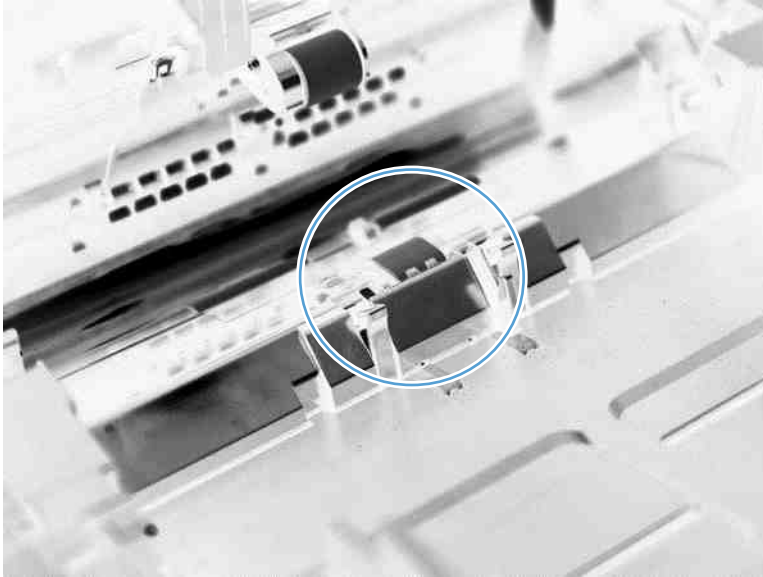

Fuser

Before proceeding, remove the following assemblies:


- Duplexer. See [Duplexer on page 9](#).

Remove the fuser

⚠ WARNING! The fuser might be hot.


1. If a finishing accessory is attached, release one handle, and then slide the finishing accessory away from the product.

Figure 1-10 Remove the fuser (1 of 3)

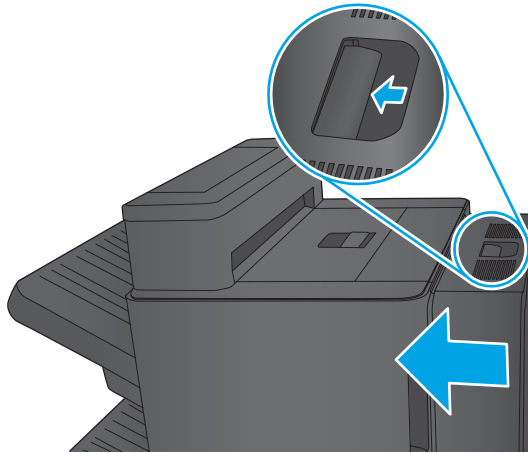


2. Open the left door, release two latches, and then slide the fuser toward the left door.

Figure 1-11 Remove the fuser (2 of 3)

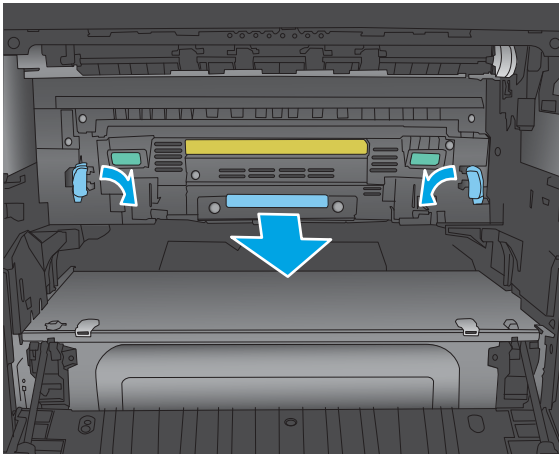

3. Grasp the fuser by the handle, and then lift it out of the product.

Figure 1-12 Remove the fuser (3 of 3)

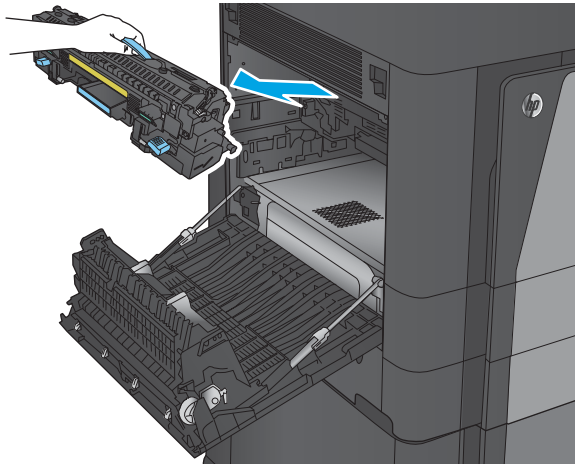

Transfer-roller assembly

1. Open the front cover.
2. Rotate the cartridge release lever down until it clicks into place.

Figure 1-6 Remove the transfer-roller assembly (1 of 2)



3. Press the blue tab, and then slowly pull the transfer roller assembly toward the front of the product until it stops. Lift the assembly up to release the catch on the underside, and then remove the assembly.



Reinstallation tip Make sure that the transfer roller is completely inserted and latched when it is reinstalled.

Figure 1-7 Remove the transfer-roller assembly (2 of 2)

