


## Fuser

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
  - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
  - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
2. Remove two screws, hold the middle of the fuser, and then pull it out of the product to remove it.

**Figure 1-67** Remove the fuser

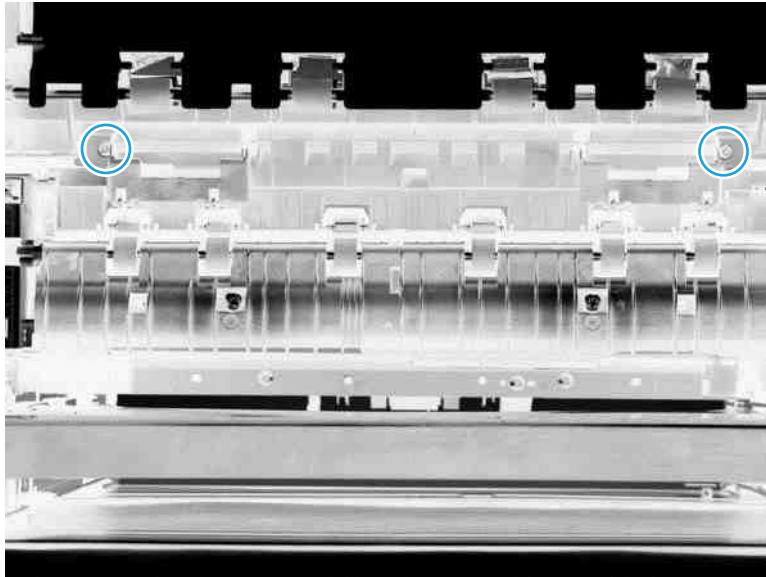

## Fuser motor

1. Before proceeding, remove the following:
  - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
  - Left cover. See [Left cover on page 21](#).
  - Top cover. See [Top cover on page 19](#).


## Internal assemblies

### Transfer roller

**⚠ WARNING!** The transfer roller bar has grease on its surface. Wear a thin glove, like an ESD glove, to keep the grease off your skin.

1. Open the print-cartridge door.
2. Unlatch the blue latch on the right (callout 2), and then lift up the transfer roller on the left side of the product (callout 1) to remove it.

**Figure 1-63** Remove the transfer roller

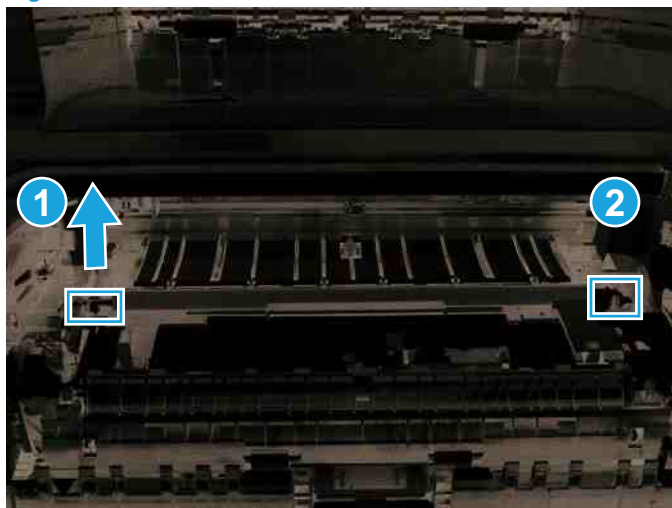

**NOTE:** Do *not* touch the rubber sponge on the transfer roller.


**NOTE:** When you reinstall the transfer roller, snap it into the left side of the product first, and then install and latch it on the right side of the product.

### Laser/scanner

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
  - Lower back cover or duplexer. See [Lower back cover on page 17](#) or [Duplexer on page 68](#).
  - Rear-cover assembly. See [Rear-cover assembly on page 17](#).
  - Top cover. See [Top cover on page 19](#).
  - Face-down cover. See [Face-down cover on page 22](#).

2. Disconnect one flat flexible cable.

**Figure 1-64** Remove the laser/scanner (1 of 3)

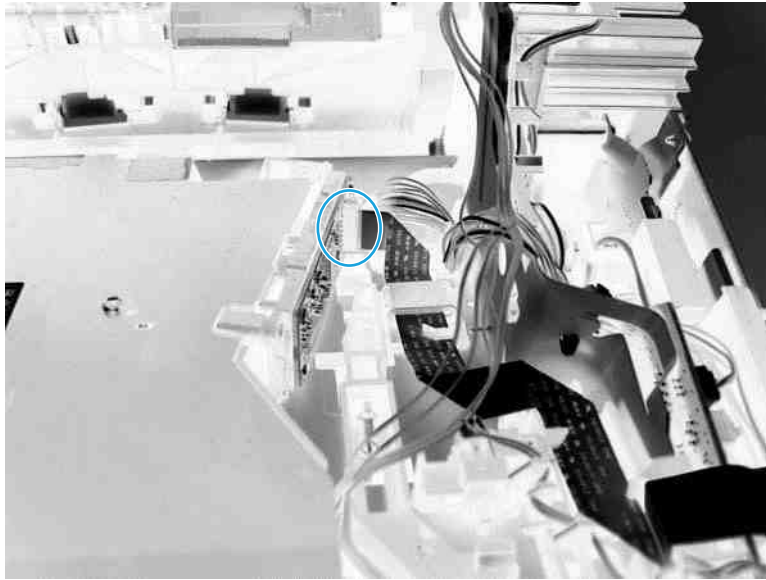


3. Remove the foam cover, and then disconnect one connector (callout 1) and release it from the cable guide. Release the wire harness (callout 2) from the retainer on the laser/scanner assembly.




**NOTE:** Do *not* disconnect the connector for the wire harness (callout 2).

**Figure 1-65** Remove the laser/scanner (2 of 3)

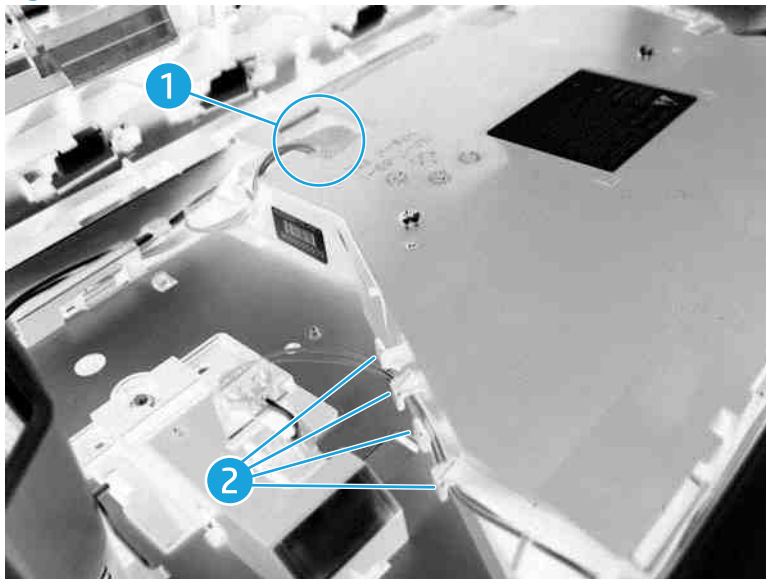

4. Remove four screws and remove the laser/scanner.

**Figure 1-66** Remove the laser/scanner (3 of 3)

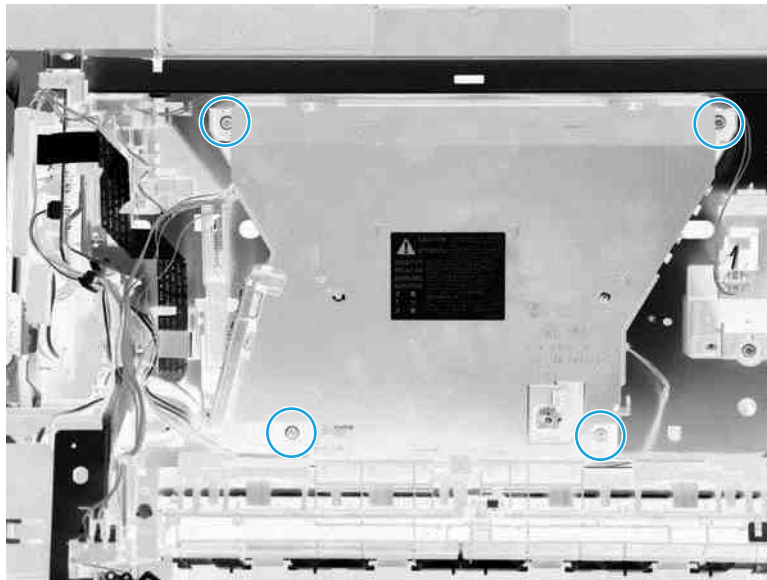

## Customer self-repair parts

The user replaces print cartridges as they are depleted. The *HP LaserJet Pro M701/M706 Series Repair Manual* explains when to replace these supplies and provides instructions about replacing them. Additional instructions on other user-replaceable parts are provided in this section.


The product tracks the amount of use on the customer-replaceable supplies by keeping a page count.

Swapping supplies between products might cause a misrepresentation of supply life values and is not recommended.

### Tray 1 roller kit


1. Tray 1 pickup roller
  - a. Open the cartridge door, and then locate the Tray 1 pickup roller.

**Figure 1-3** Remove the Tray 1 pickup roller (1 of 3)

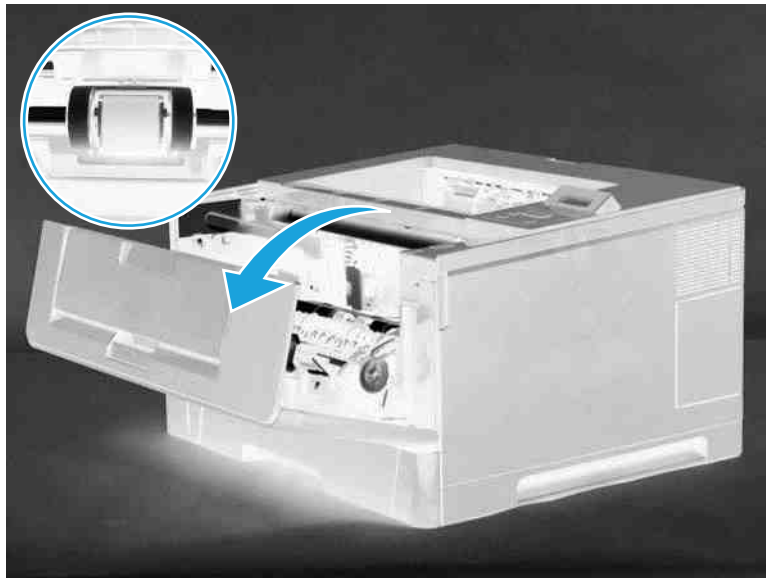


- b. Push out the two black tabs.

**Figure 1-4** Remove the Tray 1 pickup roller (2 of 3)

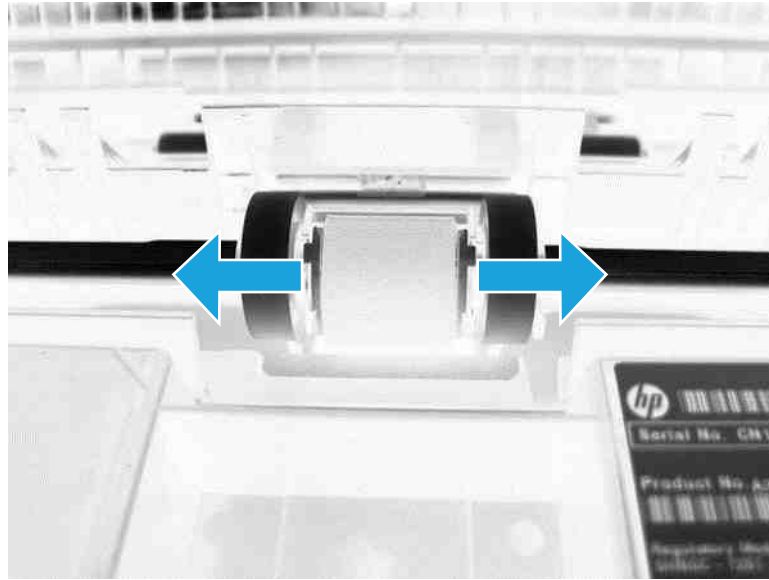

- c. Remove the Tray 1 pickup roller.


**Figure 1-5** Remove the Tray 1 pickup roller (3 of 3)

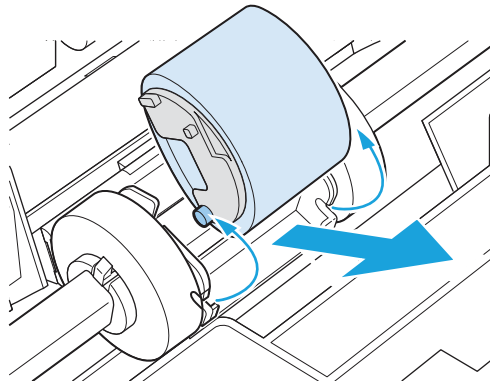

## 2. Tray 1 separation pad


- a. Grasp the handles and then open the multi-purpose tray door.

**Figure 1-6** Remove the Tray 1 separation pad (1 of 4)

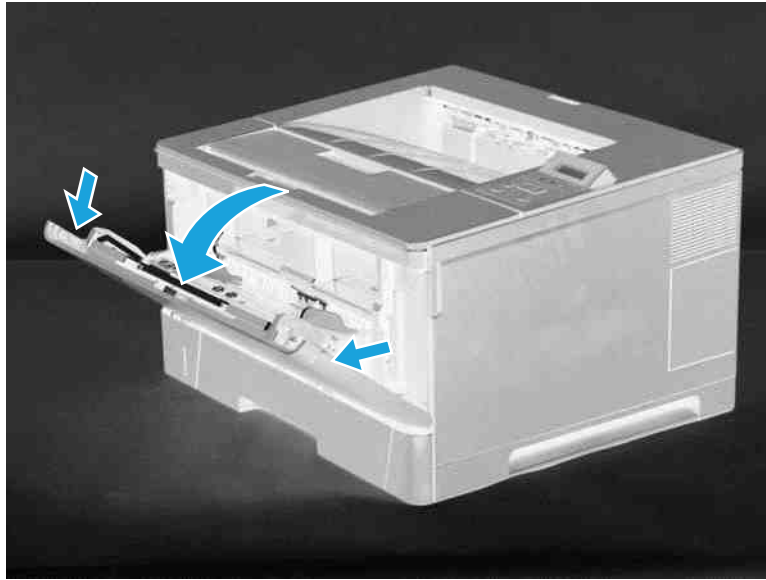

- b. Release two levers.

**Figure 1-7** Remove the Tray 1 separation pad (2 of 4)

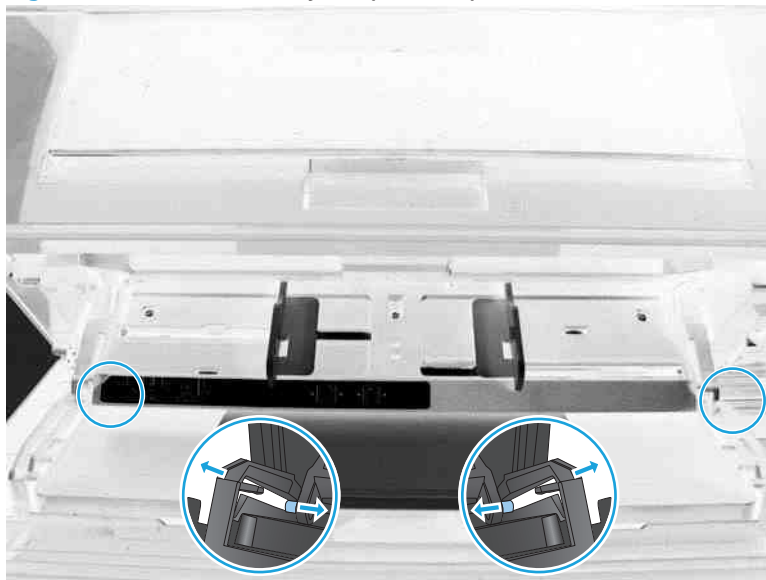


- c. Remove one screw.

**Figure 1-8** Remove the Tray 1 separation pad (3 of 4)



- d. Lift the input bin and hold it up with your hand, and then remove the Tray 1 separation pad assembly.

**Figure 1-9** Remove the Tray 1 separation pad (4 of 4)

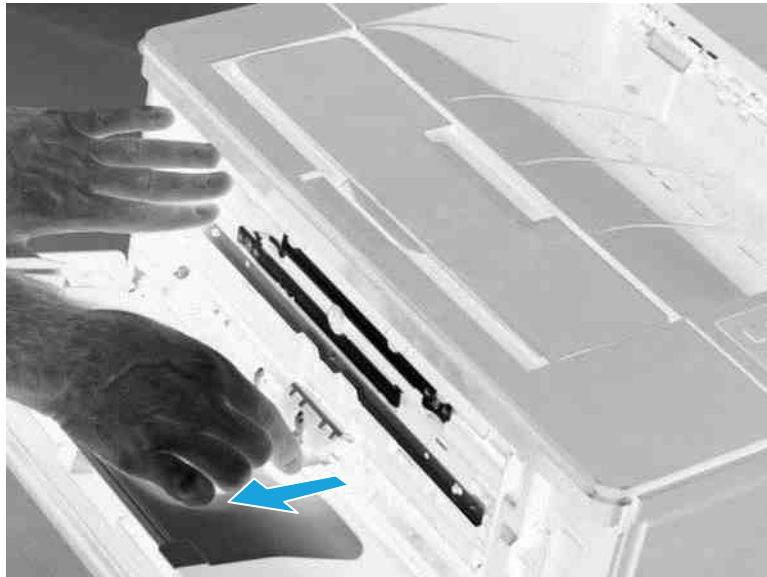




## Tray 2 roller kit


1. Tray 2 pickup roller
  - a. Remove Tray 2.

**Figure 1-10** Remove the Tray 2 pickup roller (1 of 3)

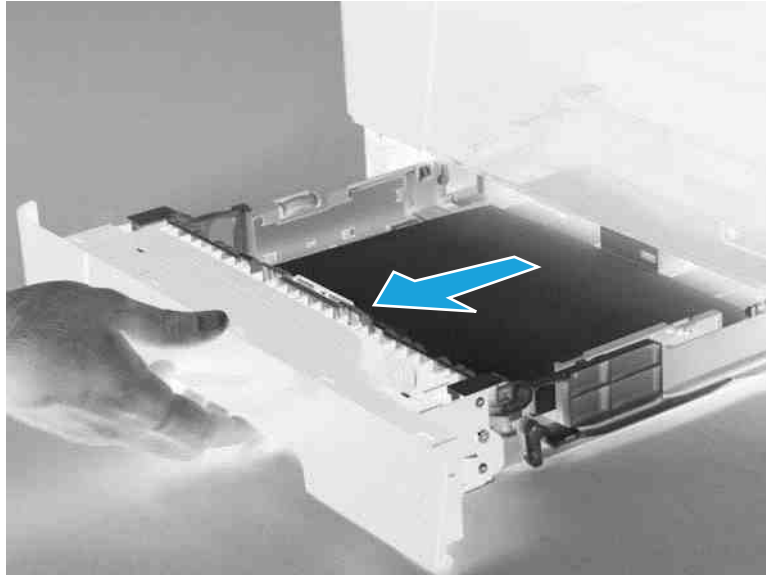


- b. From the front of the product, look up inside the product to identify the roller.


**Figure 1-11** Remove the Tray 2 pickup roller (2 of 3)

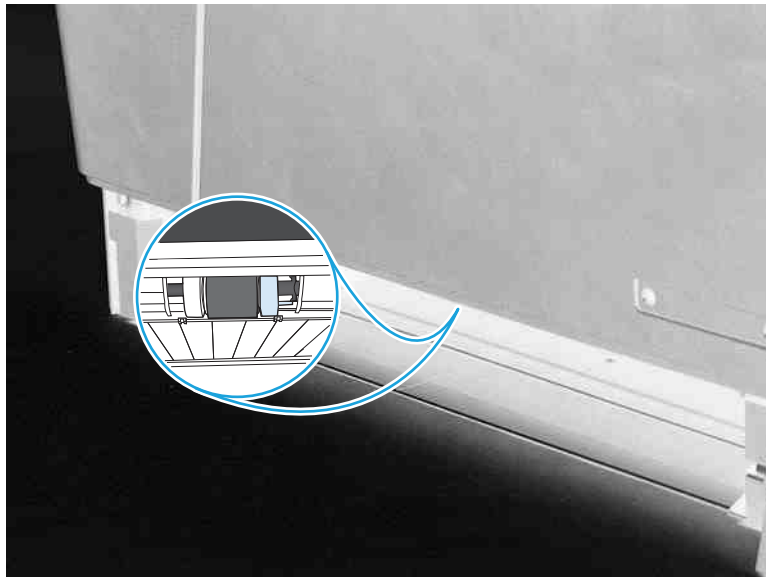

- c. Squeeze the two blue tabs (callout 1) together, push to the left, and then pull the roller down to remove it.

**Figure 1-12** Remove the Tray 2 pickup roller (3 of 3)

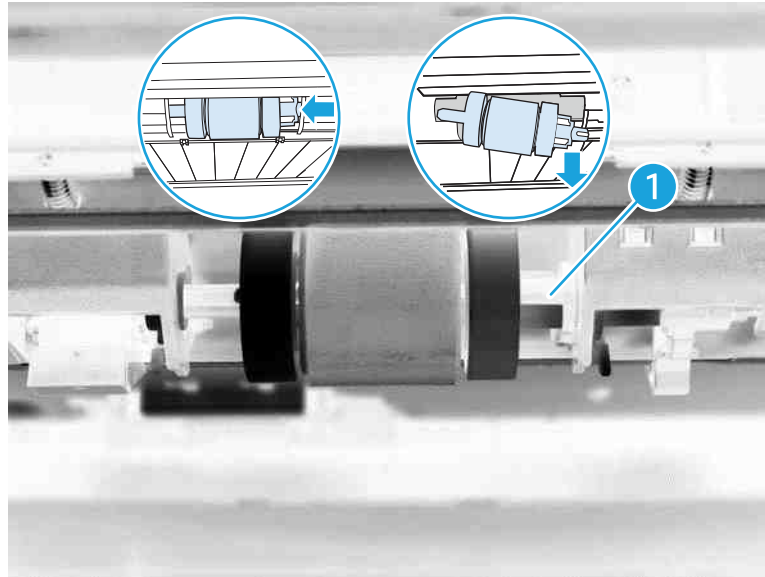


 **Reinstallation tip** Insert the left (white plastic) side of the Tray 2 pickup roller first, and then insert the right (blue plastic) side.

**2.** Tray 2 separation pad


- a. Remove Tray 2.

**Figure 1-13** Remove the Tray 2 separation pad (1 of 4)

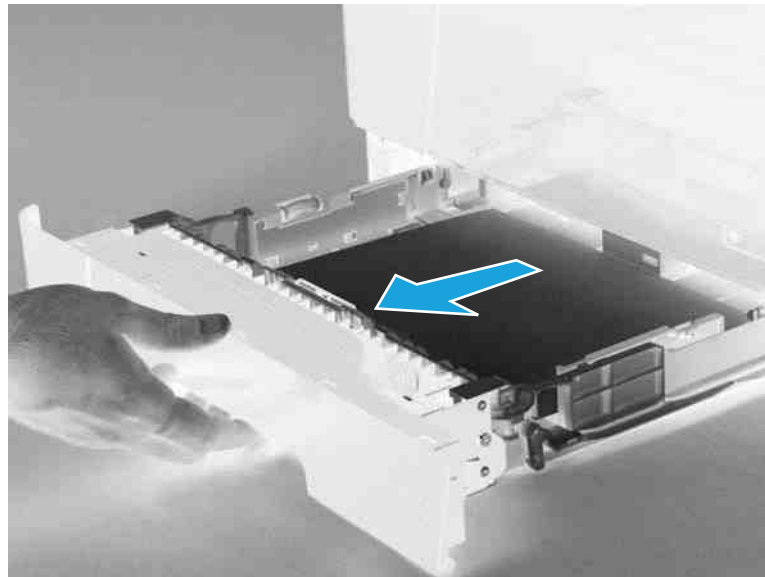


- b. Locate the Tray 2 separation pad.

**Figure 1-14** Remove the Tray 2 separation pad (2 of 4)

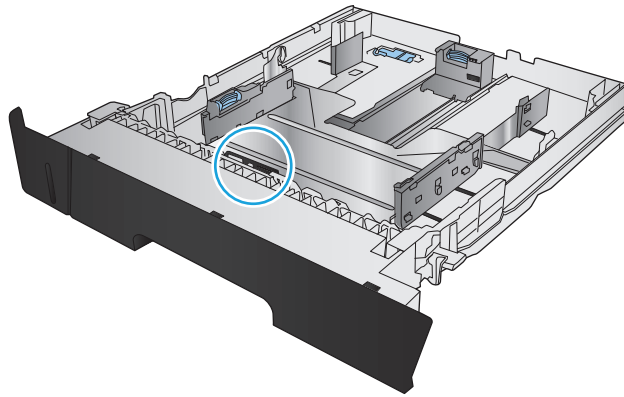


- c. Remove two screws.

**Figure 1-15** Remove the Tray 2 separation pad (3 of 4)

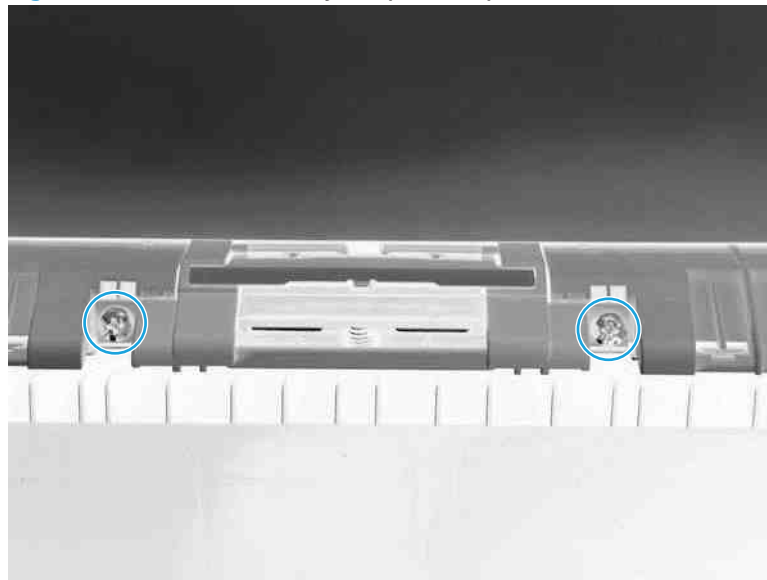

- d. Lift up the separation pad to remove it.


**Figure 1-16** Remove the Tray 2 separation pad (4 of 4)

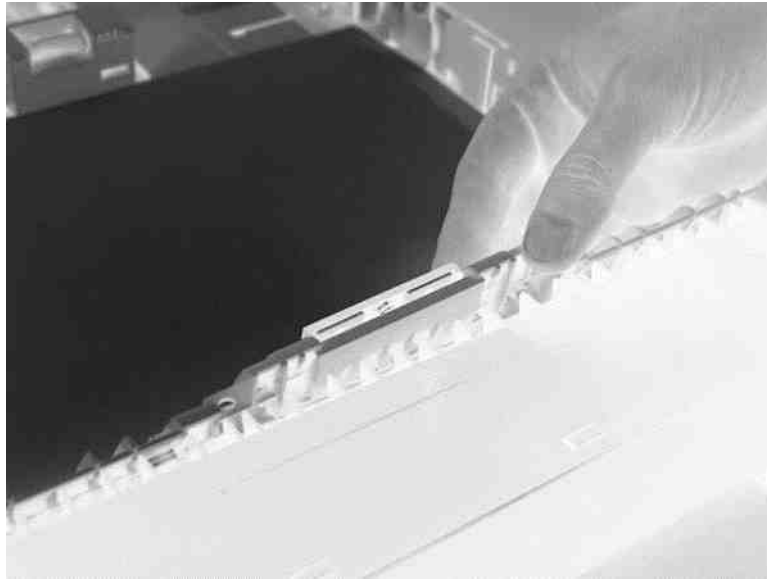

## Tray 3 roller kit


1. Remove Tray 3.

**Figure 1-17** Remove the Tray 3 feed roller 1 (1 of 5)

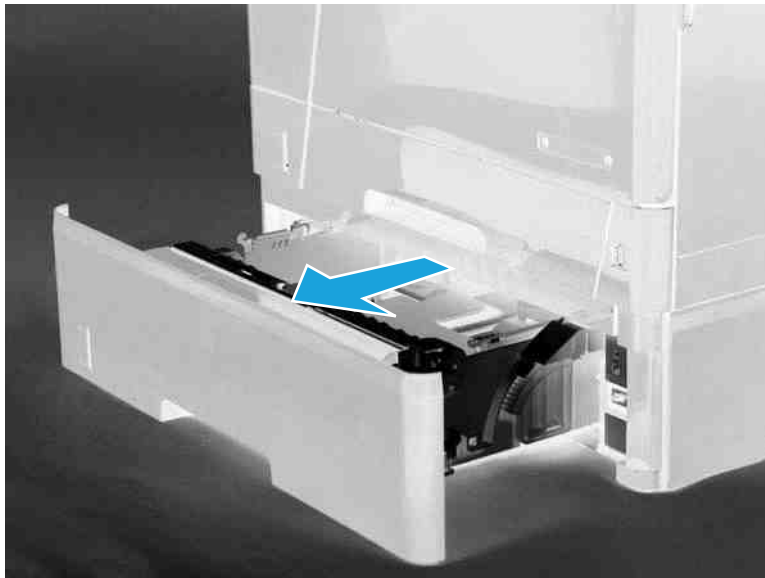


2. Locate the Tray 3 feed roller 1 inside the Tray 3 cassette.

**Figure 1-18** Remove the Tray 3 feed roller 1 (2 of 5)

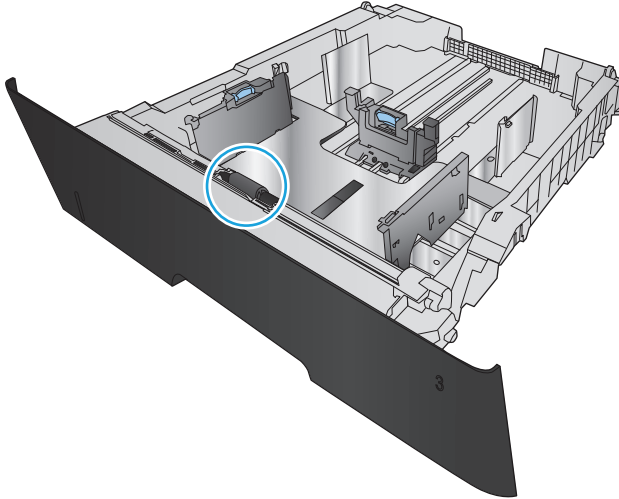


3. Remove the Tray 3 feed roller 1 located inside Tray 3.

**Figure 1-19** Remove the Tray 3 feed roller 1 (3 of 5)

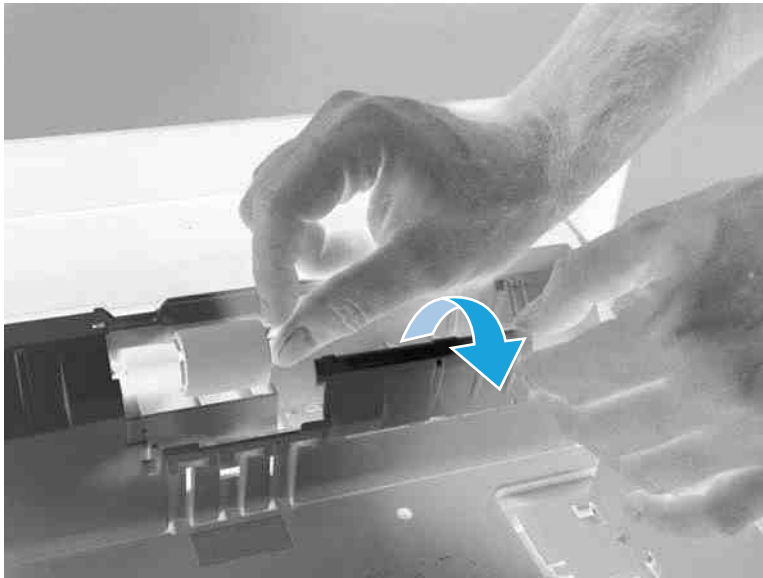

4. Look up inside the product to locate the Tray 3 feed roller 2 and Tray 3 pickup roller located inside the Tray 3 assembly.

**Figure 1-20** Remove the Tray 3 feed roller 2 (4 of 5)

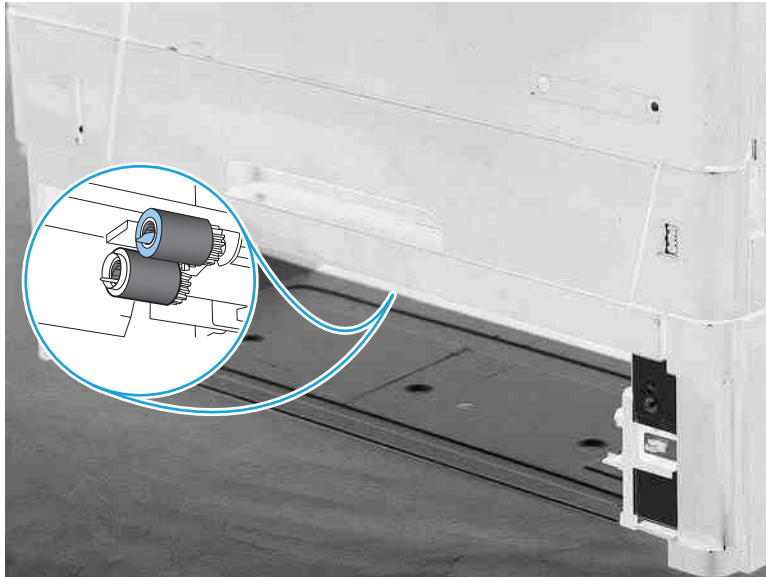

5. Remove the blue feed roller by squeezing the left side of the roller tab (callout 1), and then slide it to the left to remove the feed roller. To remove the pickup roller (callout 2), pinch the white tab, and then slide the pickup roller to the left to remove it.

**Figure 1-21** Remove the Tray 3 feed roller 2 (5 of 5)

