


## Right cassette cover

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
2. Release one tab (callout 1), and then turn the right cassette cover (callout 2) outward to remove it.

**Figure 1-35** Remove the right cassette cover

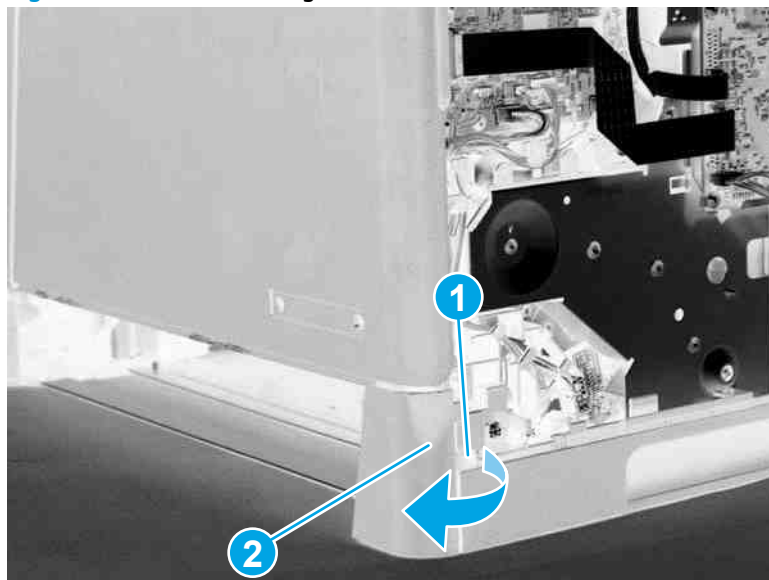


## Right handle cover

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
  - Right cassette cover. See [Right cassette cover on page 25](#).

## Face-down cover

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
  - Top cover. See [Top cover on page 19](#).
2. Release three tabs, and then lift up on the face-down cover to remove.


**Figure 1-31** Remove the face-down cover

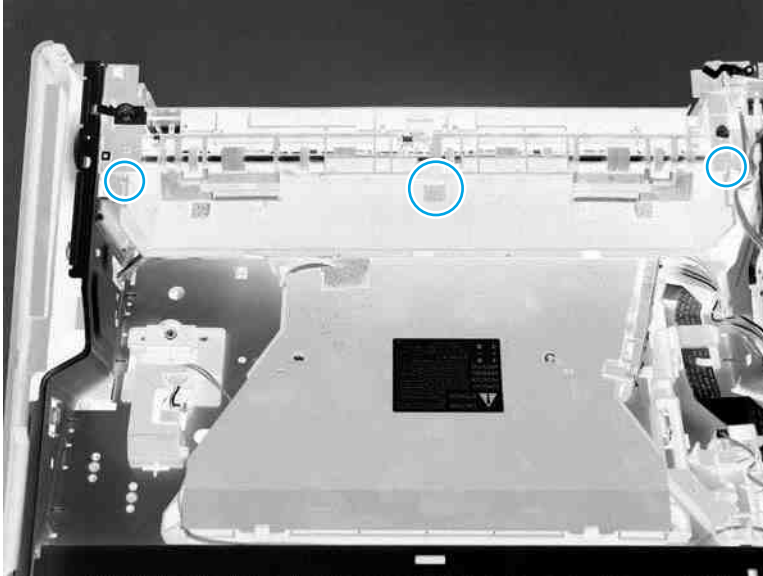

## Tray 2

Pull out the cassette tray, and then lift up to remove it.


**Figure 1-32** Remove Tray 2

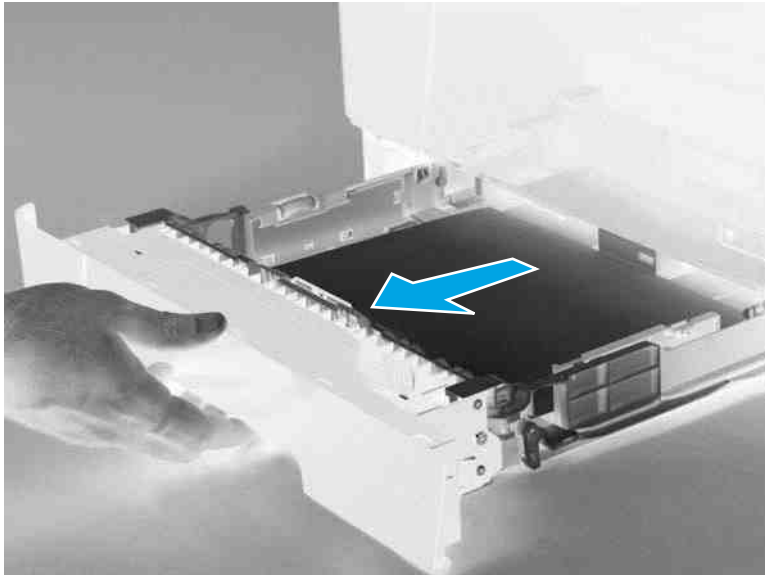

## Tray 3

Pull out the cassette tray, and then lift up to remove it.


**Figure 1-33** Remove Tray 3

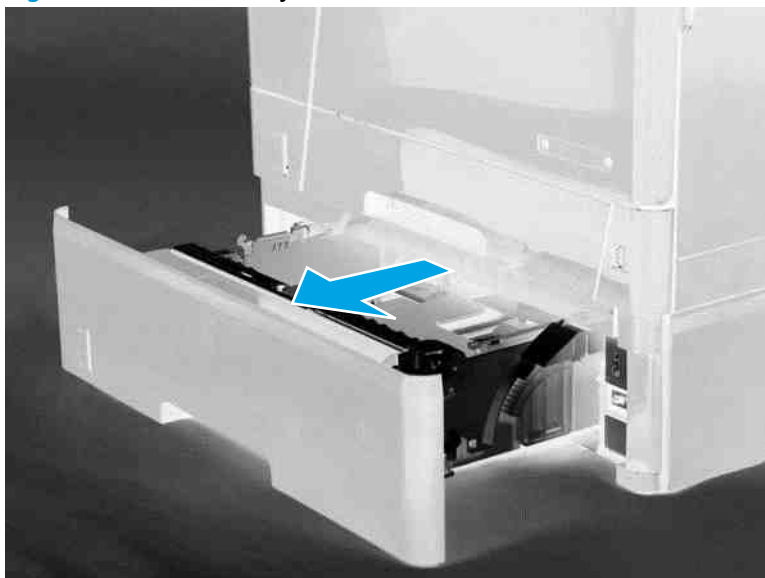

## Right front cover

1. Before proceeding, remove the following:
  - Right cover assembly. See [Right cover assembly on page 16](#).
  - Top cover. See [Top cover on page 19](#).
2. Open the print-cartridge door.
3. Open the cartridge door assembly.
4. Release one catch (callout 1), one tab (callout 2), and then slide the right front cover (callout 3) downward and remove it.

**Figure 1-34** Remove the right front cover

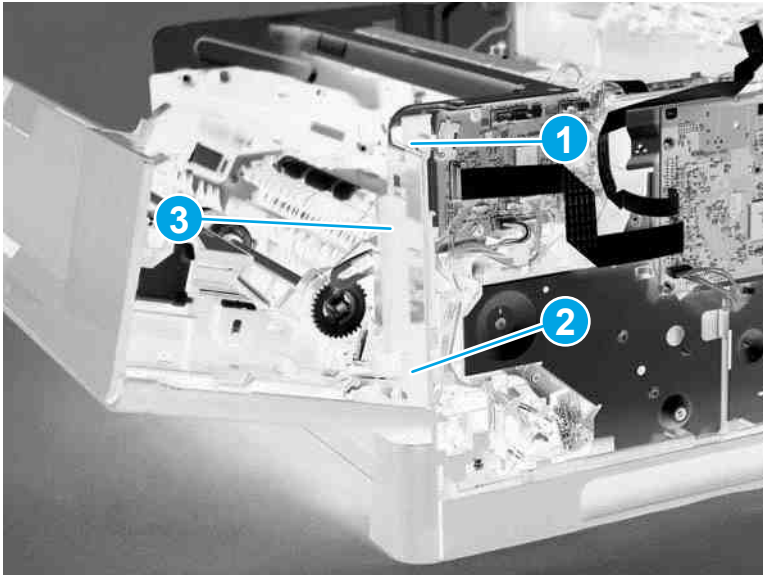



---

# Table of contents

<b>1 Removal and replacement .....</b>	<b>1</b>
Removal and replacement strategy .....	2
Introduction .....	2
Required tools .....	2
Types of screws .....	3
Service approach .....	3
Before performing service .....	3
After performing service .....	4
Parts removal order .....	5
Customer self-repair parts .....	6
Tray 1 roller kit .....	6
Tray 2 roller kit .....	10
Tray 3 roller kit .....	13
External doors, covers, and panels .....	16
Right cover assembly .....	16
Lower back cover .....	17
Rear-cover assembly .....	17
Top cover .....	19
Left cover .....	21
Face-down cover .....	22
Tray 2 .....	22
Tray 3 .....	23
Right front cover .....	24
Right cassette cover .....	25
Right handle cover .....	25
Multi-purpose tray cover assembly .....	27
Cartridge door assembly .....	29
Control panel .....	36
Internal assemblies .....	40
Transfer roller .....	40
Laser/scanner .....	40
Fuser .....	43

Fuser motor .....	43
Right fan .....	44
Left fan .....	46
Registration unit .....	48
Paper-feed assembly .....	50
Printed circuit assemblies (PCAs) .....	52
DC controller PCA .....	52
Formatter PCA .....	54
Formatter stay .....	55
High-voltage power supply .....	56
Low-voltage power supply PCA .....	63
Duplexer .....	68
Duplexer .....	68
Duplexer left cover .....	68
Duplexer right cover .....	69
Duplexer top cover .....	70
Duplexer rear cover .....	71
Duplex drive assembly .....	72
Duplexer driver PCA .....	80
Duplexer fan .....	81
Registration sensor photoreceiver assembly .....	84
Registration sensor LED assembly .....	89
500-sheet feeder .....	96
500-sheet feeder front cover .....	96
500-sheet feeder left cover .....	97
500-sheet feeder right cover .....	97
500-sheet feeder cassette cover .....	98
500-sheet feeder paper-pickup unit .....	99
500-sheet feeder lifter drive unit .....	100
500-sheet feeder drive unit .....	101
500-sheet feeder drive PCA .....	105
500-sheet feeder pickup motor .....	106
<b>2 Parts and diagrams .....</b>	<b>109</b>
Order parts by authorized service providers .....	109
Service kit parts .....	109
Whole-unit replacement part numbers .....	110
Supplies and accessories part numbers .....	111
Related documentation and software .....	111
How to use the parts lists and diagrams .....	112
Fasteners used in this product .....	113

Assembly locations ..... 114

Covers ..... 116

Internal components ..... 118

PCAs ..... 124

500-sheet feeder, cassette, external panels, and covers ..... 126

500-sheet feeder internal components ..... 128

Duplexer external covers ..... 130

Duplexing main body ..... 132

Alphabetical parts list ..... 136

Numerical parts list ..... 140

**Index ..... 145**





---

## List of tables

Table 2-1	Order parts, accessories, and supplies .....	109
Table 2-2	Repair kits .....	109
Table 2-3	Whole-unit replacement part numbers .....	110
Table 2-4	Related documentation and software .....	111
Table 2-5	External panels and covers .....	117
Table 2-6	Internal components (1 of 3) .....	119
Table 2-7	Internal components (2 of 3) .....	121
Table 2-8	Internal components (3 of 3) .....	123
Table 2-9	PCA assembly .....	125
Table 2-10	500-sheet feeder, cassette, external panels, and covers .....	127
Table 2-11	500-sheet feeder internal components .....	129
Table 2-12	Duplexer external covers .....	131
Table 2-13	Duplexing main body (1 of 2) .....	133
Table 2-14	Duplexing main body (2 of 2) .....	135
Table 2-15	Alphabetical parts list .....	136
Table 2-16	Numerical parts list .....	140



---

# List of figures

Figure 1-1	Screwdrivers .....	2
Figure 1-2	Parts removal order .....	5
Figure 1-3	Remove the Tray 1 pickup roller (1 of 3) .....	6
Figure 1-4	Remove the Tray 1 pickup roller (2 of 3) .....	7
Figure 1-5	Remove the Tray 1 pickup roller (3 of 3) .....	7
Figure 1-6	Remove the Tray 1 separation pad (1 of 4) .....	8
Figure 1-7	Remove the Tray 1 separation pad (2 of 4) .....	8
Figure 1-8	Remove the Tray 1 separation pad (3 of 4) .....	9
Figure 1-9	Remove the Tray 1 separation pad (4 of 4) .....	9
Figure 1-10	Remove the Tray 2 pickup roller (1 of 3) .....	10
Figure 1-11	Remove the Tray 2 pickup roller (2 of 3) .....	10
Figure 1-12	Remove the Tray 2 pickup roller (3 of 3) .....	11
Figure 1-13	Remove the Tray 2 separation pad (1 of 4) .....	11
Figure 1-14	Remove the Tray 2 separation pad (2 of 4) .....	12
Figure 1-15	Remove the Tray 2 separation pad (3 of 4) .....	12
Figure 1-16	Remove the Tray 2 separation pad (4 of 4) .....	13
Figure 1-17	Remove the Tray 3 feed roller 1 (1 of 5) .....	13
Figure 1-18	Remove the Tray 3 feed roller 1 (2 of 5) .....	14
Figure 1-19	Remove the Tray 3 feed roller 1 (3 of 5) .....	14
Figure 1-20	Remove the Tray 3 feed roller 2 (4 of 5) .....	15
Figure 1-21	Remove the Tray 3 feed roller 2 (5 of 5) .....	15
Figure 1-22	Remove the right cover (1 of 2) .....	16
Figure 1-23	Remove the right cover (2 of 2) .....	16
Figure 1-24	Remove the lower back cover .....	17
Figure 1-25	Remove the rear-cover assembly (1 of 2) .....	18
Figure 1-26	Remove the rear-cover assembly (2 of 2) .....	18
Figure 1-27	Remove the top cover (1 of 2) .....	19
Figure 1-28	Remove the top cover (2 of 2) .....	20
Figure 1-29	Remove the left cover (1 of 2) .....	21
Figure 1-30	Remove the left cover—tab locations (2 of 2) .....	21
Figure 1-31	Remove the face-down cover .....	22
Figure 1-32	Remove Tray 2 .....	22

Figure 1-33	Remove Tray 3 .....	23
Figure 1-34	Remove the right front cover .....	24
Figure 1-35	Remove the right cassette cover .....	25
Figure 1-36	Remove the right handle cover (1 of 2) .....	26
Figure 1-37	Remove the right handle cover (2 of 2) .....	26
Figure 1-38	Remove the multi-purpose cover (1 of 5) .....	27
Figure 1-39	Remove the multi-purpose cover (2 of 5) .....	27
Figure 1-40	Remove the multi-purpose cover (3 of 5) .....	28
Figure 1-41	Remove the multi-purpose cover (4 of 5) .....	28
Figure 1-42	Remove the multi-purpose cover (5 of 5) .....	29
Figure 1-43	Remove the cartridge door unit (1 of 13) .....	29
Figure 1-44	Remove the cartridge door unit (2 of 13) .....	30
Figure 1-45	Remove the cartridge door unit (3 of 13) .....	30
Figure 1-46	Remove the cartridge door unit (4 of 13) .....	31
Figure 1-47	Remove the cartridge door unit (5 of 13) .....	31
Figure 1-48	Remove the cartridge door unit (6 of 13) .....	32
Figure 1-49	Remove the cartridge door unit (7 of 13) .....	32
Figure 1-50	Remove the cartridge door unit (8 of 13) .....	33
Figure 1-51	Remove the cartridge door unit (9 of 13) .....	33
Figure 1-52	Remove the cartridge door unit (10 of 13) .....	34
Figure 1-53	Remove the cartridge door unit (11 of 13) .....	34
Figure 1-54	Remove the cartridge door unit (12 of 13) .....	35
Figure 1-55	Remove the cartridge door unit (13 of 13) .....	35
Figure 1-56	Remove the control panel (1 of 3) .....	36
Figure 1-57	Remove the control panel (2 of 3) .....	36
Figure 1-58	Remove the control panel (3 of 3) .....	37
Figure 1-59	Correct orientation of control-panel grounding spring .....	37
Figure 1-60	Incorrect orientation of control-panel grounding spring .....	38
Figure 1-61	Control-panel electrical continuity check points .....	39
Figure 1-62	Control-panel contact point .....	39
Figure 1-63	Remove the transfer roller .....	40
Figure 1-64	Remove the laser/scanner (1 of 3) .....	41
Figure 1-65	Remove the laser/scanner (2 of 3) .....	41
Figure 1-66	Remove the laser/scanner (3 of 3) .....	42
Figure 1-67	Remove the fuser .....	43
Figure 1-68	Remove the fuser motor .....	44
Figure 1-69	Remove the right fan (1 of 3) .....	44
Figure 1-70	Remove the right fan (2 of 3) .....	45
Figure 1-71	Remove the right fan (3 of 3) .....	45
Figure 1-72	Remove the left fan (1 of 5) .....	46
Figure 1-73	Remove the left fan (2 of 5) .....	47

Figure 1-74	Remove the left fan (3 of 5)	47
Figure 1-75	Remove the left fan (4 of 5)	48
Figure 1-76	Remove the left fan (5 of 5)	48
Figure 1-77	Remove the registration unit (1 of 2)	49
Figure 1-78	Remove the registration unit (2 of 2)	49
Figure 1-79	Remove the paper-feed unit (1 of 3)	50
Figure 1-80	Remove the paper-feed unit (2 of 3)	51
Figure 1-81	Remove the paper-feed unit (3 of 3)	51
Figure 1-82	Remove the DC controller (1 of 4)	52
Figure 1-83	Remove the DC controller (2 of 4)	53
Figure 1-84	Remove the DC controller (3 of 4)	53
Figure 1-85	Remove the DC controller (4 of 4)	54
Figure 1-86	Remove the formatter PCA	54
Figure 1-87	Remove the formatter stay	55
Figure 1-88	Remove the high-voltage power supply (1 of 14)	56
Figure 1-89	Remove the high-voltage power supply (2 of 14)	57
Figure 1-90	Remove the high-voltage power supply (3 of 14)	57
Figure 1-91	Remove the high-voltage power supply (4 of 14)	58
Figure 1-92	Remove the high-voltage power supply (5 of 14)	58
Figure 1-93	Remove the high-voltage power supply (6 of 14)	59
Figure 1-94	Remove the high-voltage power supply (7 of 14)	59
Figure 1-95	Remove the high-voltage power supply (8 of 14)	60
Figure 1-96	Remove the high-voltage power supply (9 of 14)	60
Figure 1-97	Remove the high-voltage power supply (10 of 14)	61
Figure 1-98	Remove the high-voltage power supply (11 of 14)	61
Figure 1-99	Remove the high-voltage power supply (12 of 14)	62
Figure 1-100	Remove the high-voltage power supply (13 of 14)	62
Figure 1-101	Remove the high-voltage power supply (14 of 14)	63
Figure 1-102	Remove the low-voltage power supply PCA (1 of 7)	64
Figure 1-103	Remove the low-voltage power supply PCA (2 of 7)	64
Figure 1-104	Remove the low-voltage power supply PCA (3 of 7)	65
Figure 1-105	Remove the low-voltage power supply PCA (4 of 7)	65
Figure 1-106	Remove the low-voltage power supply PCA (5 of 7)	66
Figure 1-107	Remove the low-voltage power supply PCA (6 of 7)	66
Figure 1-108	Remove the low-voltage power supply PCA (7 of 7)	67
Figure 1-109	Remove the duplexer	68
Figure 1-110	Remove the duplexer left cover (1 of 2)	68
Figure 1-111	Remove the duplexer left cover (2 of 2)	69
Figure 1-112	Remove the duplexer right cover (1 of 2)	69
Figure 1-113	Remove the duplexer right cover (2 of 2)	70
Figure 1-114	Remove the duplexer top cover (1 of 3)	70