

Fuser

- 1 Remove the duplexer. See page 244.
- 2 Rotate the two blue tabs inward.

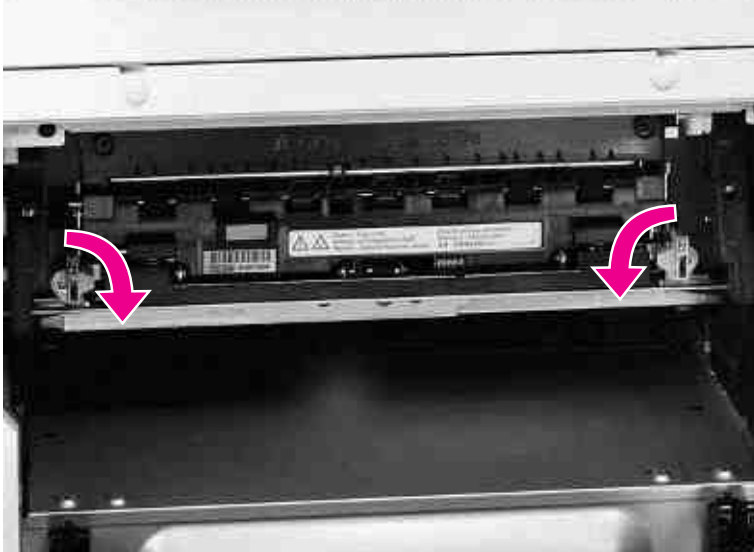


Figure 157. Unlock the fuser

- 3 Slightly lift up the fuser and pull it out.

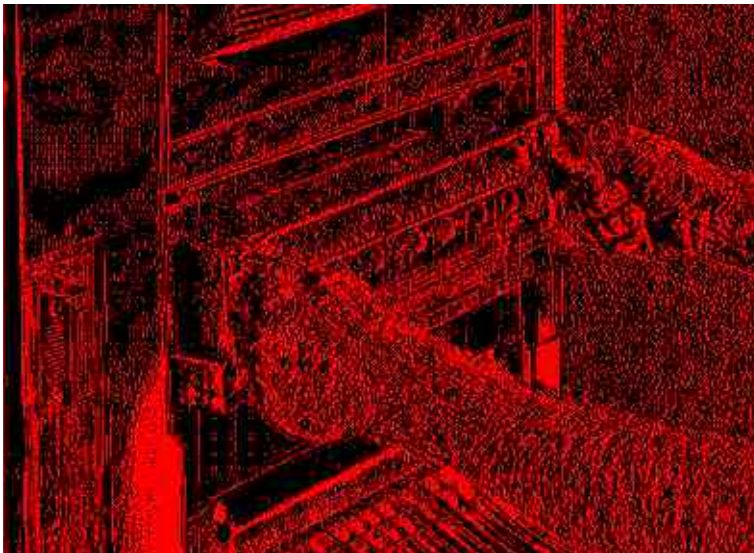


Figure 158. Remove the fuser

Intermediate transfer belt (ITB)

- 1 Open the front doors.

Note

Make sure that the green handle is down.

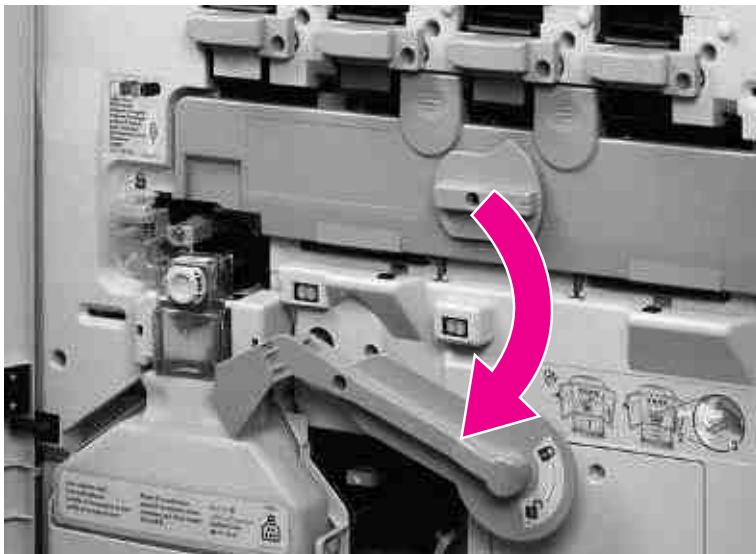


Figure 159. Release the ITB

- 2 Open the ITB door.



Figure 160. Open the ITB door

- 3 Grasp the blue handle, and slide the ITB out until it stops.

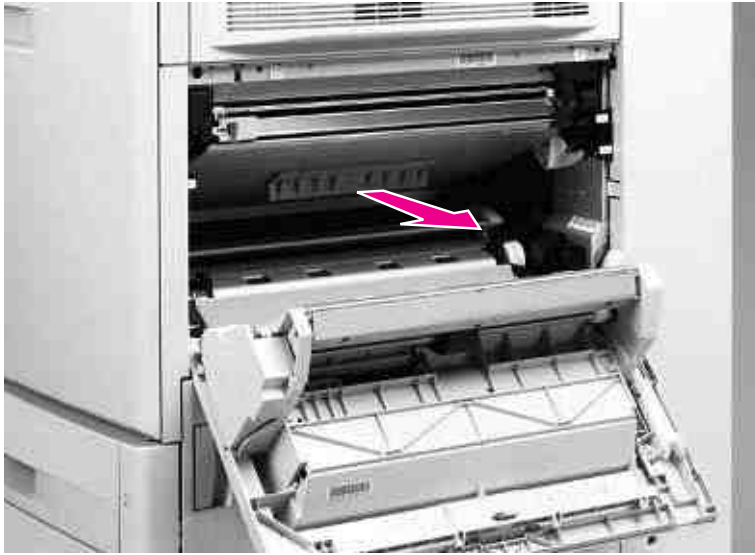


Figure 161. Slide the ITB out of the printer

CAUTION Do not let anything touch the surface of the ITB.

- 4 Depress the two blue levers (callout 1), and remove the ITB.

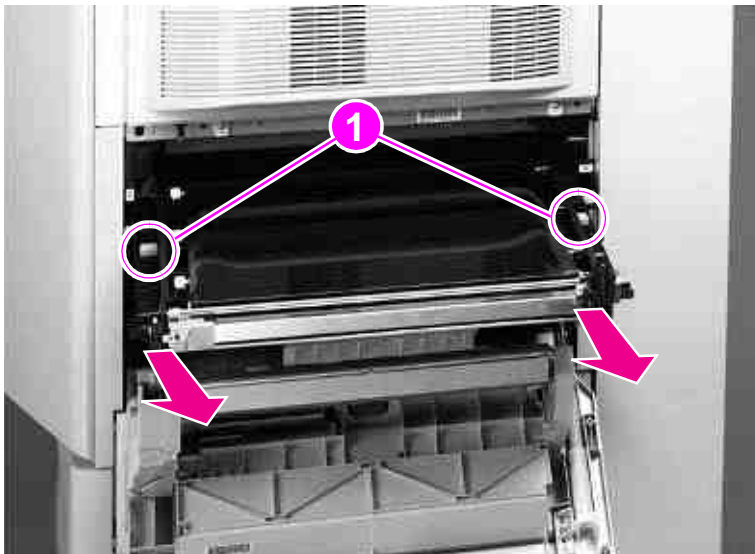


Figure 162. Remove the ITB

CAUTION Make sure that you set the ITB on a flat, clean surface.