

Fuser

1. Remove the duplexer or duplexer access cover.

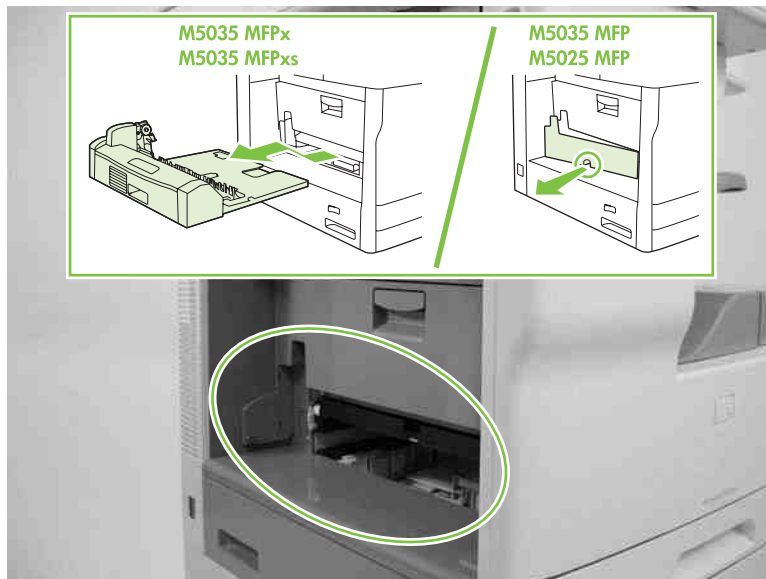


Figure 5-23 Remove the fuser (1 of 6)

2. Open the fuser door.



Figure 5-24 Remove the fuser (2 of 6)

3. Support the fuser door and pull up on the blue plastic door retainer (callout 1) to release it.



Tip When the fuser door is reinstalled, forcibly close the door to engage the door retainer.

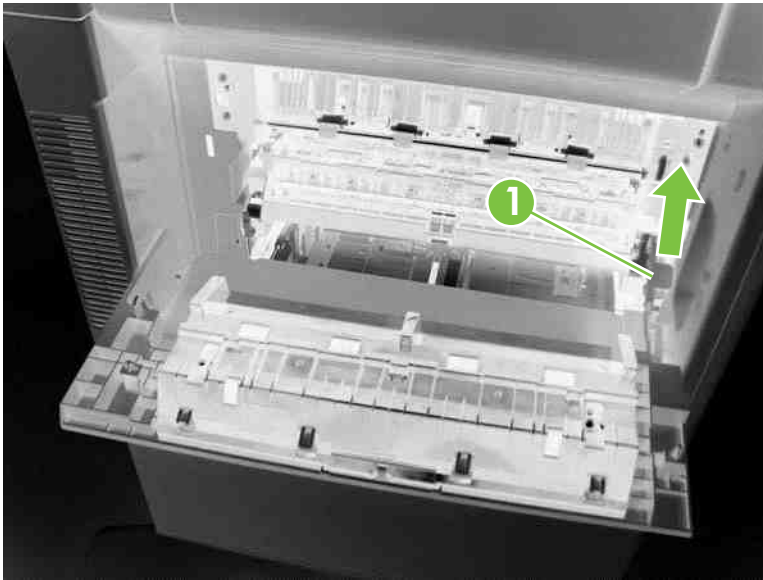


Figure 5-25 Remove the fuser (3 of 6)

4. Rotate the side of the fuser door nearest the back of the device away from the keyed hinge pin and remove the door.

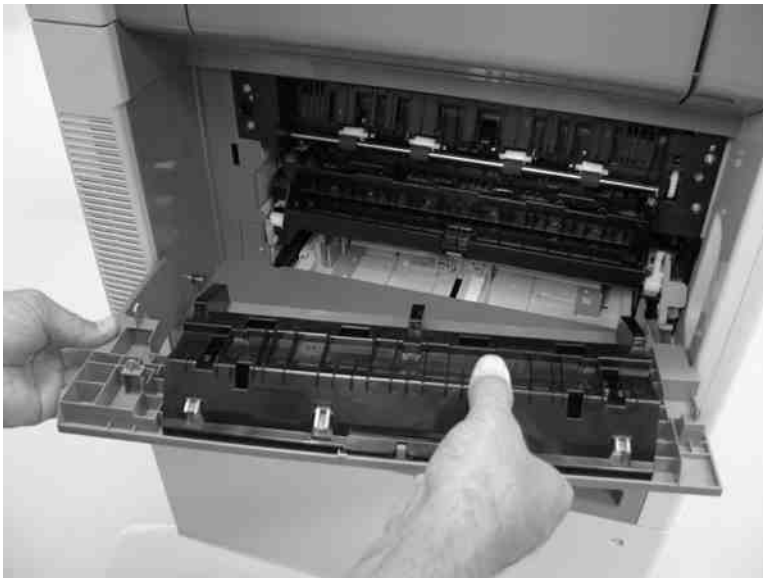


Figure 5-26 Remove the fuser (4 of 6)

5. Release the two latches and remove the pressure release assembly.



NOTE You must reach behind the fuser door retainer to gain access to the latch nearest the front side of the device.

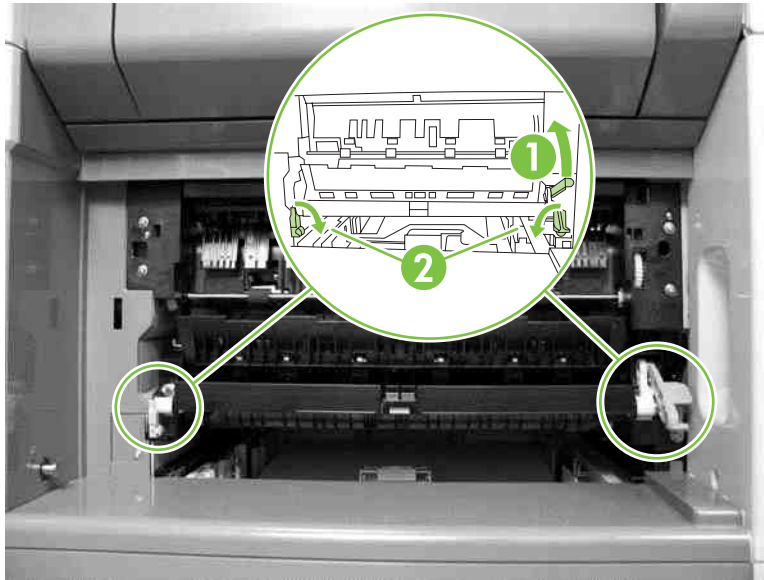


Figure 5-27 Remove the fuser (5 of 6)

6. Pull the fuser straight out of the device.



NOTE When you install the replacement fuser, *do not* use screws to fasten the fuser bracket (callout 2) to the device chassis.

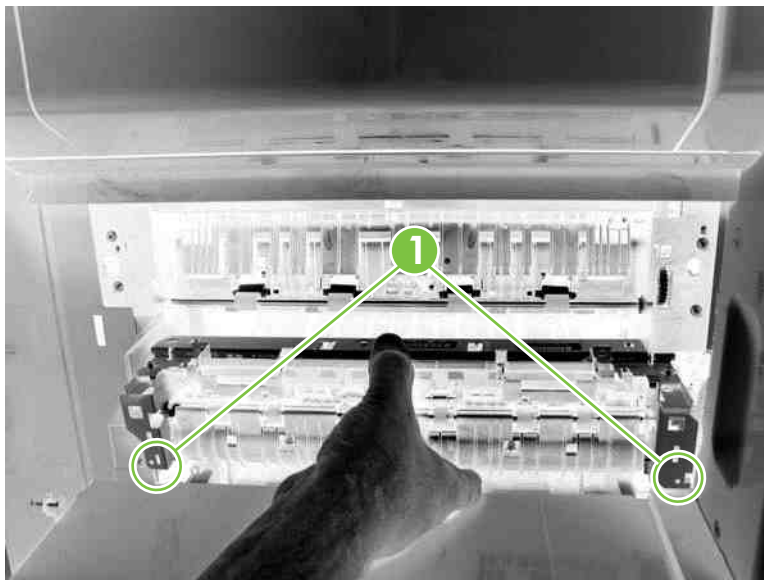


Figure 5-28 Remove the fuser (6 of 6)

Transfer roller

1. Open the print cartridge door and locate the transfer roller.

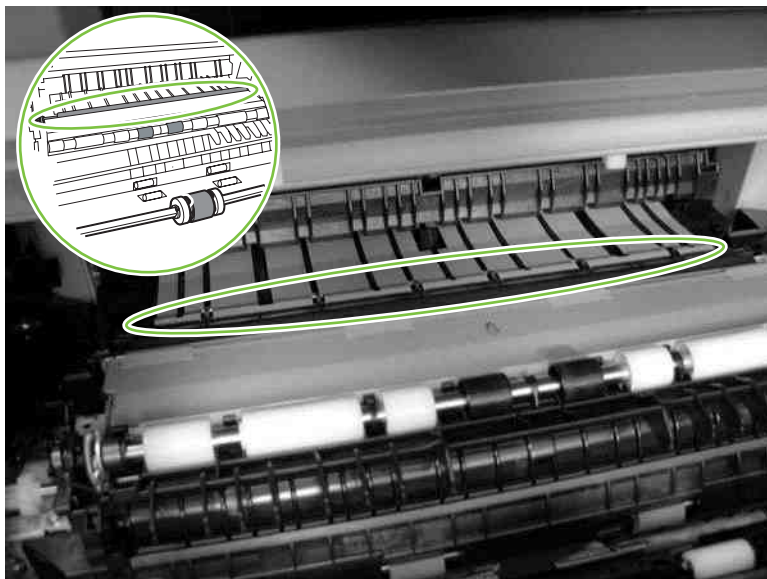


Figure 5-9 Remove the transfer roller (1 of 2)

2. Use a small flat-blade screw driver (or the blue plastic transfer roller hook tool provided in the engine maintenance kit) to lift up on the gear end of the roller and then rotate the roller up and away from the device and remove it.



Tip When you install the replacement transfer roller, make sure that you remove the protective paper sleeve from the roller *after* the roller is installed.

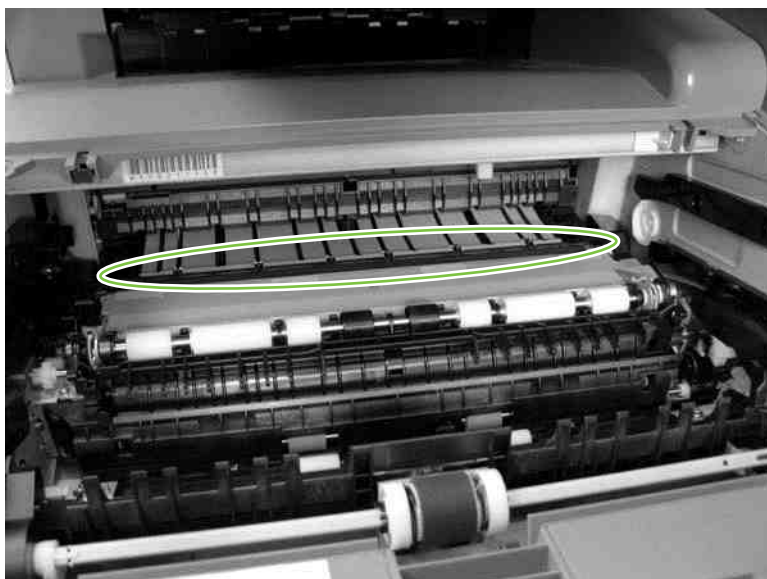


Figure 5-10 Remove the transfer roller (2 of 2)

Tray 1 pickup roller (multipurpose paper pickup roller)

1. Open the print cartridge door and locate the Tray 1 pickup roller.



Figure 5-11 Remove the Tray 1 pickup roller (1 of 2)

2. Push out the two black tabs and rotate the roller away from the shaft to remove the roller.

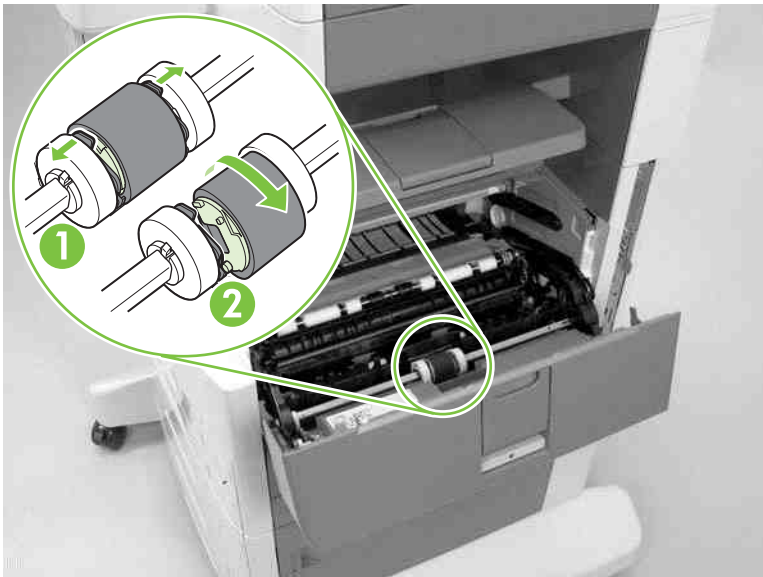


Figure 5-12 Remove the Tray 1 pickup roller (2 of 2)

Tray 1 separation pad assembly (multipurpose pad assembly)

1. Open Tray 1.
2. Carefully pry the tray front retainer away from the tray arm and then pry the tray rear retainer (not shown) away from the tray arm.



Tip When you reinstall the tray retainers, make sure that the inward facing pins are inserted in the mounting holes in the sliding media adjustment shelf (callout 1).



Figure 5-13 Remove the Tray 1 separation pad assembly (1 of 3; front retainer shown)

3. Raise the top portion of the tray, and then remove one screw.



CAUTION Use a screwdriver with a magnetic tip so you do not drop this screw into the device.



Figure 5-14 Remove the Tray 1 separation pad assembly (2 of 3)

4. Carefully remove the Tray 1 separation pad assembly.



Figure 5-15 Remove the Tray 1 separation pad assembly (3 of 3)

Tray 2 and Tray 3 pickup rollers (paper pickup roller assembly)

1. Remove Tray 2 and Tray 3.



Figure 5-16 Remove the Tray 2 and Tray 3 pickup rollers (1 of 4)

2. Open the right door.



Figure 5-17 Remove the Tray 2 and Tray 3 pickup rollers (2 of 4)

3. Release the blue clip and slide the roller toward the front of the device. Rotate the rear of the roller away from the device and then remove the roller. Install the replacement roller.



NOTE Installing the pickup rollers backwards will cause no-pick errors. Make sure that the black shaft on the roller faces the front of the MFP when the rollers are installed.

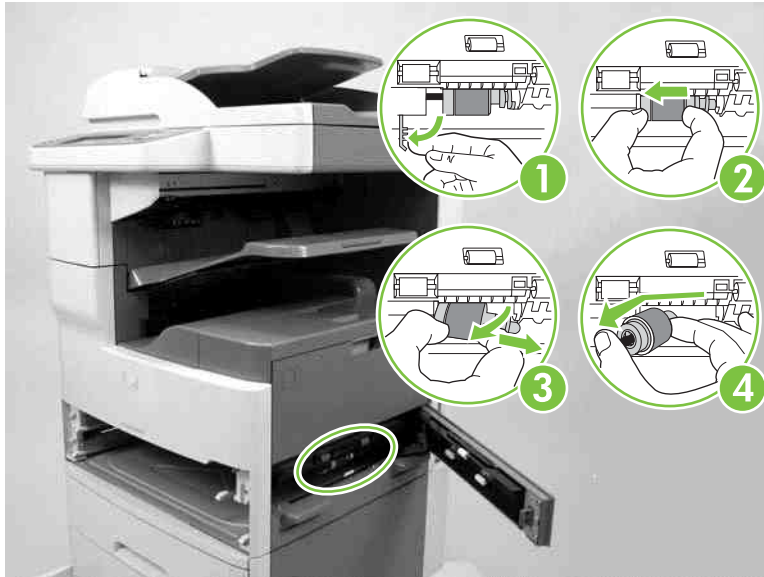


Figure 5-18 Remove the Tray 2 and Tray 3 pickup rollers (3 of 4)

4. Reach up inside of the Tray 2 and Tray 3 cavity and release the blue latch on the upper pickup roller. Slide the roller toward the clip and then rotate the roller out and away from the device.

Install the replacement roller.



NOTE The lower pickup roller was replaced through the right door in the previous step.

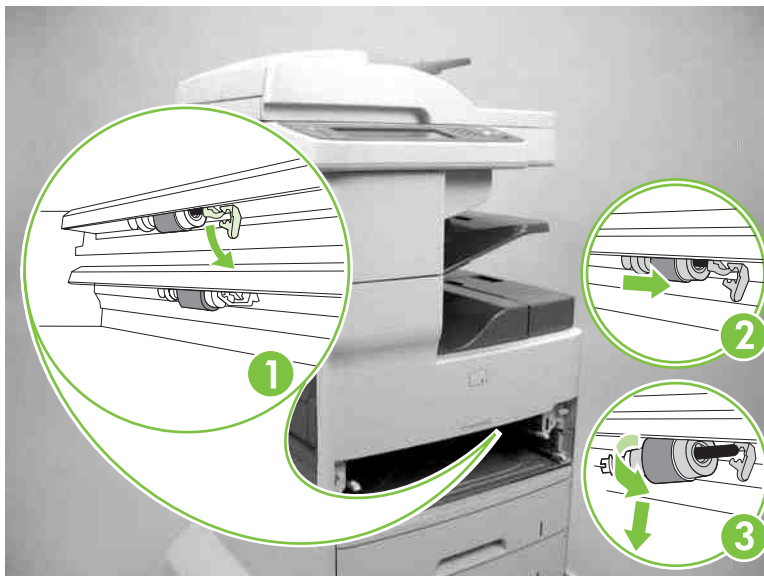


Figure 5-19 Remove the Tray 2 and Tray 3 pickup rollers (4 of 4)

Tray 2 and Tray 3 separation pad assembly (separation block assembly)

1. Remove Tray 2 and Tray 3.
2. Remove two screws (callout 1).



NOTE Be careful during reinstallation. Make sure that you do not cross thread the plastic screw mounting holes when you reinstall these screws.

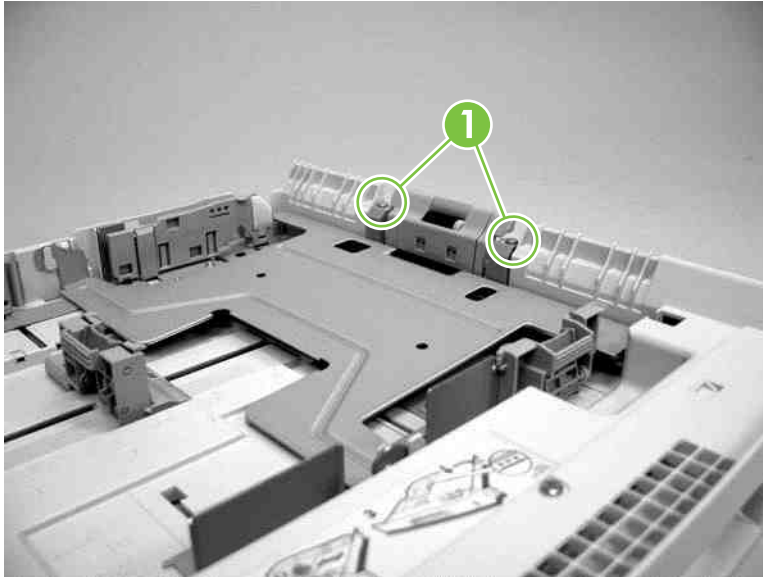


Figure 5-20 Remove the Tray 2 and Tray 3 separation pad assembly (1 of 2)

3. Lift up the separation pad to remove it.

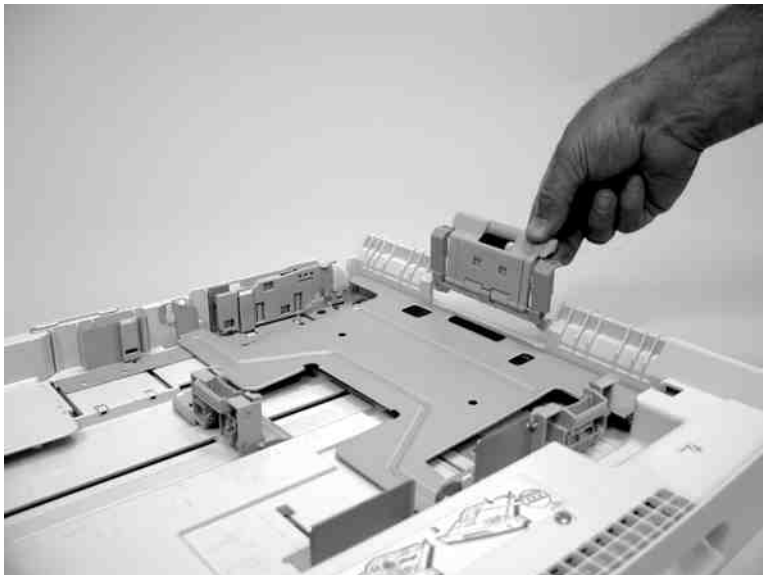


Figure 5-21 Remove the Tray 2 and Tray 3 separation pad assembly (2 of 2)

4. Repeat this procedure for the remaining tray.

Tray 4, Tray 5, and Tray 6 pickup and feed rollers (paper feed roller assembly)

1. Remove Tray 4, Tray 5, and Tray 6.
2. To remove a roller, pinch the tab and slide the roller toward the front of the device to remove it.

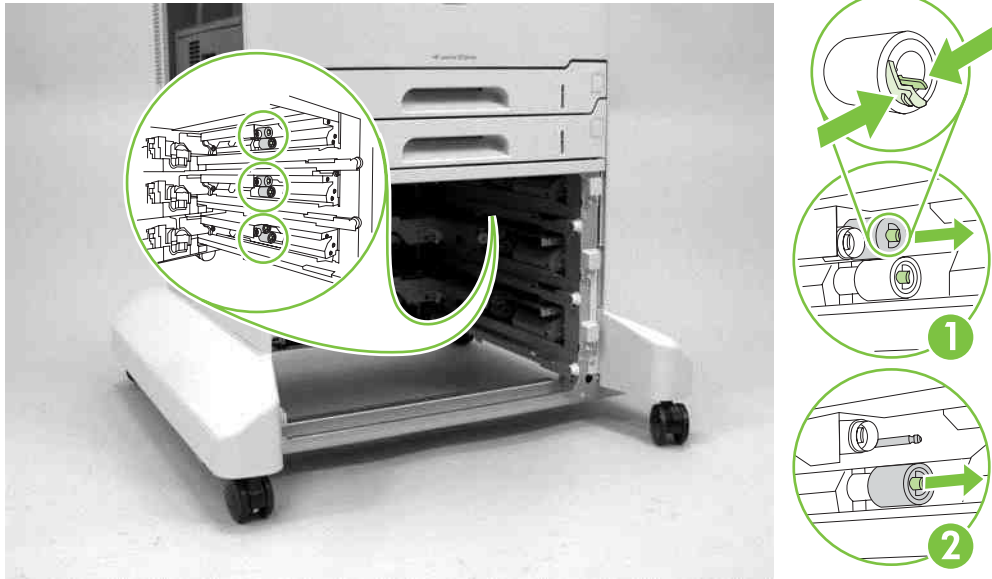


Figure 5-22 Remove the Tray 4, Tray 5, and Tray 6 pickup and feed rollers

3. Repeat this procedure for the remaining rollers.