

ADF mylar shield

- 1 Open the ADF/scanner assembly and release the locking tabs on the mylar-holder assembly.

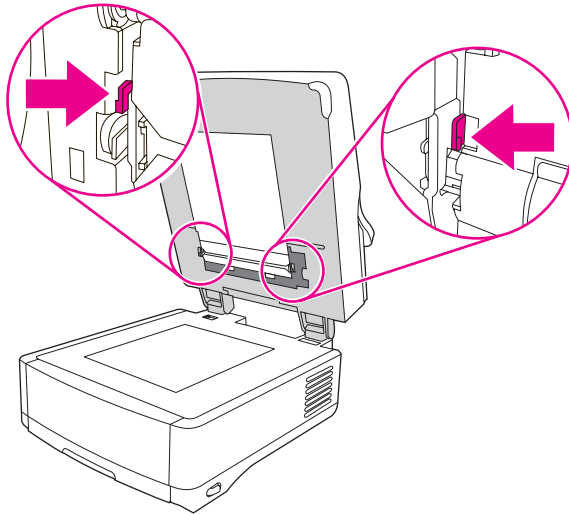


Figure 6-7 Replacing the ADF mylar shield (1 of 5)

The mylar-holder assembly will drop open.

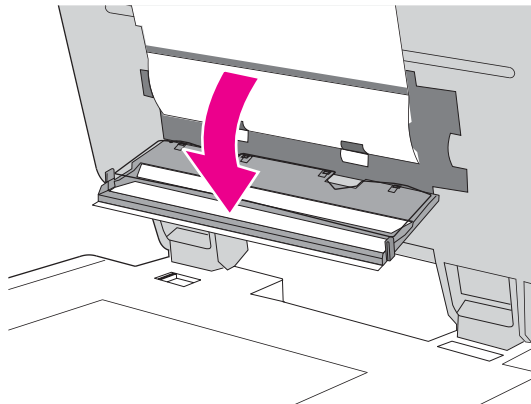


Figure 6-8 Replacing the ADF mylar shield (2 of 5)

- 2 Carefully unhook the mylar shield from the four tabs on the mylar-holder assembly, and then remove and discard the mylar shield.

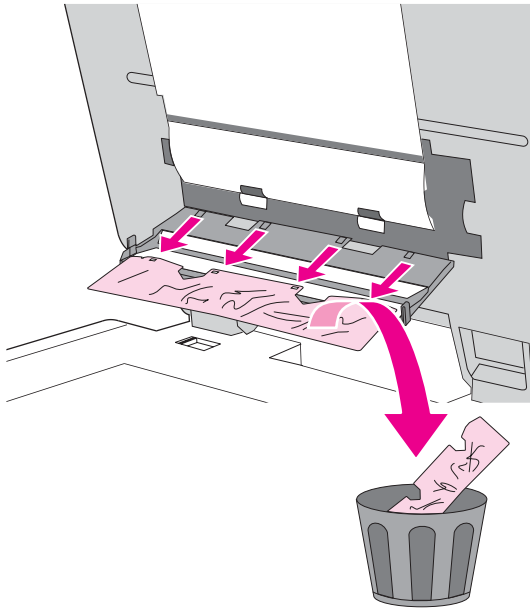


Figure 6-9 Replacing the ADF mylar shield (3 of 5)

- 3 Insert a new mylar shield, and clip it onto the four tabs on the mylar-holder assembly.

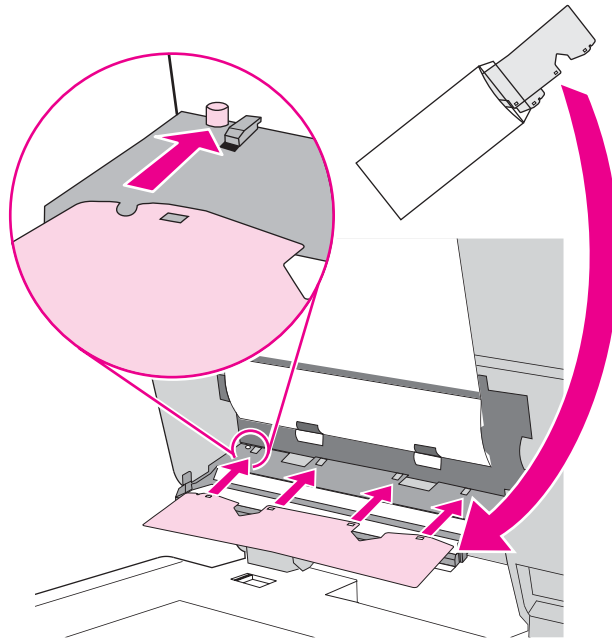


Figure 6-10 Replacing the ADF mylar shield (4 of 5)

- 4 Close the mylar-holder assembly.

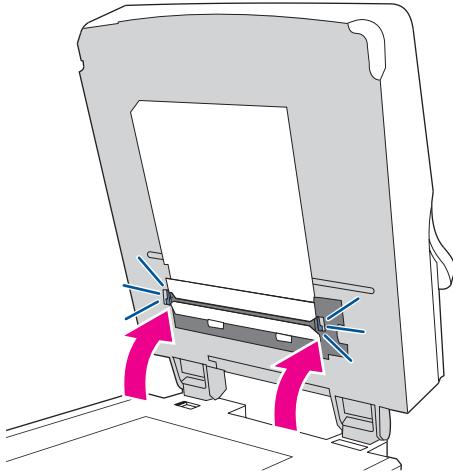


Figure 6-11 Replacing the ADF mylar shield (5 of 5)

Mylar-holder assembly

- 1 Open the ADF/scanner assembly and release the locking tabs on the mylar-holder assembly.

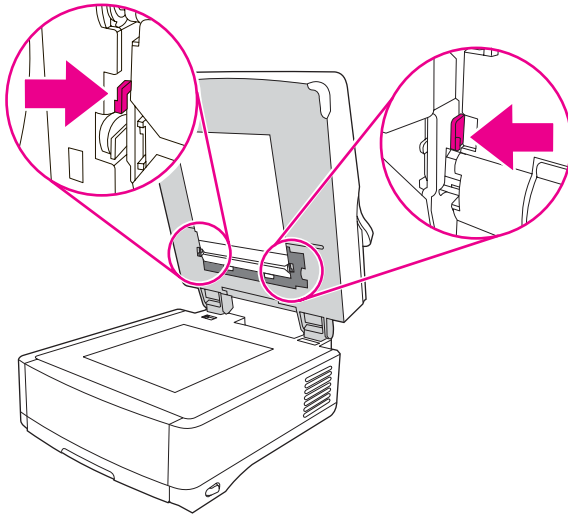


Figure 6-12 Removing the mylar-holder assembly (1 of 2)

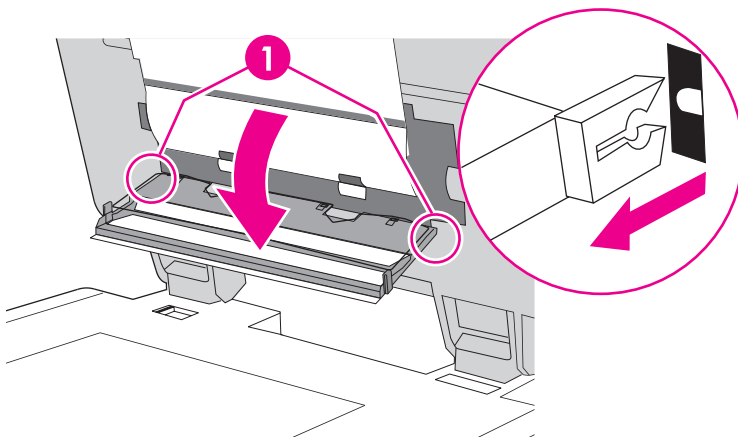


Figure 6-13 Removing the mylar-holder assembly (2 of 2)

- 2 Remove the mylar-holder assembly by unclipping two clips (callout 1) and pulling the assembly toward you.

Pickup roller assembly

- 1 Open the ADF top cover.

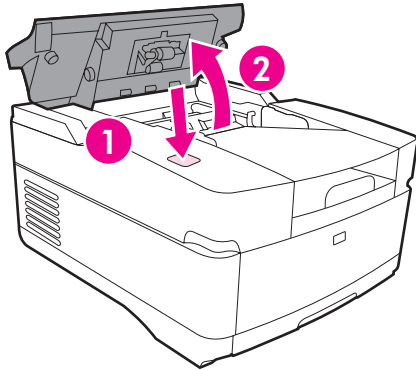


Figure 6-3 Removing the pickup roller assembly (1 of 3)

- 2 Open the pickup-roller cover by pressing the locking tab and rotating the top of the assembly away from the ADF.

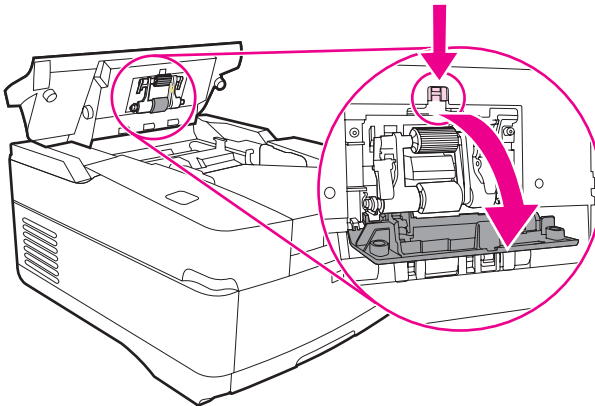


Figure 6-4 Removing the pickup roller assembly (2 of 3)

- 3 Disengage the left side (gear end) of the roller-assembly drive shaft, and slide the assembly to the left of the device to remove it.

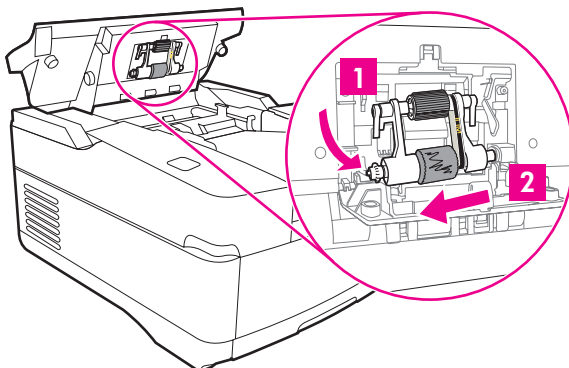


Figure 6-5 Removing the pickup roller assembly (3 of 3)

Pickup-roller cover

- 1 Open the ADF top cover.
- 2 Open the pickup-roller cover.
- 3 Release two clips (callout 1) to remove the cover.

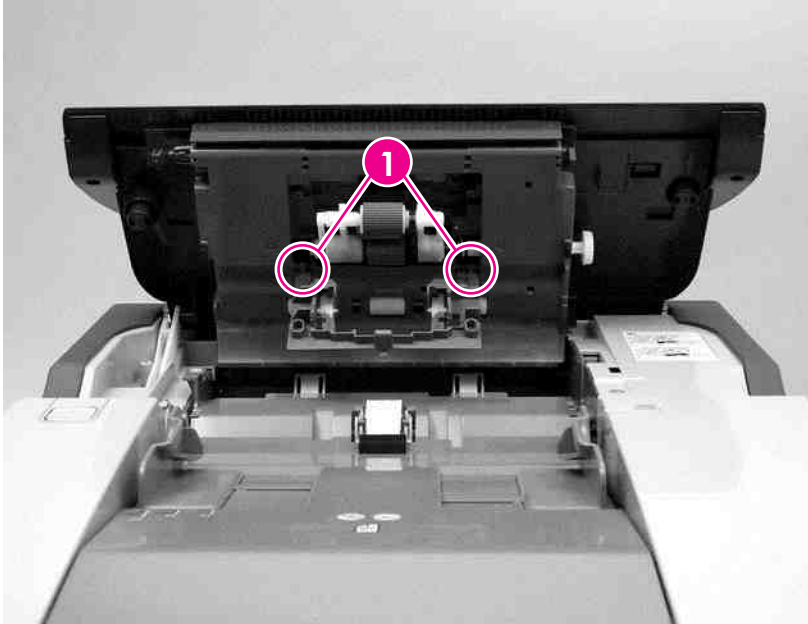


Figure 6-6 Removing the pickup-roller cover

Separation pad

- 1 Open the ADF top cover.
- 2 Raise the separation pad frame assembly.

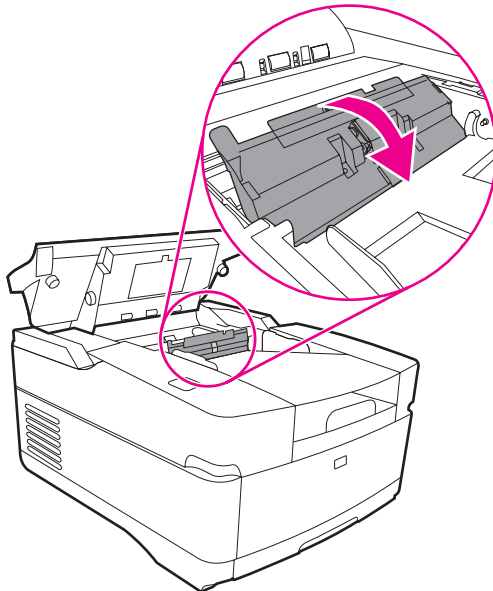


Figure 6-1 Removing the separation pad (1 of 2)

- 3 Push the bottom edge of the separation pad away from the frame.

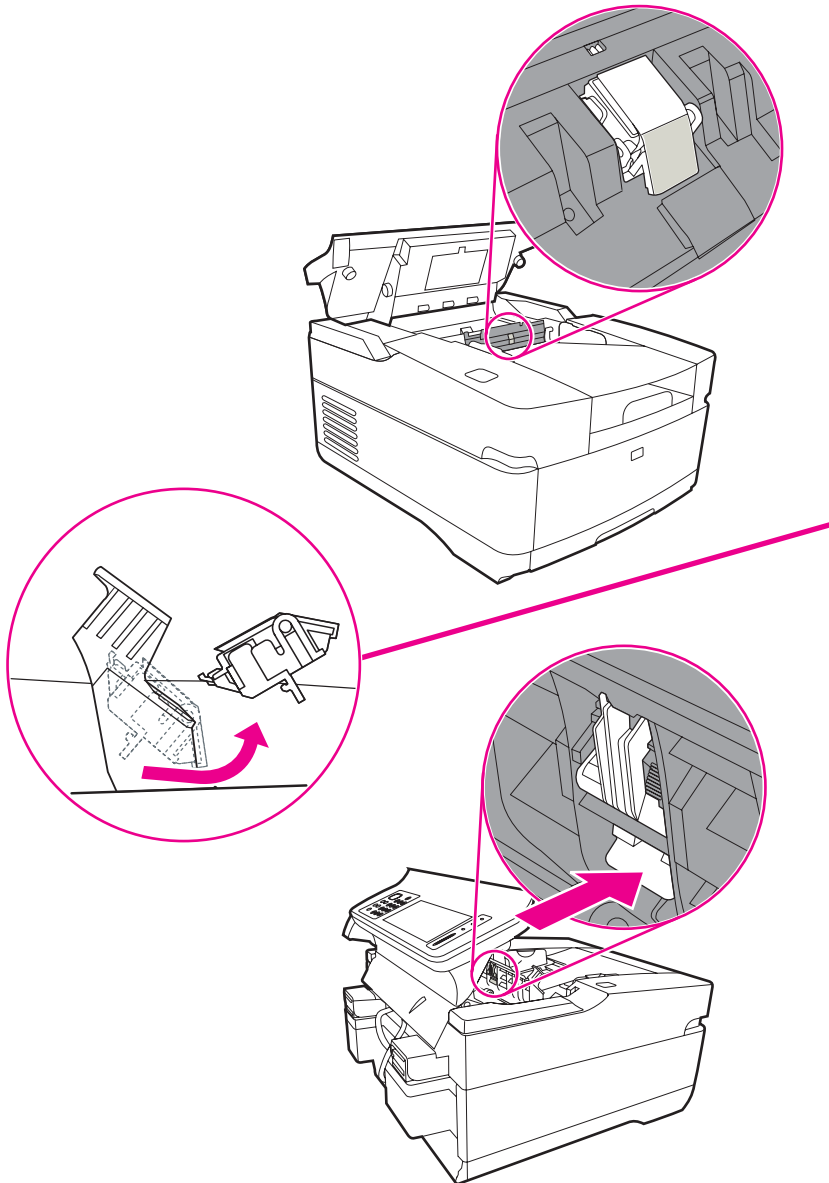


Figure 6-2 Removing the separation pad (2 of 2)

- 4 Remove the separation pad.