

Fuser


Before proceeding, remove the following components:

- Input tray or main-input tray. See [Input tray or main-input tray on page 40](#).
- Output bin tray extension. See [Output bin tray extension on page 41](#).
- Front cover. See [Front cover on page 42](#).
- Left cover. See [Left cover on page 43](#).
- Right cover. See [Right cover on page 46](#).
- Cartridge door assembly. See [Cartridge door on page 48](#).
- Face-down cover. See [Face-down cover on page 50](#).
- Rear cover. See [Rear cover on page 52](#).
- Formatter PCA. See [Formatter PCA on page 54](#).
- Wireless PCA. See [Wireless PCA on page 57](#).

Remove the fuser


1. Remove three screws (callout 1), and then remove the plastic plate (callout 2).

Figure 2-45 Remove the fuser (1 of 7)

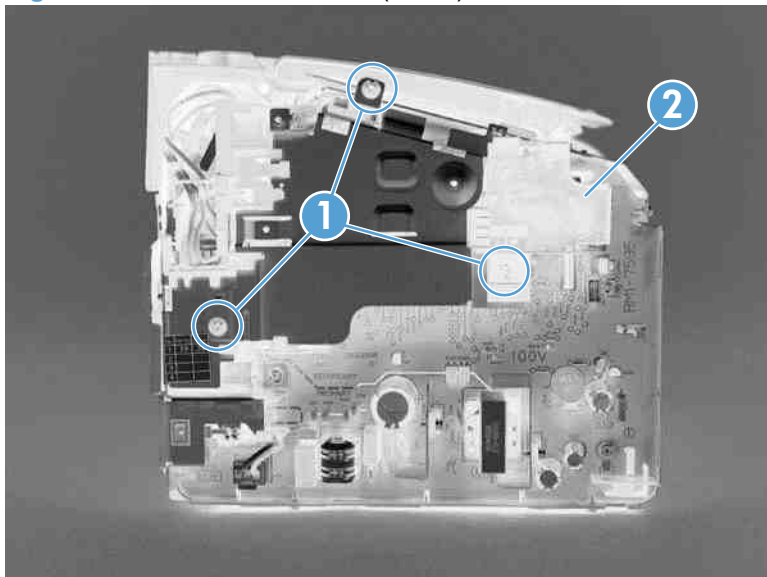


2. Remove one screw (callout 1), and then remove the sheet-metal plate (callout 2).

Figure 2-46 Remove the fuser (2 of 7)

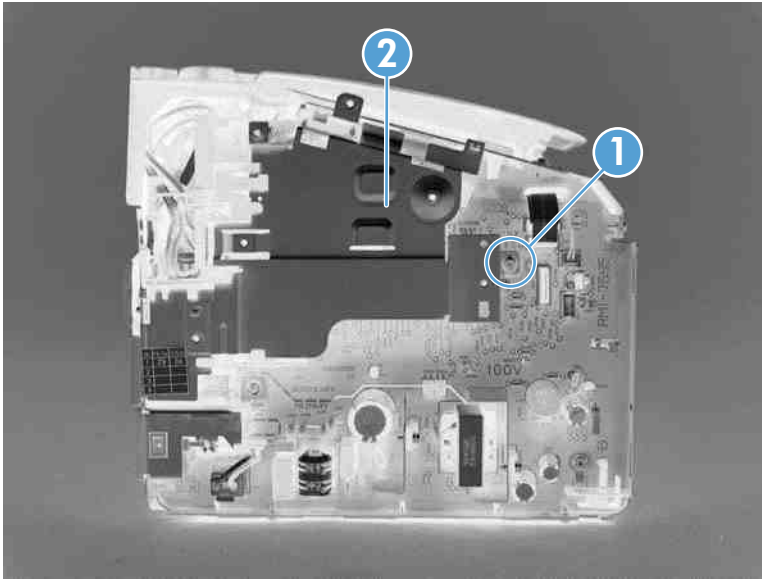


3. Disconnect one connector (callout 1), and then remove the wire harness (callout 2) from the guide (callout 3).

Figure 2-47 Remove the fuser (3 of 7)

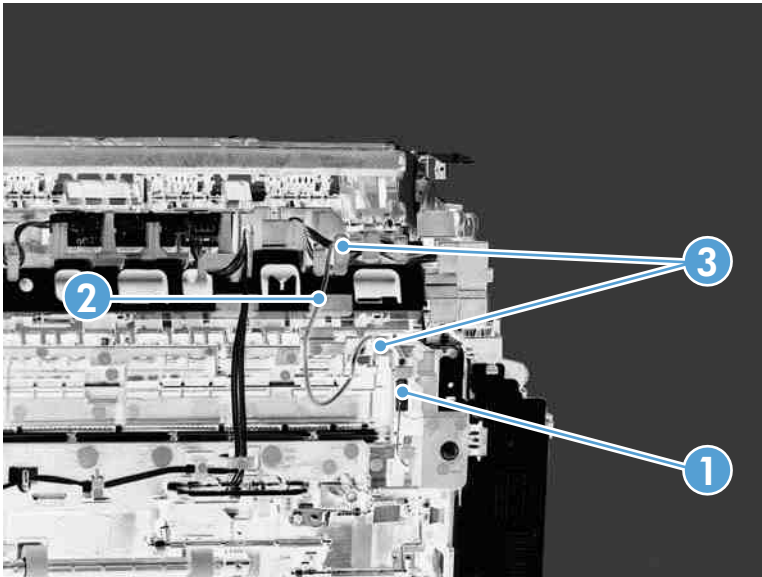


4. Disconnect four connectors (callout 1), and then release the wire harnesses (callout 2) from the guide (callout 3).

Figure 2-48 Remove the fuser (4 of 7)

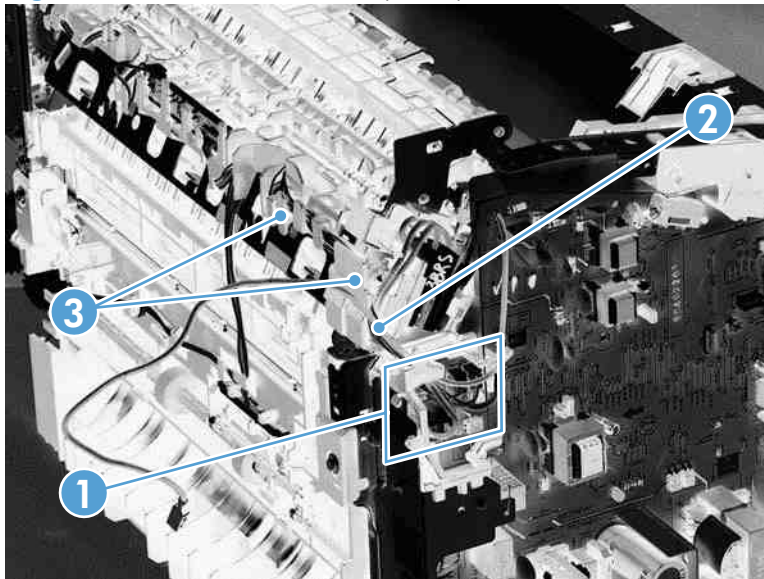


5. Disconnect one tab (callout 1), and then remove the guide (callout 2).

Figure 2-49 Remove the fuser (5 of 7)

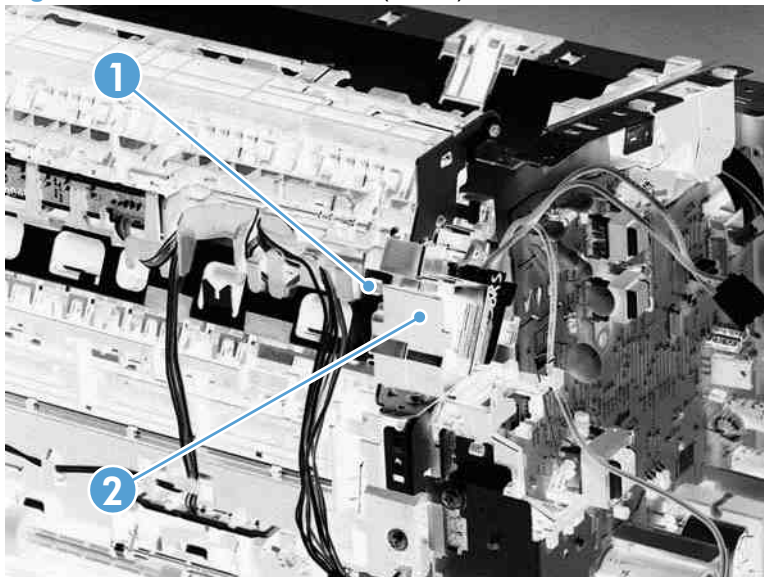


6. Release the wire harnesses (callout 1) from the guide (callout 2).

Figure 2-50 Remove the fuser (6 of 7)

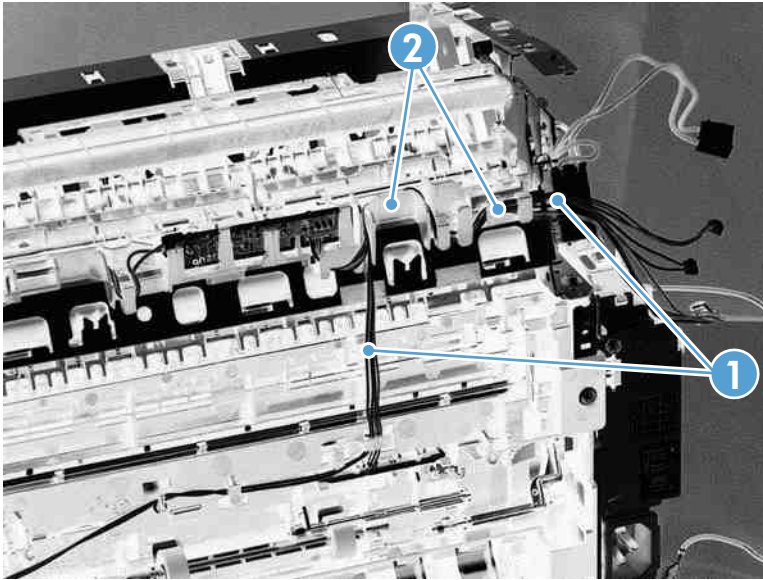

7. Remove three screws (callout 1) and then remove the fuser (callout 2).

Figure 2-51 Remove the fuser (7 of 7)

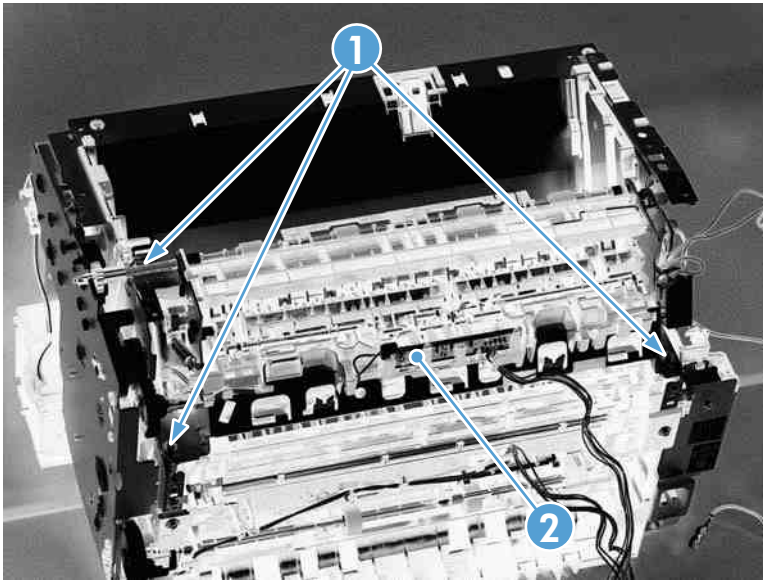


Reinstall the fuser

- ▲ To avoid damage to the wire harnesses, make sure that they are correctly installed in the guides when the fuser is reinstalled.

Figure 2-52 Reinstall the fuser; correct wire harness installation



Figure 2-53 Reinstall the fuser; incorrect wire harness installation

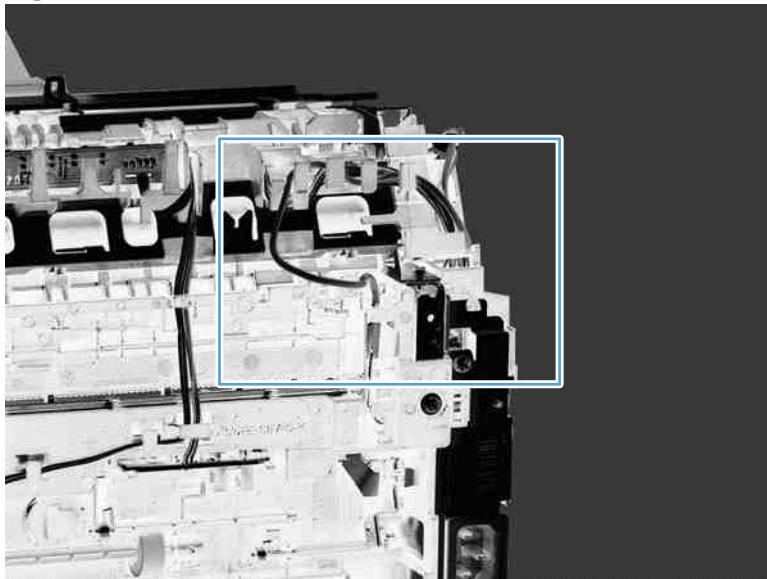


Pickup roller

△ **CAUTION:** Do not touch the sponge portion of the roller. Skin oils can cause paper handling problems.


1. Release two tabs.

Figure 2-3 Remove the pickup roller (1 of 2)

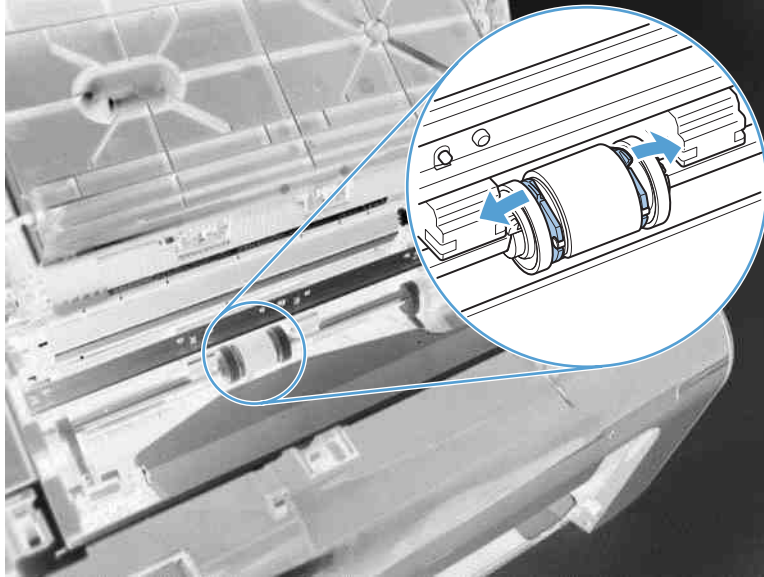

2. Rotate the roller away from the product to remove it.

Figure 2-4 Remove the pickup roller (2 of 2)

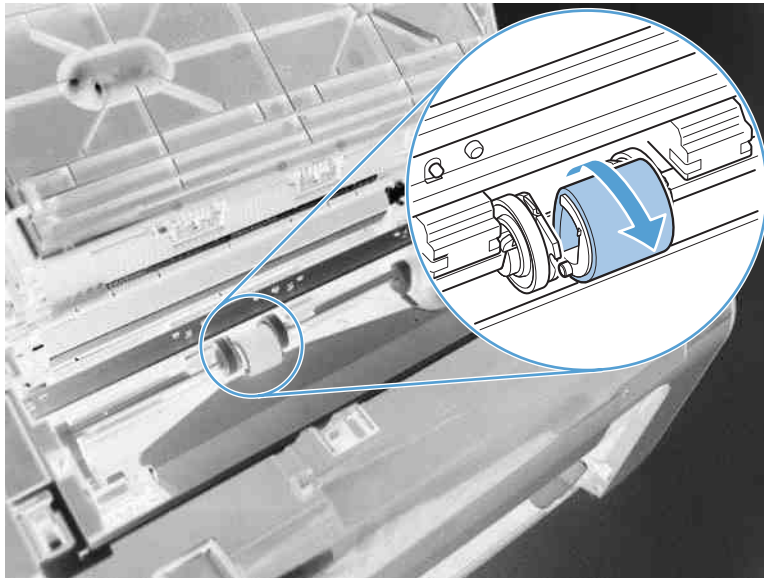

Separation pad


△ **CAUTION:** Do not touch the sponge portion of the pad. Skin oils can cause paper handling problems.

1. Place the product rear-side up to access the separation pad assembly.

△ **CAUTION:** Dirt and debris can scratch the product covers. Place the product on a cloth or other clean surface.

2. Remove two screws (callout 1) and then remove the separation pad assembly (callout 2).

Figure 2-5 Remove the separation pad assembly

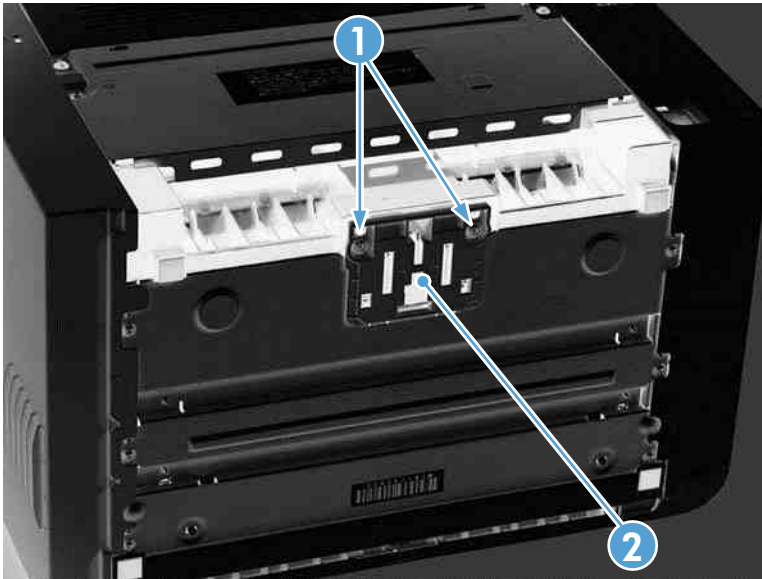

Transfer roller

△ **CAUTION:** Do not touch the sponge portion of the roller. Skin oils can cause print quality problems.

1. Open the print-cartridge door.
2. Release two tabs (callout 1), and then remove the transfer roller (callout 2).

Figure 2-6 Remove the transfer roller

